 


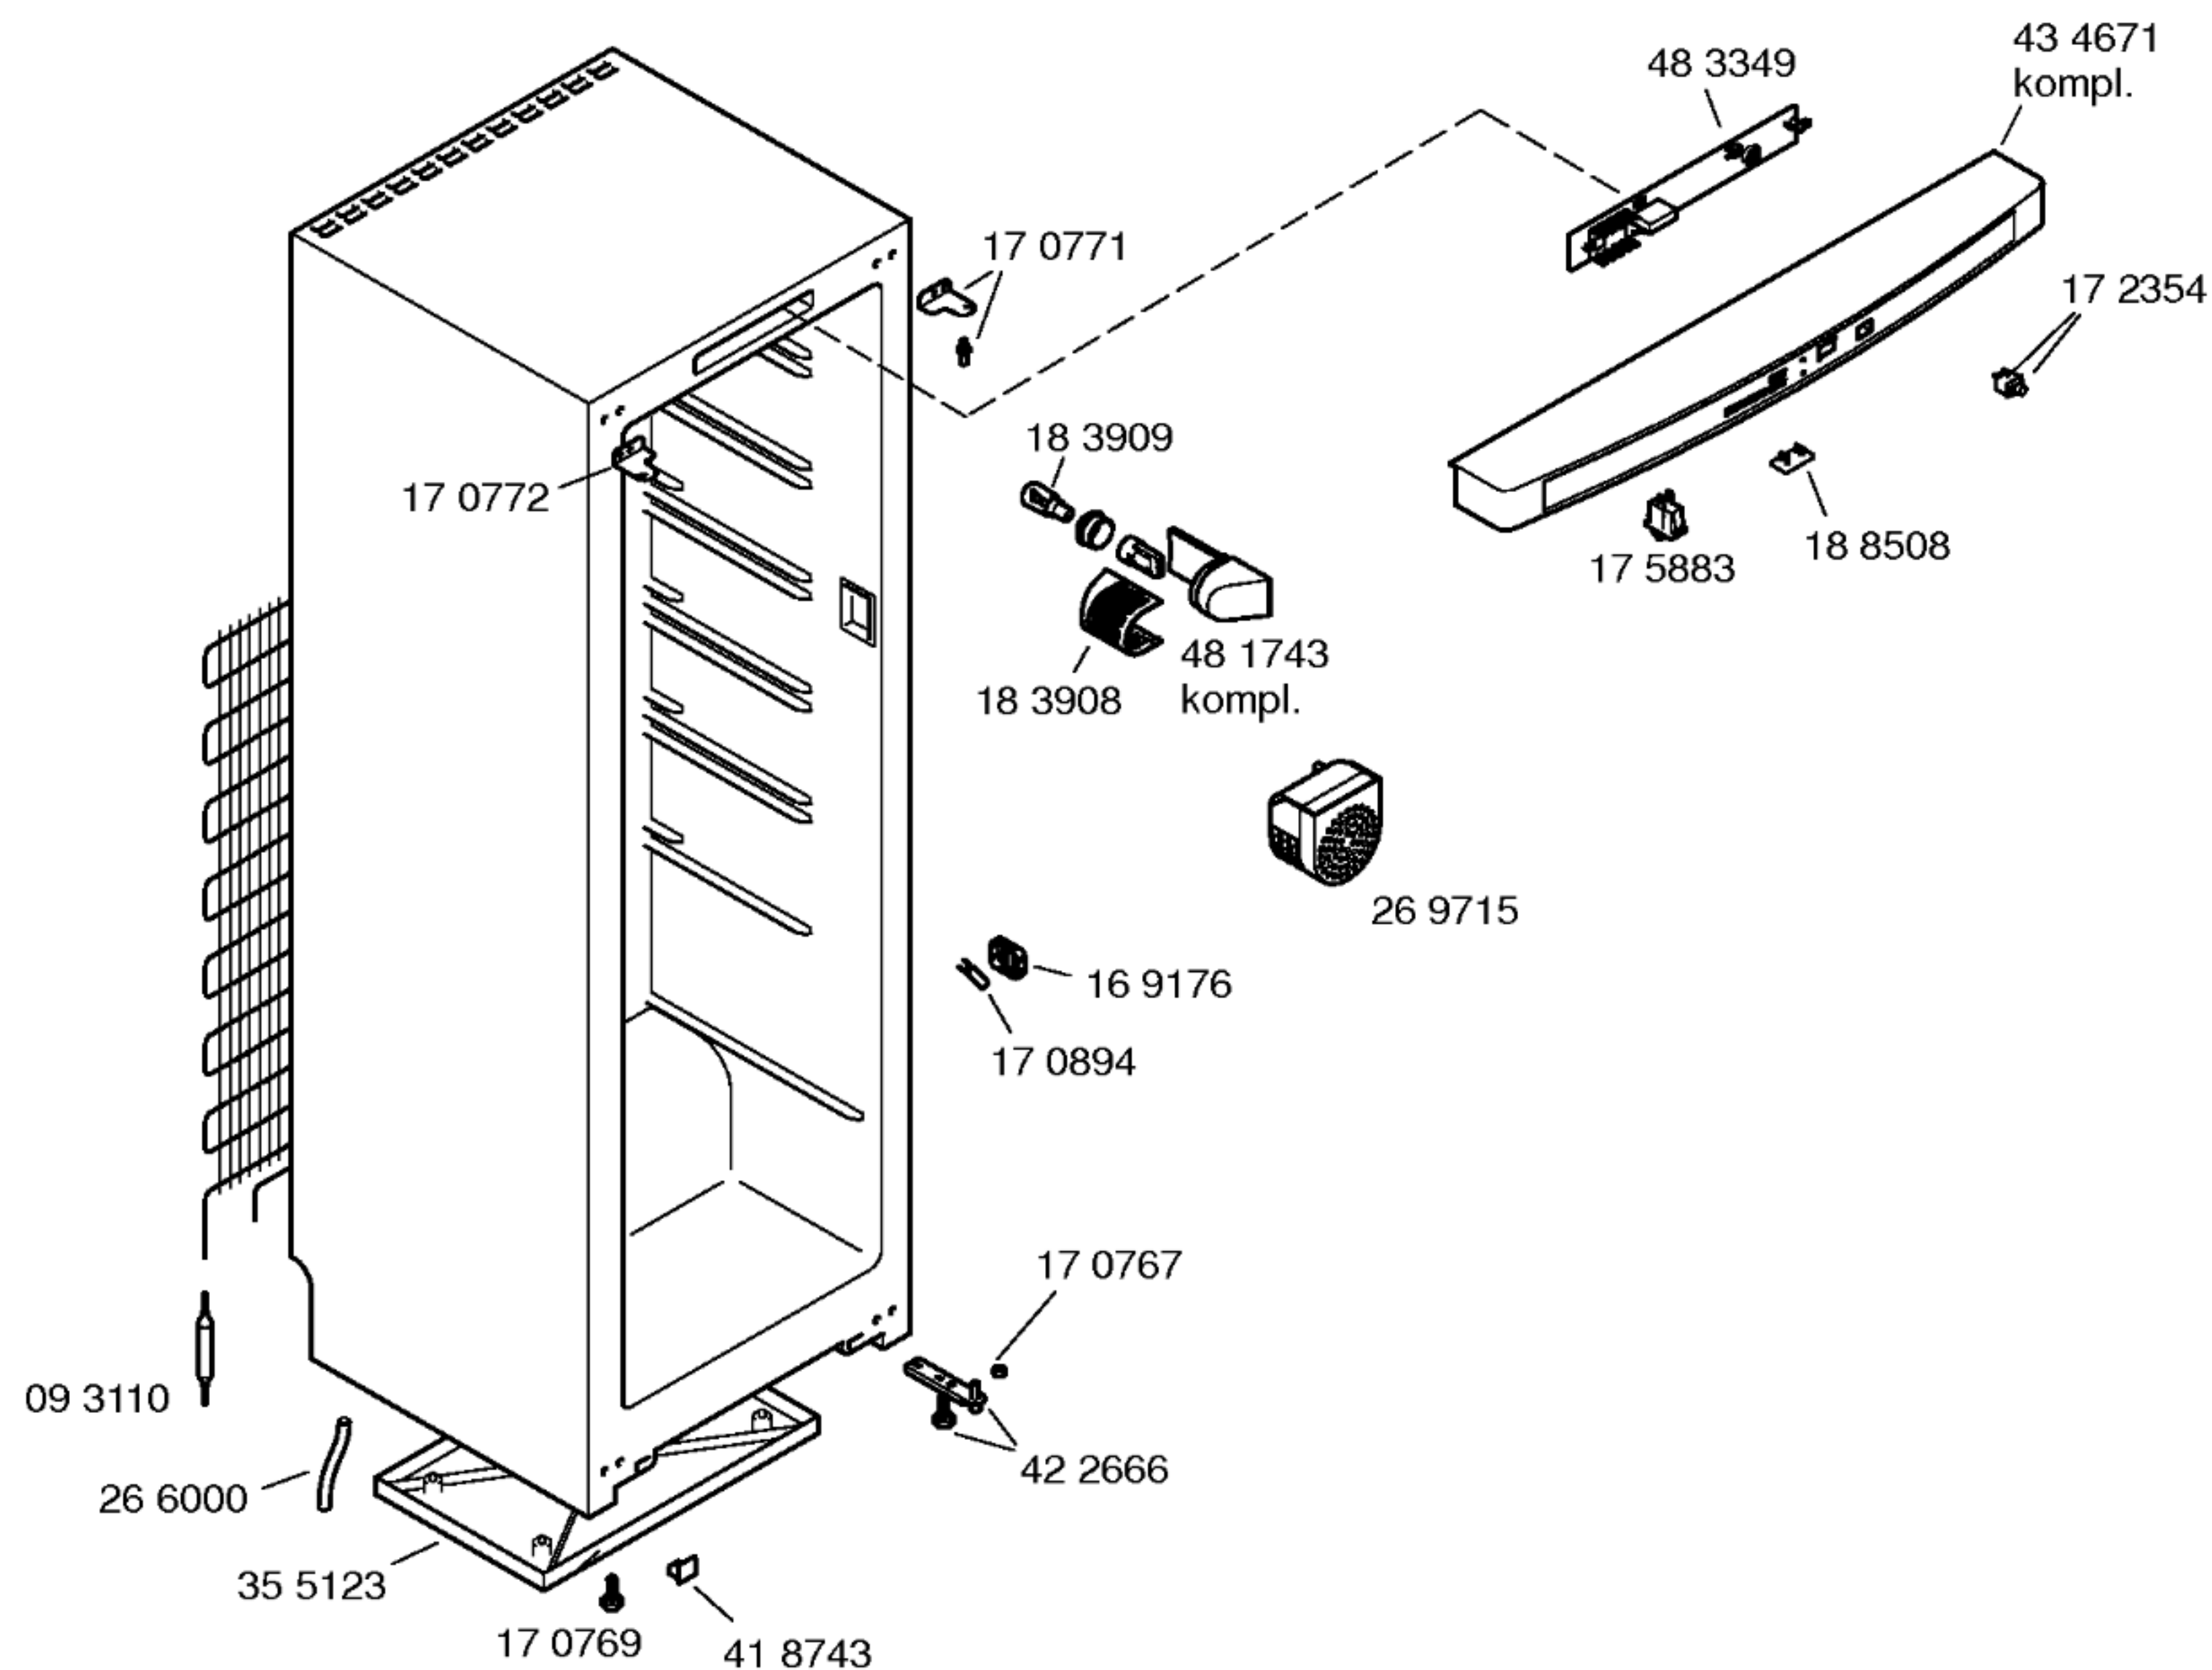 


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 6651
(de,en,fr,it,nl,es,pt,gr)
58 6652
(da,no,sf,fi)

 
Montageanleitung
58 0241

Beistellsatz
18 1139

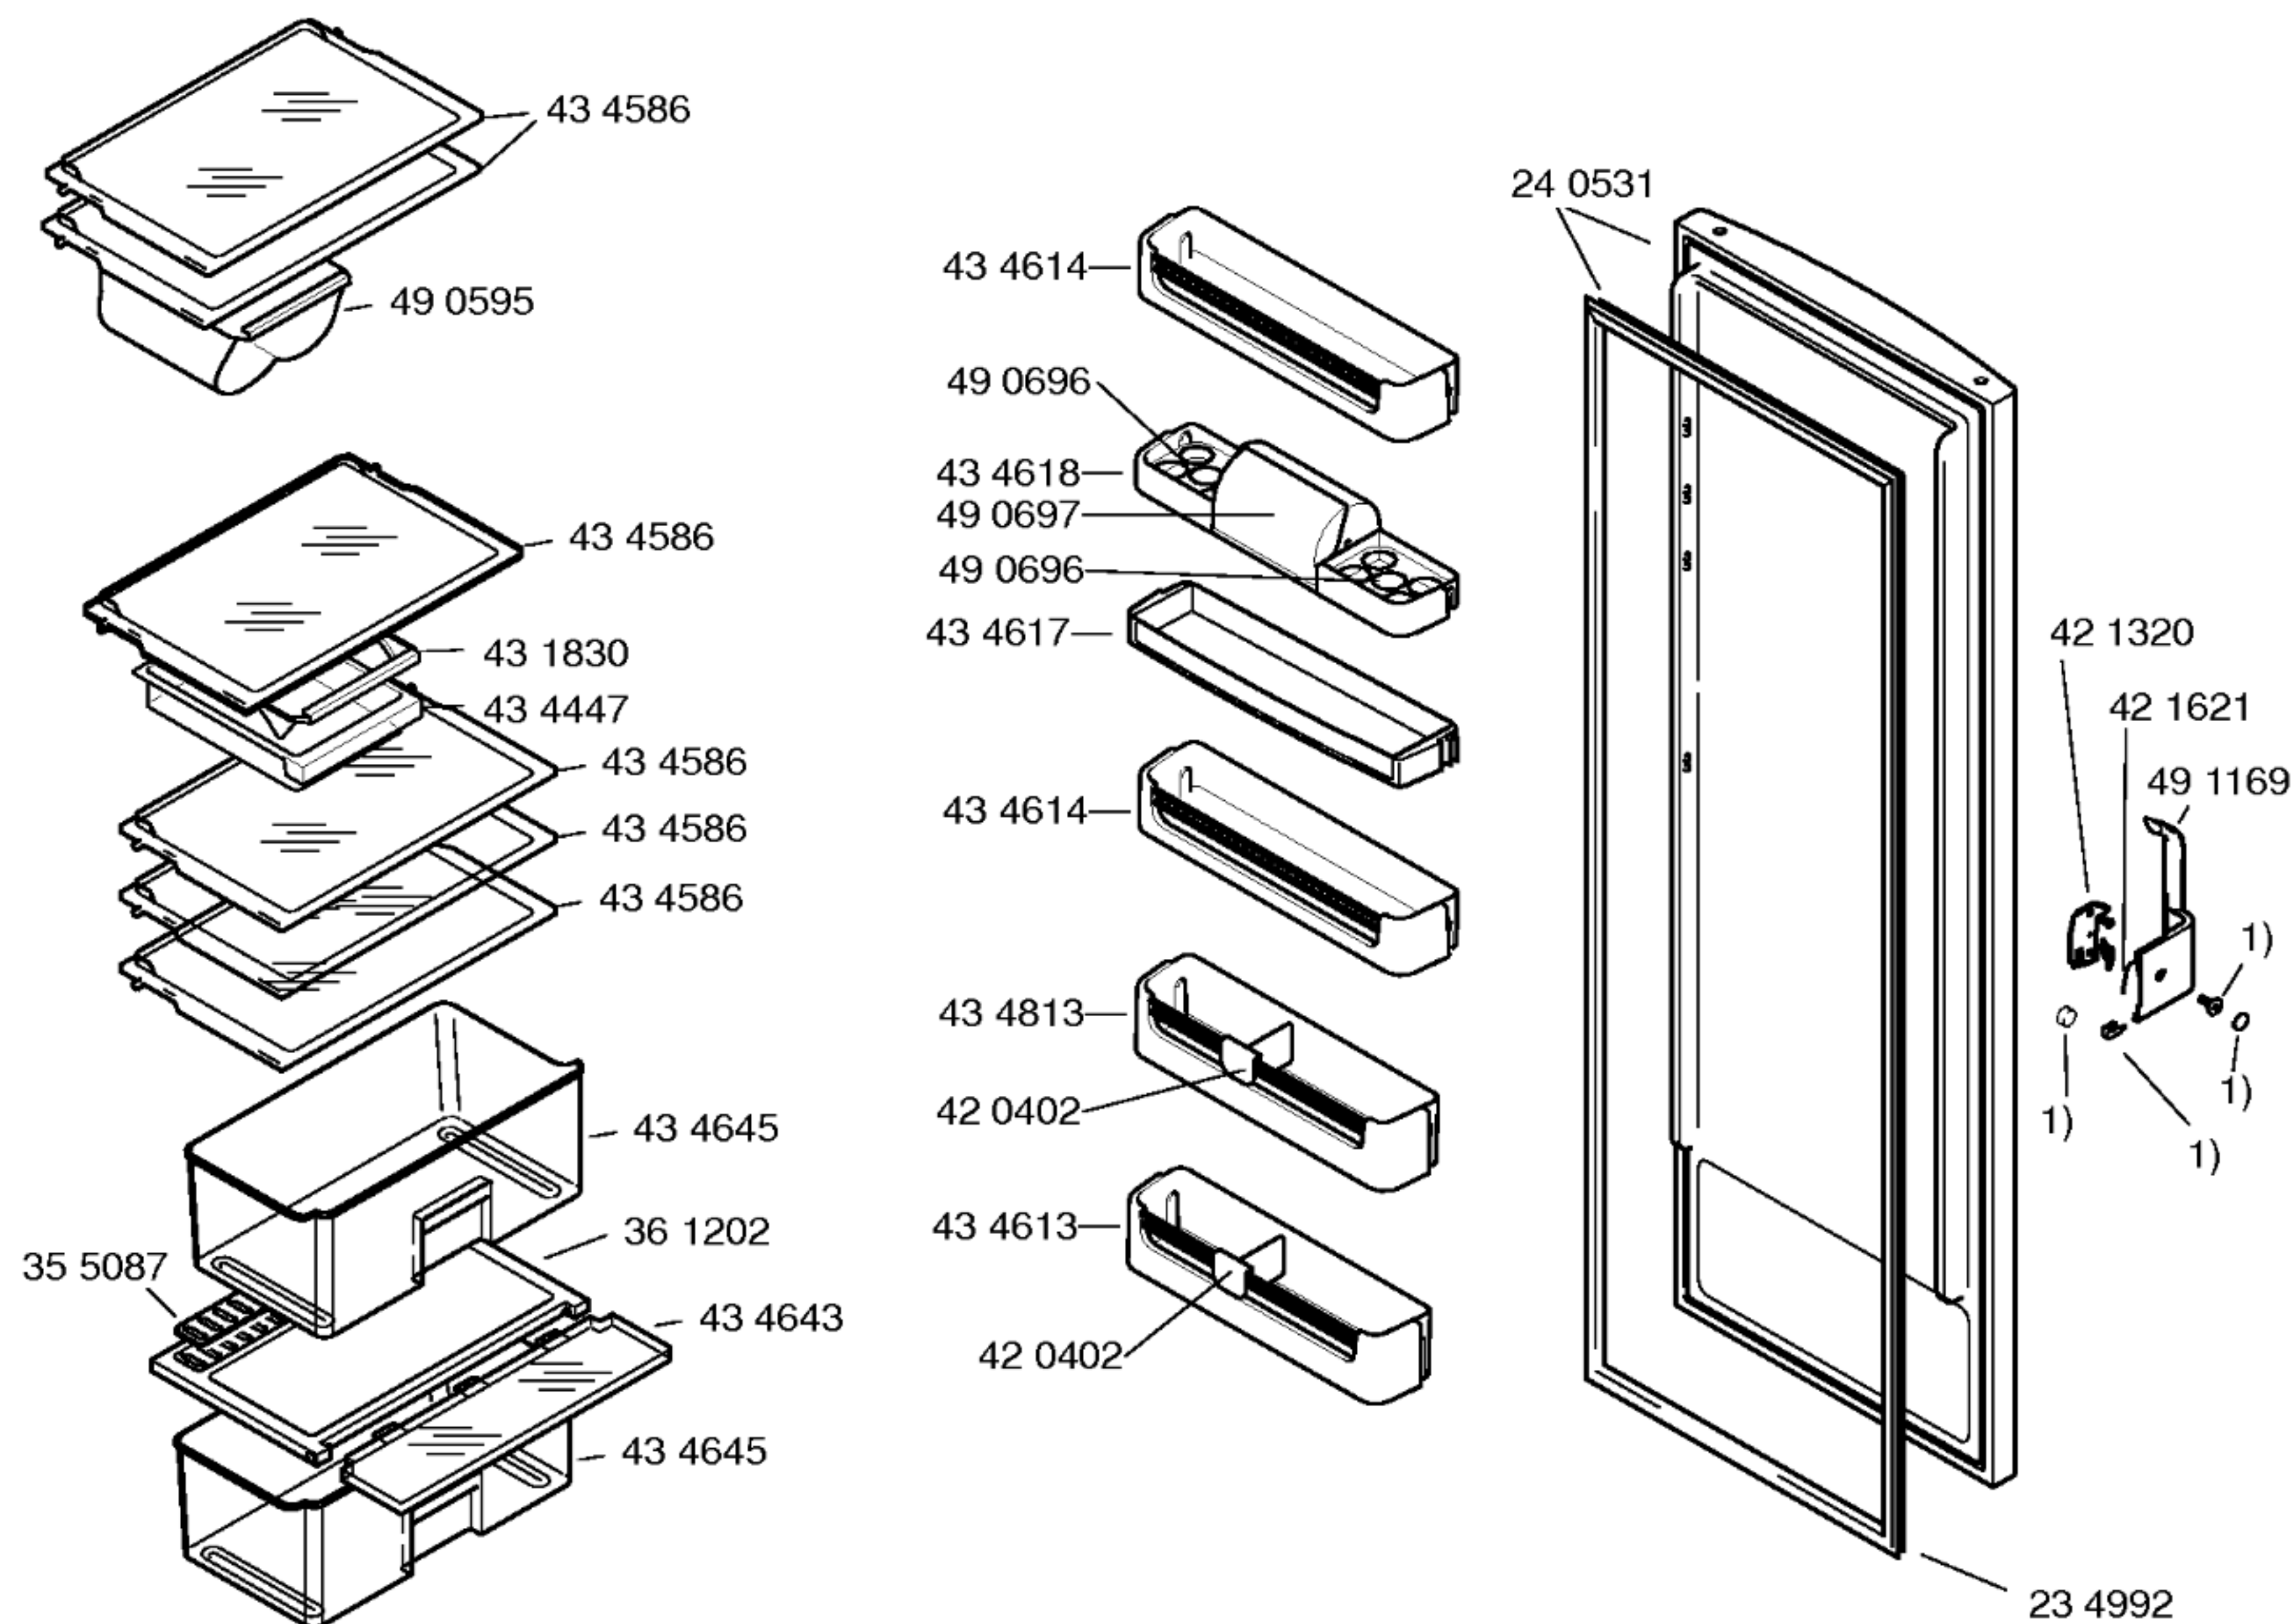

Mat. – Nr. – Konstante
3740

1) Kleinteilesatz
42 2336

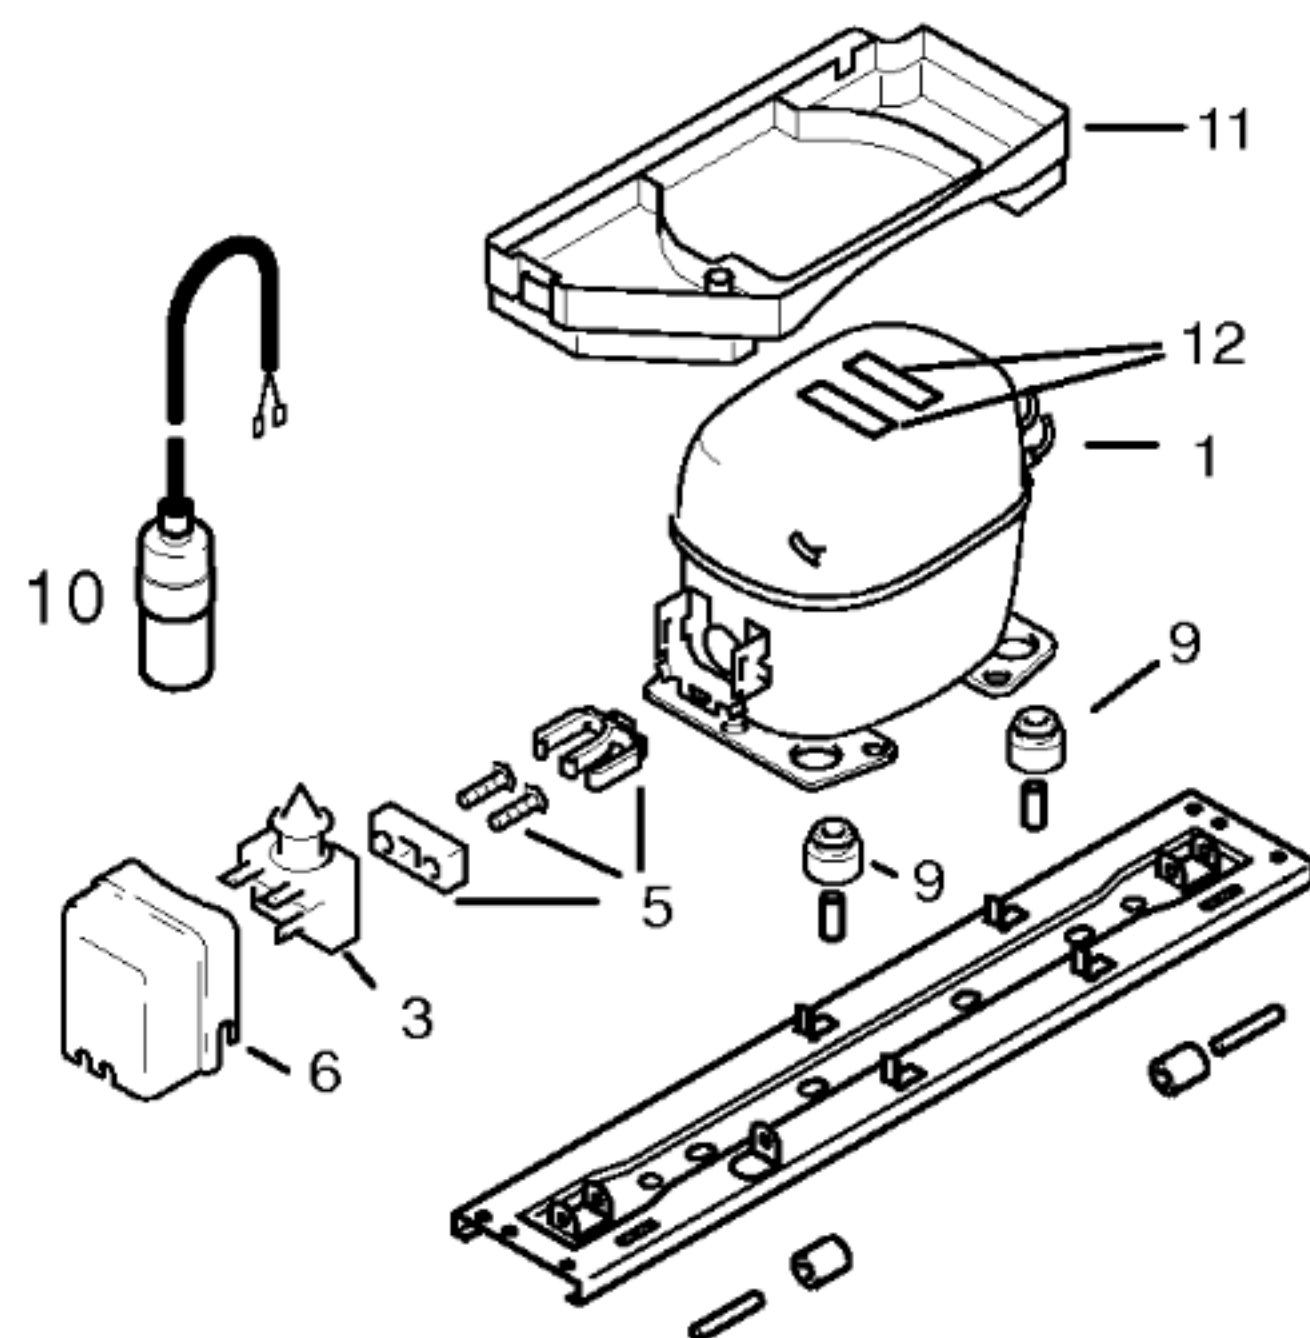Mat. – Nr. – Konstante
3740

	V01		
	Goldstar		
Pos.	NDA52NAEM		
1	14 2206		
2			
3	18 4685		
4			
5	17 0745		
6	17 0744		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11	26 9660		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Goldstar		
Typ/Type		NDA52NAEM		
Förderleistung/Delivery/Débit	l/h	1121		
Anlaufstrom/Starting current/Cour de démarrage	A			
Widerstand/Resistance/Résistance Ha/main/prin	Ω	31,5		
Hi/aux	Ω	8,0		
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values	"warm"			
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*		
Anschlußwert/Conn.load/Puiss. connectée	W	59	61	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
NTC–Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	–18
		+5	12,70 ±0,18	–22
		0	16,33 ±0,16	–26
				43,31 ±1,10
				54,66 ±1,59
				69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild