

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
	43 0136	Austauschgerät RG294G4	exchange unit appareil de rechange
	43 0137	Austauschgerät RG294G5	exchange unit appareil de rechange
		Deckel f. Batteriefach	cover f. battery compartment couvercle p. boîtier de batterie
	73 5825	f. RG294G4	
	73 5826	f. RG294G5	
		ELEKTRISCHE TEILE	ELECTRICAL PARTS PIECES ELECTRIQUE
IC1	73 0883	 LA1260	
IC2	72 0885	LA4140	
IC3	73 7954	LM8365	
TR1, ...	72 9202	 9013 or BC337	
TR2, ...	73 1813	9014L or BC550	
TR3, ...	73 1812	9012 or BC327	
TR20, ...	72 4542	9018F or BF255	
ZD1	72 3098	 ZPD6.8V	
D1, ...	70 6829	1N4148	
D9, ...	70 7504	1N4001 or 1N4007	
	53 0514	Gebrauchsanweisung f. RG294G4, RG294G5	instruction manual instruction d'emploi

SIEMENS
RG294G4
RG294G5
RG298G4
RG298G5

AUDIOGERÄTE
UHREN-RADIO/TISCHGERÄT
Audio Equipment
Radio Watch/Table Set
Equipment Audio
Radio Horloge/de Table

Pos. Item Pos.	Ident-Nr. Ident-No N° d'ident	Bezeichnung	Designation Désignation
	43 0138	Austauschgerät RG298G4	exchange unit appareil de rechange
	43 0139	Austauschgerät RG298G5	exchange unit appareil de rechange
		Deckel f. Batteriefach	cover f. battery compartment
	73 5827	f. RG298G4	couvercle p. boîtier de batterie
	73 5828	f. RG298G5	
		ELEKTRISCHE TEILE	ELECTRICAL PARTS
			PIECES ELECTRIQUE
IC1	73 0885	LA4140(NF)	
IC2	kein ET	CD4042	
IC3	73 7954	LM8365	
IC4	73 3715	78L09 or 7808	
			
TR1, ...	72 9202	9013 or BC337	
TR3, ...	73 1812	9012 or BC327	
TR5, ...	73 1813	9014L or BC550	
TR10, ...	73 4391	9015 or BC560	
TR21, ...	72 4542	9018F or BF255	
			
ZD1	72 3098	ZPD6.2V	
ZD2	73 4942	ZPD5.6V	
TD2	73 4116	1SV201Y	
D1, ...	70 6829	1N4148 or 1N4448	
D49, ...	70 9740	1N4004 or 1N4007	
	kein ET	1N60	
	53 0515	Gebrauchsanweisung f. RG298G4, RG298G5	instruction manual instruction d'emploi