


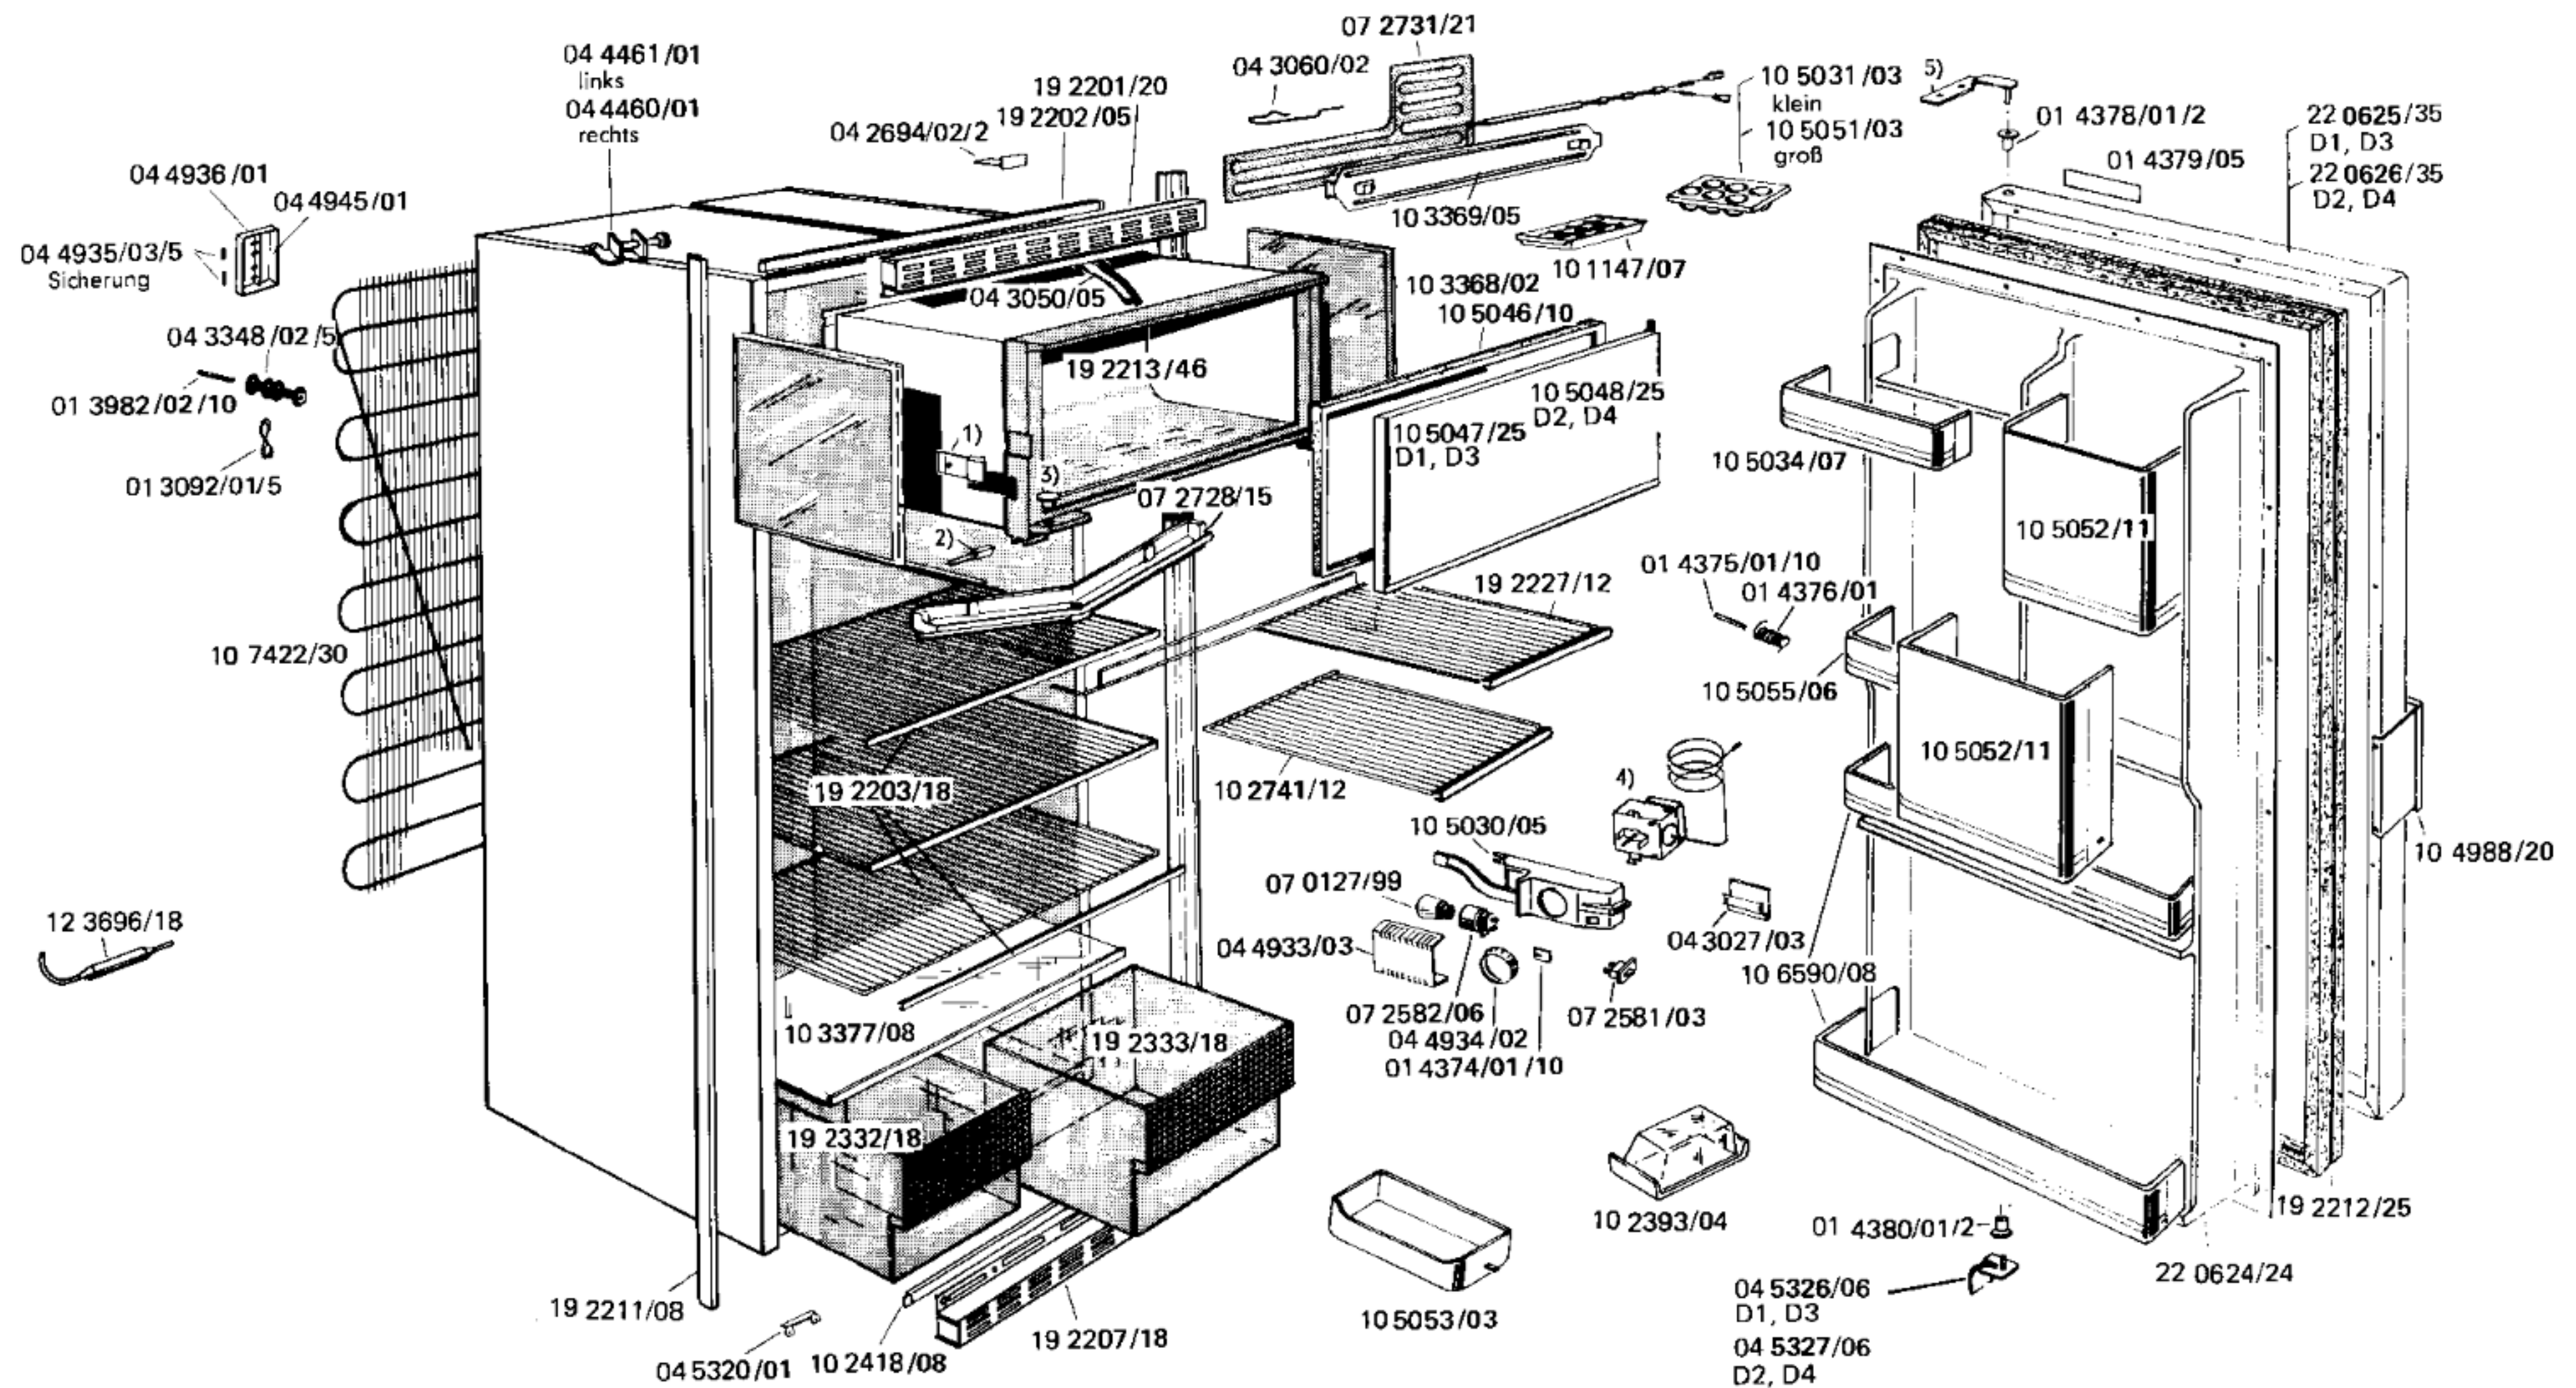


- | | | |
|-------------------------------|--|--|
| 1) 01 2838/02/2 | 5) 04 5322/03
D1, D3
mit Lagerzapfen | 04 5324/03
D2, D4
mit Lagerzapfen |
| 2) 01 2847/03/10 | 04 5323/02
D1, D3
ohne Lagerzapfen | 04 5325/02
D2, D4
ohne Lagerzapfen |
| 3) 01 2844/02/25
Stopfen | | |
| 4) 07 2727/27
Temp.-Regler | | |
| 04 5321/05
Dosenheizung | | |

01 4518/02/20
Stahlschr. für
Dekorrahmen

Dekorleiste
oben
10 5812/08
D3
10 5814/08
D4

unten
10 5814/08
D3
10 5812/08
D4
seitlich
19 2791/08
D3, D4

50 8311/00
Bed.-Anleitung
50 8312/00
Mont.-Anleitung

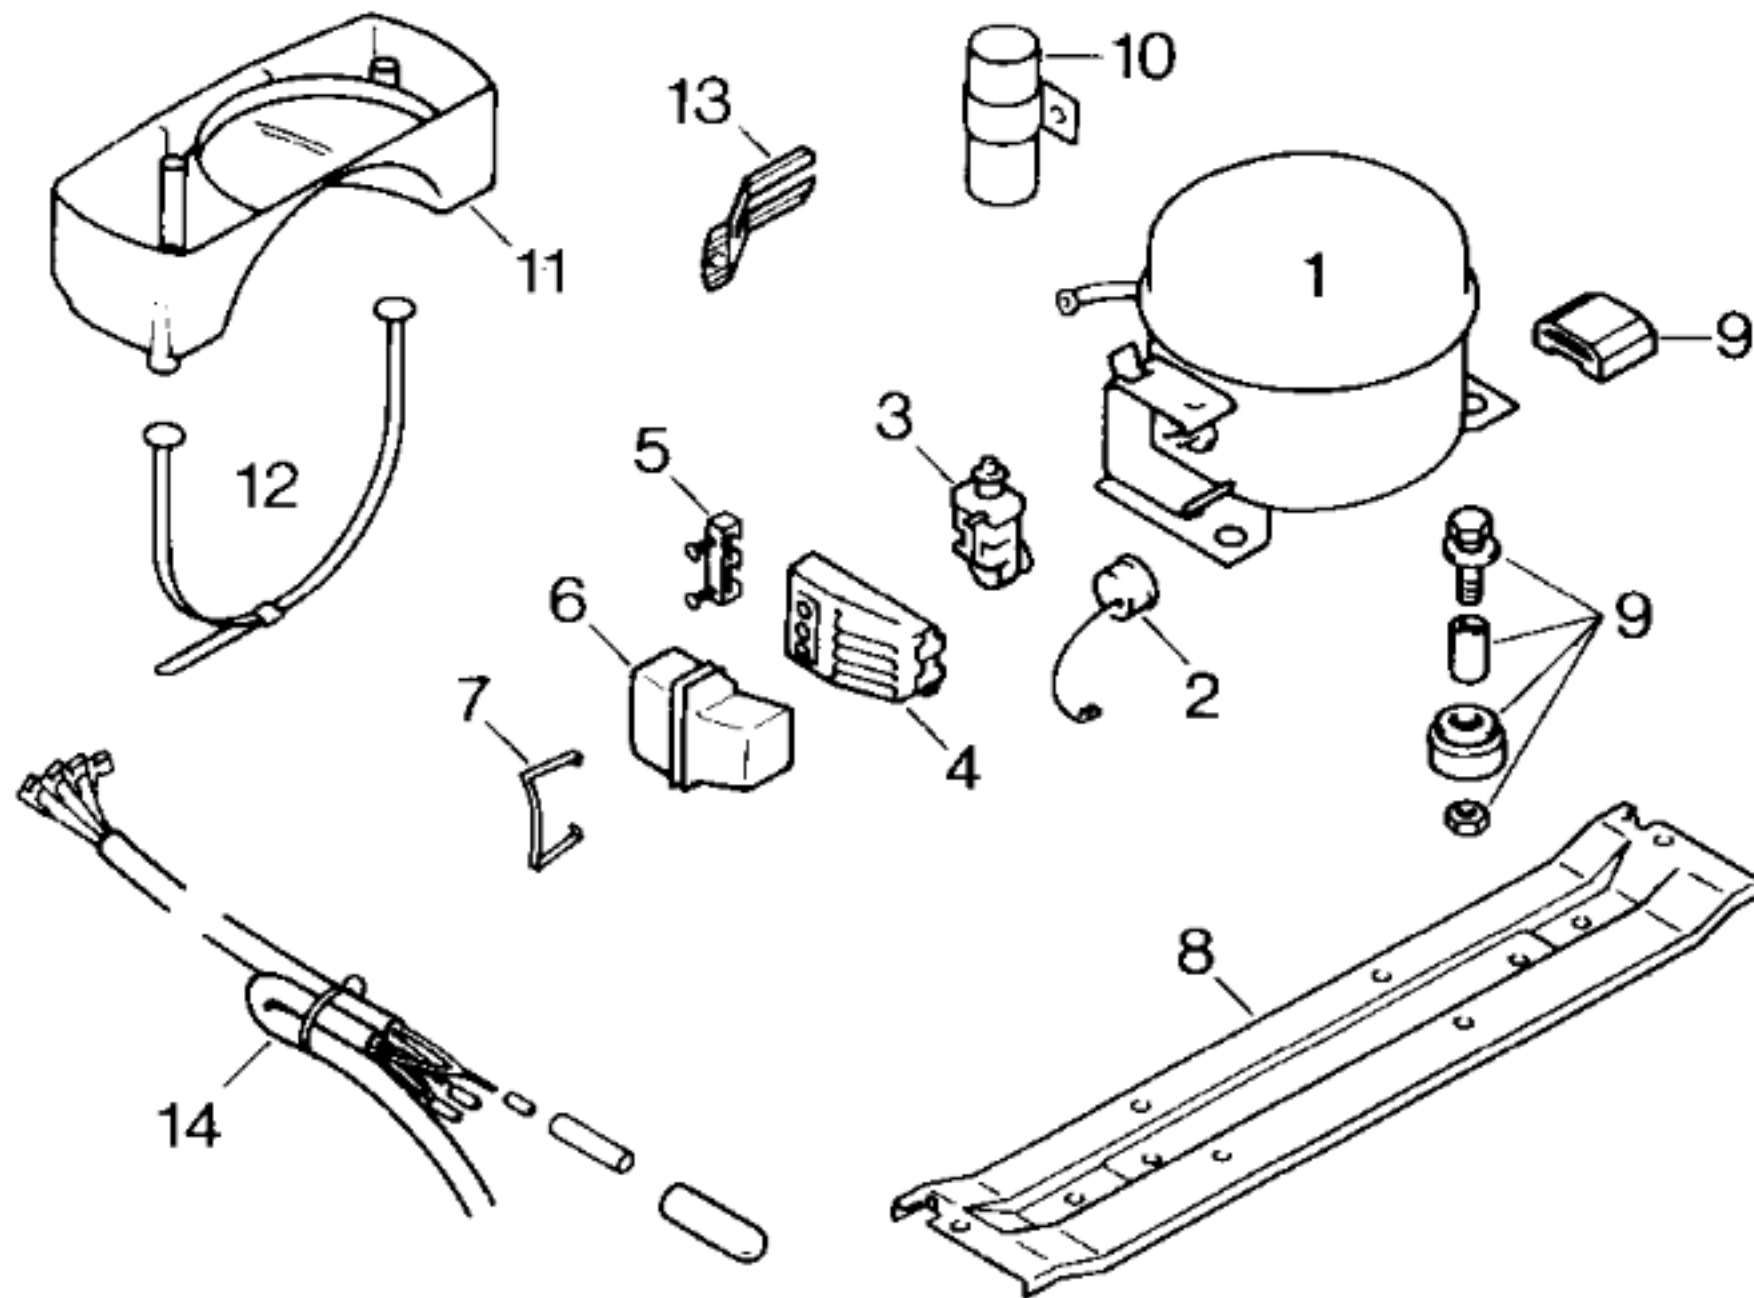

	D1 - D4	D1 - D4	D1 - D4
Pos.	PW	V 1040	TL 5 A
1	Danfoss	Bosch	Danfoss
2	07 1267/22	07 2131/18	14 0065/45
3	07 0262/18	07 3899/09	02 0108/27
4		04 9757/02	
5			02 1361/04
6		04 9758/02	05 1413/06
7			
8			*11 1839/07
9			*05 0166/05/4
10			
11		10 6693/03	*11 1243/01
12			
13			
14			

*) Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Bosch	Danfoss	
Typ/Type		PW 5,5	V 1040	TL 5 A	
Förderleistung/Delivery/Débit	l/h	994	1040	920	
Anlaufstrom/Starting current/Cour. de démarrage	A	9,3	9,5	9,0	
Widerstand/Resistance/Résistance	Ω	11,5	17,6	15,7	
	Hi/aux	44,3	28,7	18,8	
Temp.-Regler/Thermostat		Ranco			
Typ/Type		A 59			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/	„ein“	+ 4	+ 4		
Valeurs de commutation	„aus“	- 29	- 20		
(„abtauen“ od.)	„alarm“				
Füllmenge/Fill.quantity/Charge	R12	g	130		
Anschlußwert/Conn.load/Puiss. connectée		W	120		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω	2120			
Leistung/Power/Puissance	W	14,5			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				