


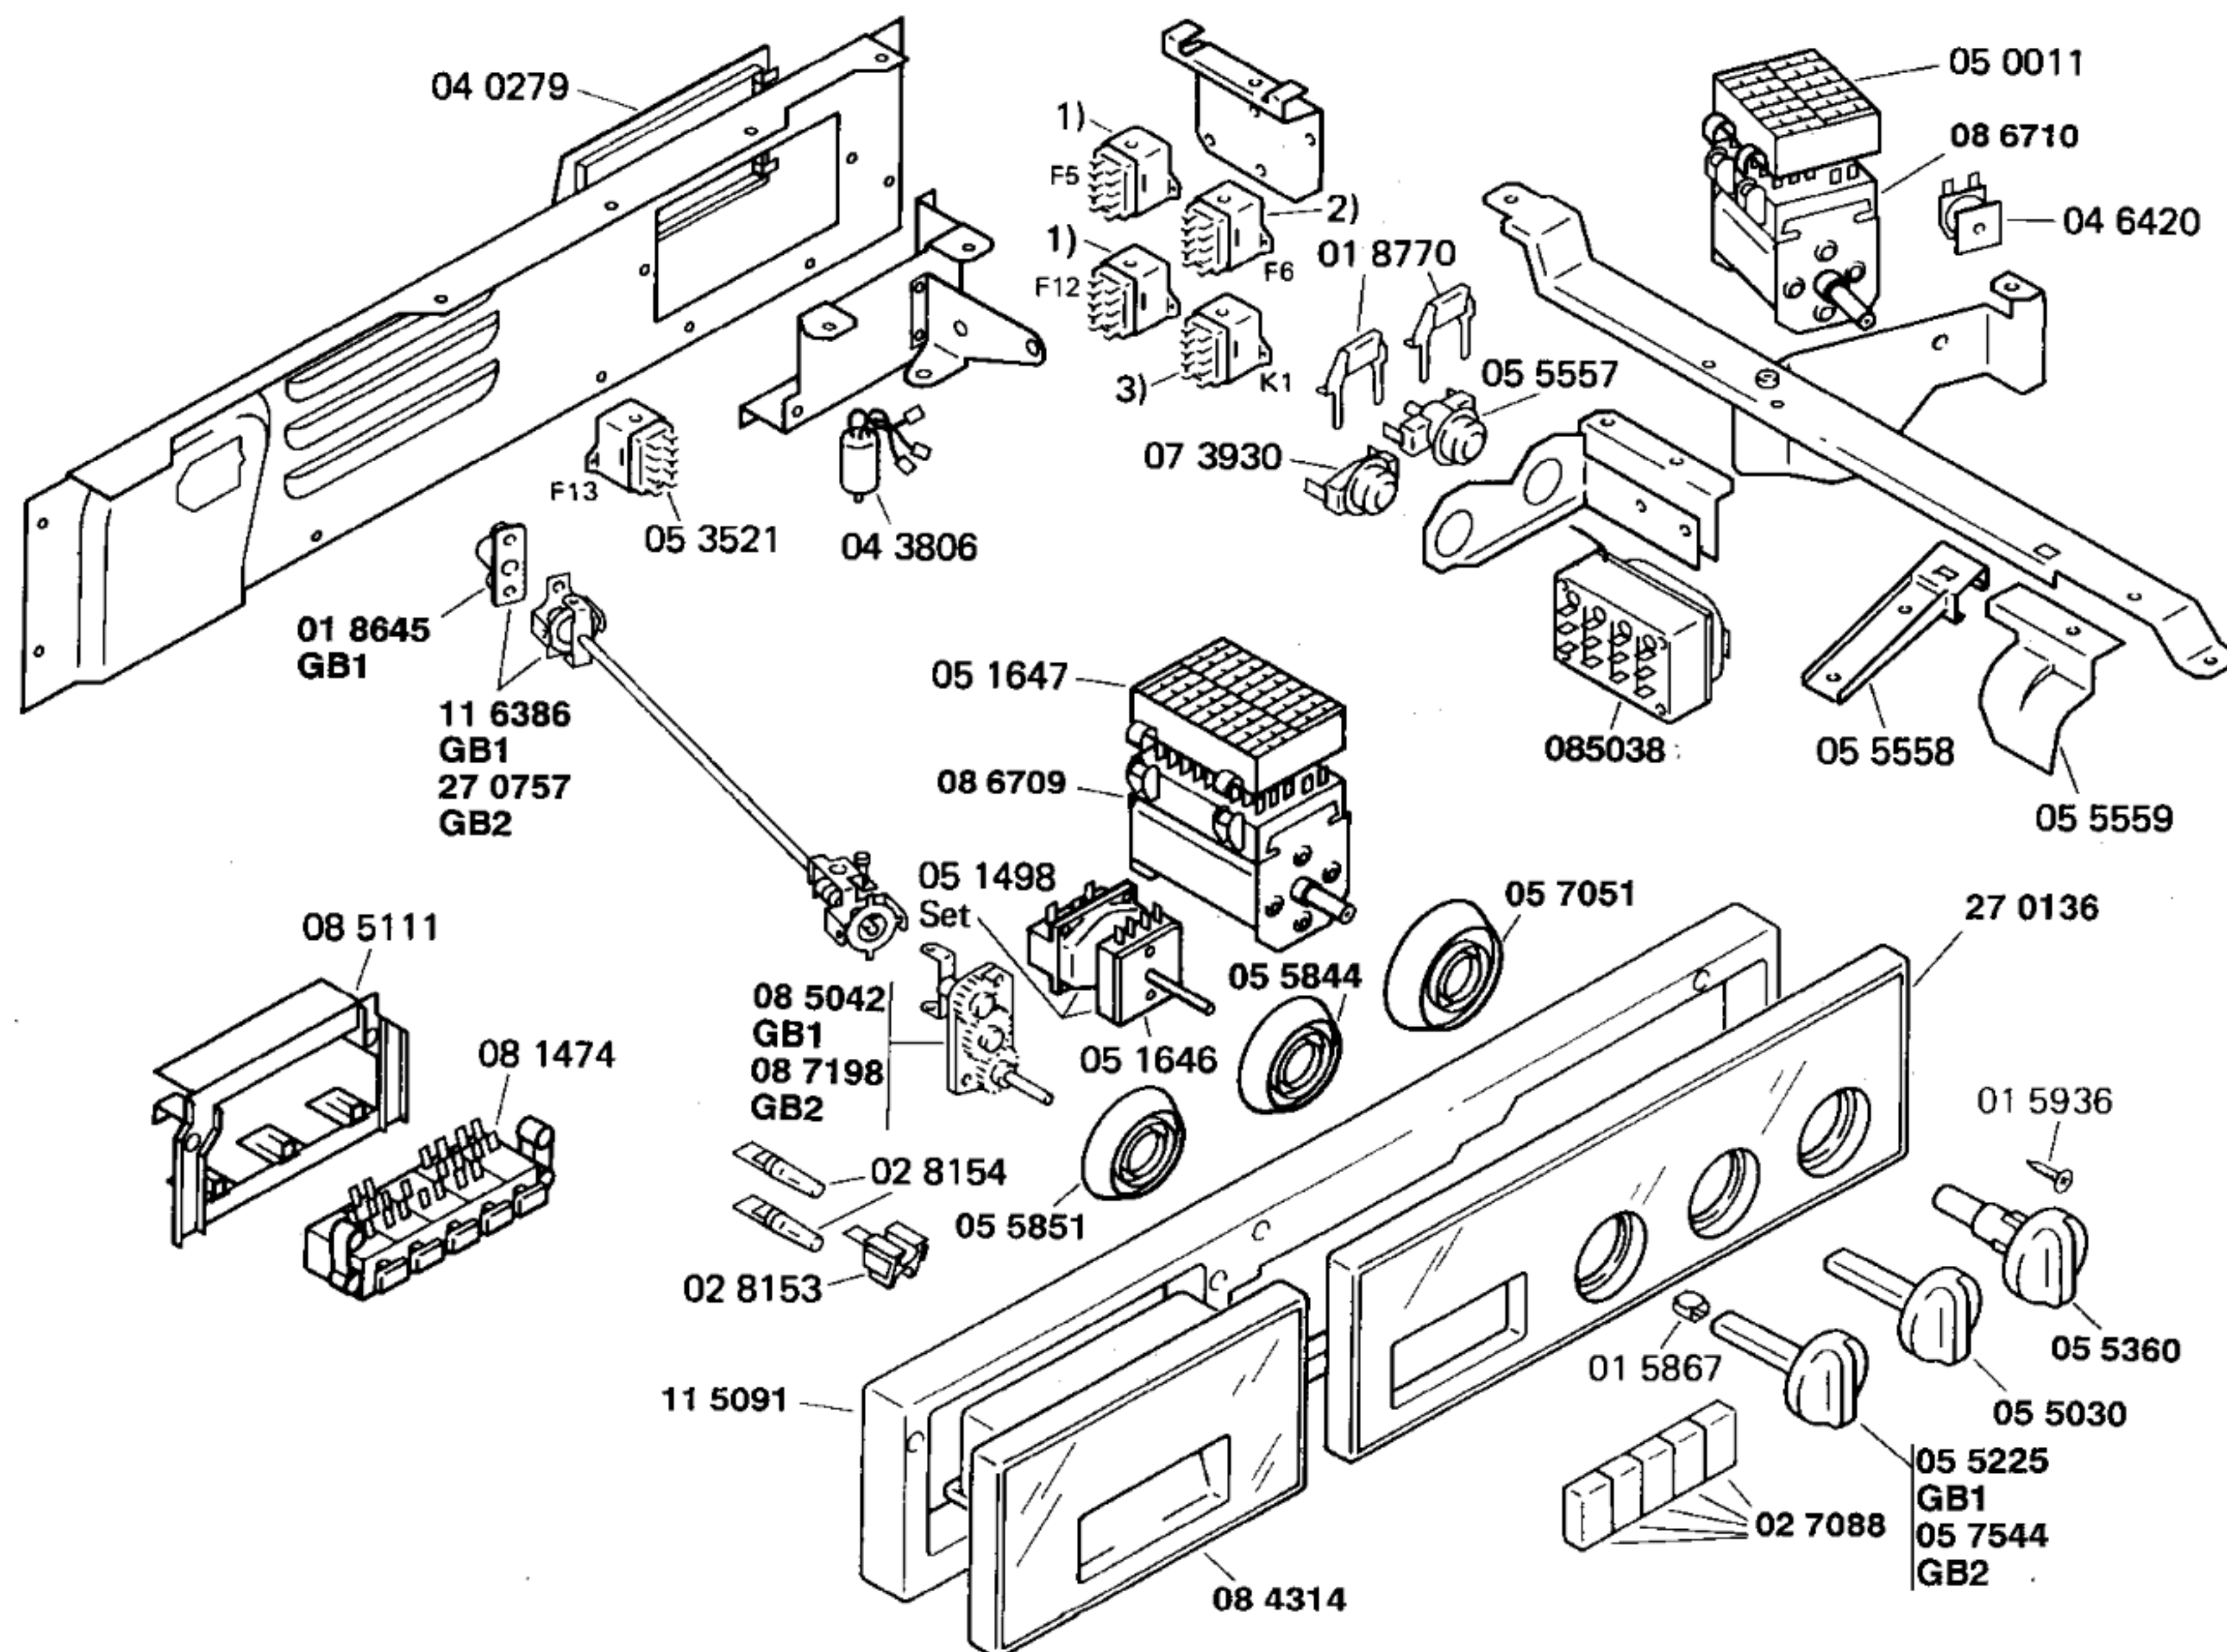



Aufstellanweisung
51 3771
(D,F,I,NL,GB)
Gebrauchsanweisung
51 3766
(D,F,I,NL,GB)
Kurzanleitung
51 3744
(D,F,I,NL,GB)

1) 05 3521


2) 05 5621

3) 05 3521

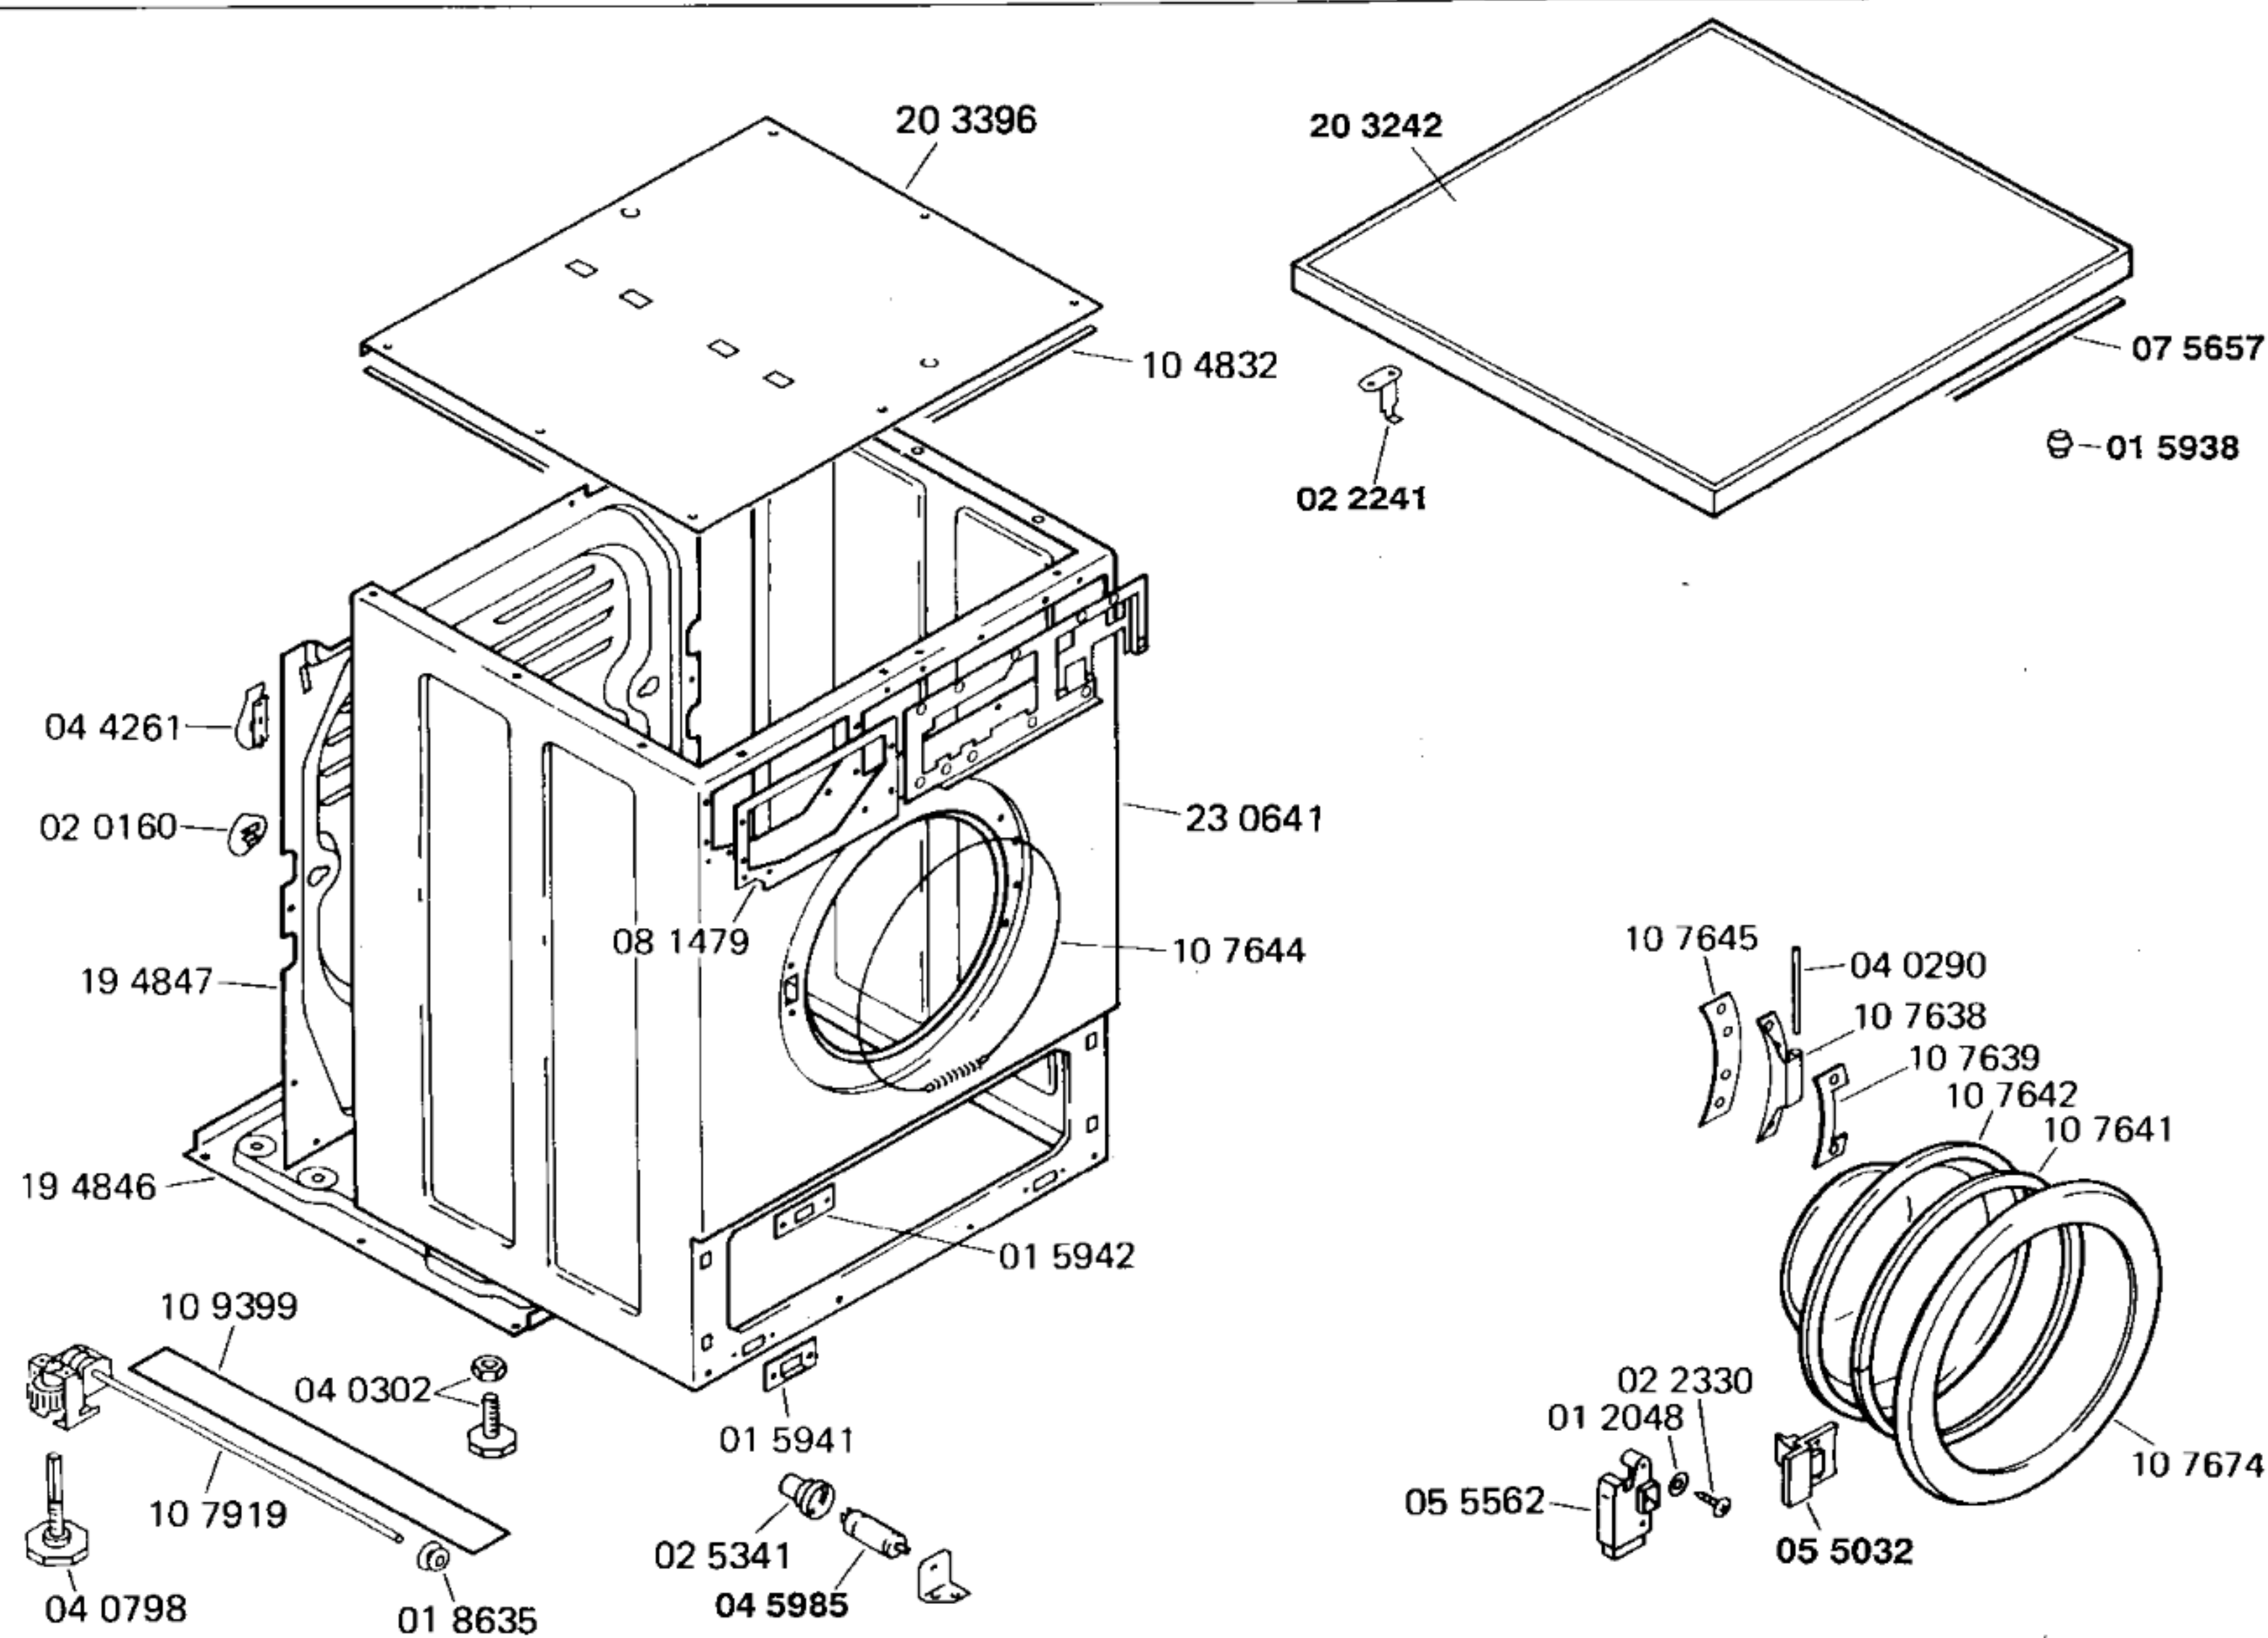

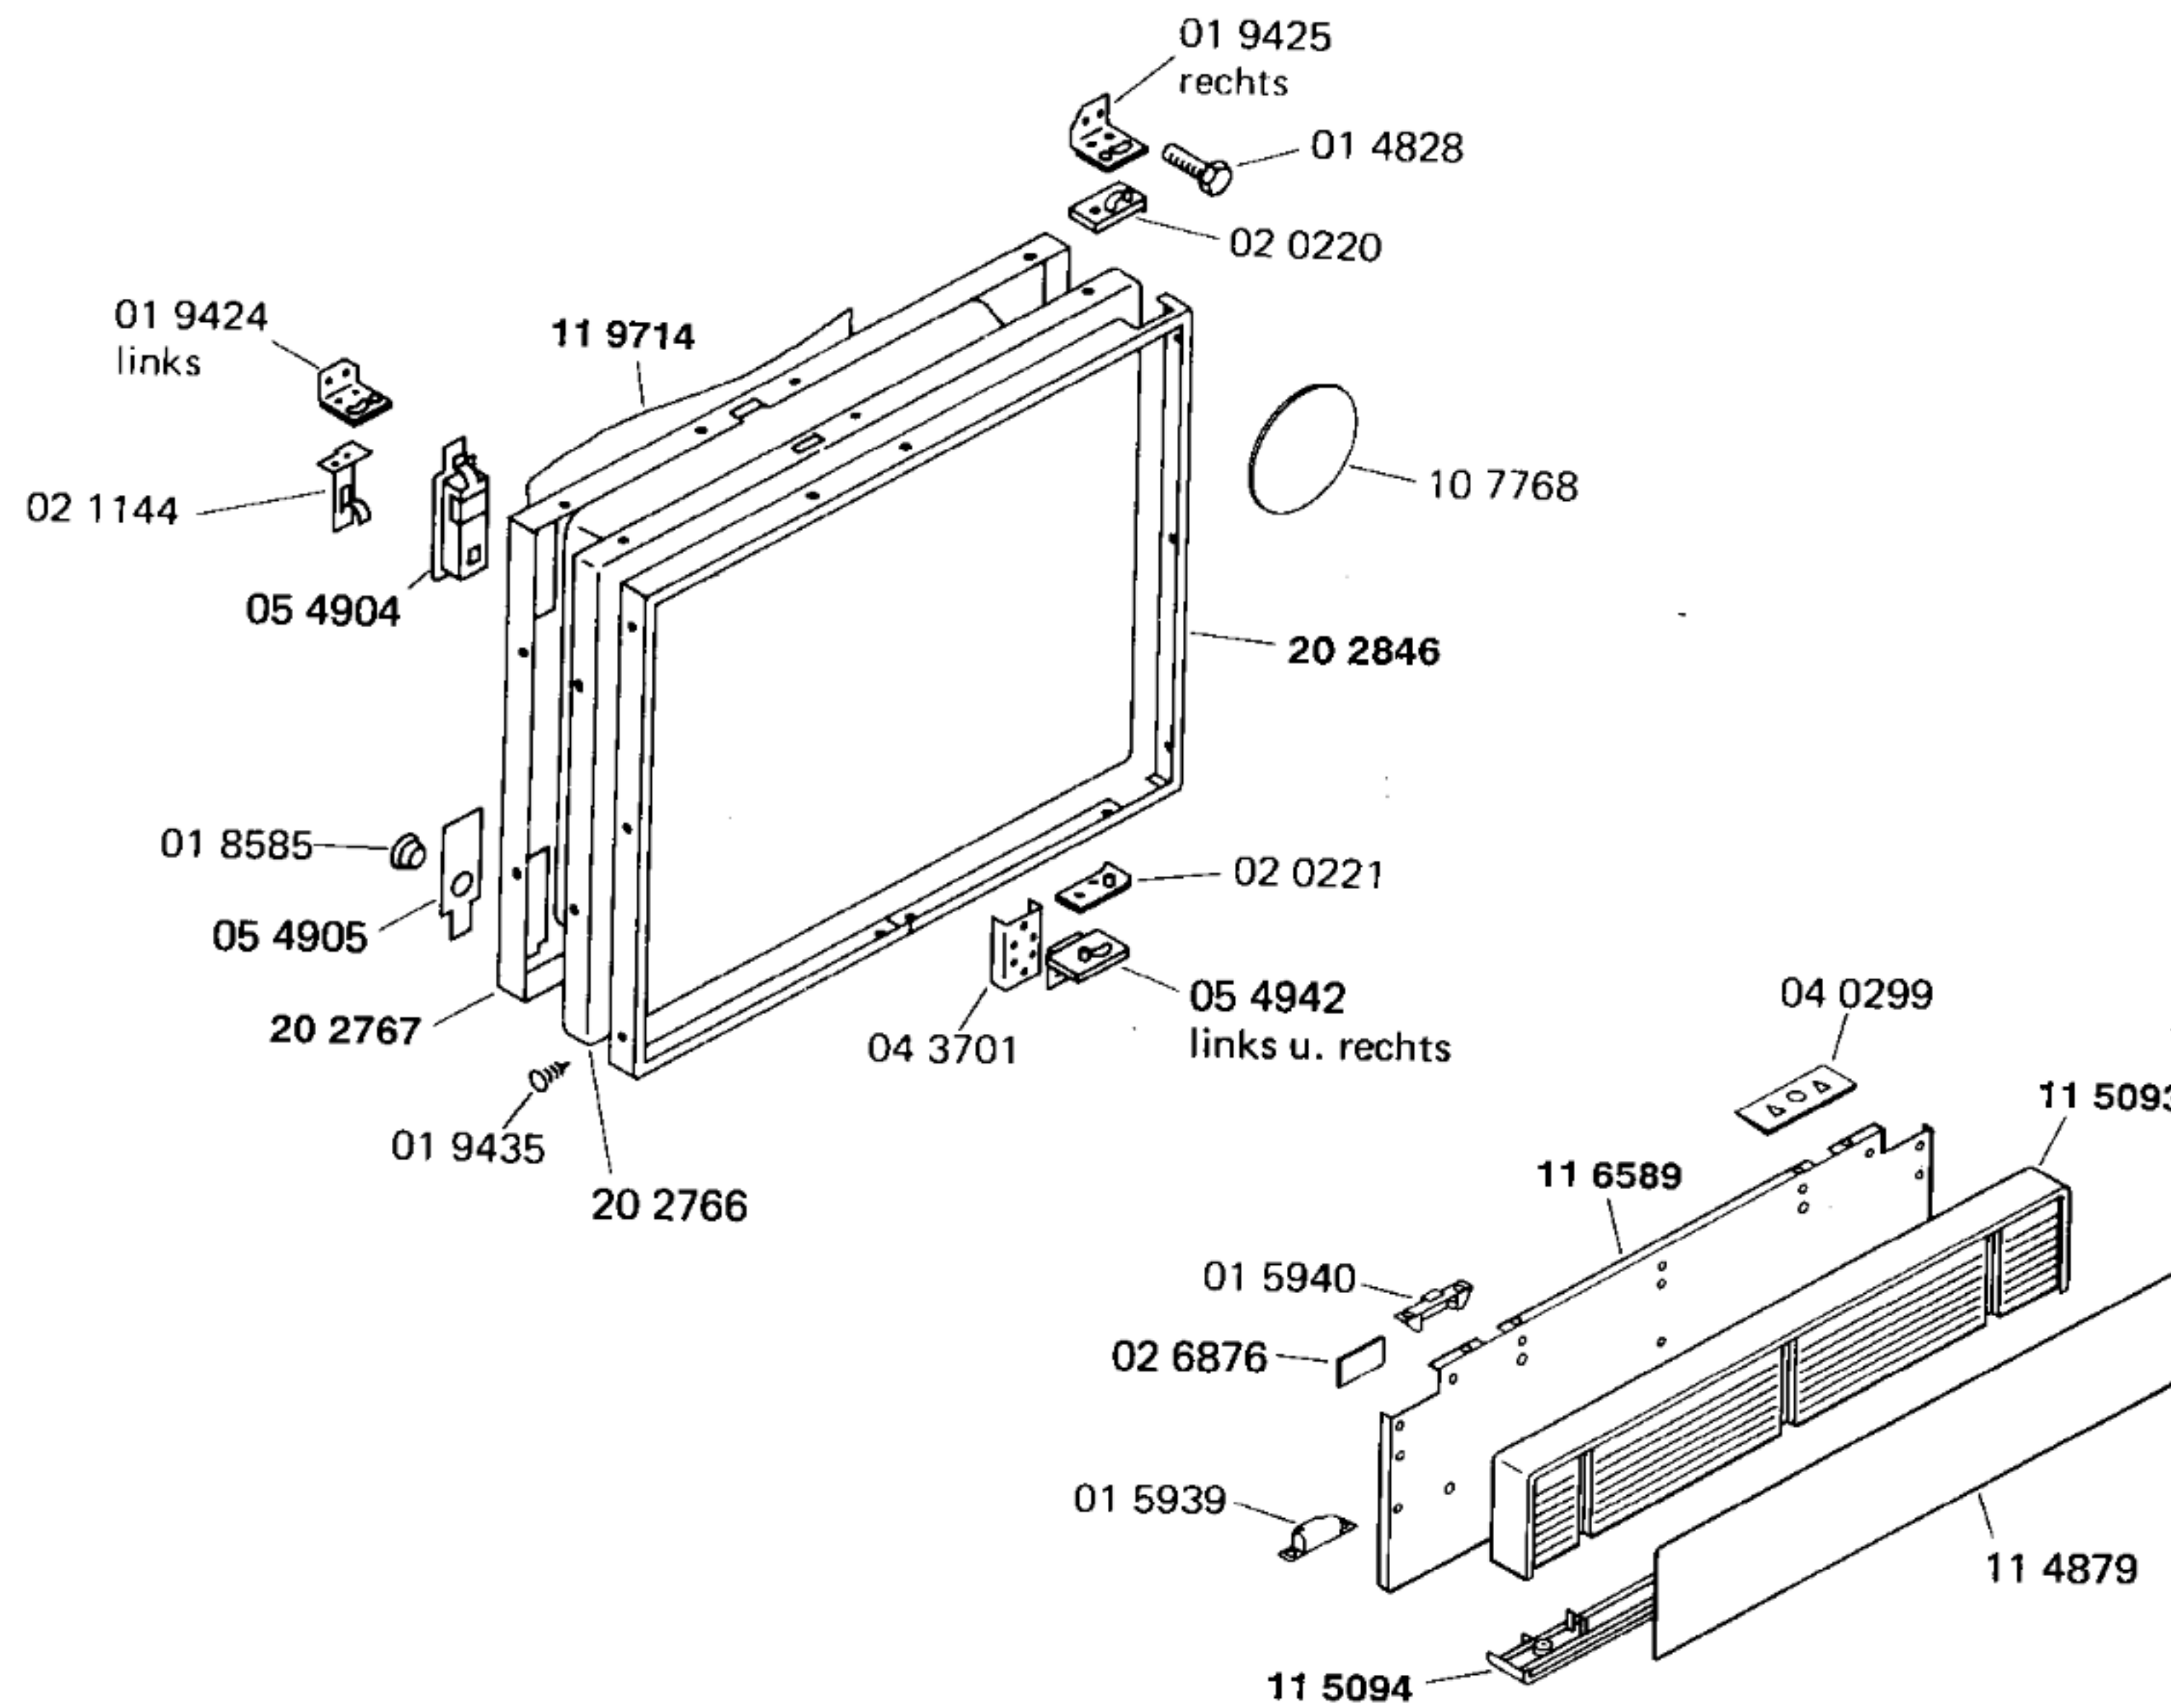

Ident-Nummern-Konstante
3740

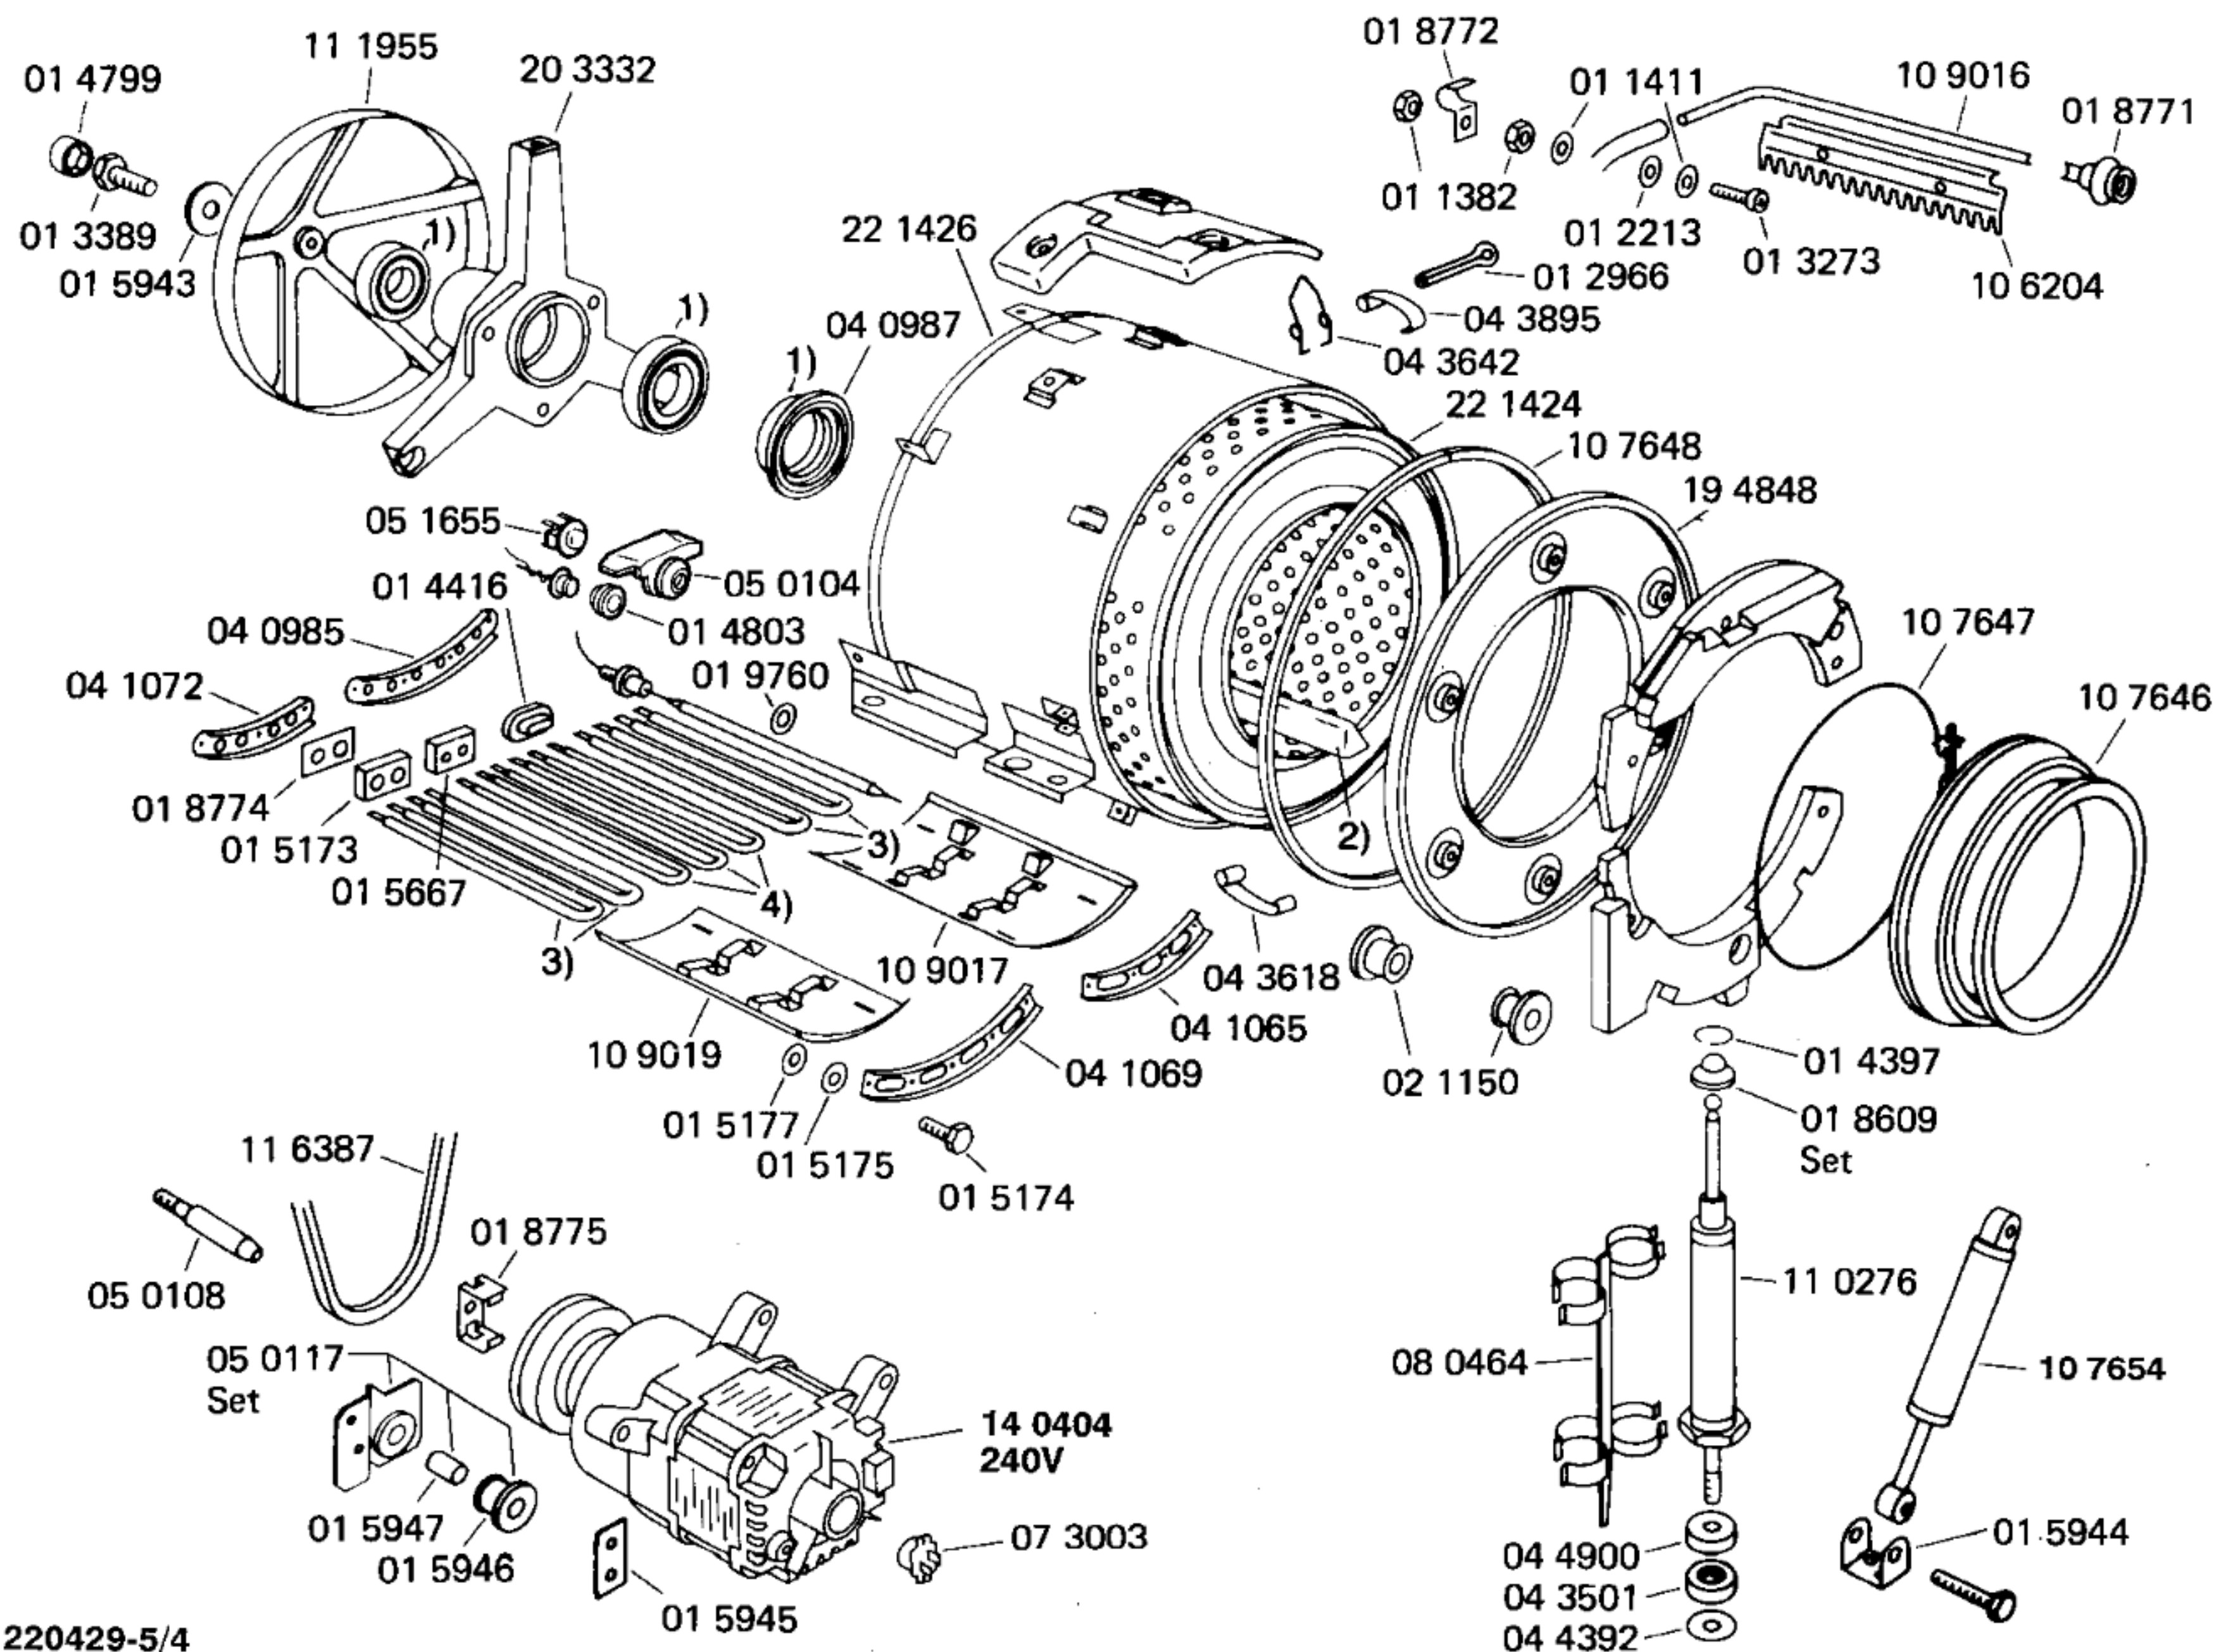

- 1) 10 8898
Set
- 2) 10 8892
- 3) 07 5317
120V
- 4) 08 2898
240V

