



Ident – Nummern – Konstante
3740

51 3432
Gebrauchsanweisung
(D,GB,F,I,NL,N)

- 1) 02 6817
 - 2) 02 9165
 - 3) 02 6816
 - 4) 05 6520
 - 5) 02 6824
 - 6) 05 6518
 - 7) 02 9453
 - 8) 05 6516
 - 9) 05 6517
 - 10) 02 8793
 - 11) 08 5716
 - 12) 11 8471
 - 13) 11 8475
 - 14) 11 8480
- EU1,CH
11 8492
F1

EU1,CH1
11 8492
F1

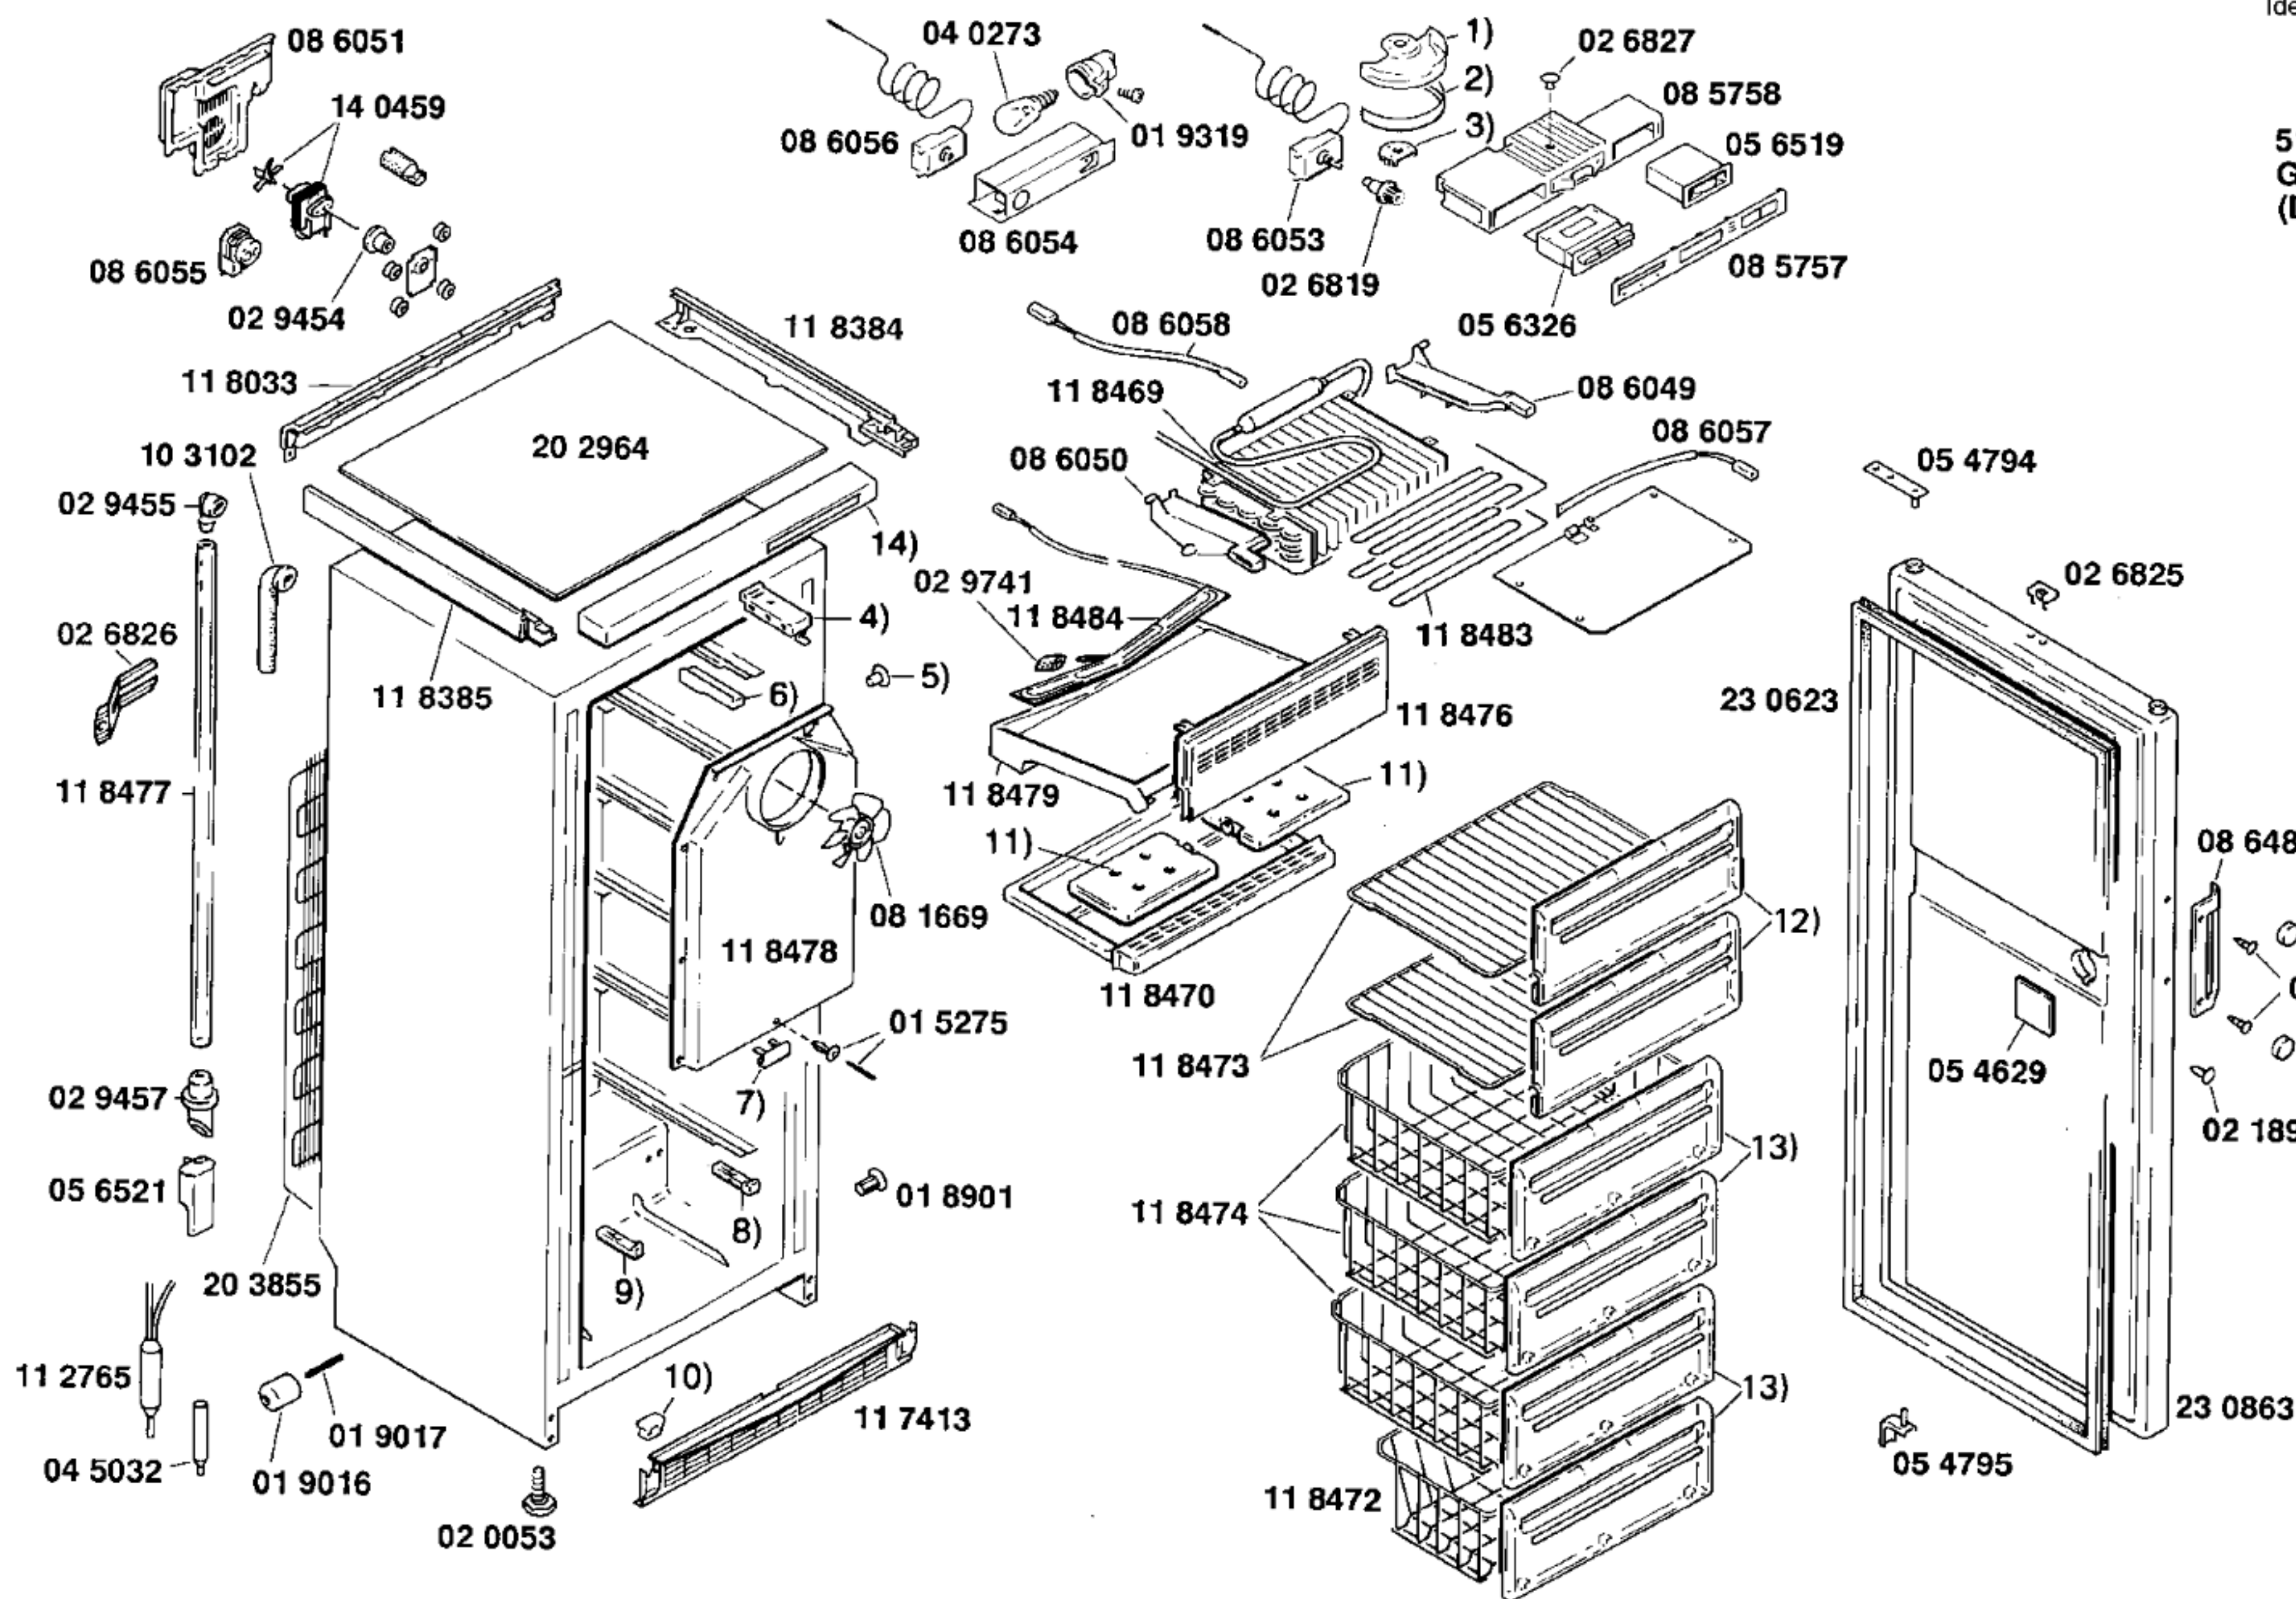

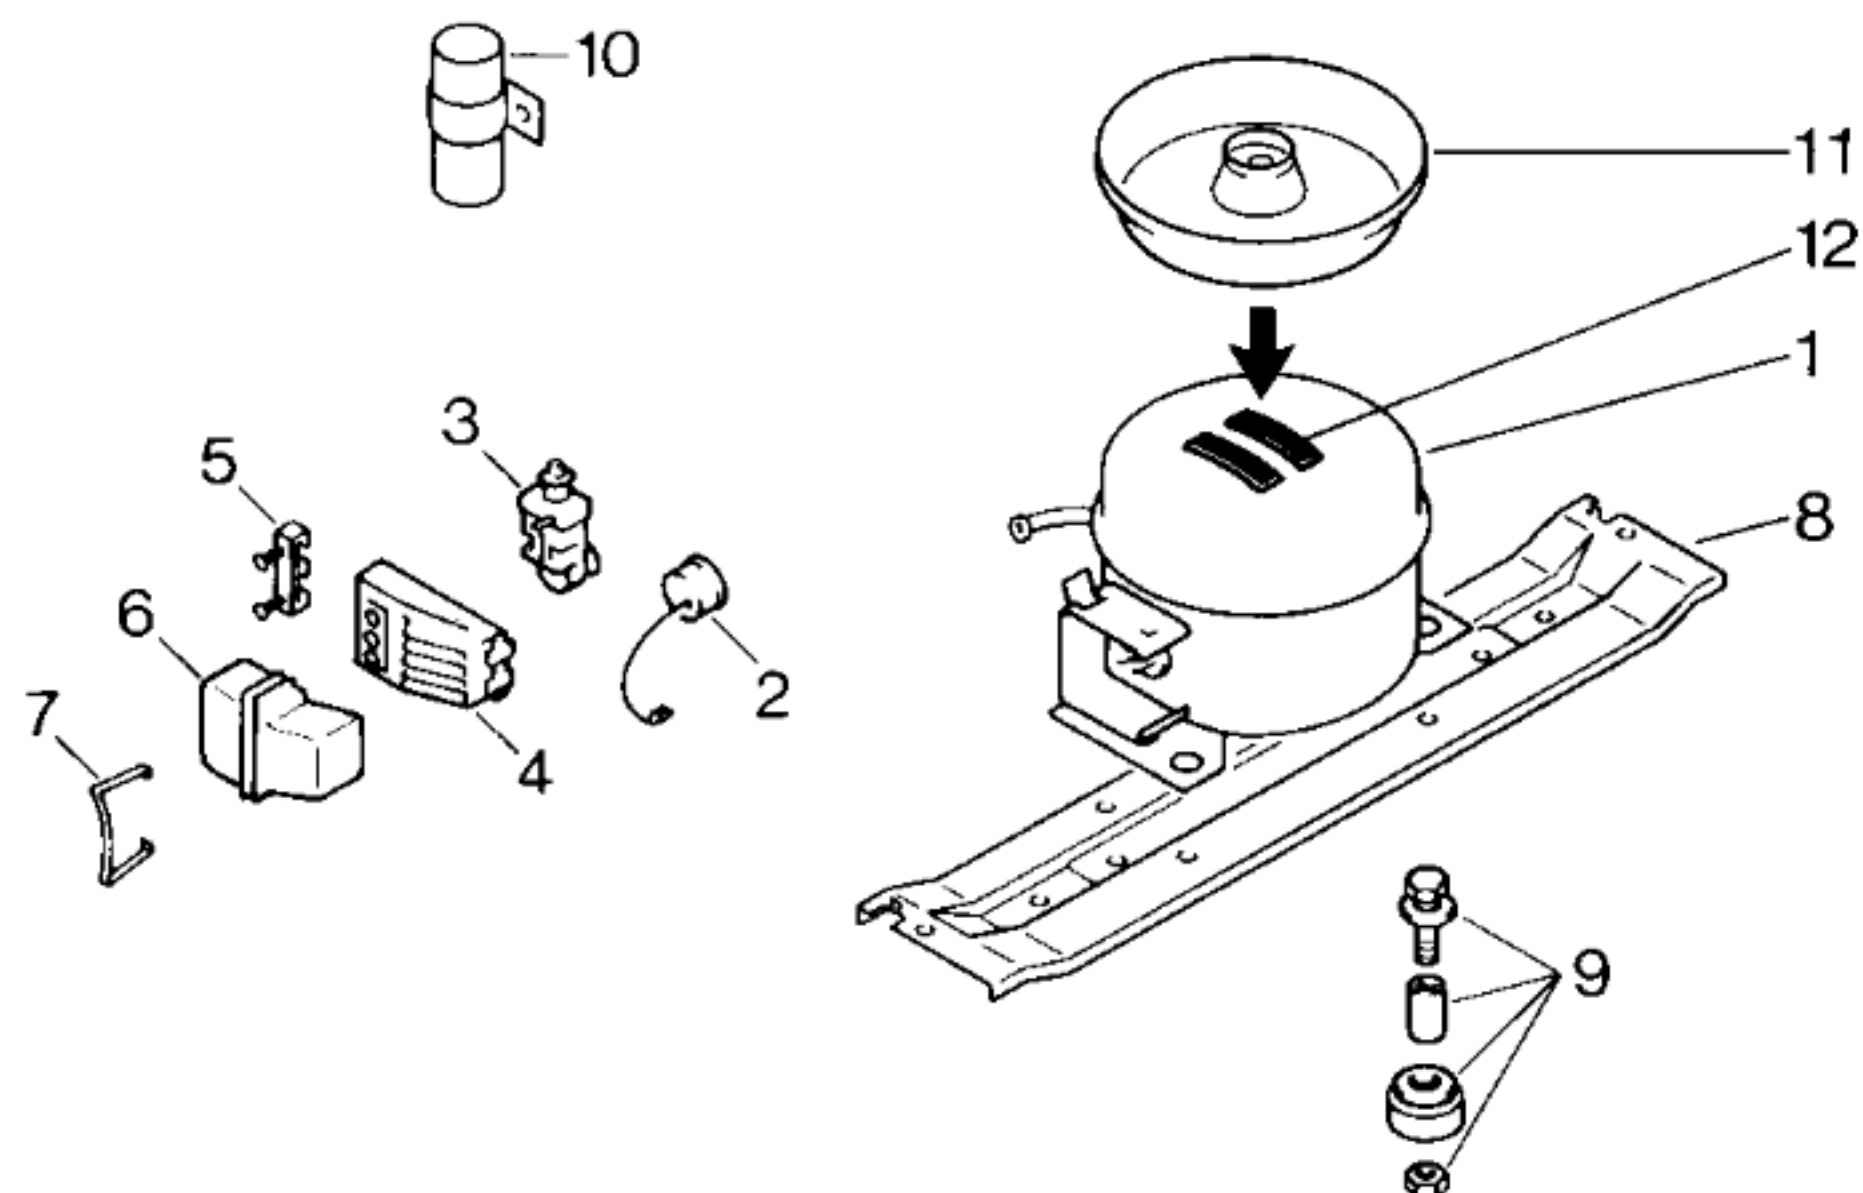Ident – Nummern – Konstante
3740

Pos.	EU1,CH1,F1		
	Aspera		
	BY 1116 A-BC		
1	14 0460		
2	02 6559		
3	02 9456		
4	05 1748		
5			
6	05 1746		
7	02 2339		
8	11 9114		
9	05 0166		
10	05 6524		
11	08 6060		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera		
Typ/Type		BY 1116 A-BC		
Förderleistung/Delivery/Débit	l/h	1450		
Anlaufstrom/Starting current/Cour. de démarrage	A	9,9		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	11,7		
	Hi/aux Ω	37,7		
Temp.-Regler/Thermostat		Danfoss		Ranco
Typ/Type		077BO/091X4742		K 50 H 5658
Reglerstellung/Position		kalt warm		ein aus
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-26,9 - 18		-12 -15
Valeurs de commutation	„aus“	-33,5 - 23		
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R12 g	220		
Anschlußwert/Conn.load/Puiss. connectée	W	170		
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung
Widerstand/Resistance/Résistance	Ω	173		6050
Leistung/Power/Puissance	W	280		8
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω	340		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω	6500		