



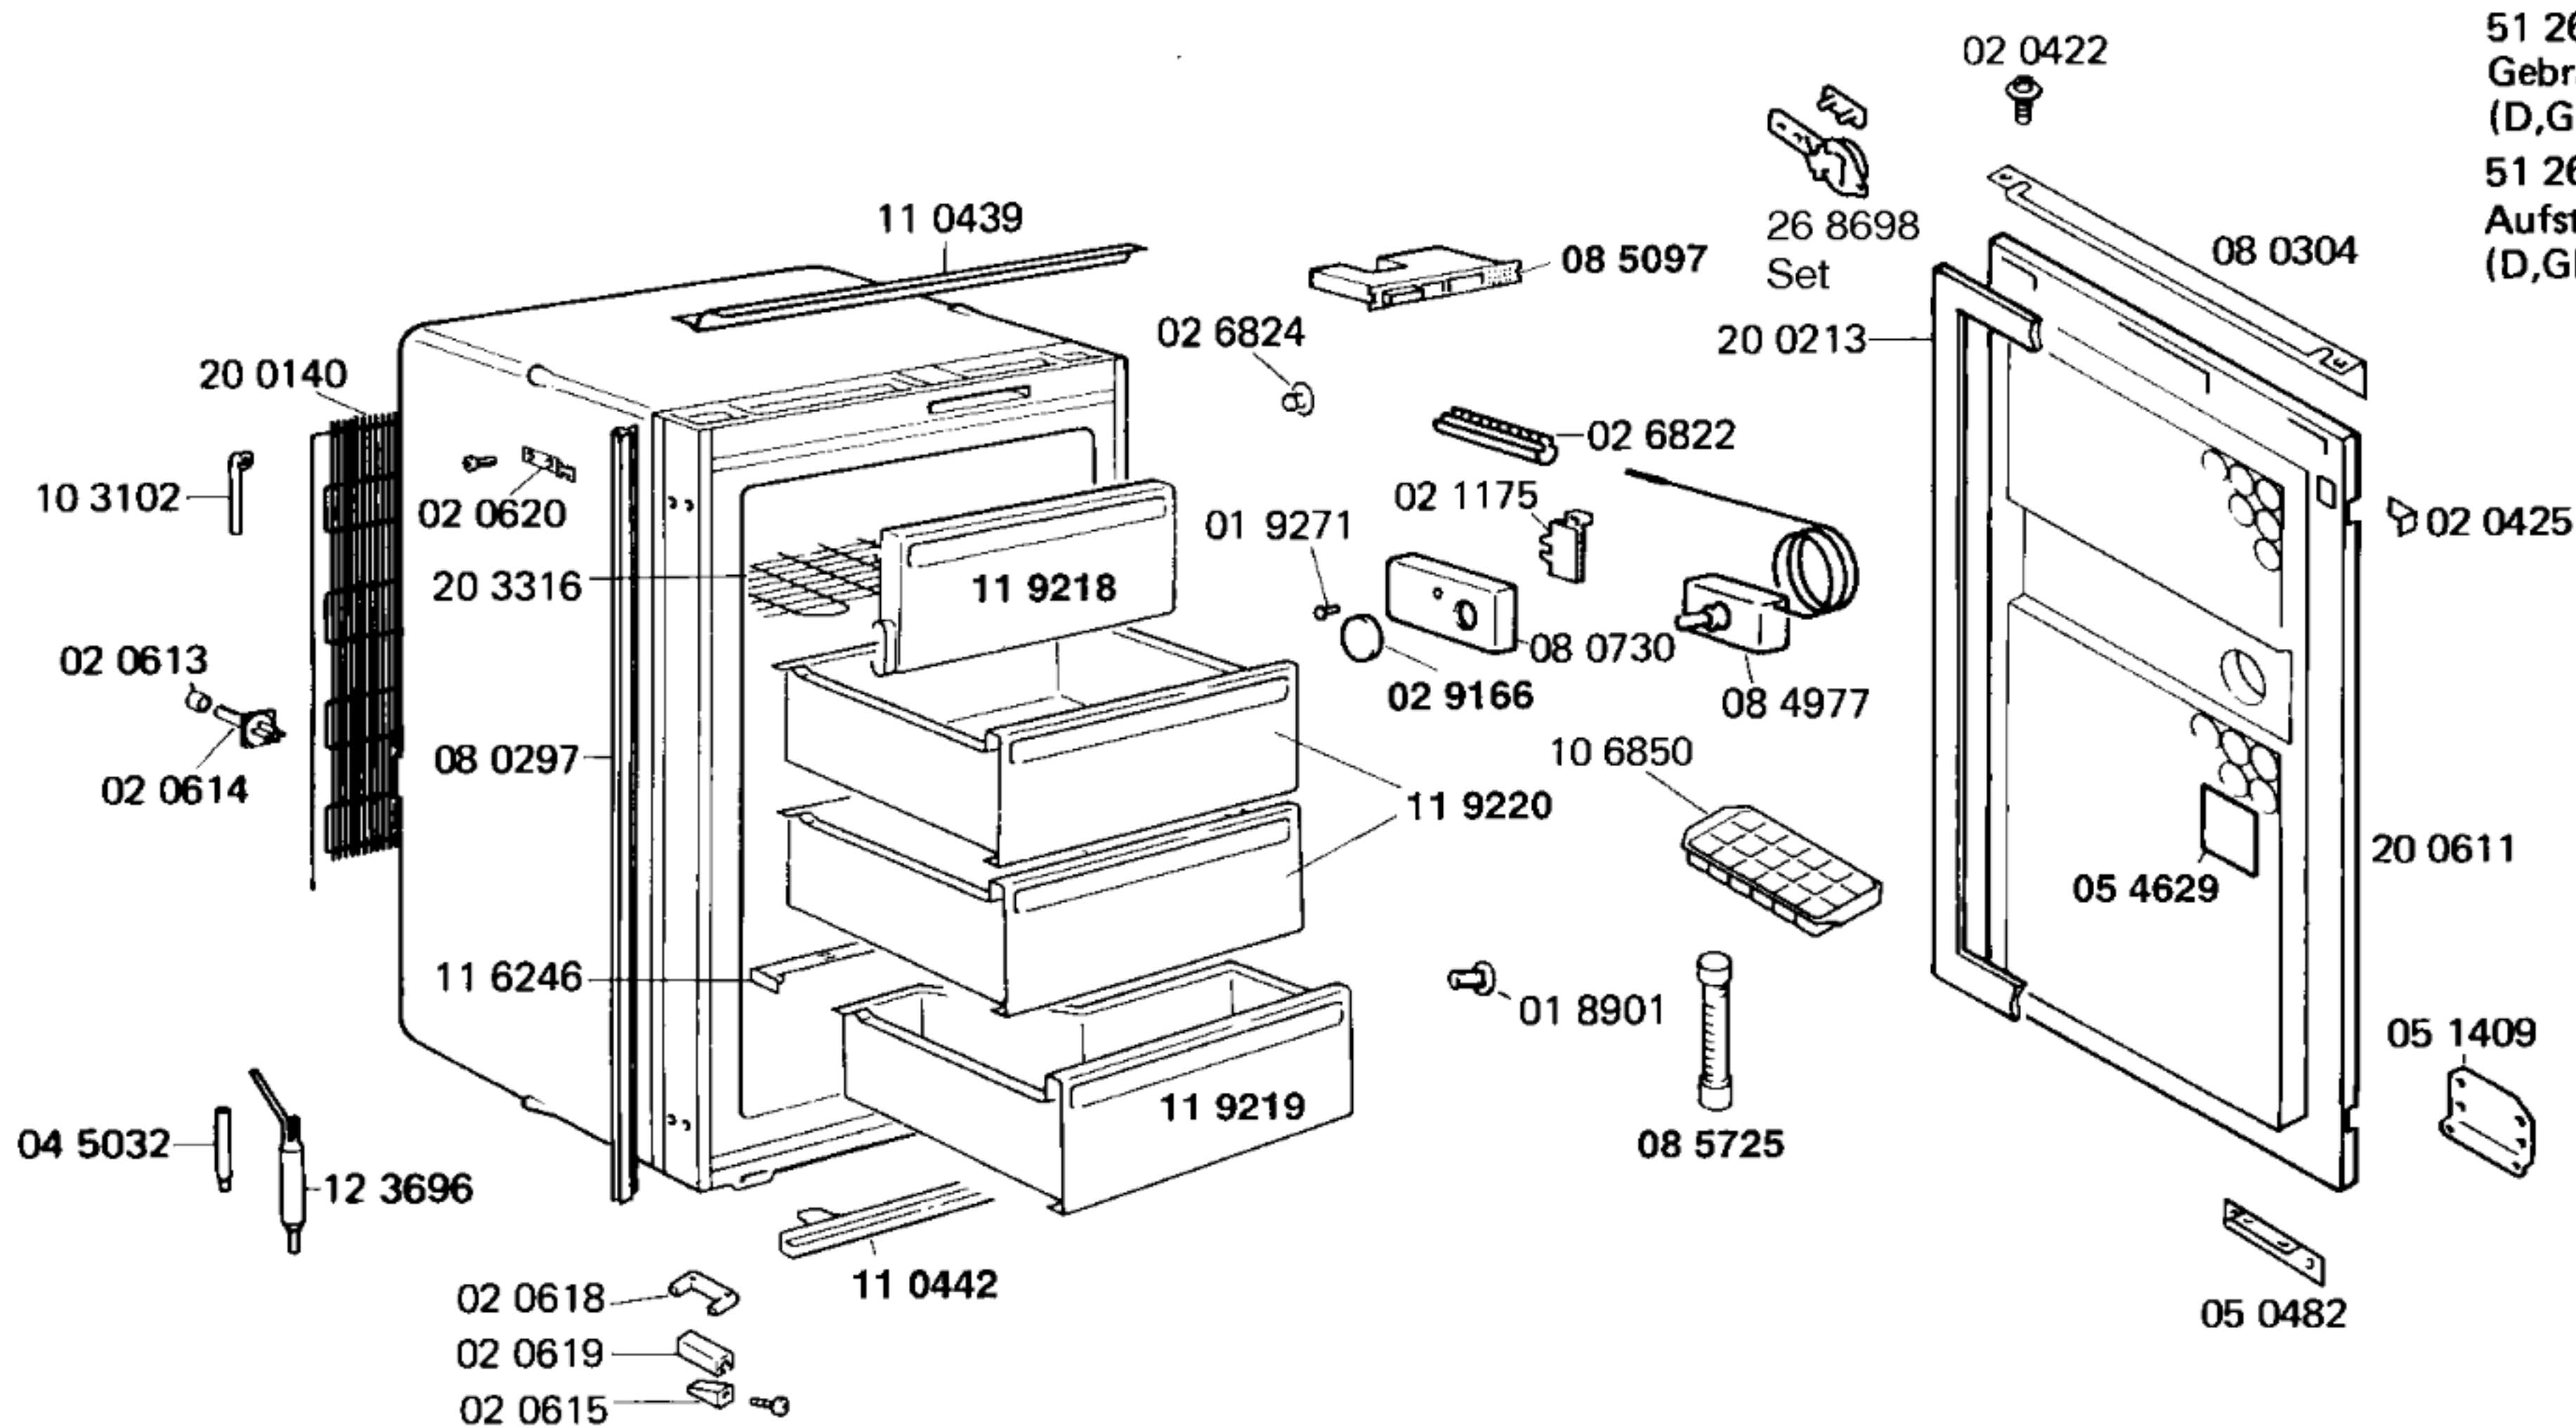

Ident – Nummern – Konstante
3740

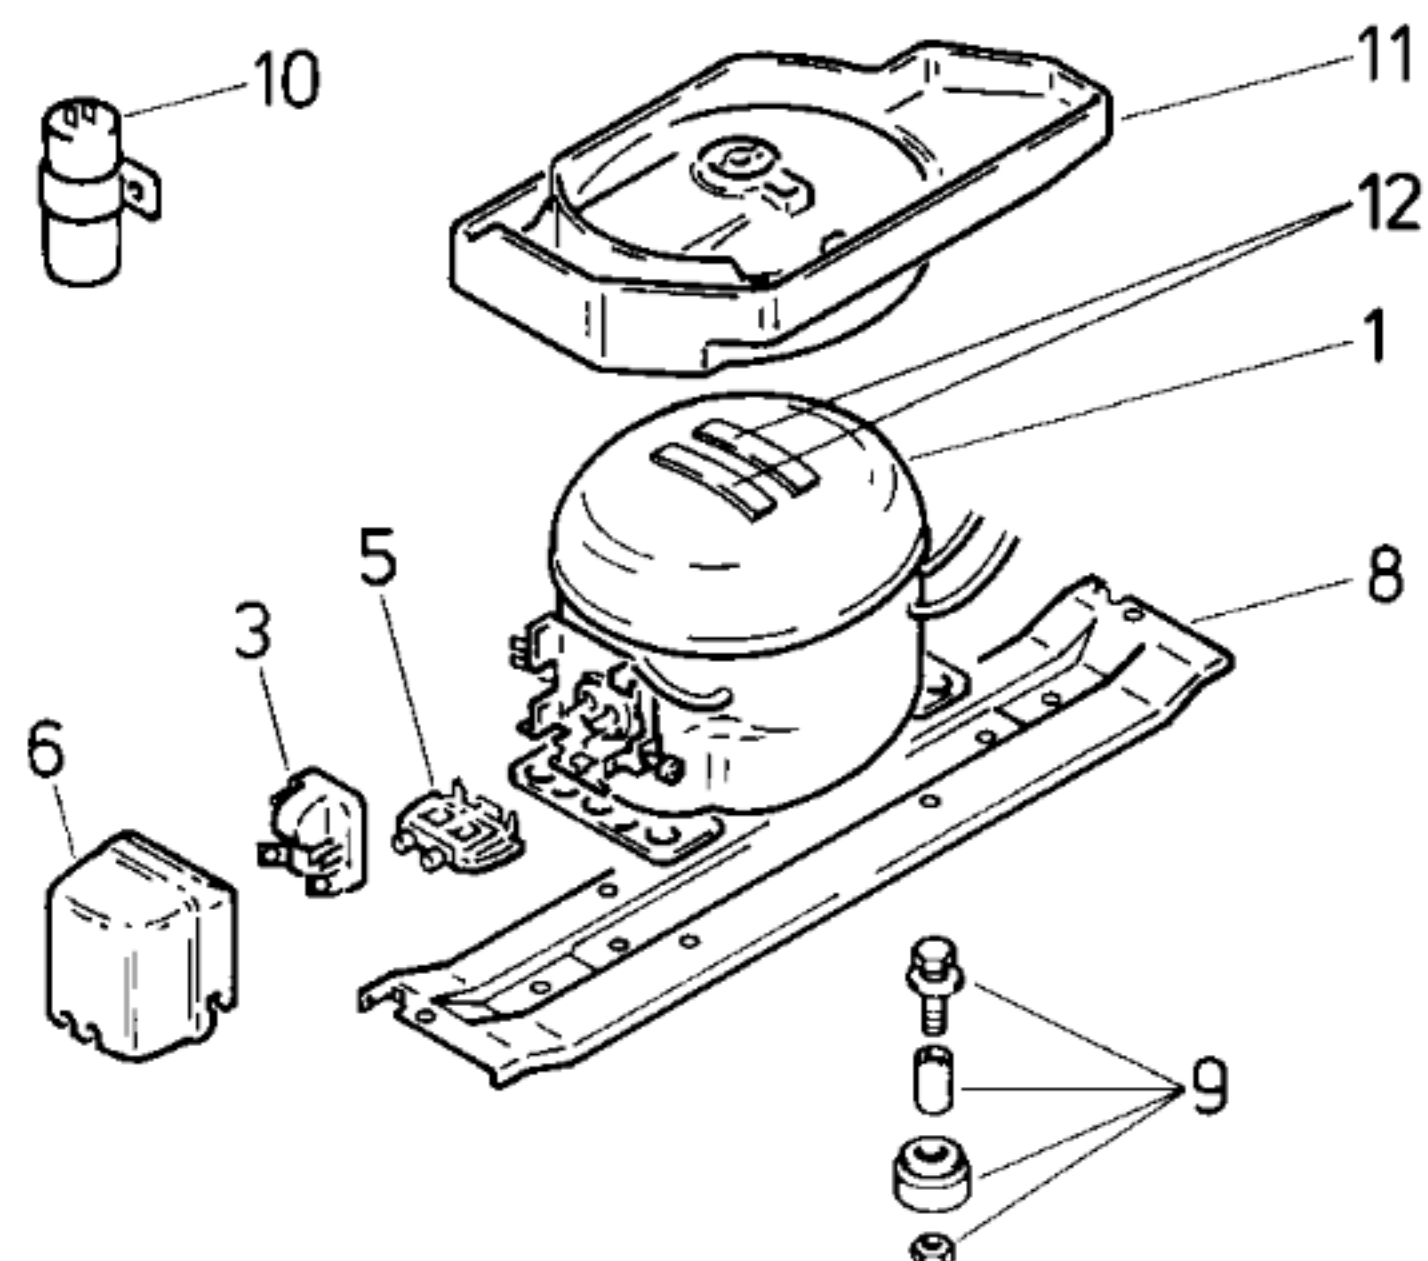

51 2674
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)
51 2643
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N,DK)

Ident – Nummern – Konstante
3740

Pos.	EU1		
	Danfoss TL 5 A		
1	14 0065		
2			
3	02 0108		
4			
5	02 7310		
6	05 1413		
7			
8	11 0437		
9	05 0166		
10			
11			
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 5 A			
Förderleistung/Delivery/Débit		l/h	V 920		
Anlaufstrom/Starting current/Cour. de démarrage		A	9,0		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	15,7	
		Hi/aux	Ω	18,8	
Temp.-Regler/Thermostat		M & J			
Typ/Type		TF 57 SF 2			
Reglerstellung/Position			kalt	warm	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	- 24	- 16
		„aus“		- 34	- 24
		(„abtauen“ od.)	„alarm“	- 19	- 12
Füllmenge/Fill.quantity/Charge		R12	g	175	
Anschlußwert/Conn.load/Puiss. connectée			W	120	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		