





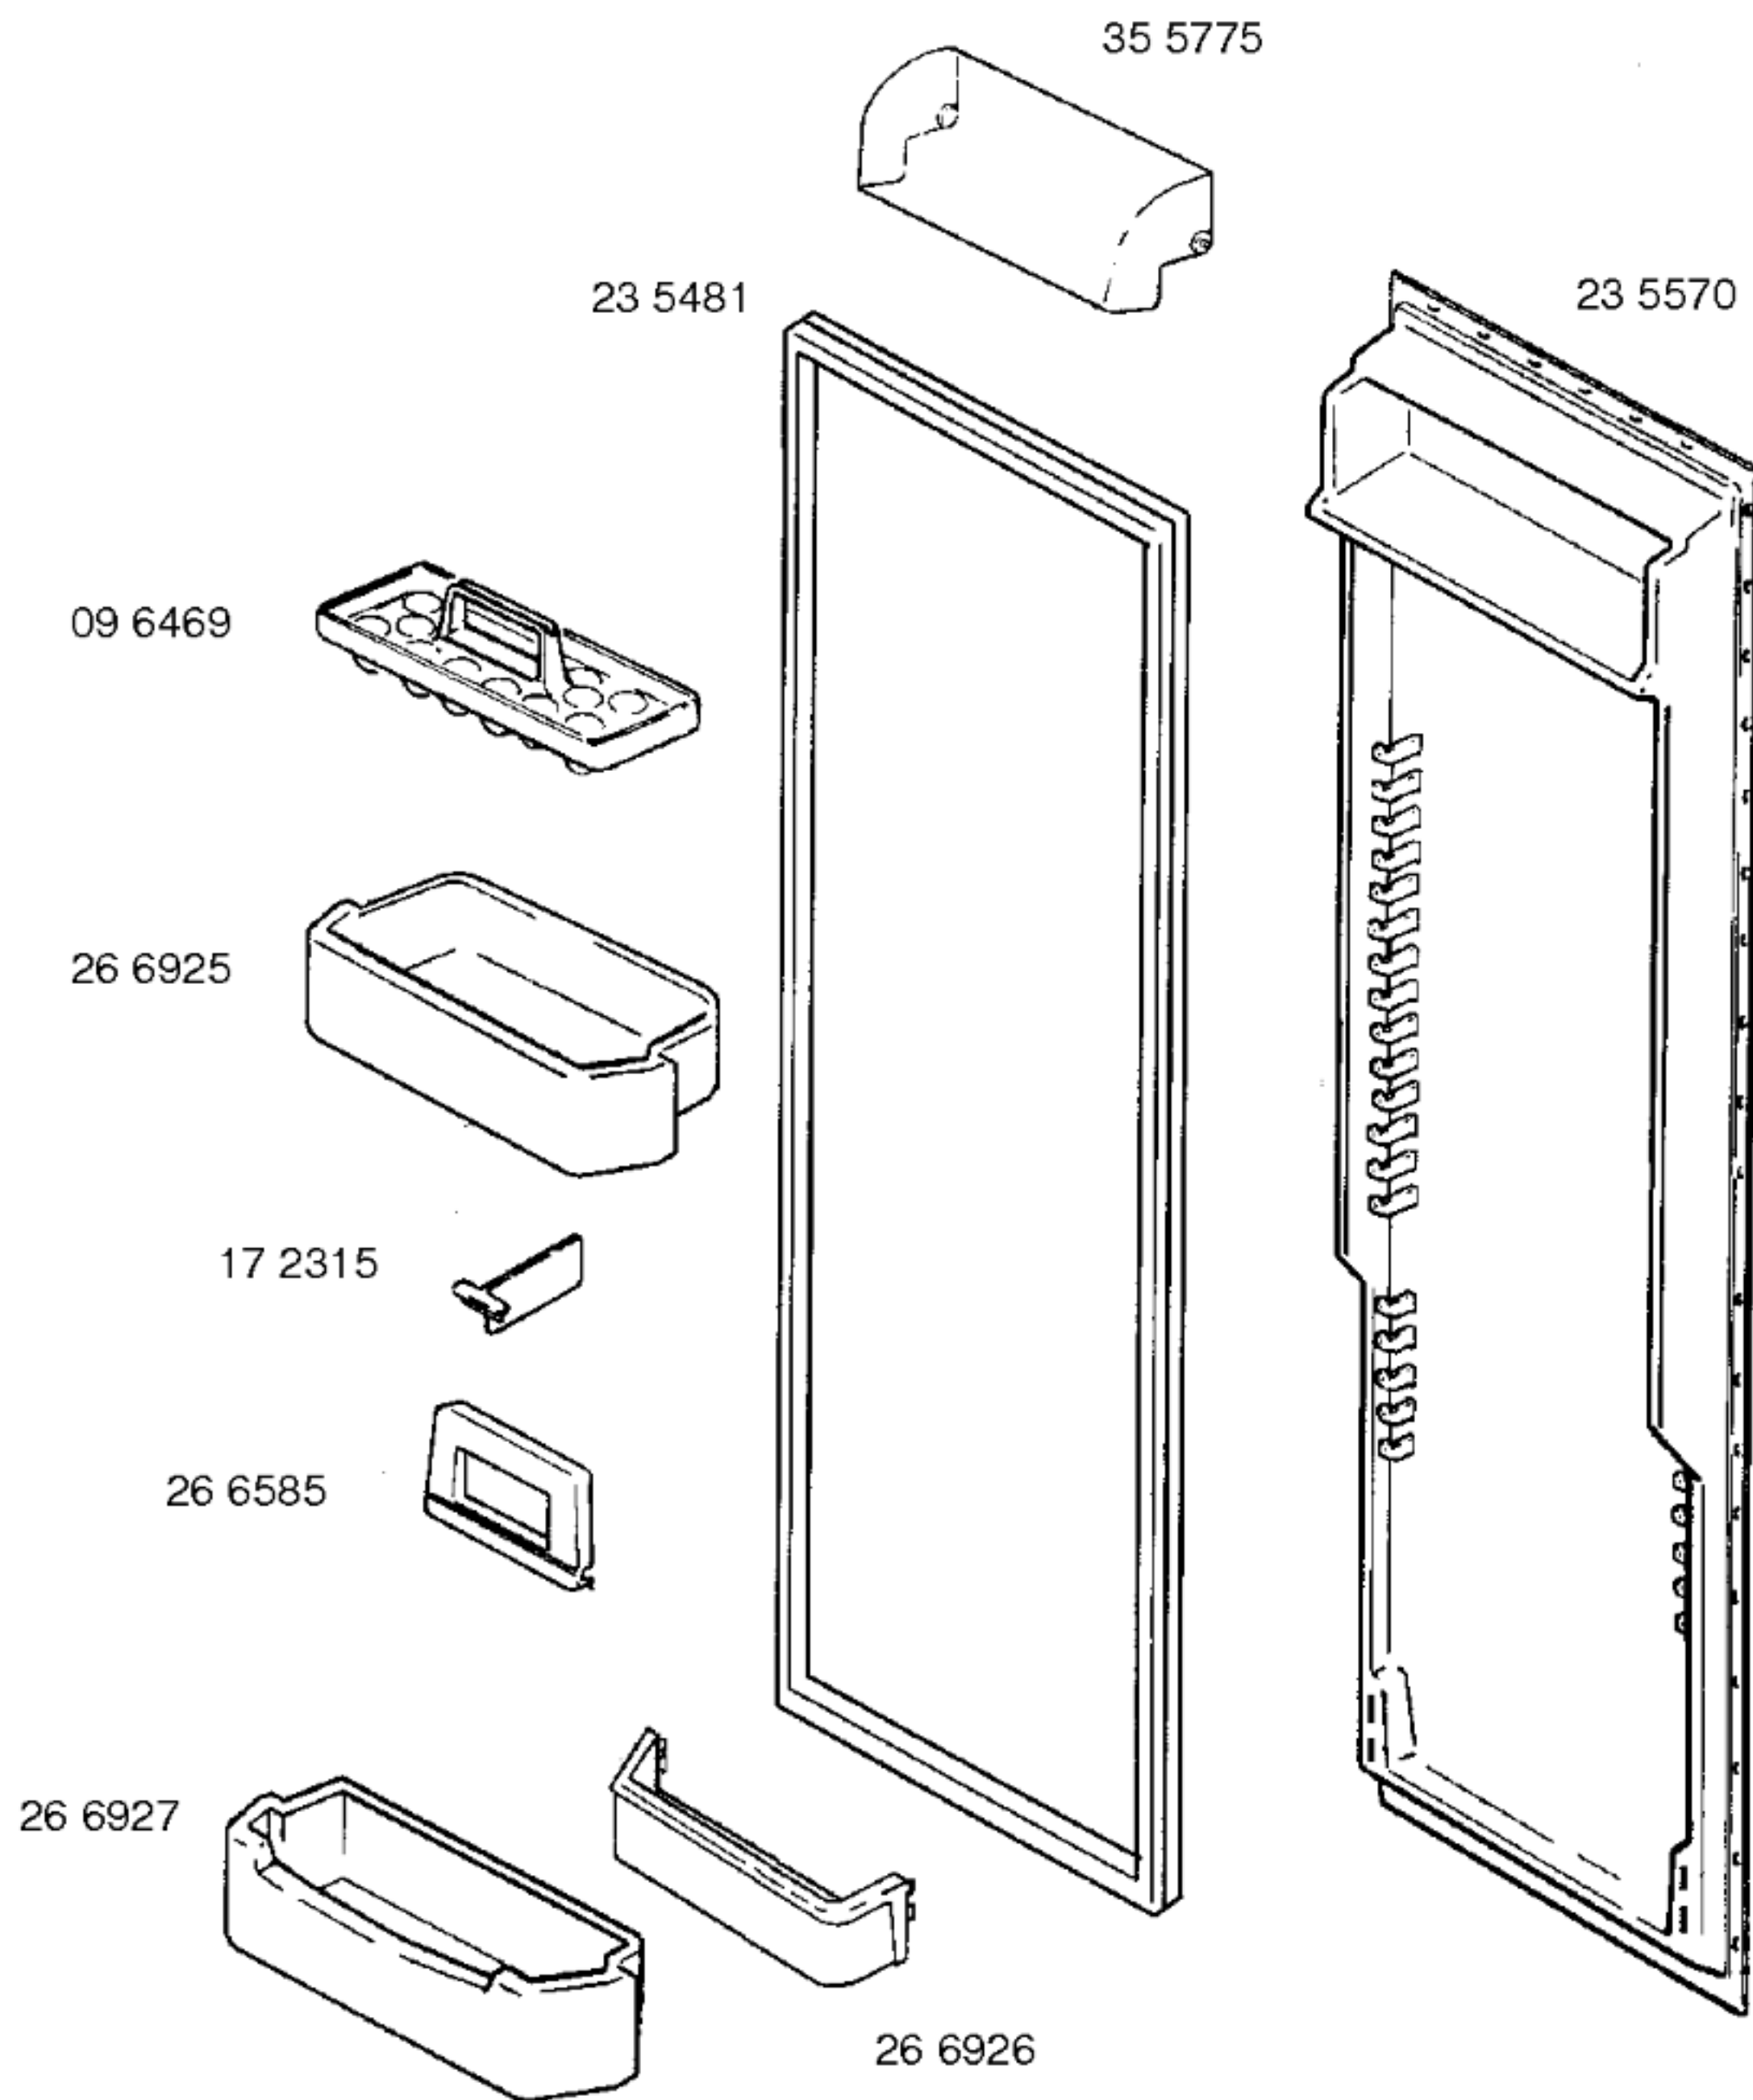



Gebrauchsanweisung
52 3821
D,GB,F,I,NL,E,P,GR,SE
Montageanleitung
52 3822
D,GB,F,I,NL,E,P,GR,SE

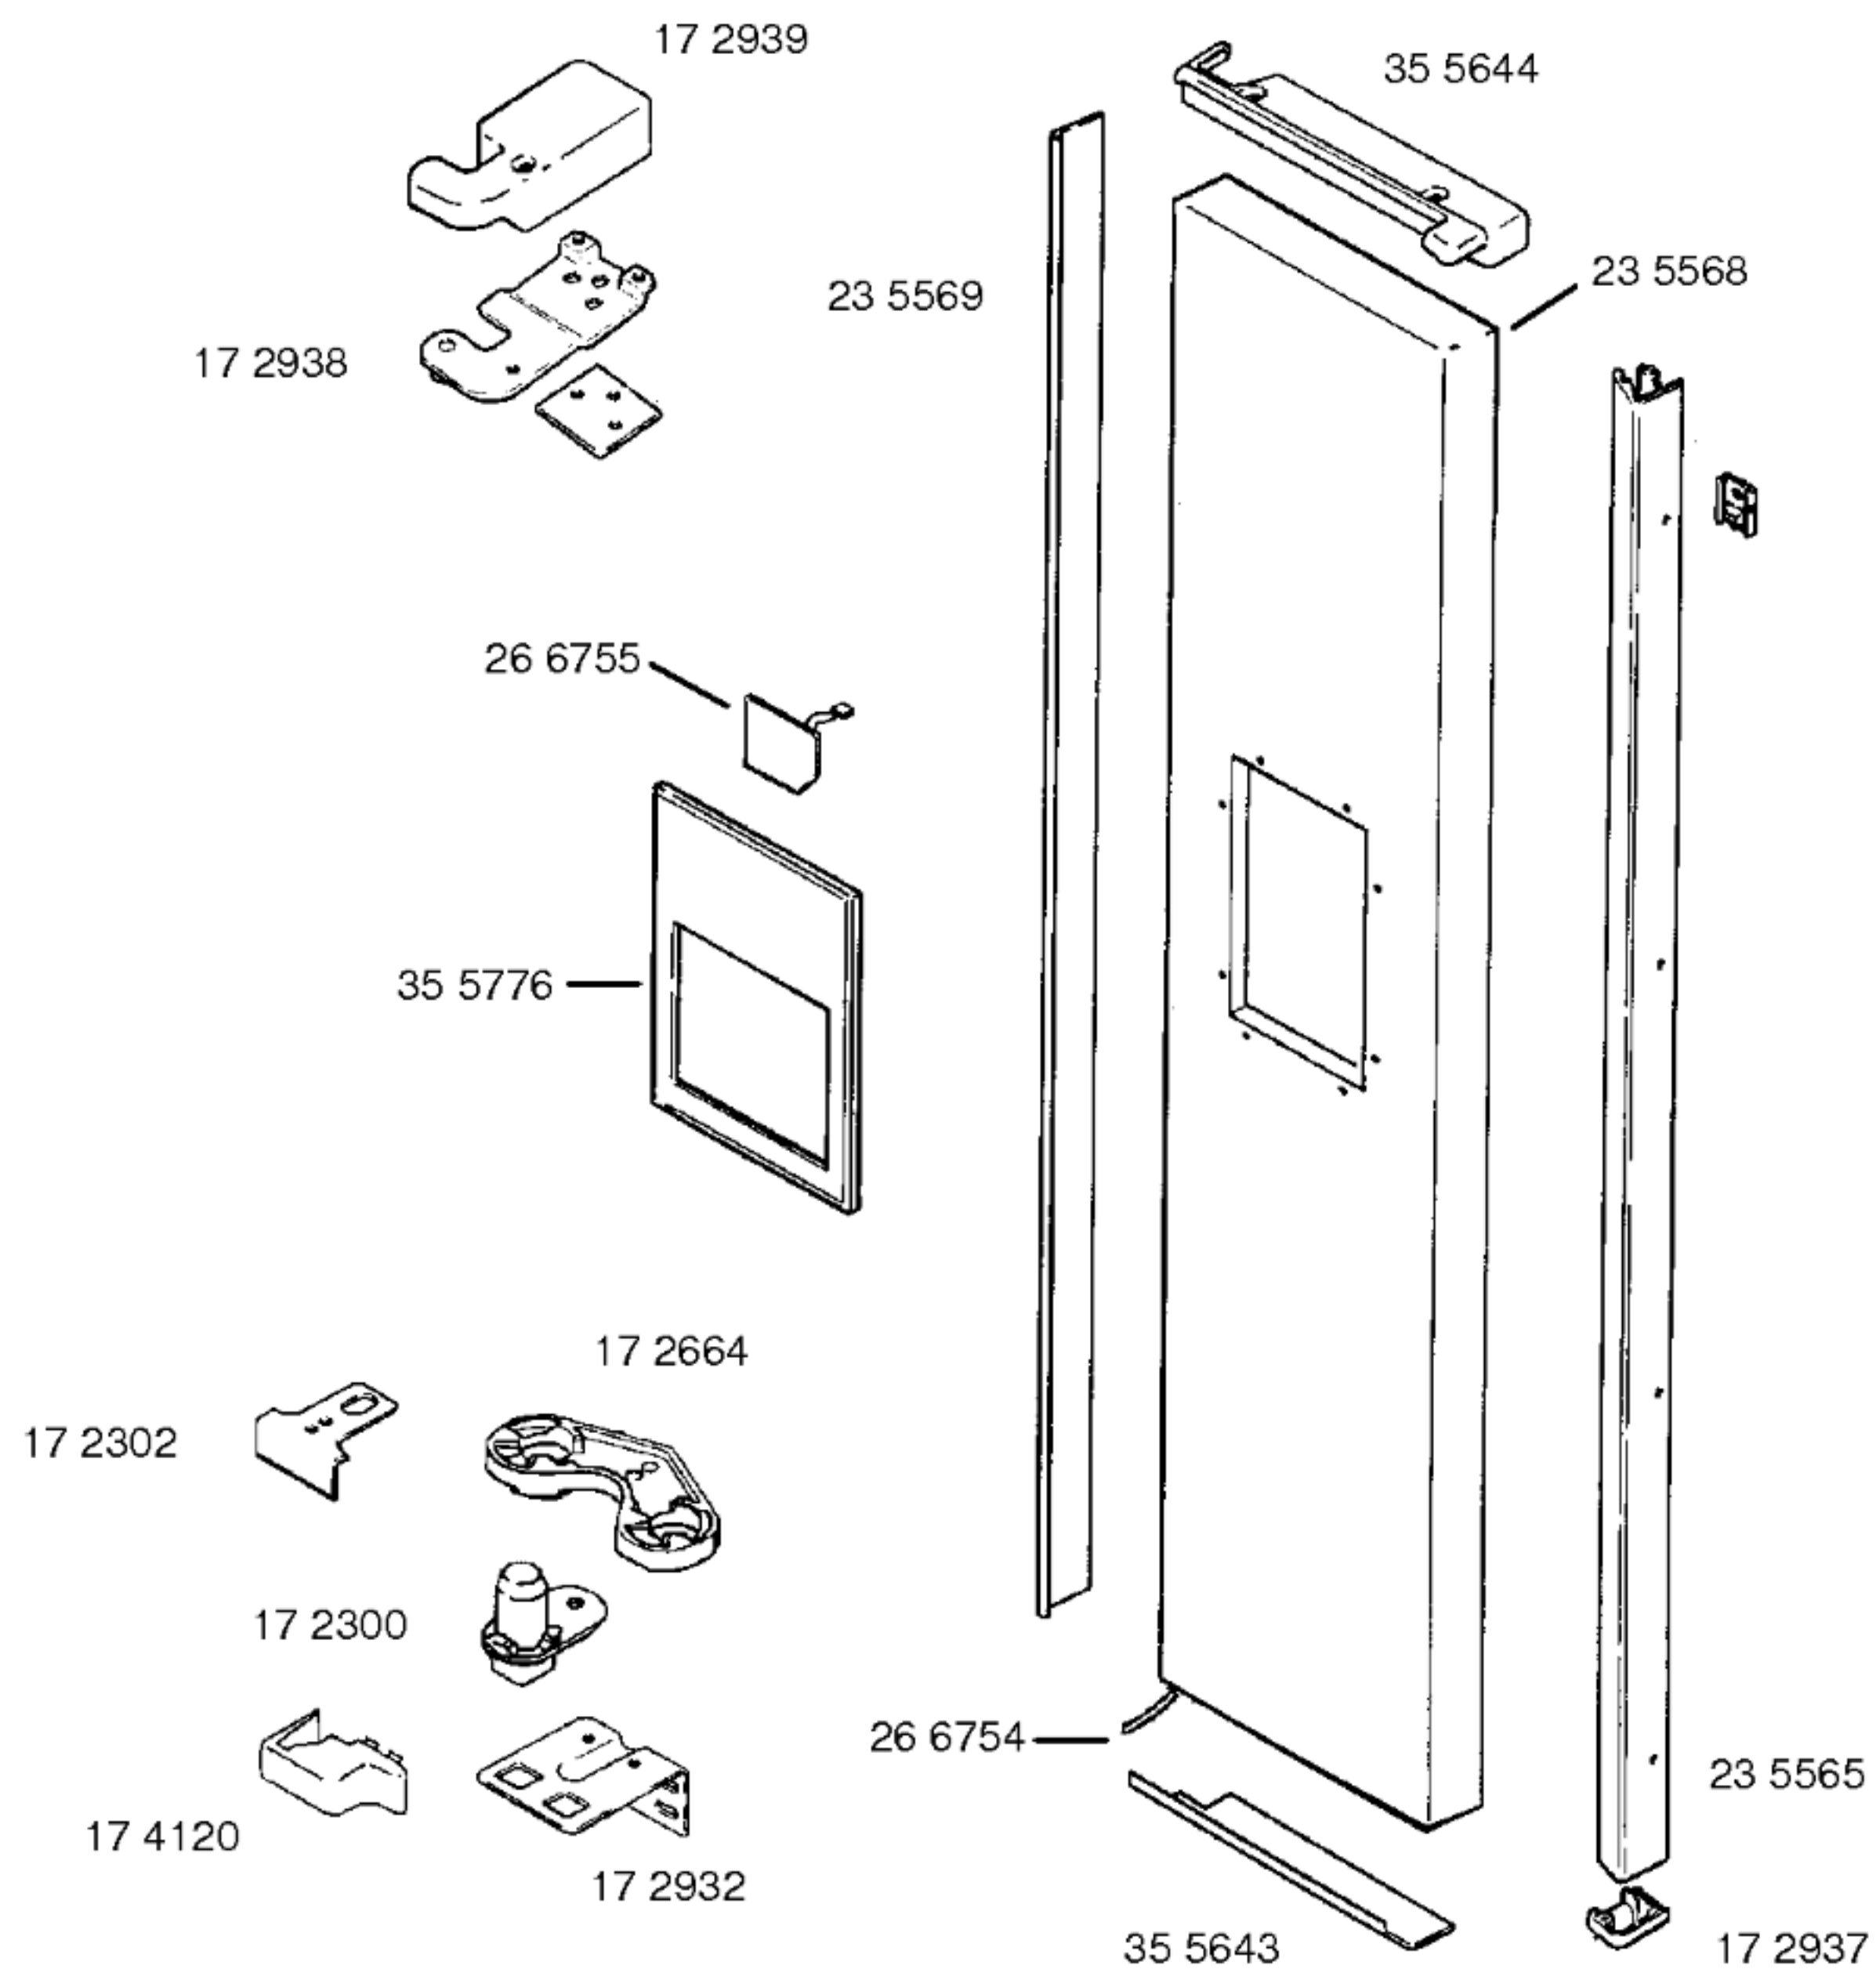

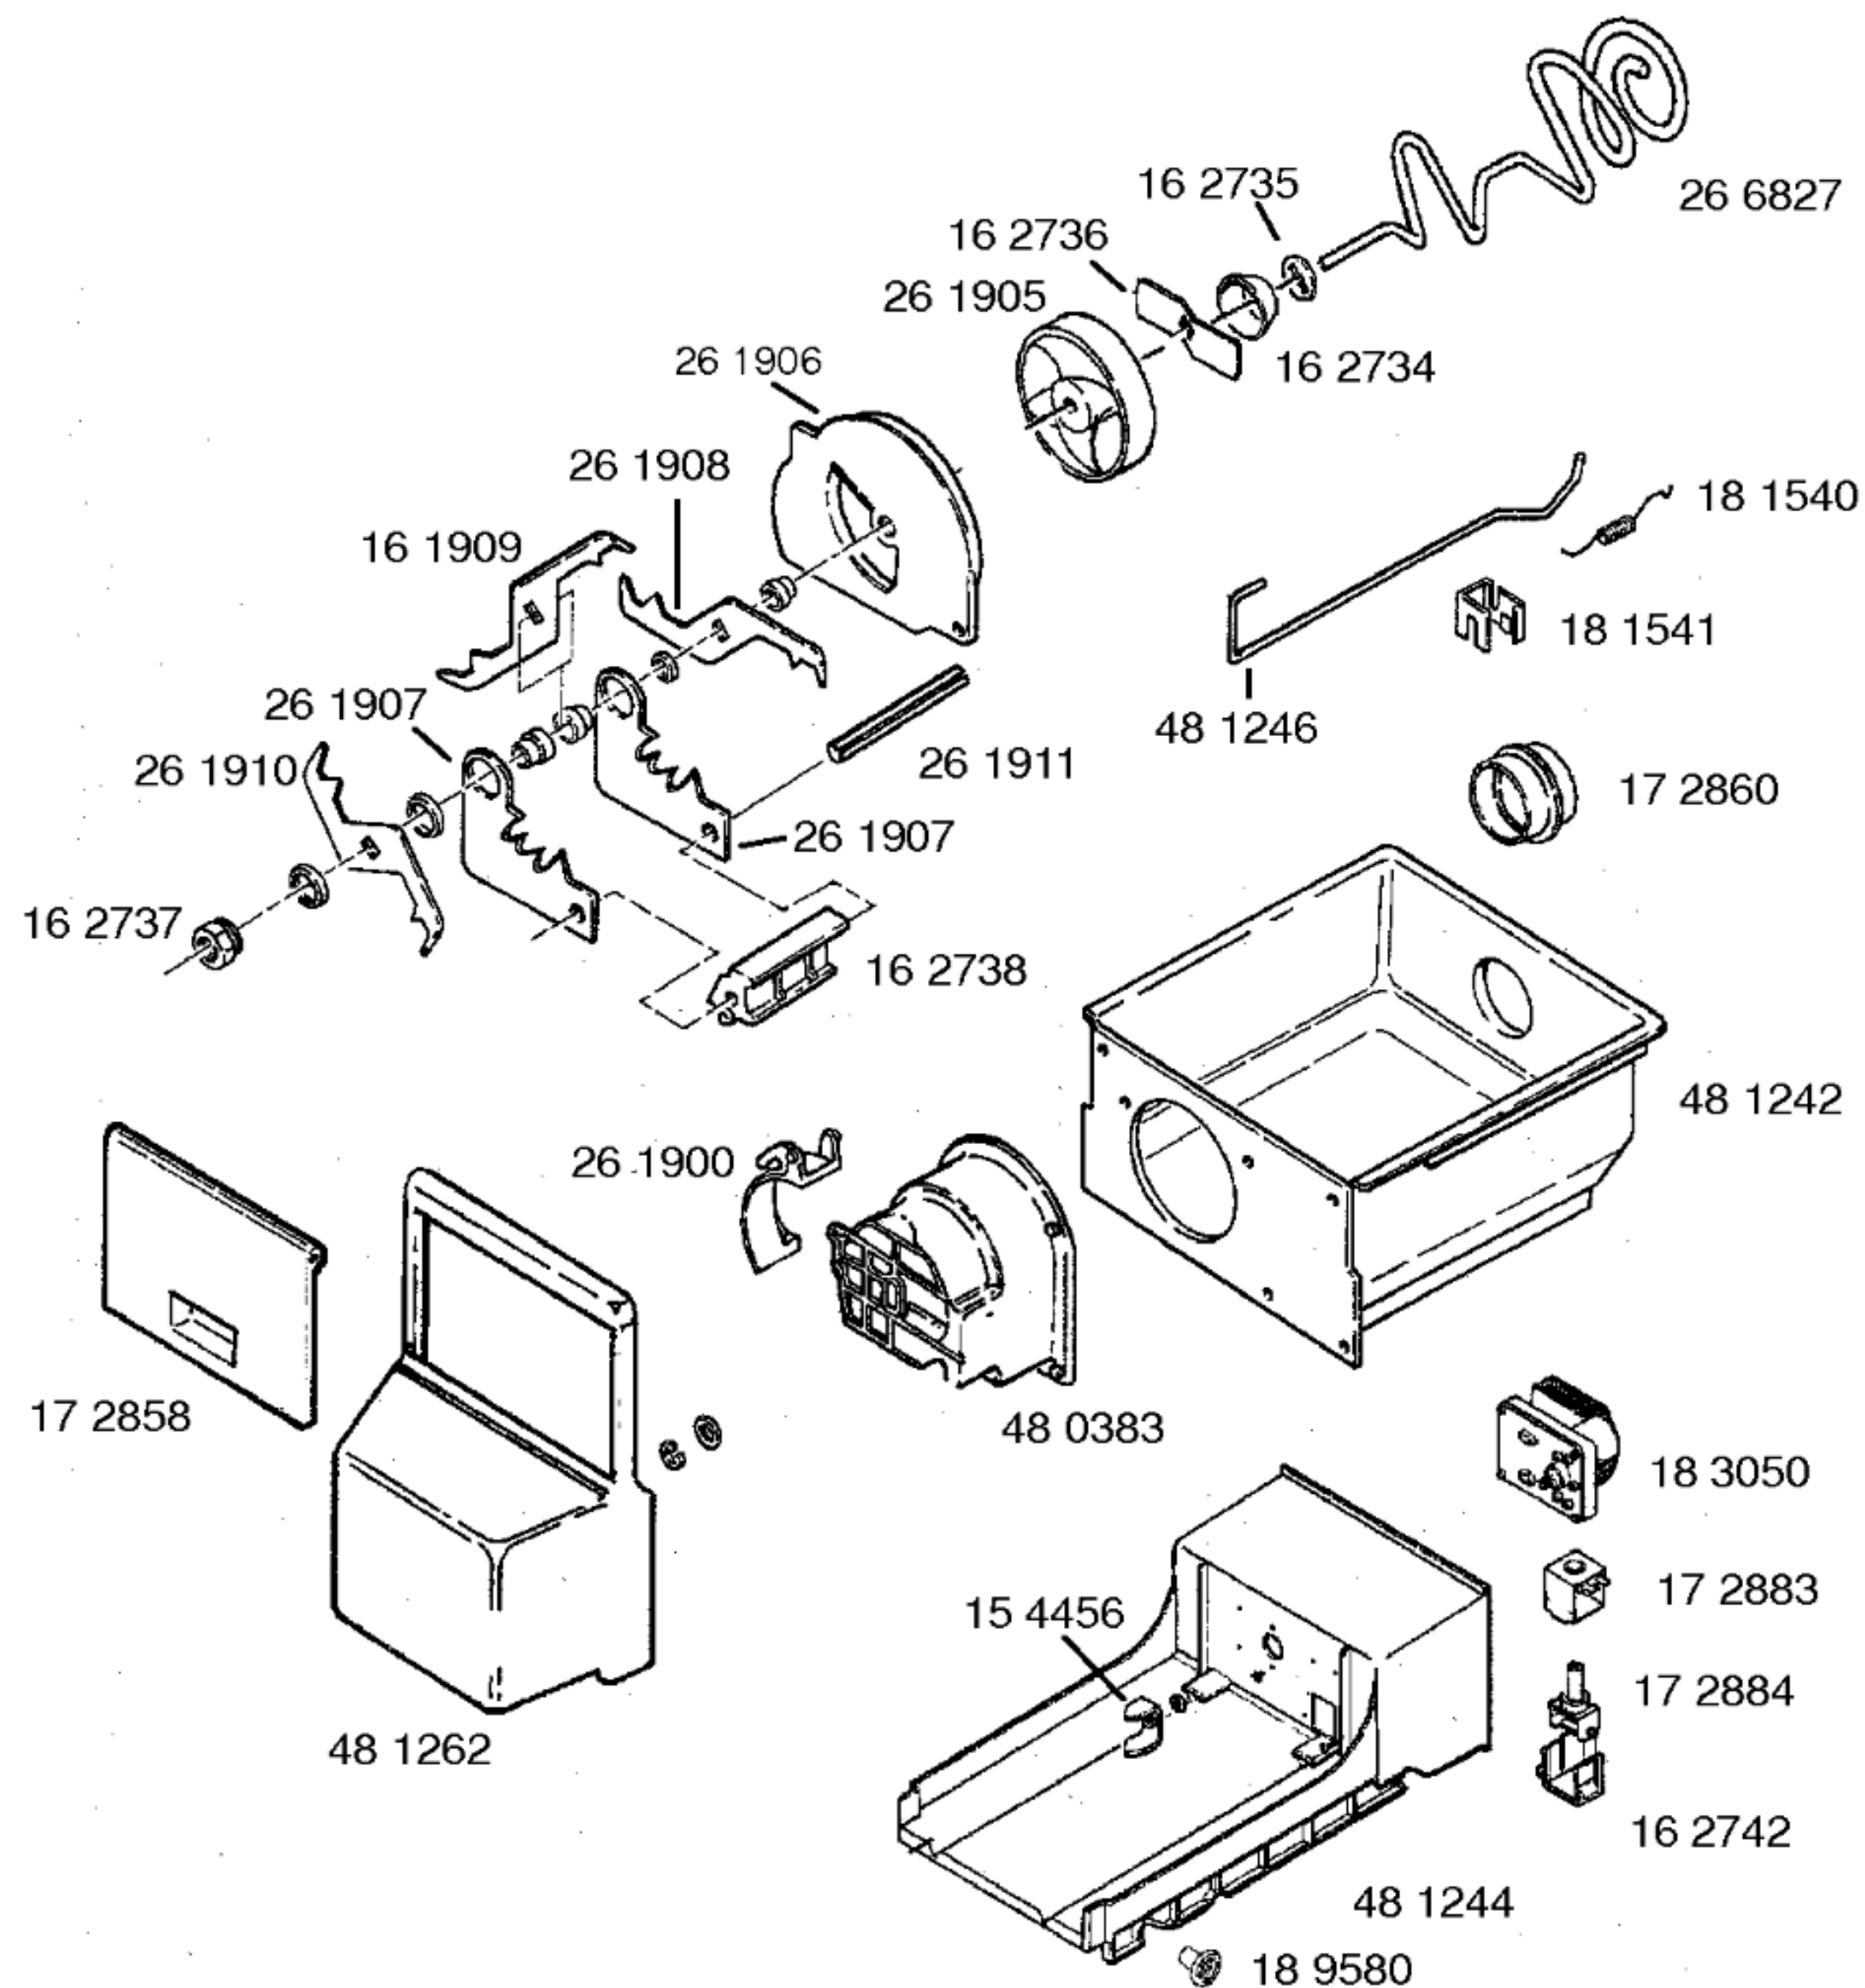

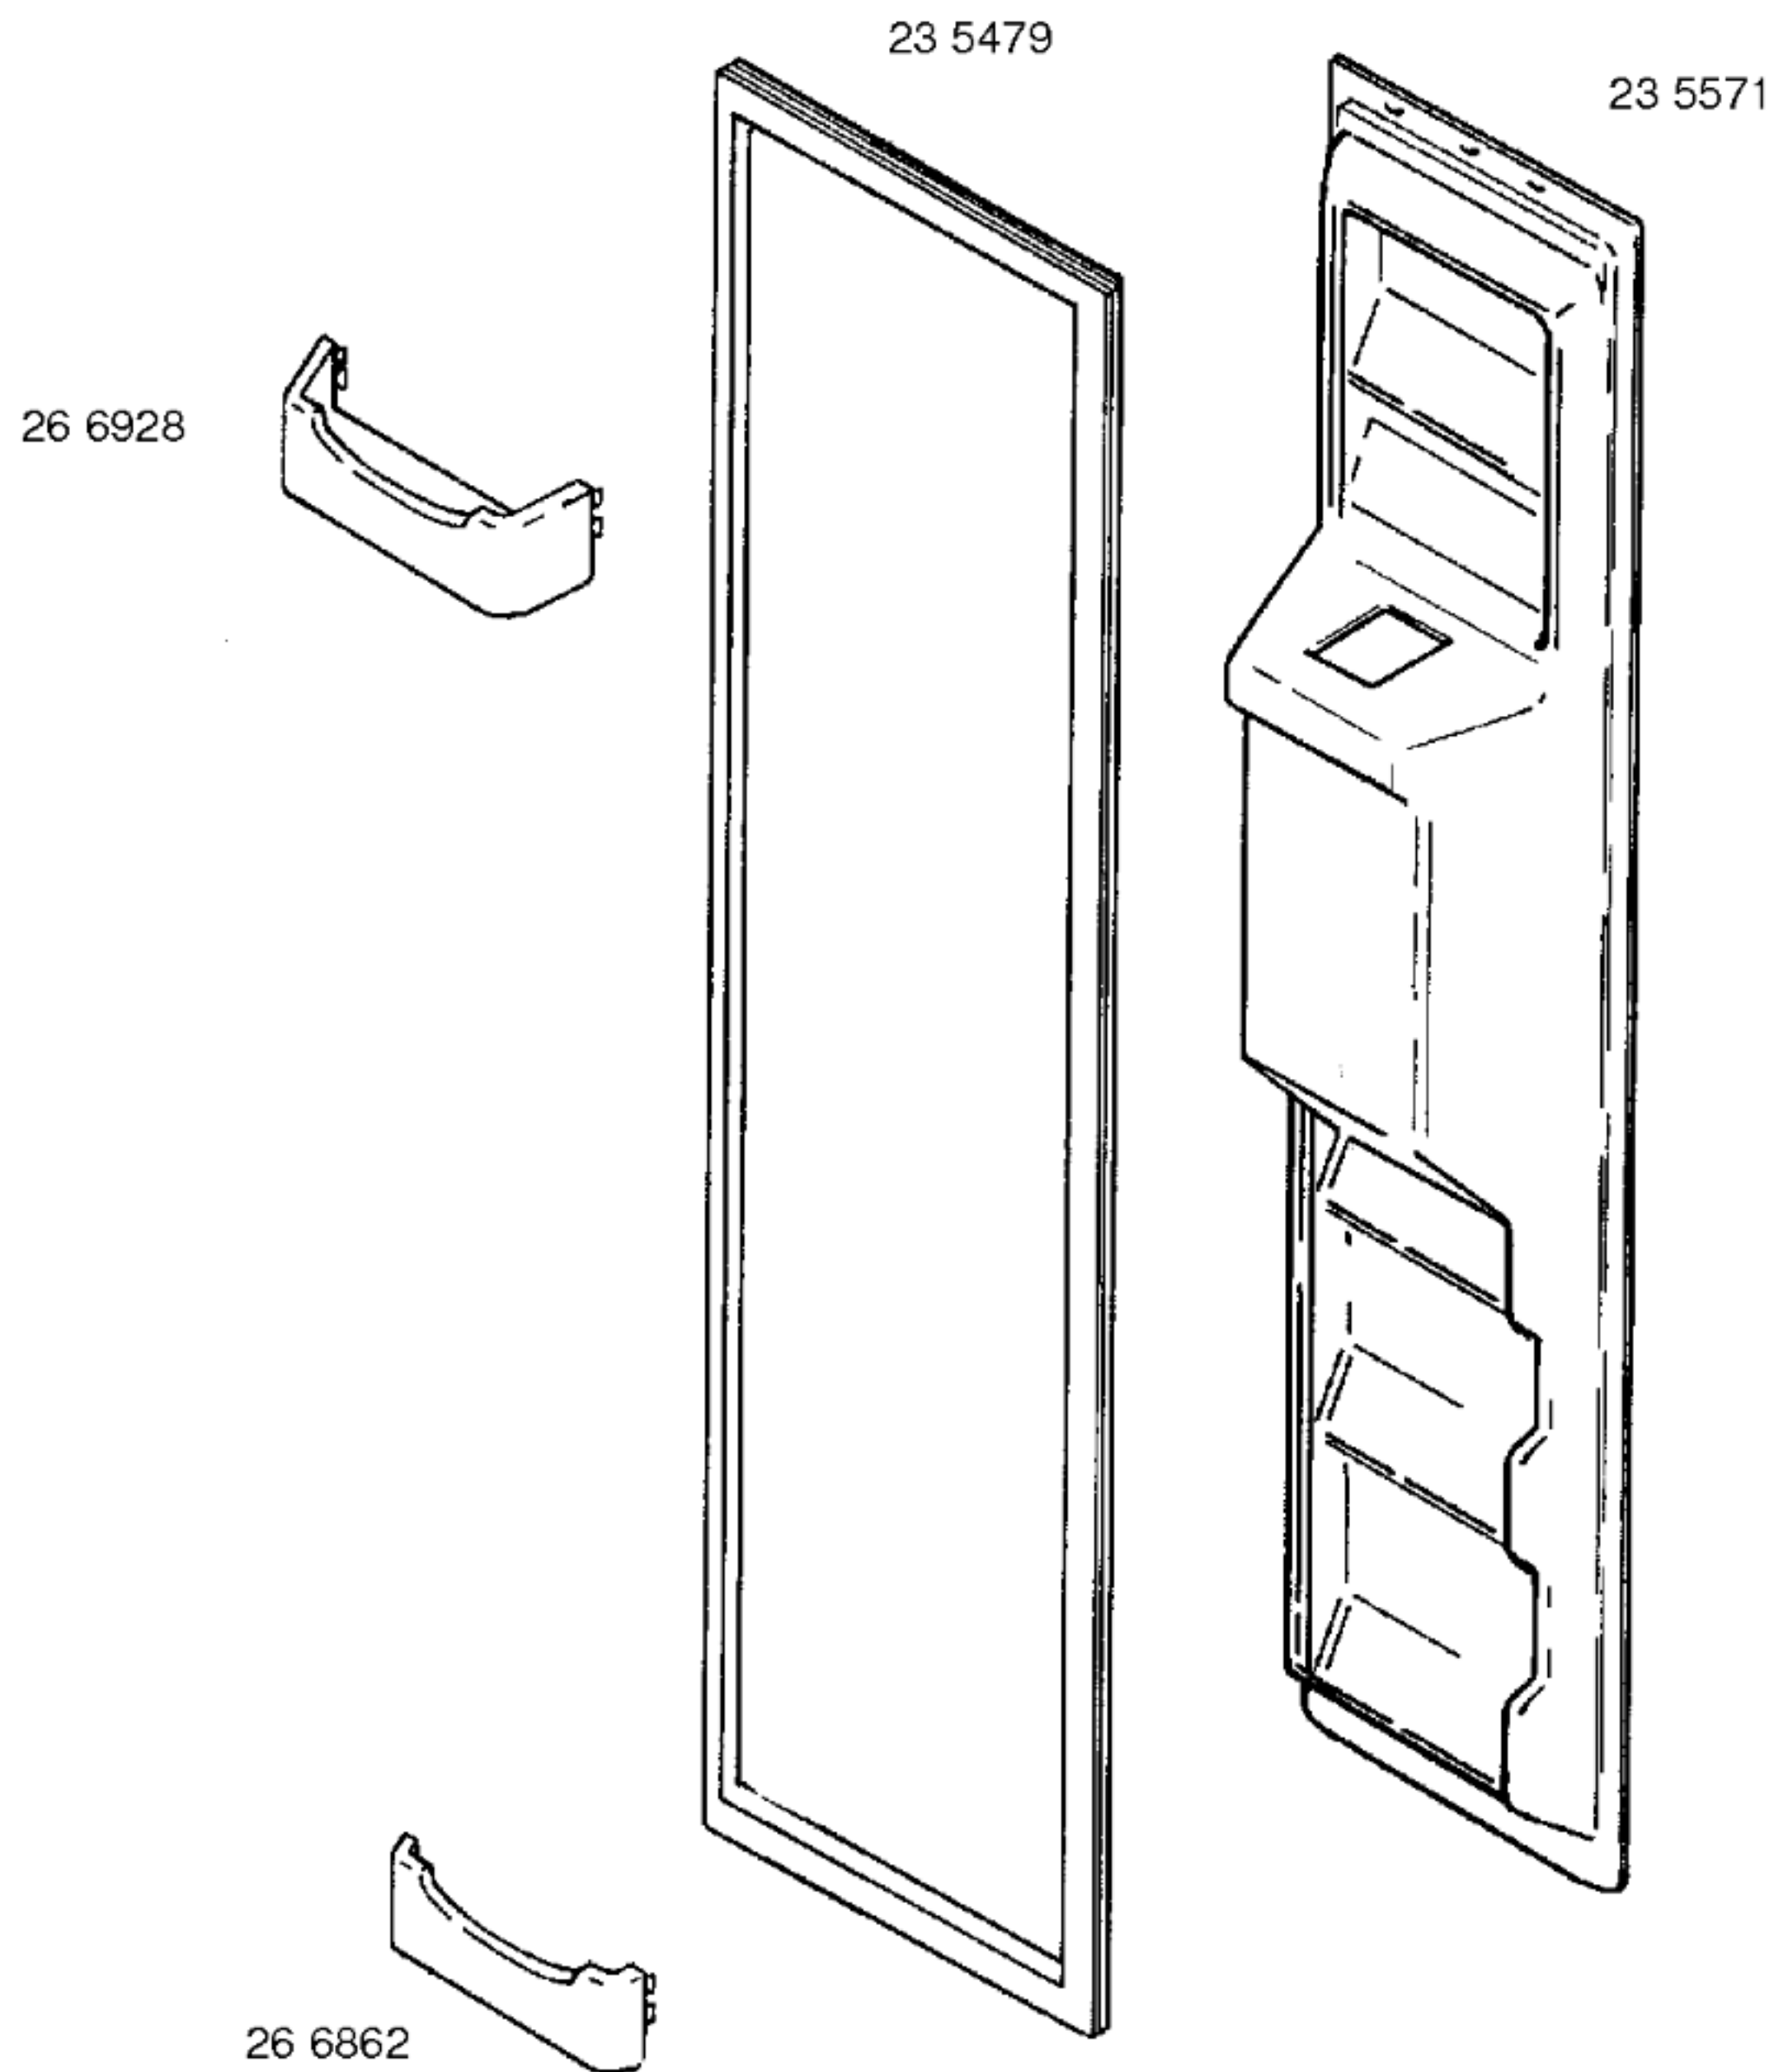

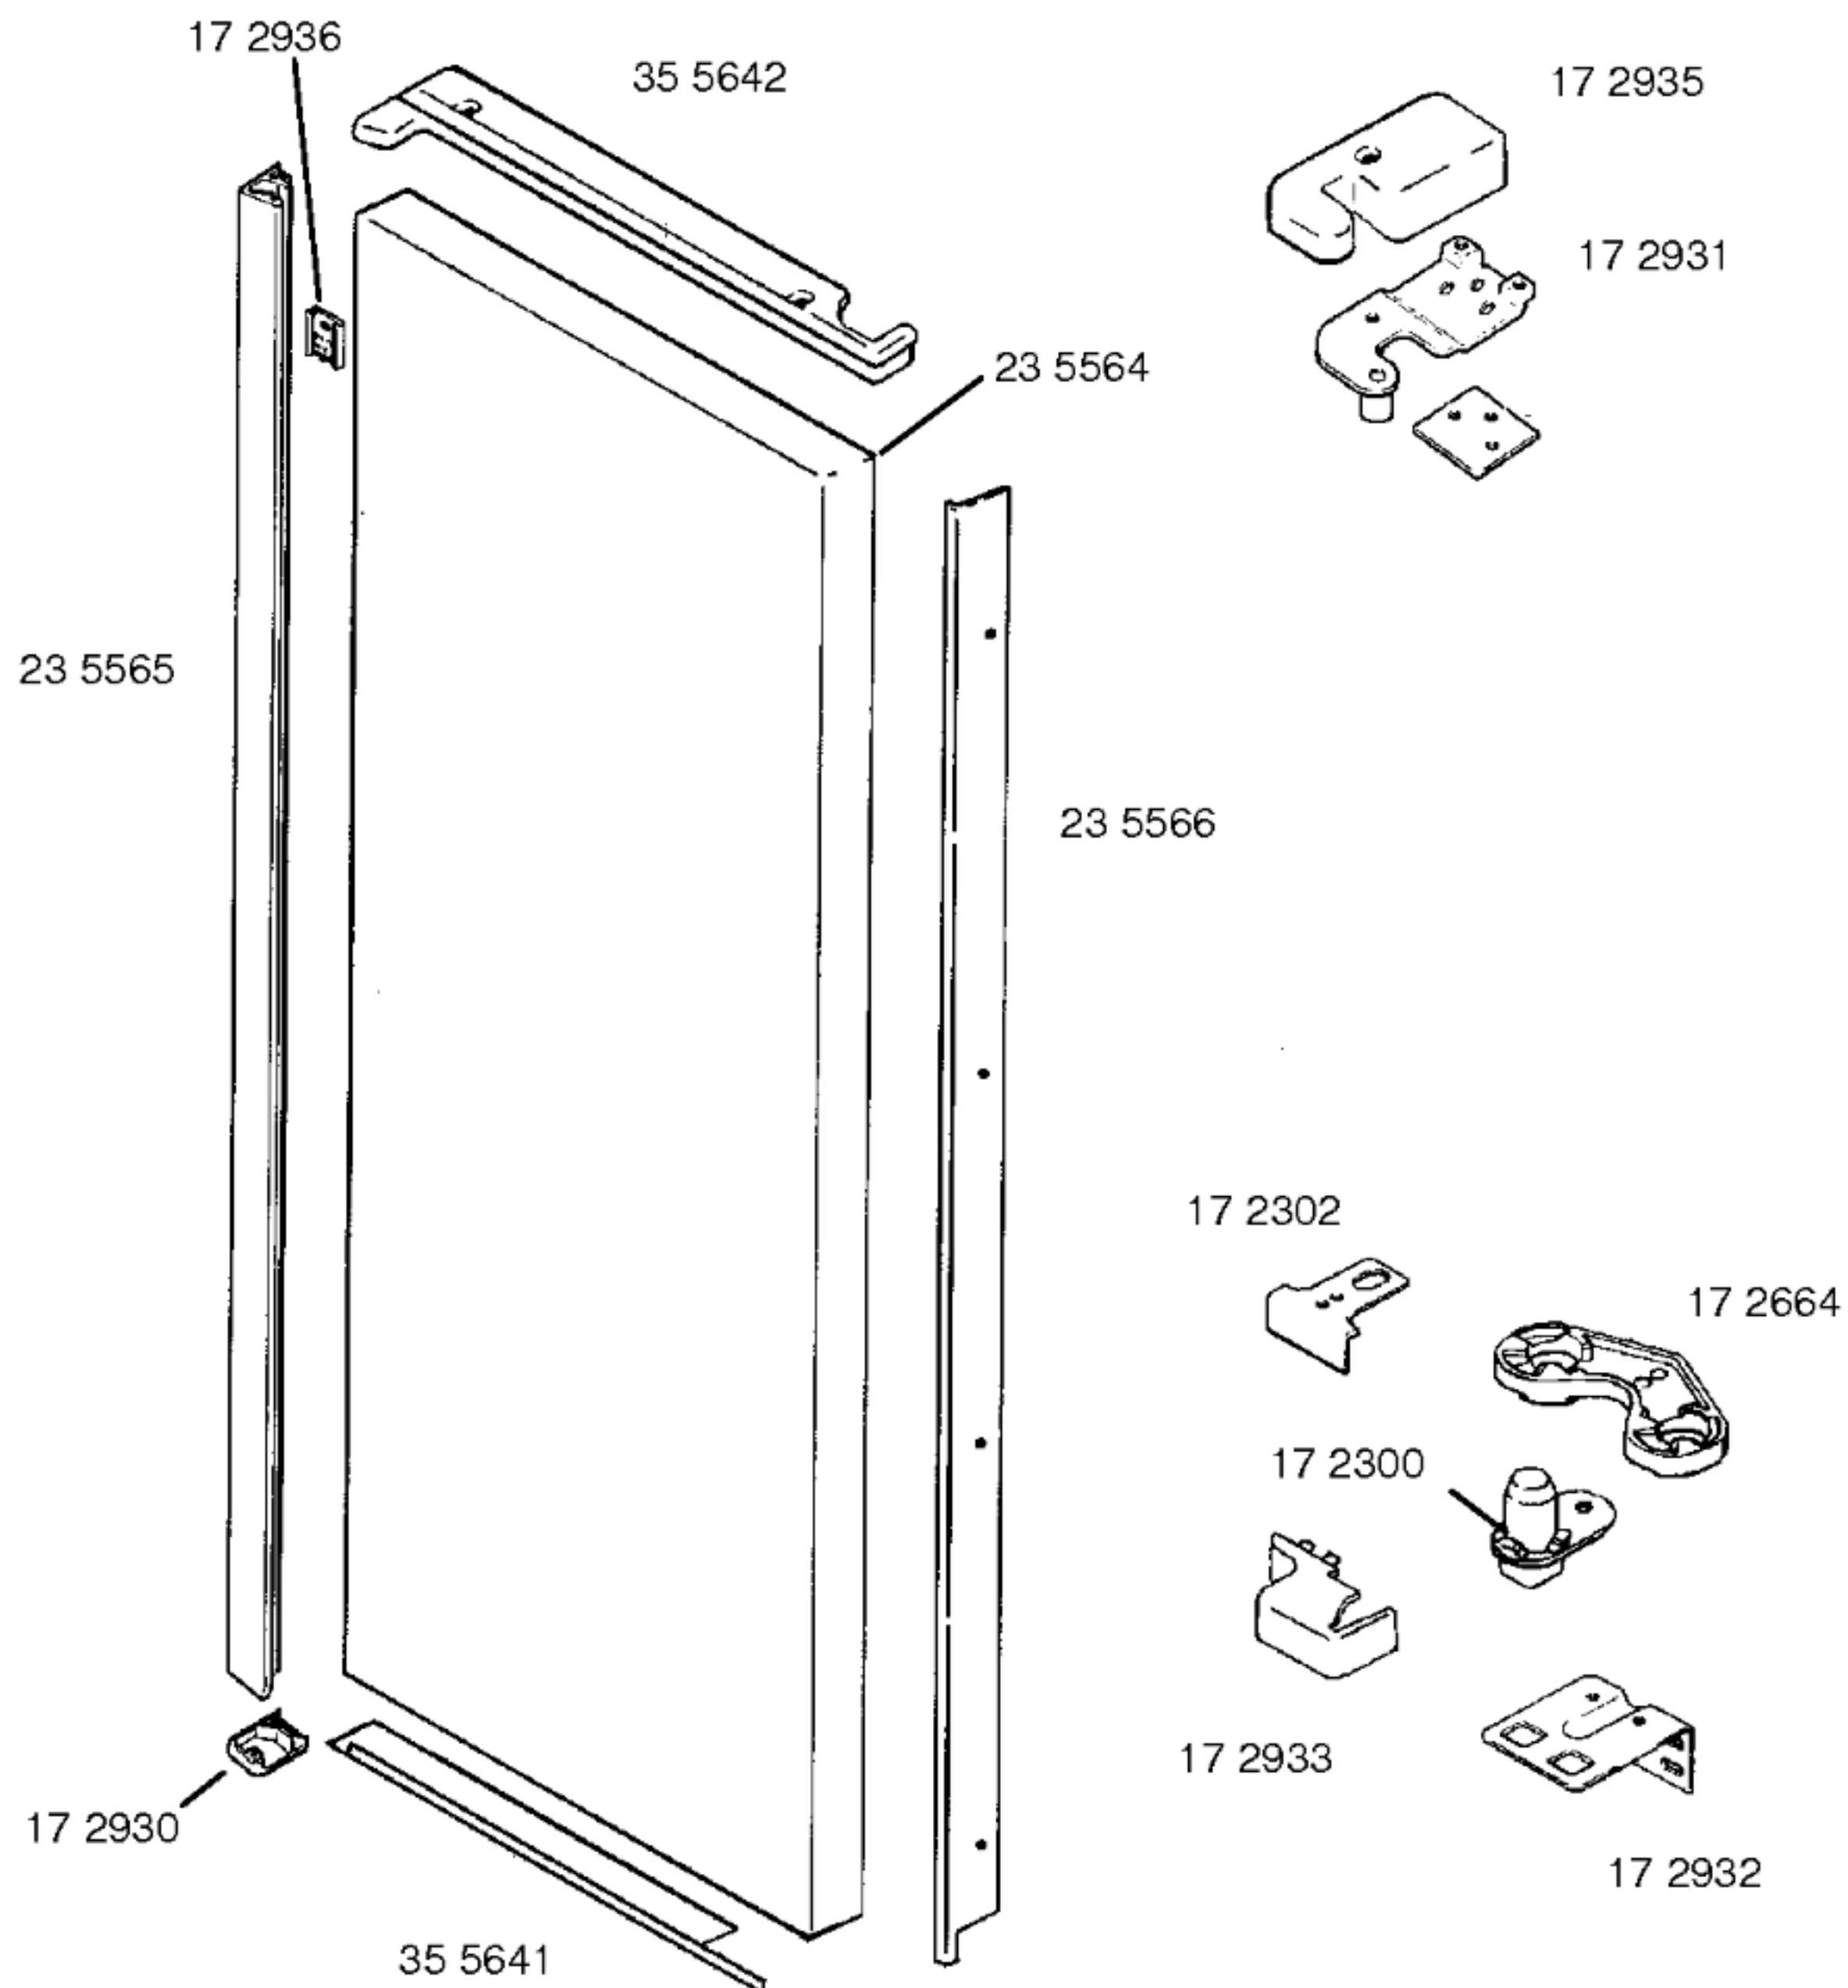

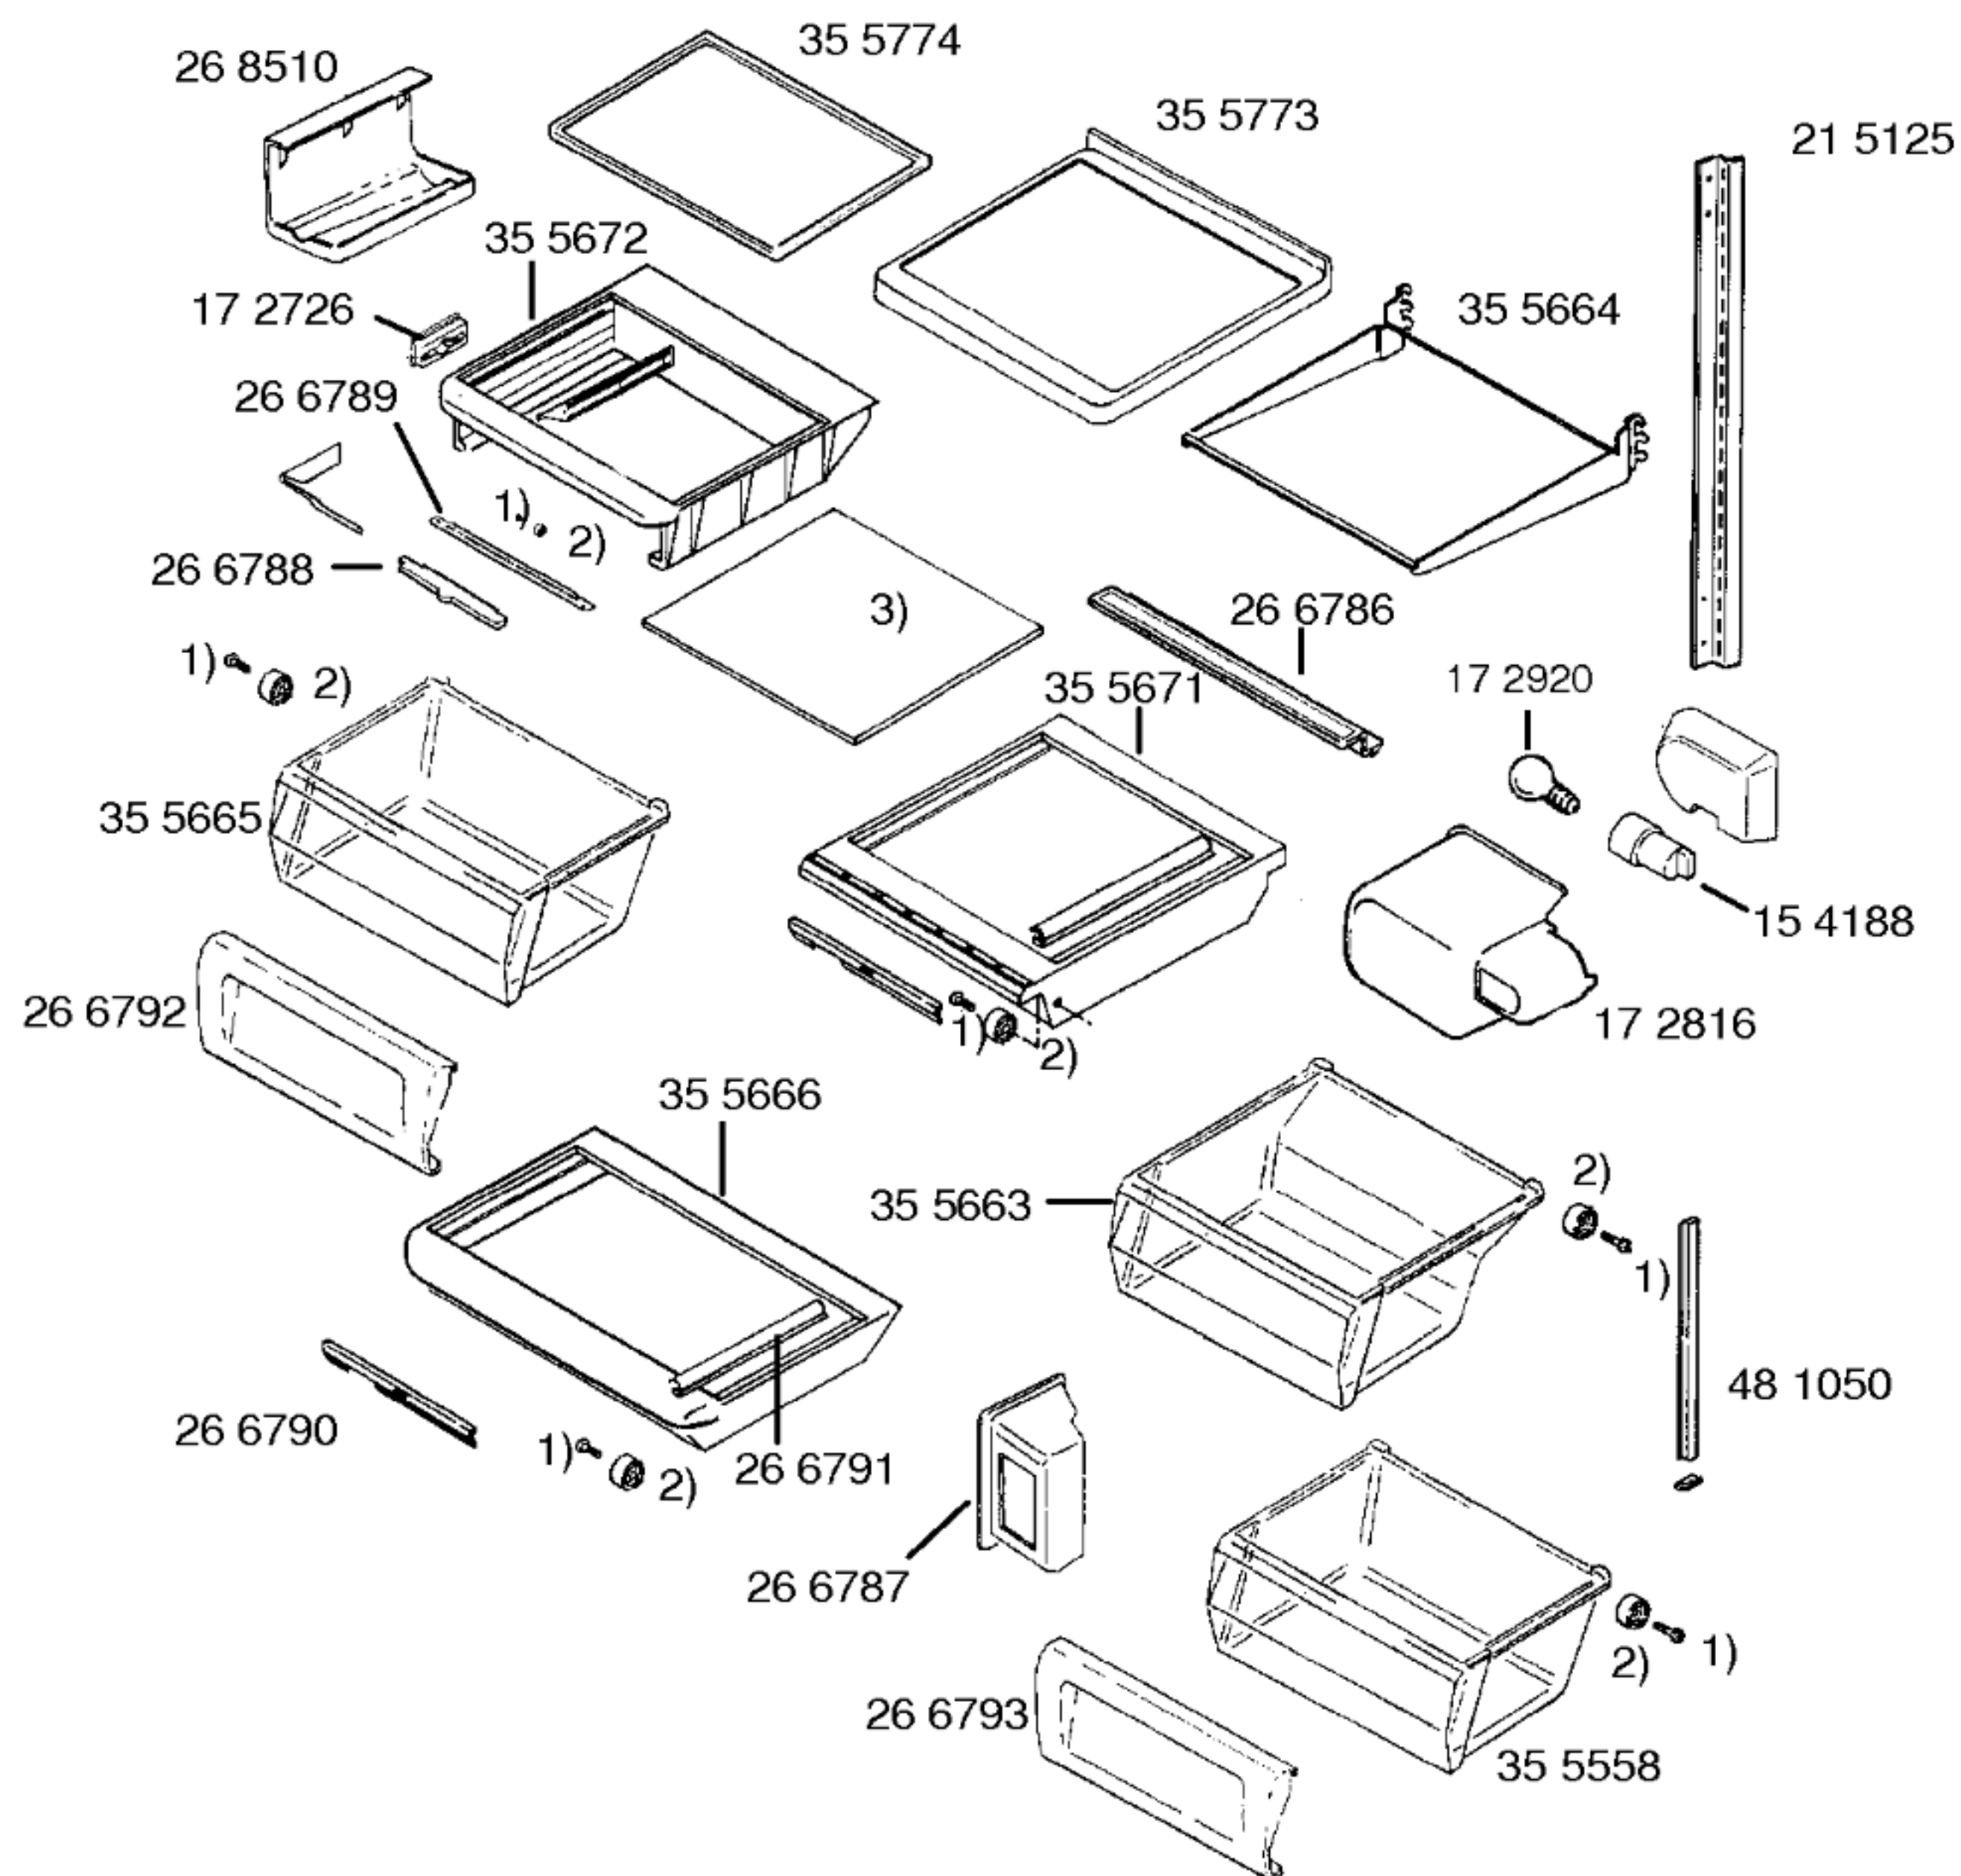

- 1) 15 4245
2) 15 4244
3) 35 5657
unten
35 5658
oben

