




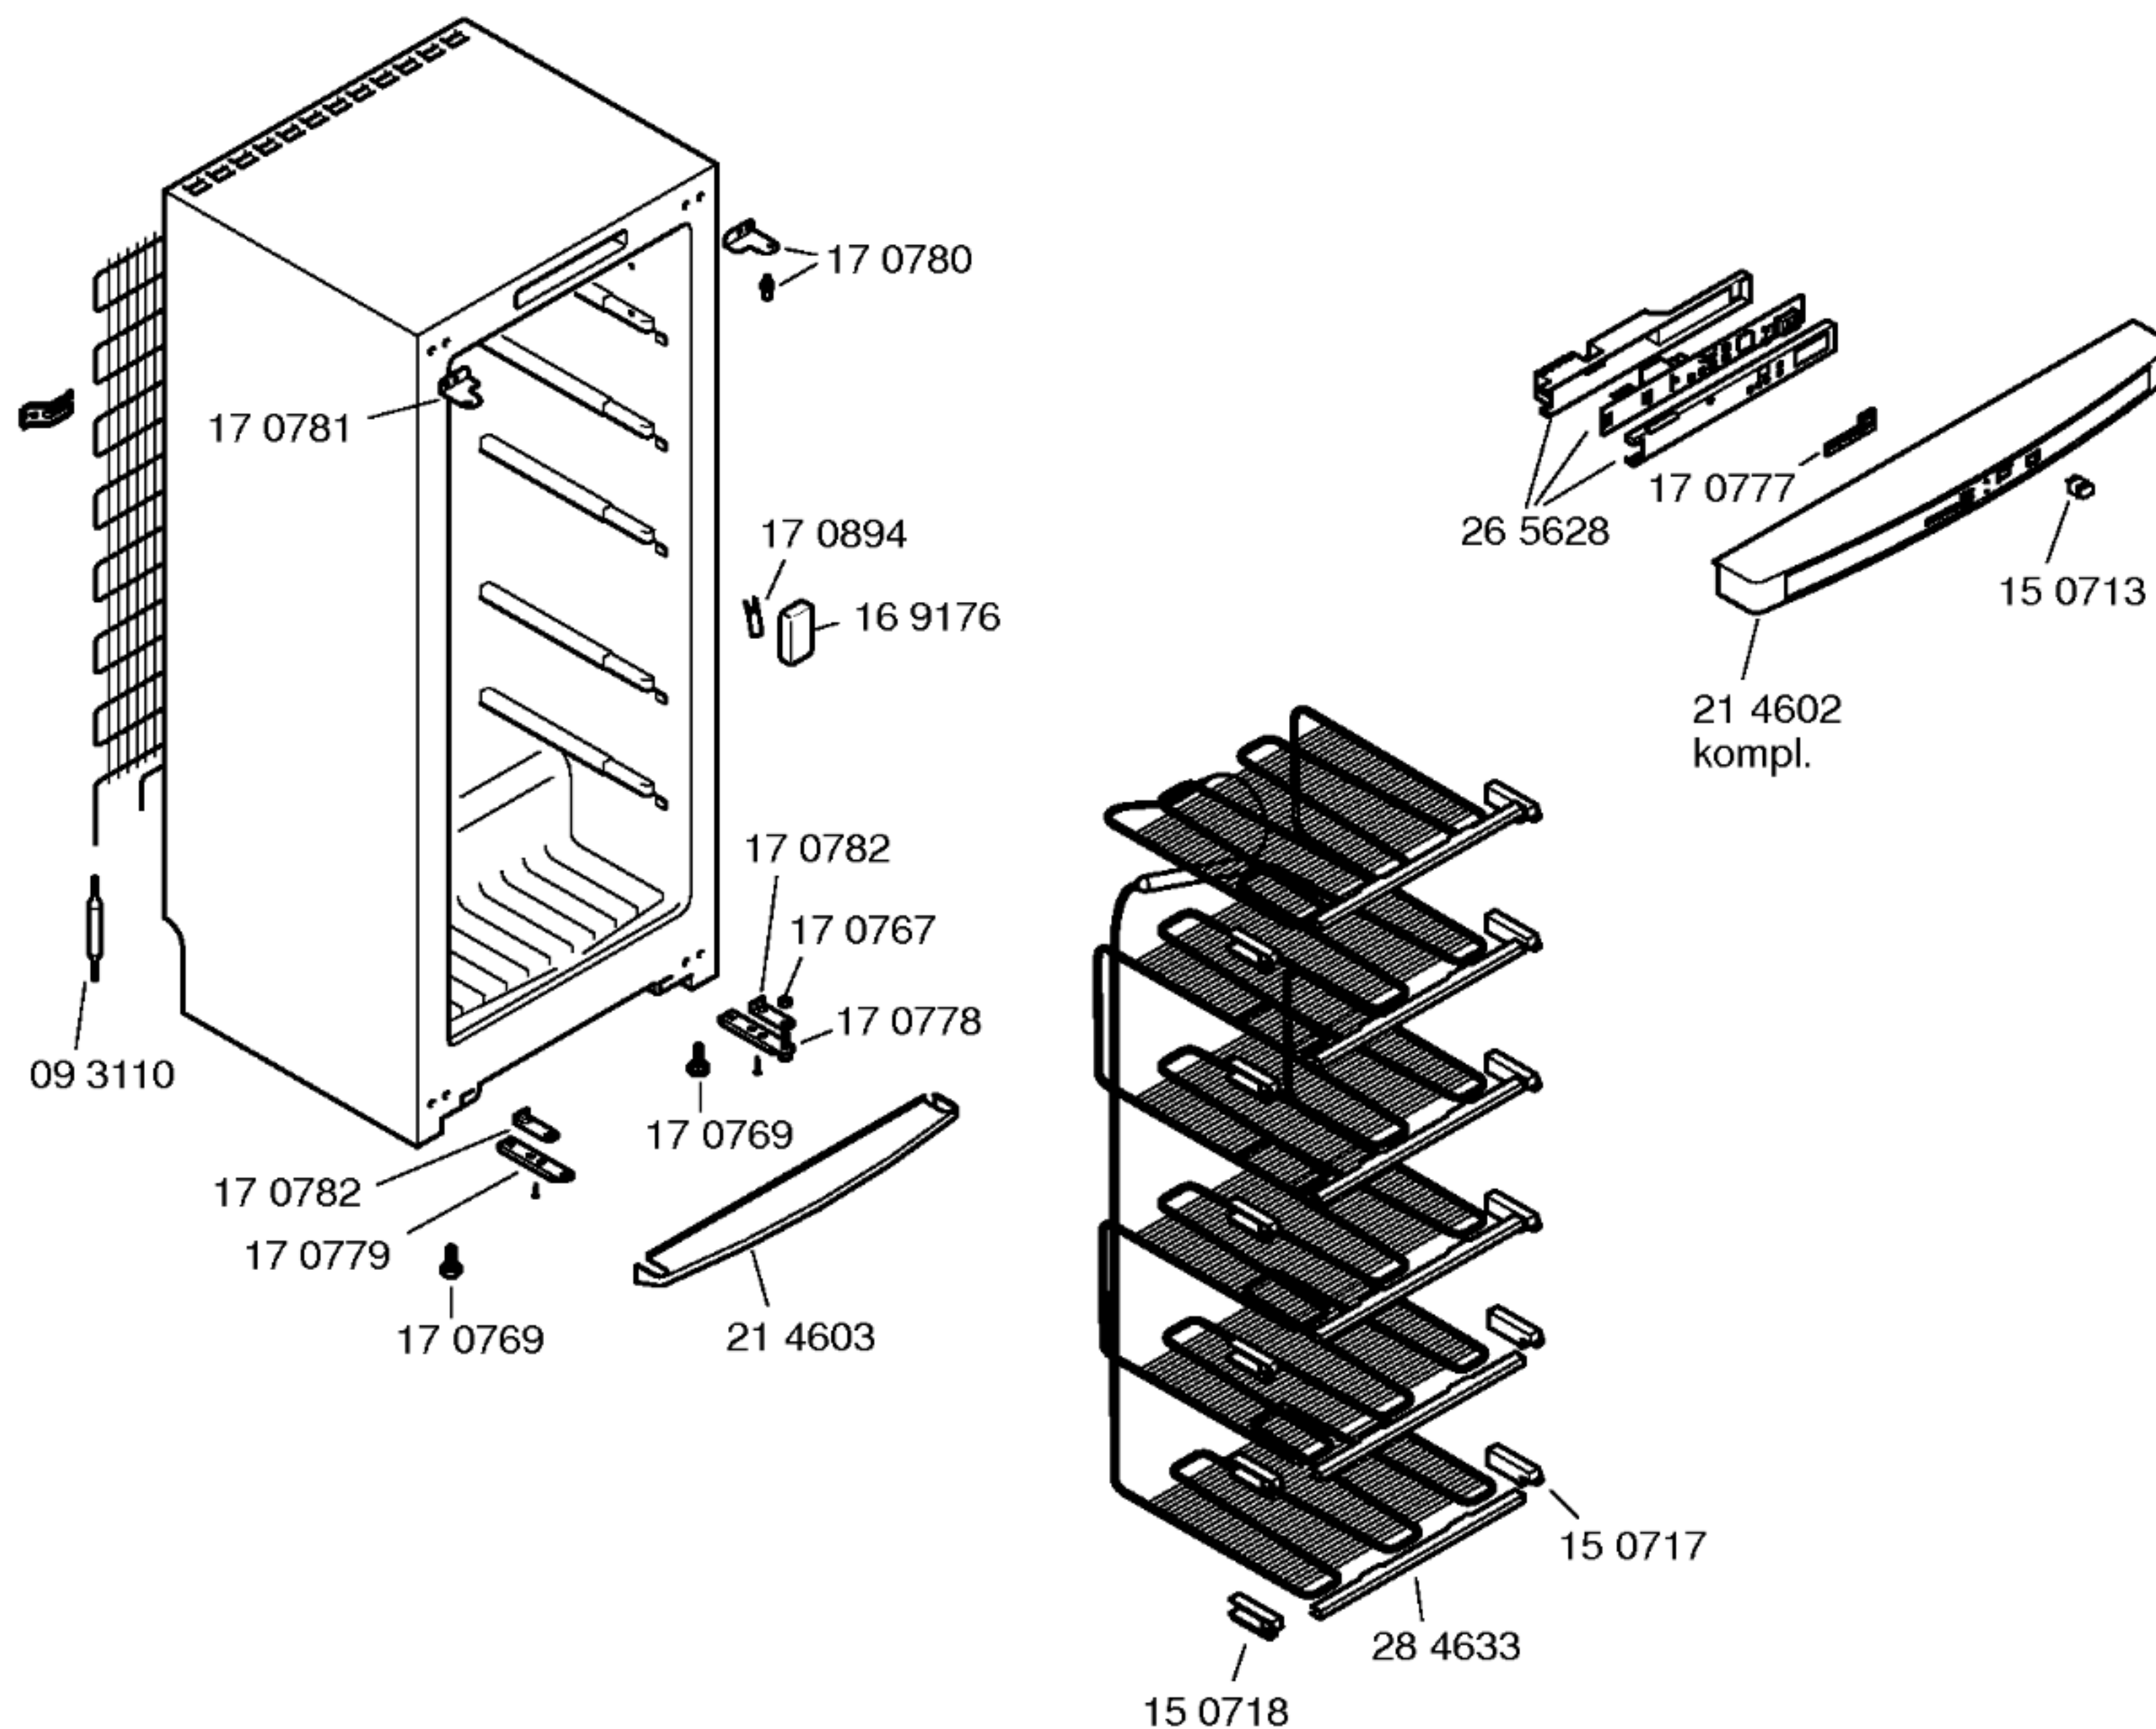



Gebrauchsanweisung
52 2770
(D,GB,F,I,NL)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

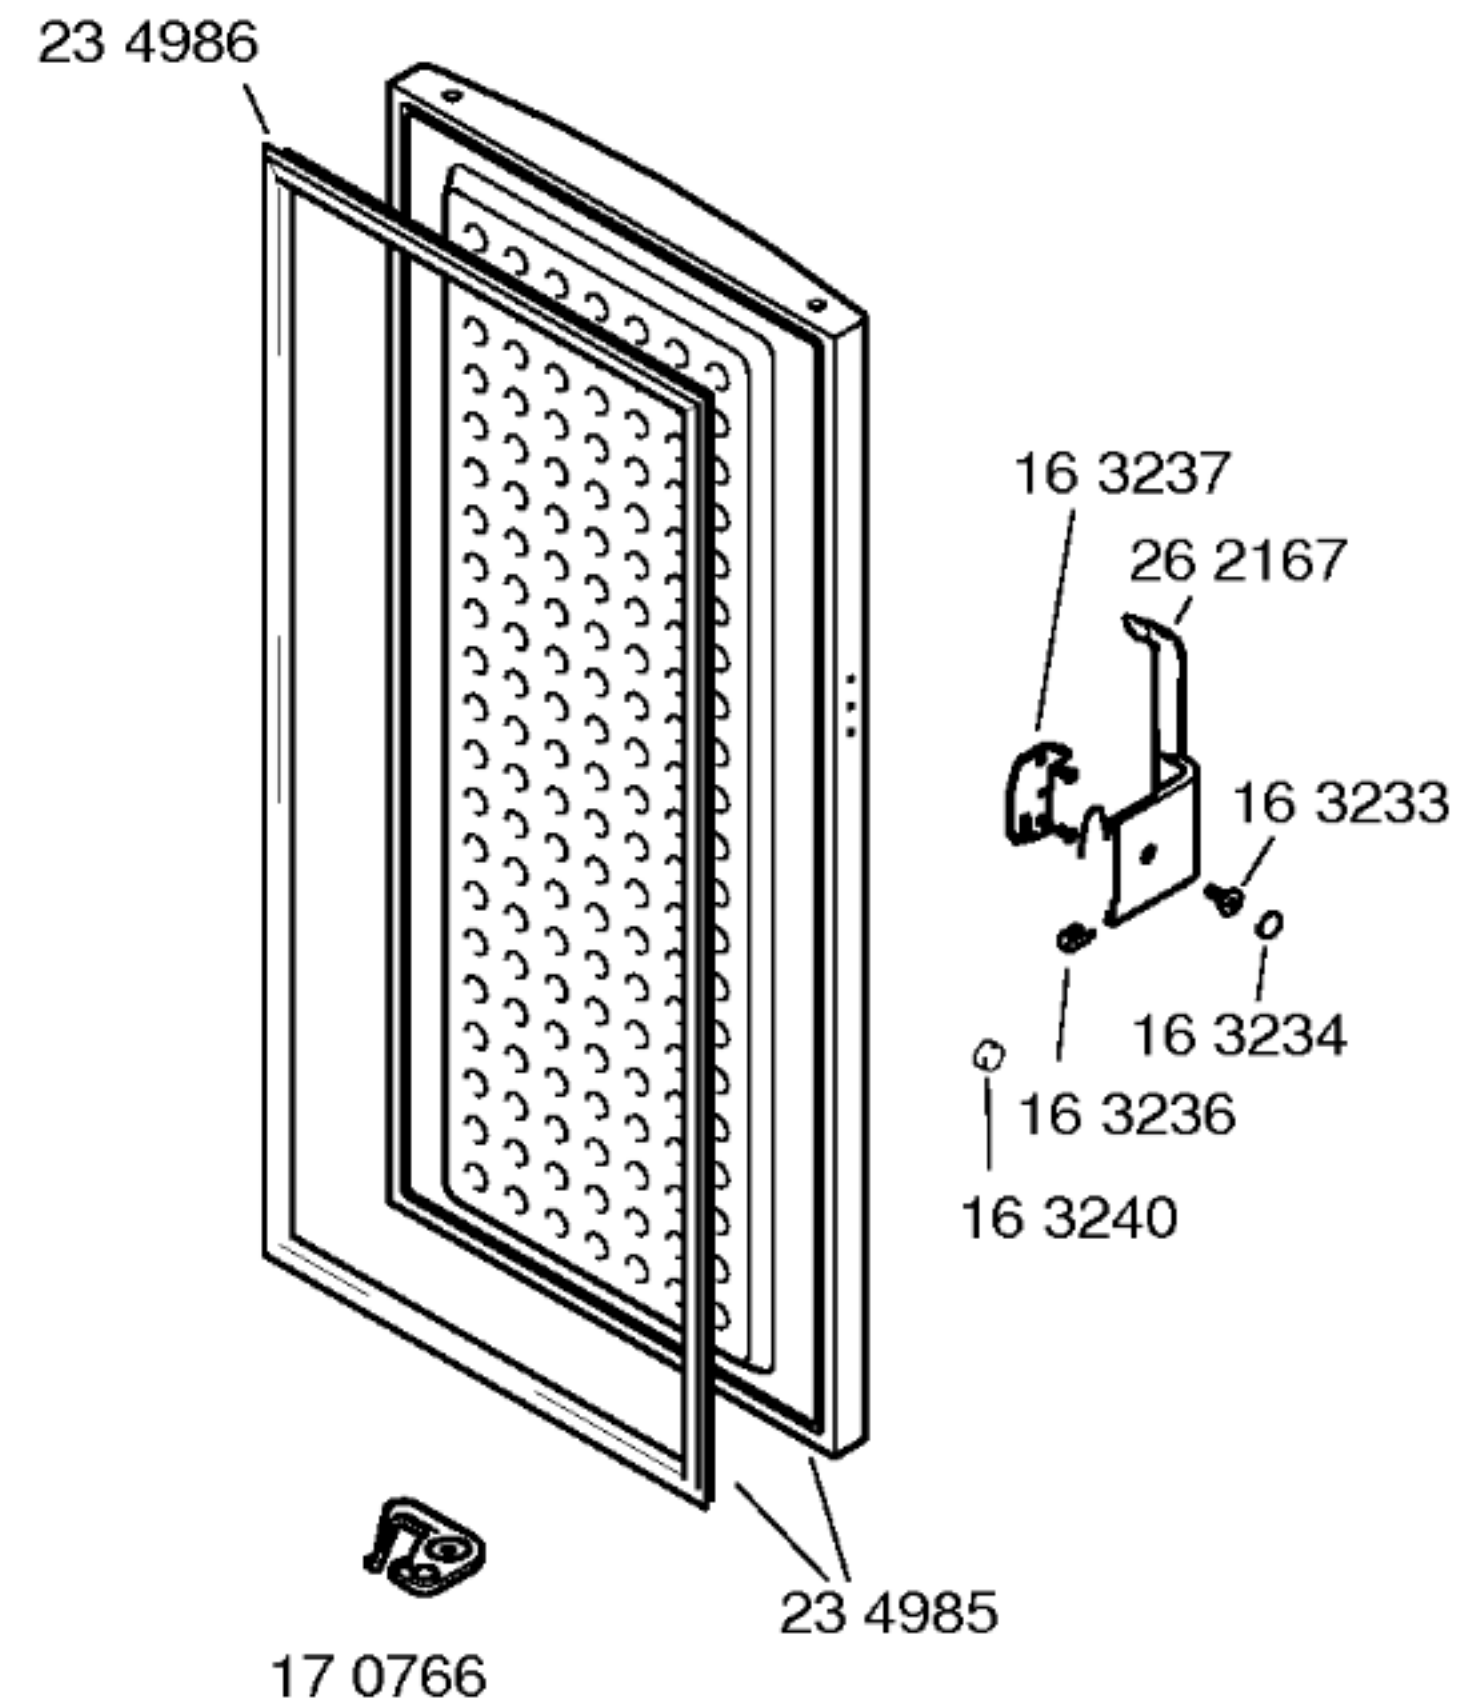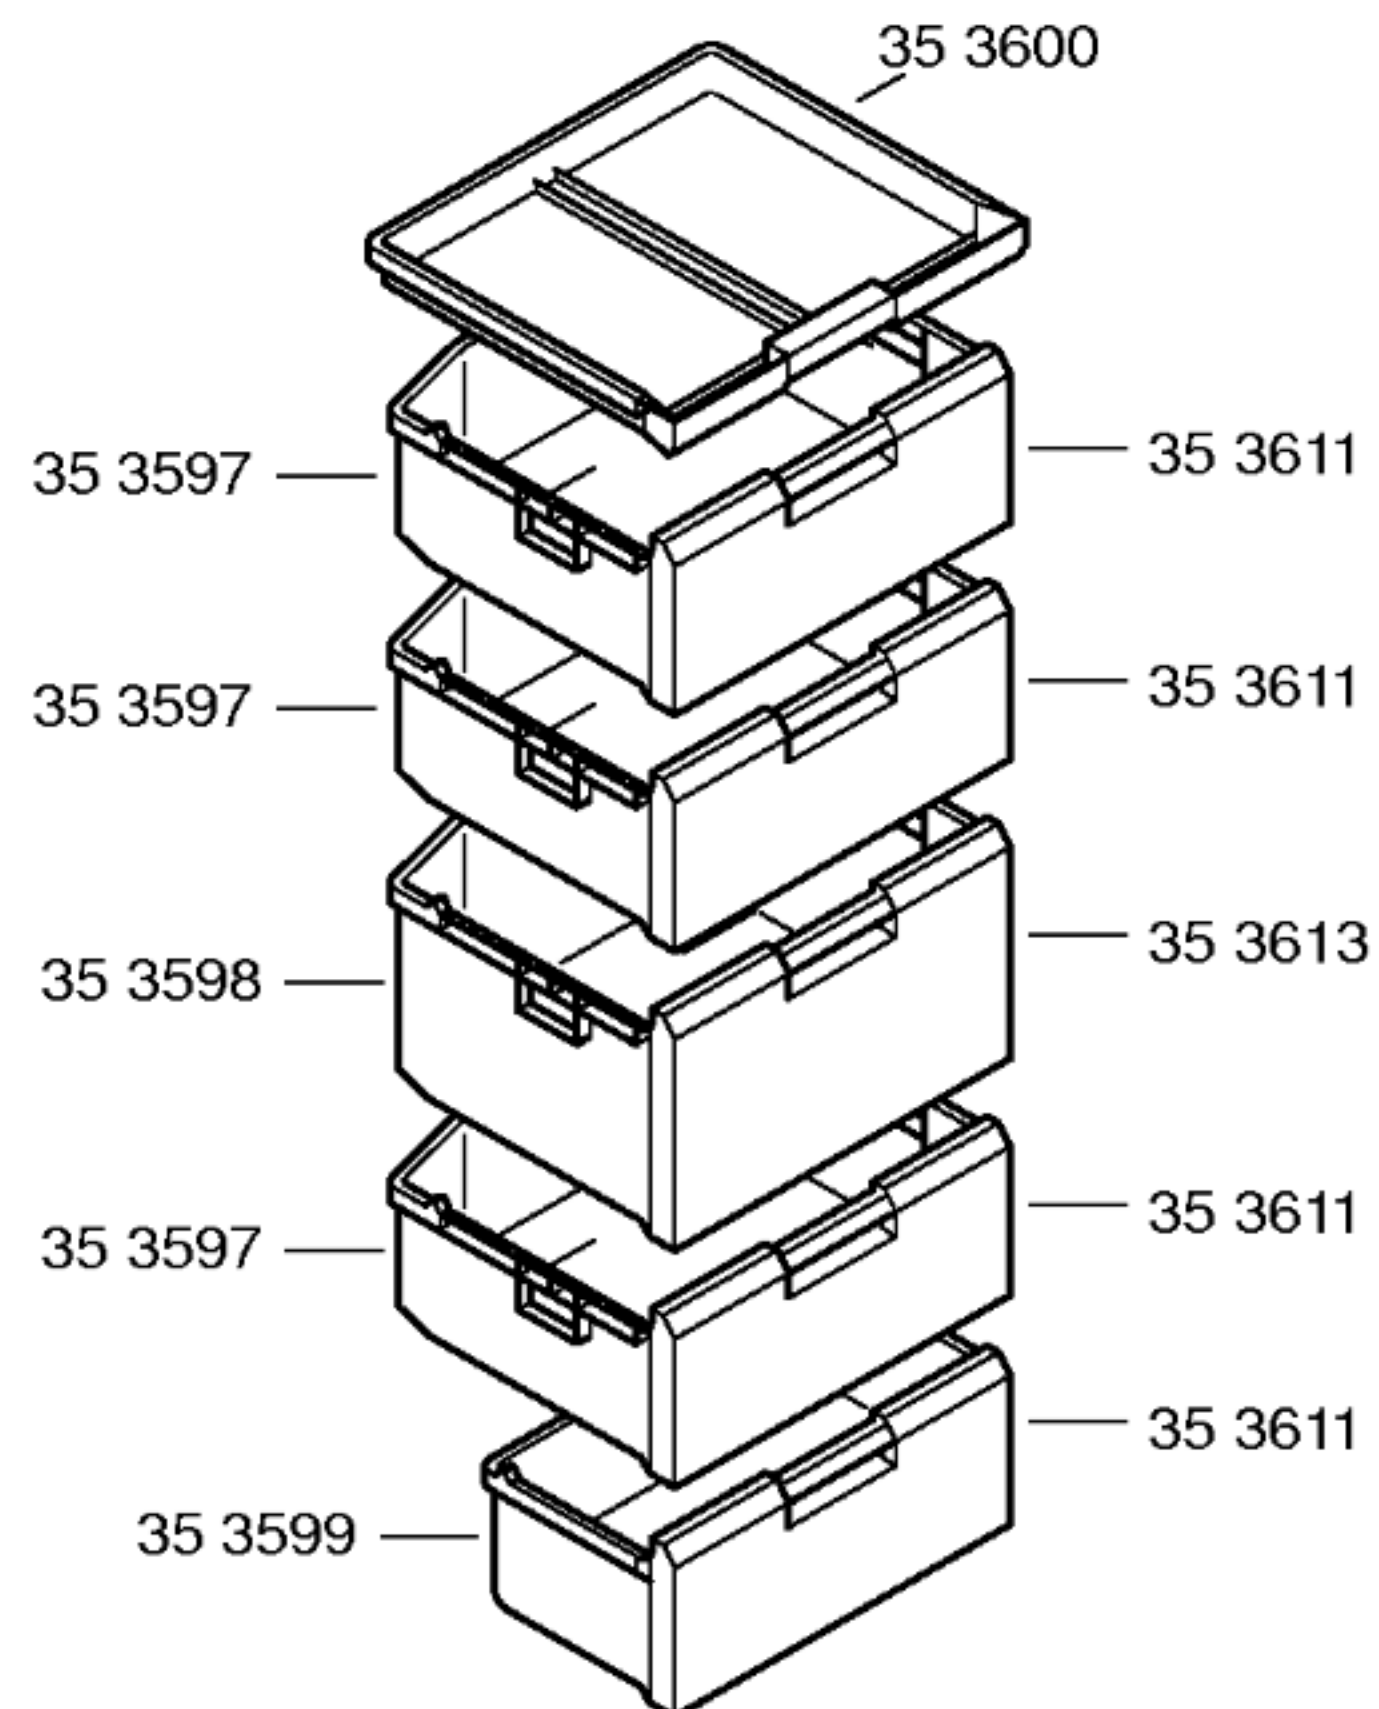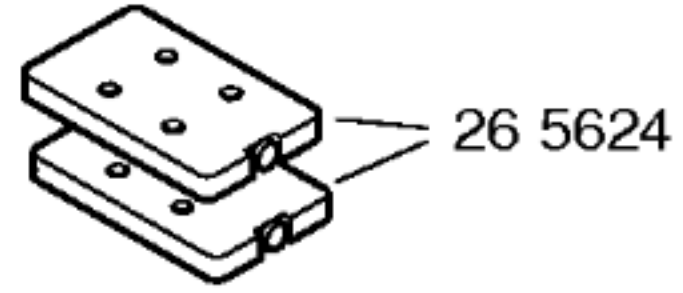

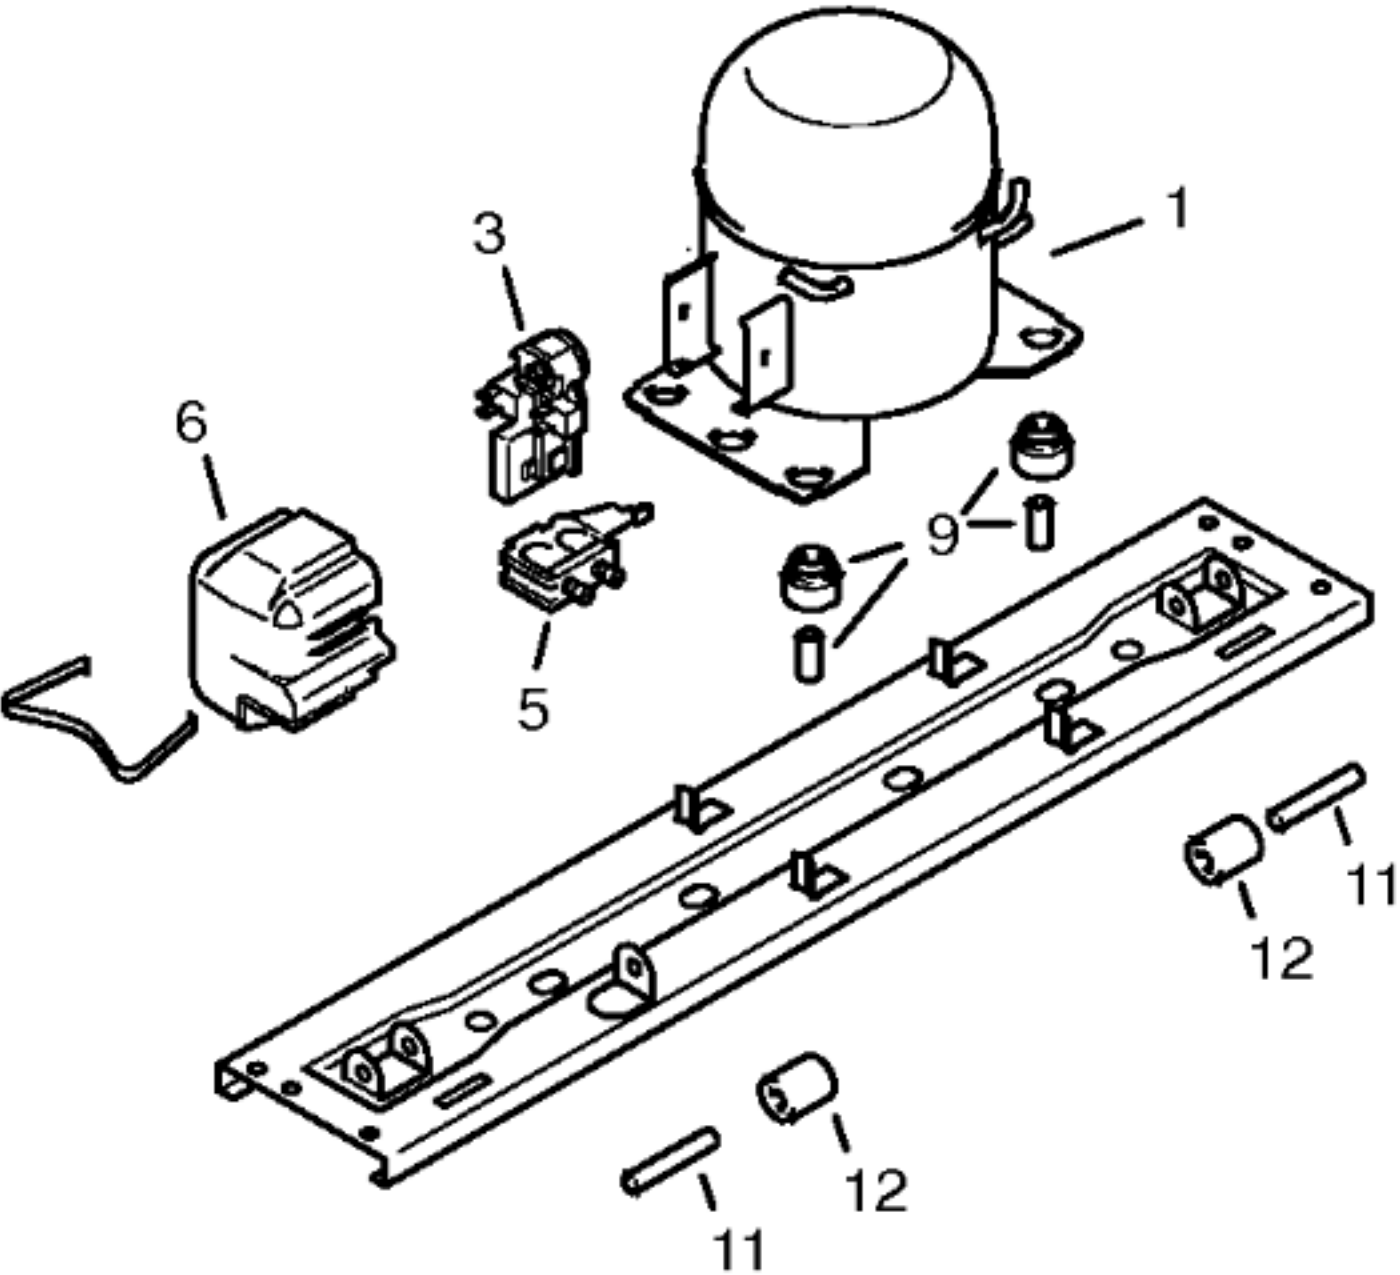

Pos.	V02		
	Danfoss	Goldstar	
	TLES 9 K	ND88NAEG	
1	14 1660	14 2015	
2			
3	15 1055	17 4811	
4			
5	15 0760	17 0745	
6	15 1072	17 0744	
7			
8	21 4604	21 4604	
9	05 0166	05 0166	
10			
11	01 9017	01 9017	
12	01 1916	01 1916	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Golstar
Typ/Type		TLES 9 K		ND88NAEG
Förderleistung/Delivery/Débit		l/h	1589	
Anlaufstrom/Starting current/Cour de démarrage		A	8,8	
Widerstand/Resistance/Résistance Ha/main/prin		Ω	16,5	
Hi/aux		Ω	16,9	
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W	100	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC–Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	–18 43,31 ±1,10
		+5	12,70 ±0,18	–22 54,66 ±1,59
		0	16,33 ±0,16	–26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		