


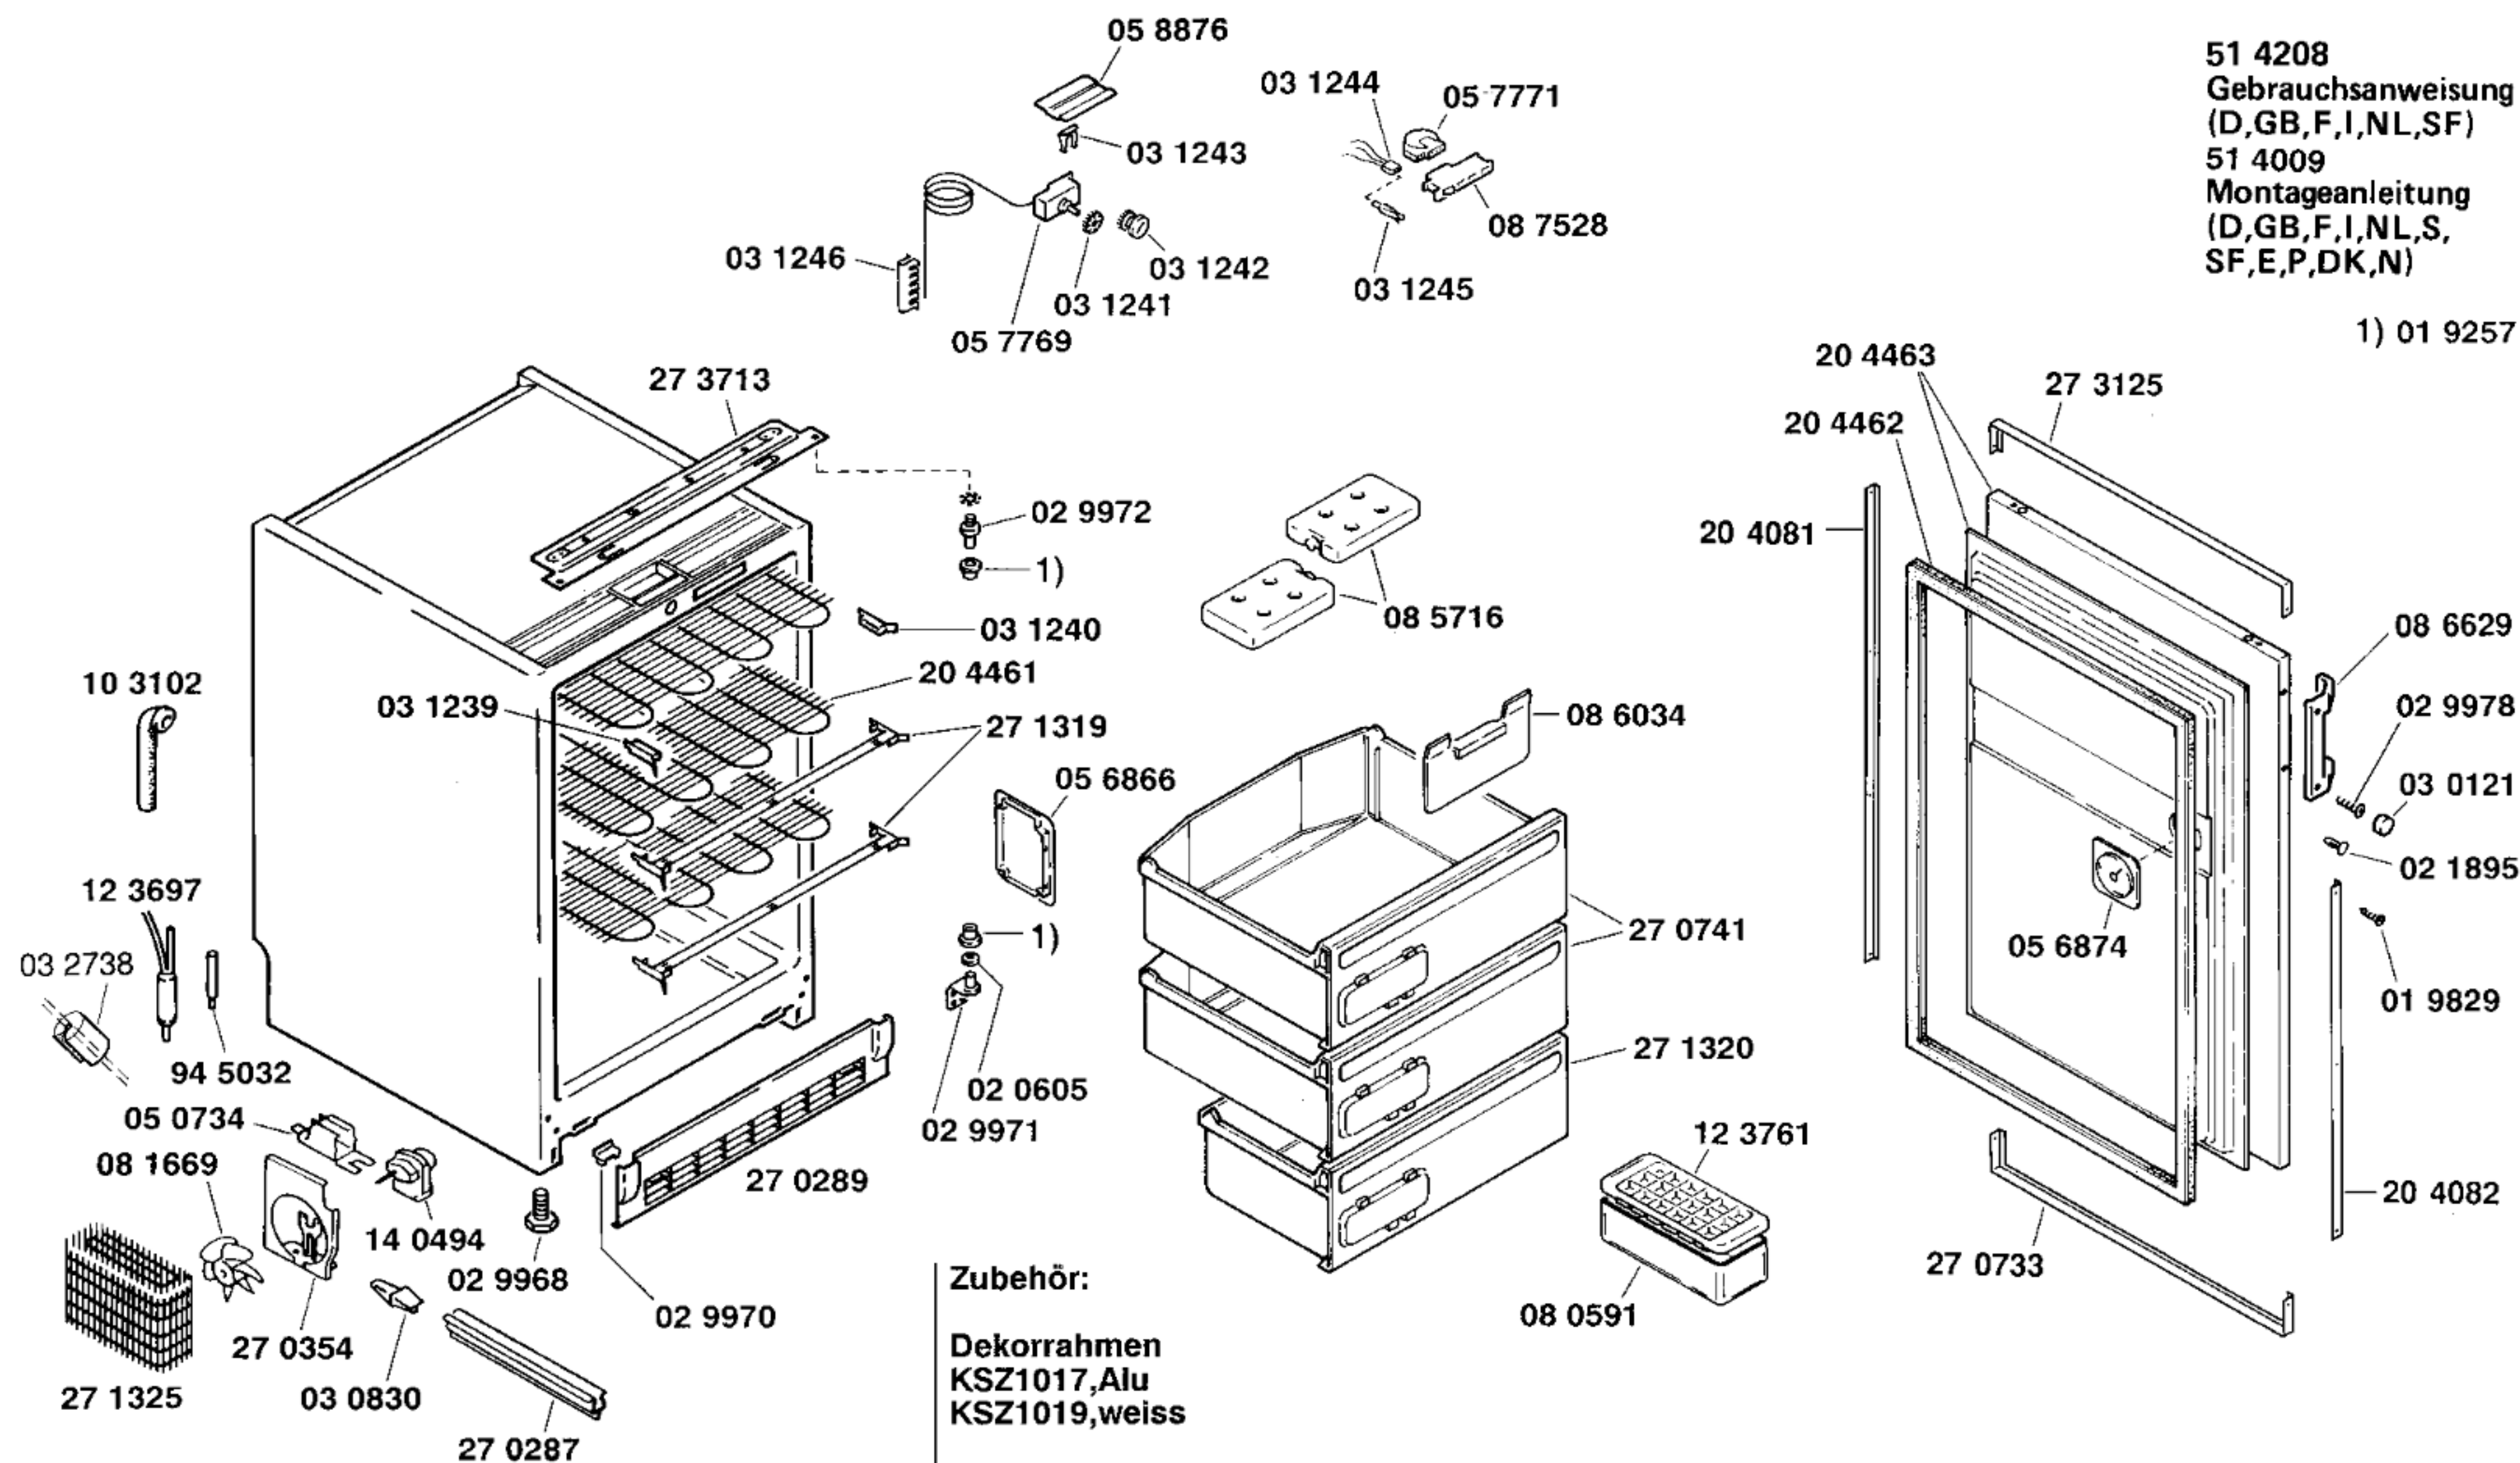


Ident – Nummern – Konstante
3740

51 4208
Gebrauchsanweisung
(D,GB,F,I,NL,SF)
51 4009
Montageanleitung
(D,GB,F,I,NL,S,
SF,E,P,DK,N)

1) 01 9257



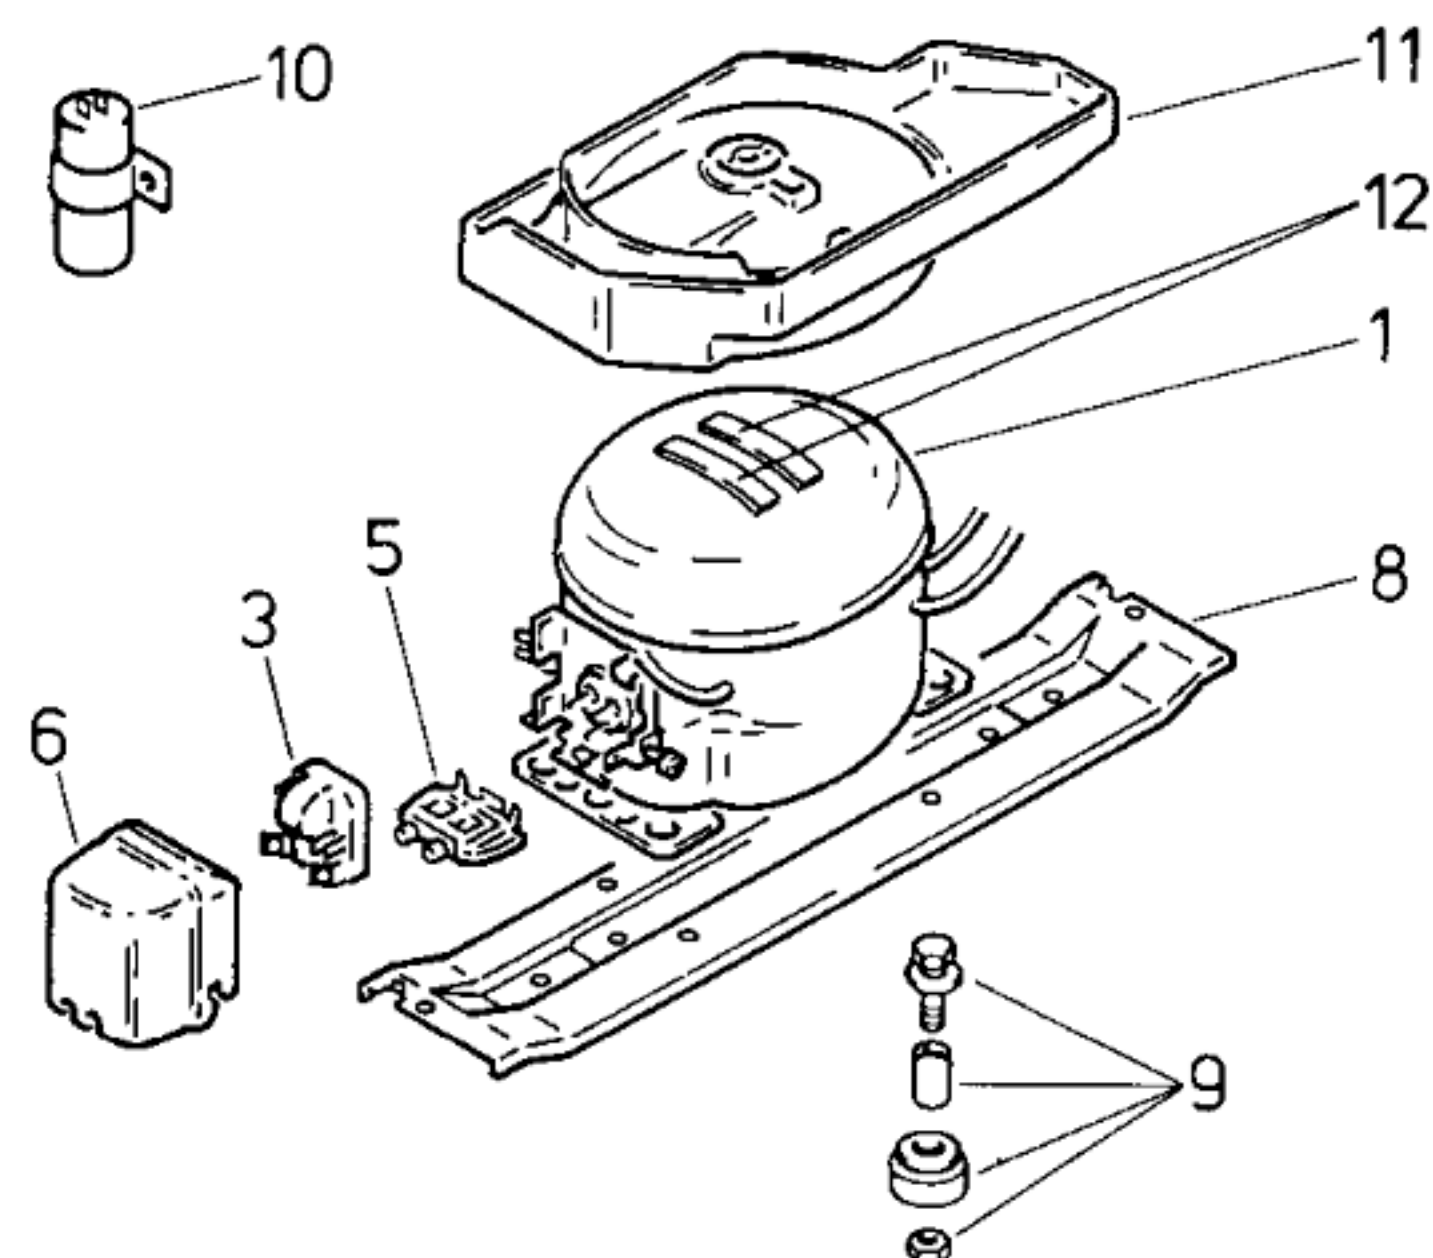Ident – Nummern – Konstante
3740

Pos.	Danfoss		
	TL 5 A		
1	14 0065		
2			
3	02 0108		
4			
5	02 7310		
6	05 1413		
7			
8	27 0291		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5 A		
Förderleistung/Delivery/Débit		I/h	V 914	
Anlaufstrom/Starting current/Cour. de démarrage		A	9,0	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	15,5	
	Hi/aux	Ω	16,8	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF57 SF2		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“	°C	
Valeurs de commutation		„aus“		
(„abtauen“ od.)		„alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	140
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		