


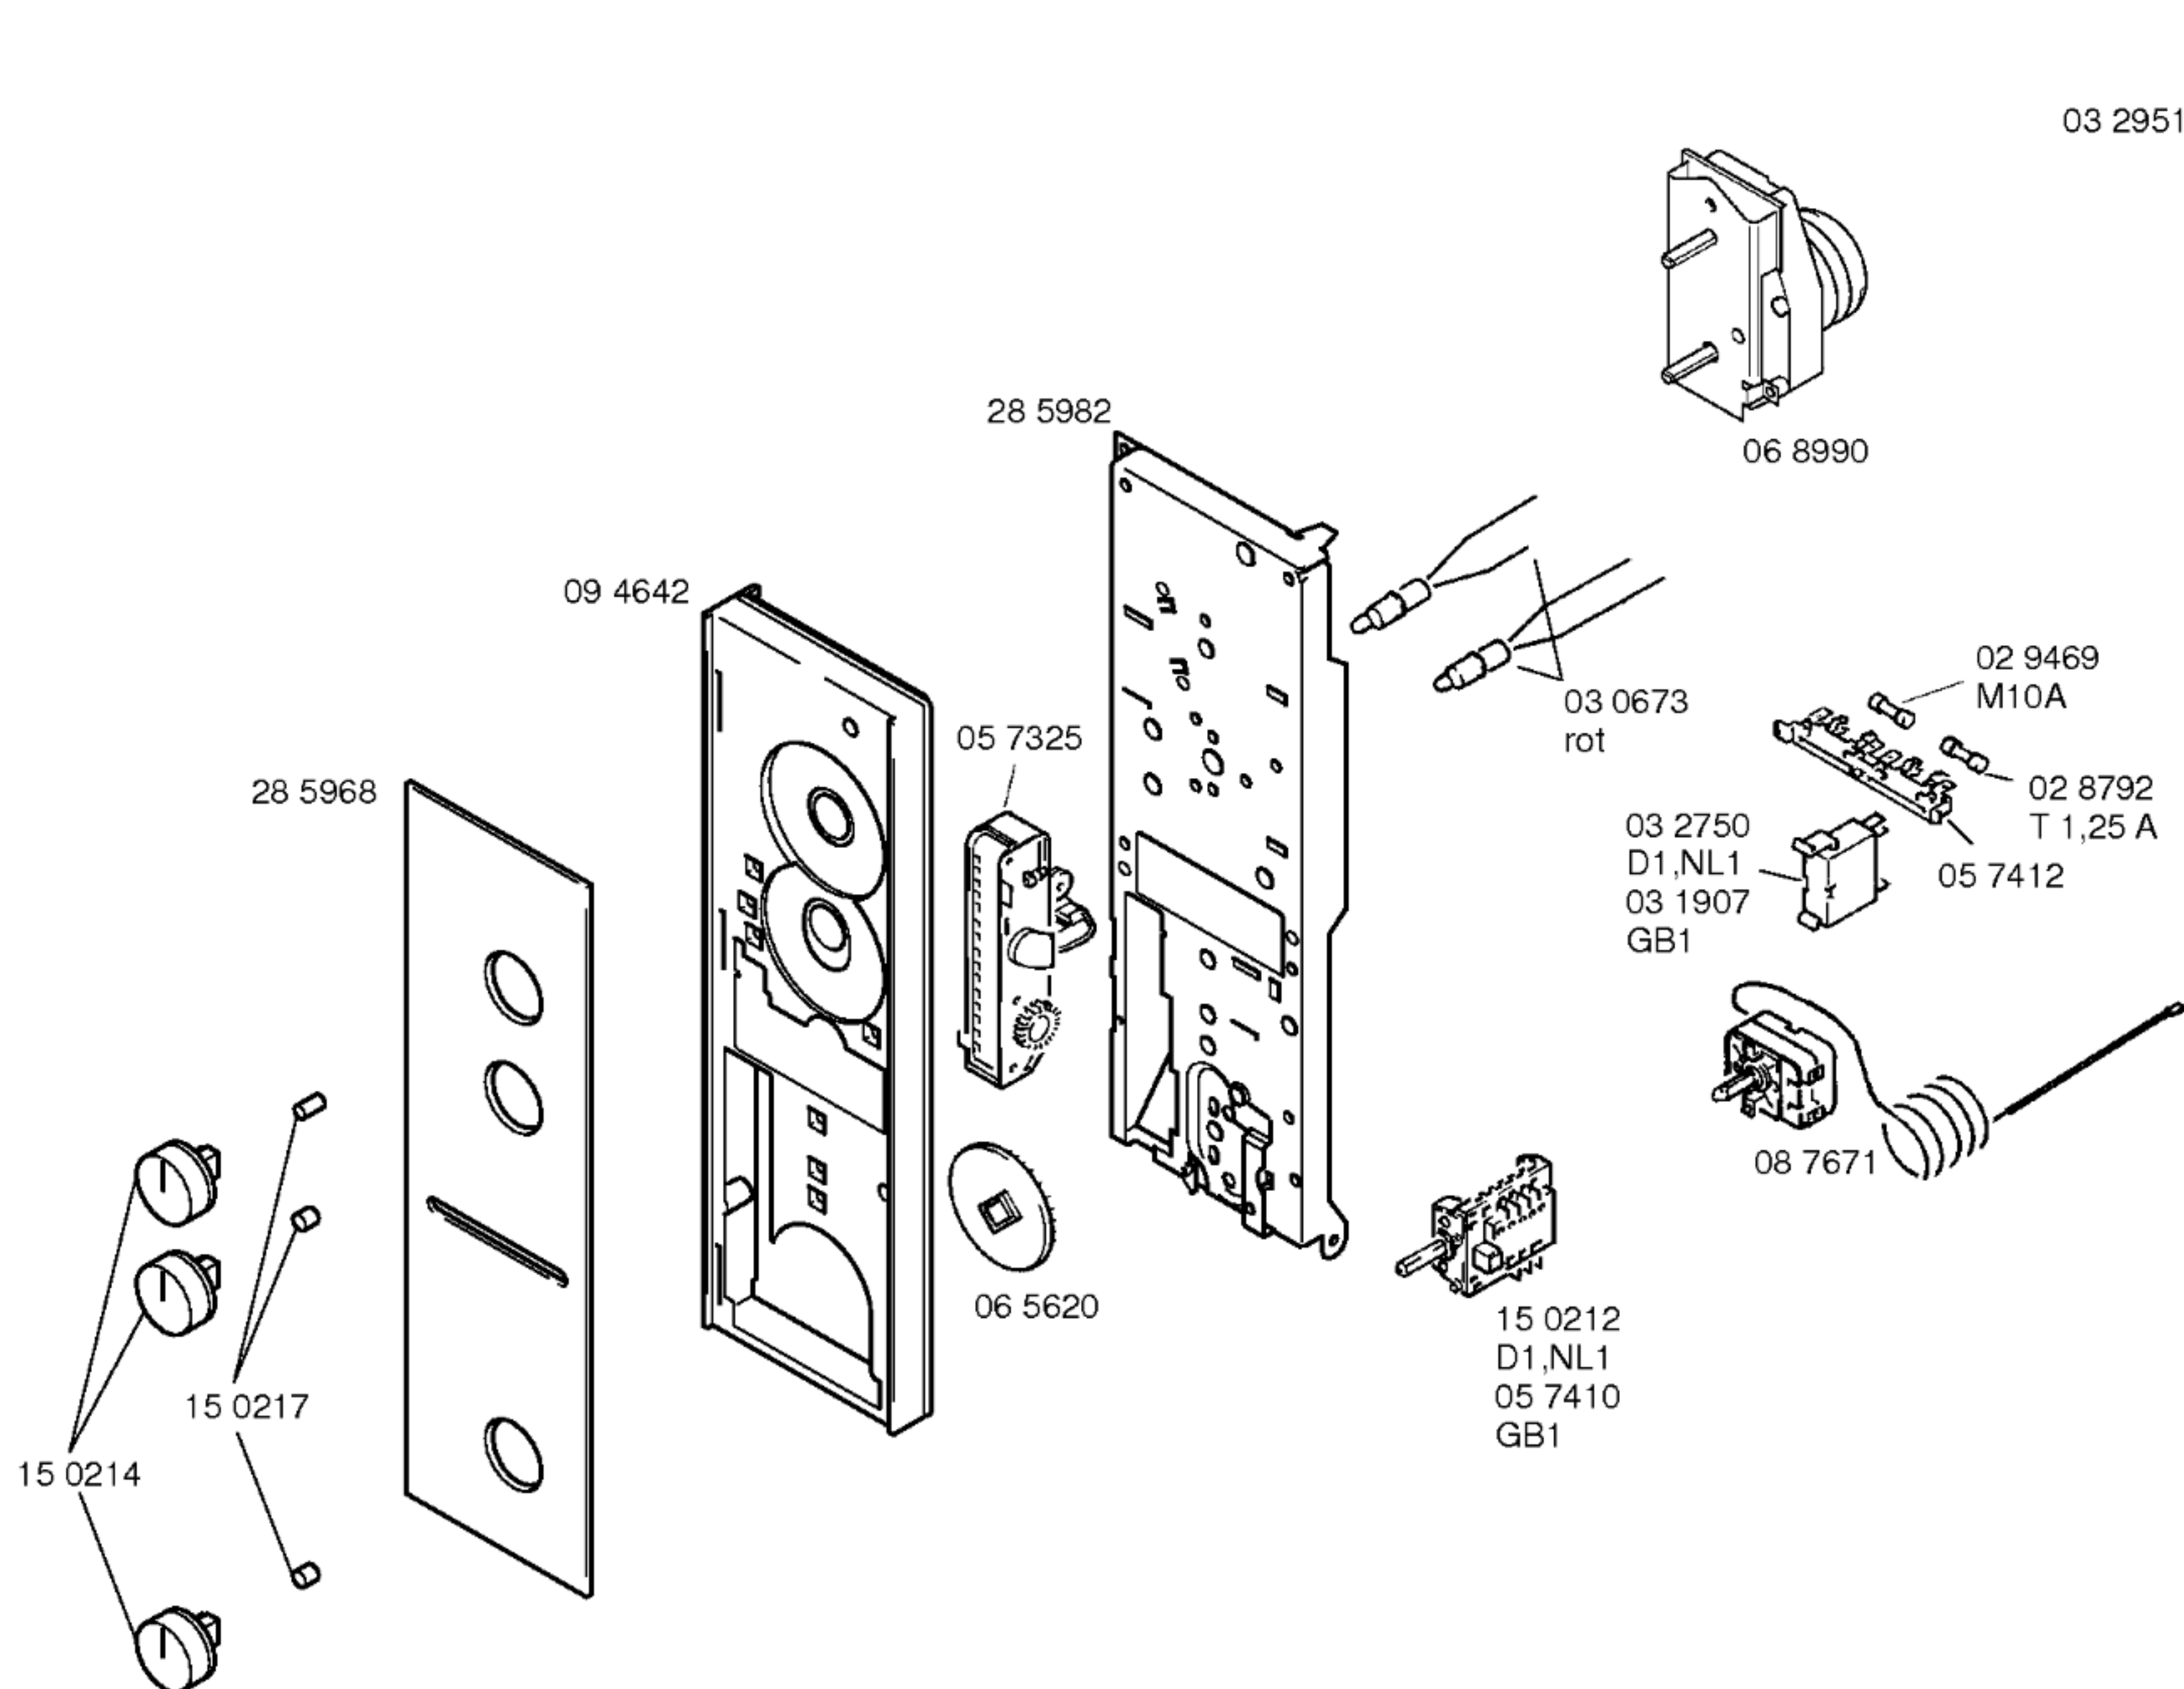



Gebrauchsanweisung

51 6887
(D,GB,NL)
D1,NL1
51 6888
(GB/10A)
GB1
Kochbuch
51 5833
(D)
51 5834
(NL)

Zubehör:

Einbaurahmen
HZ 67022
Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056

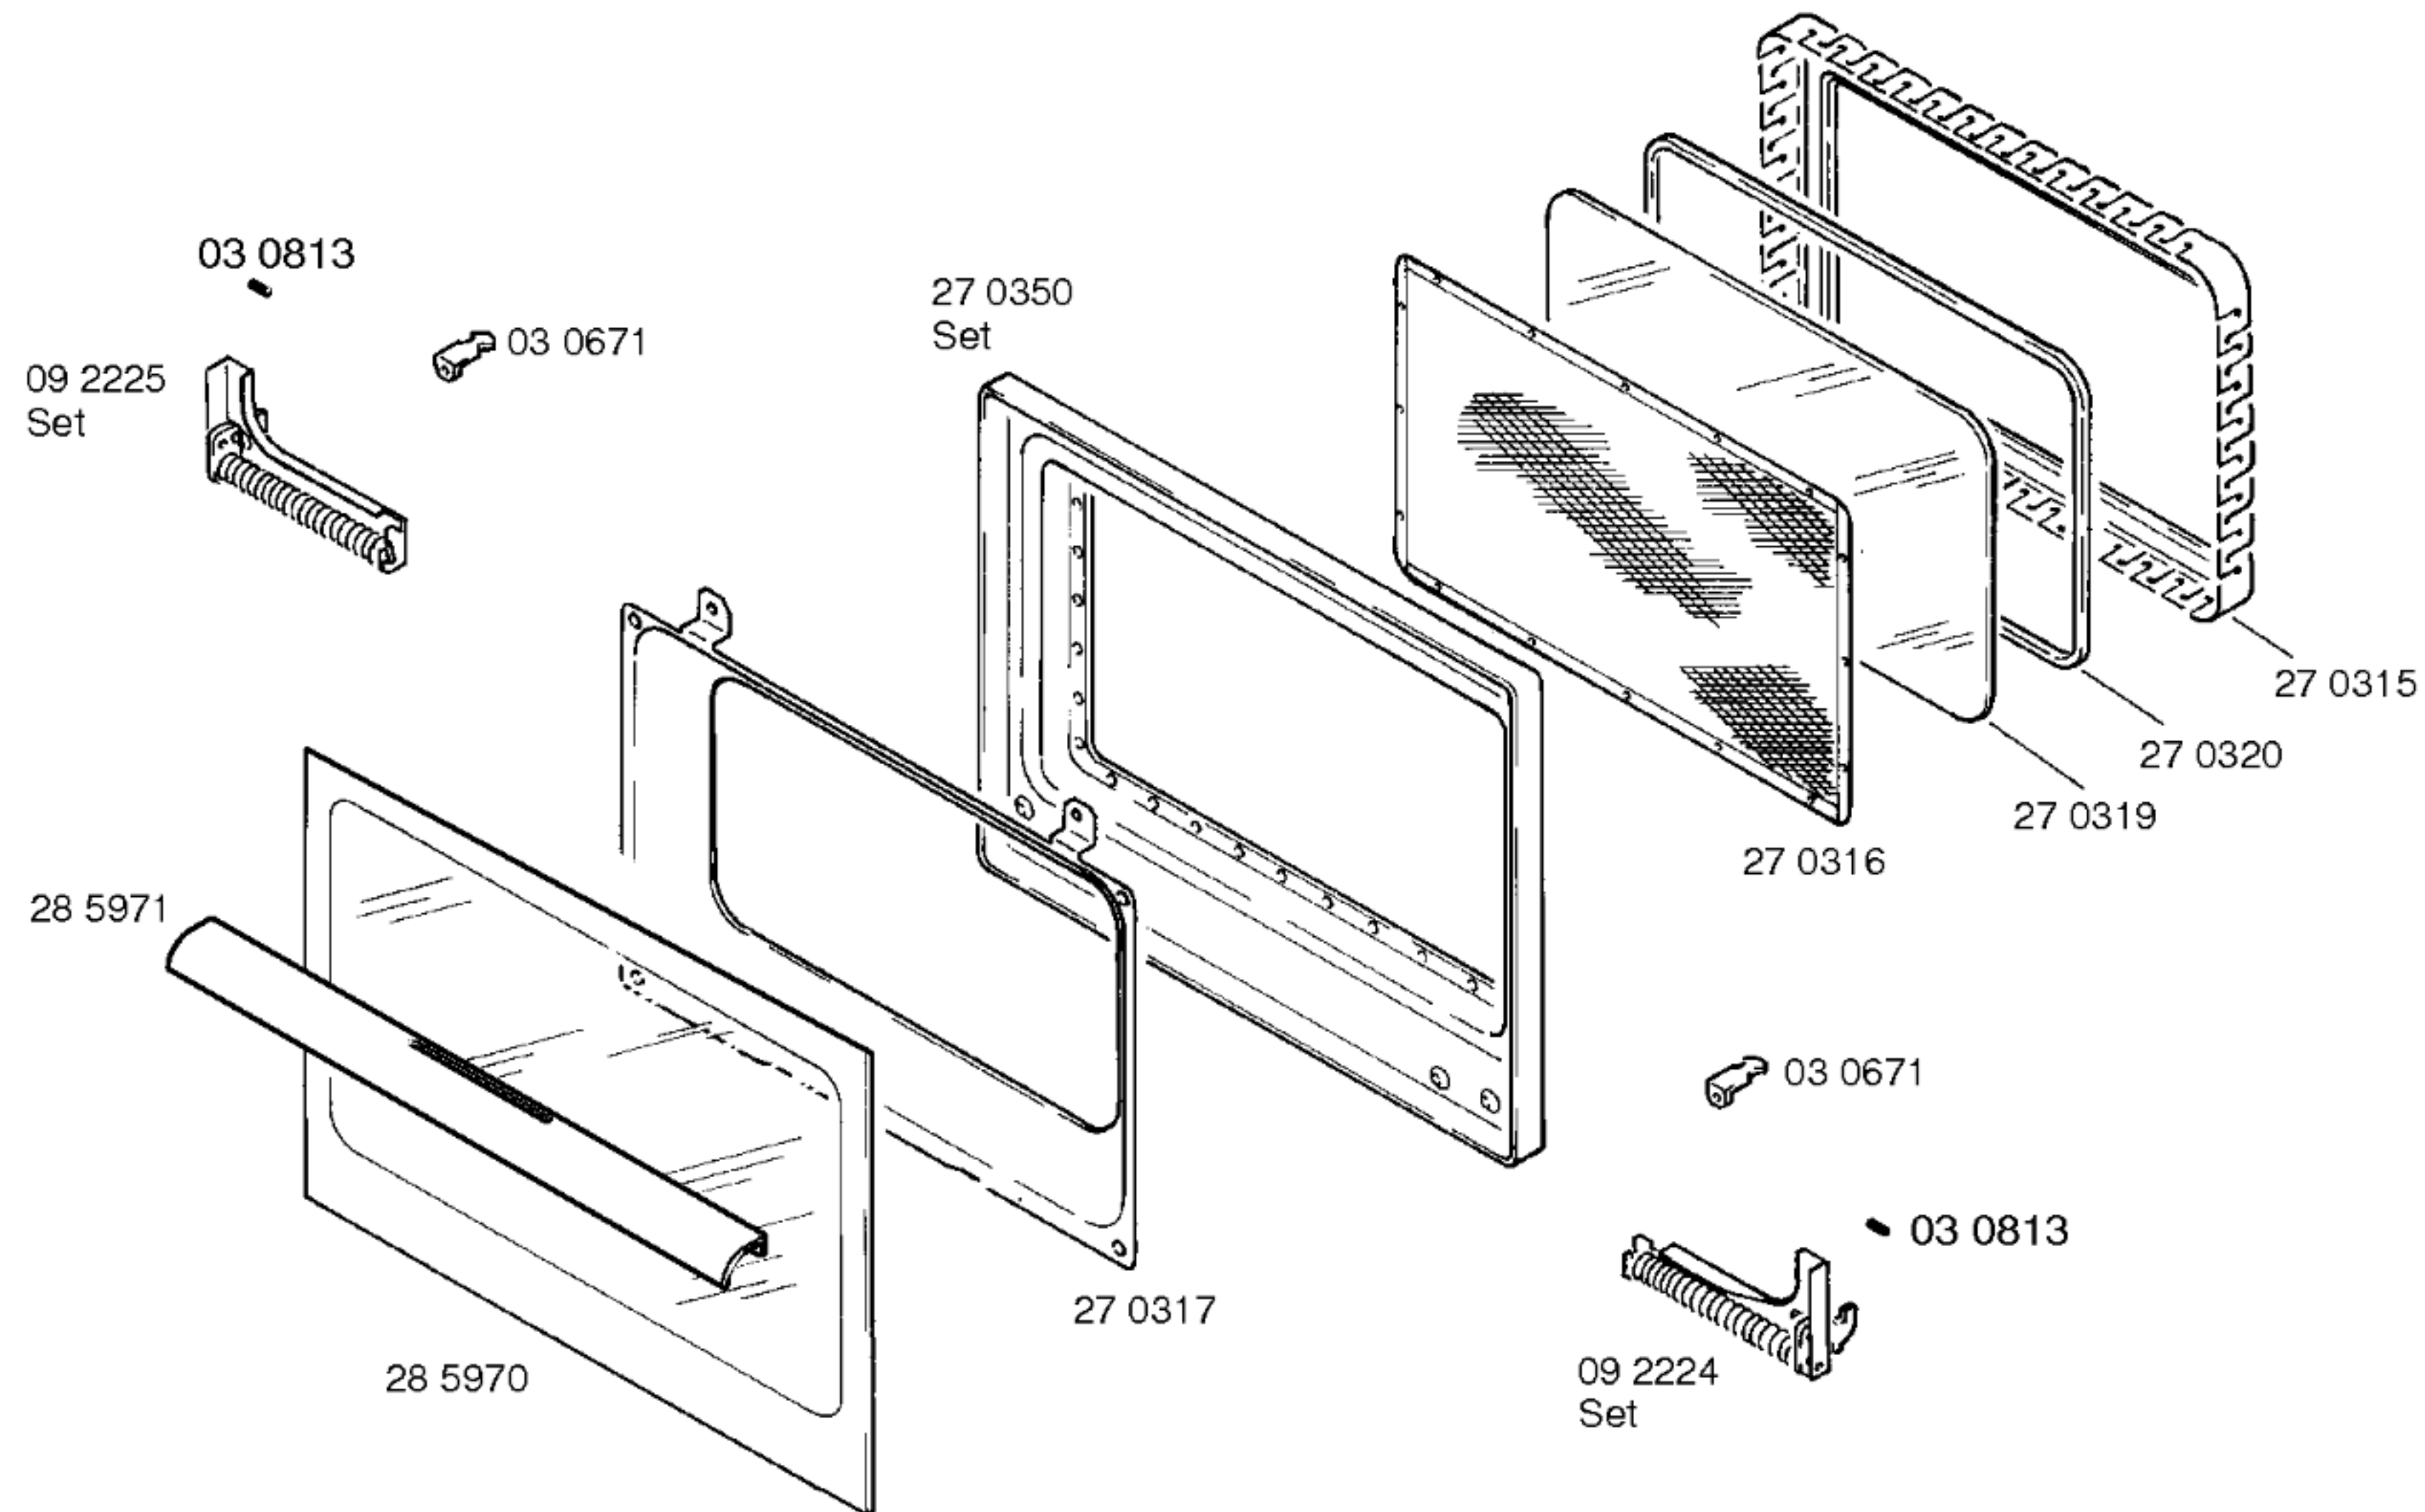

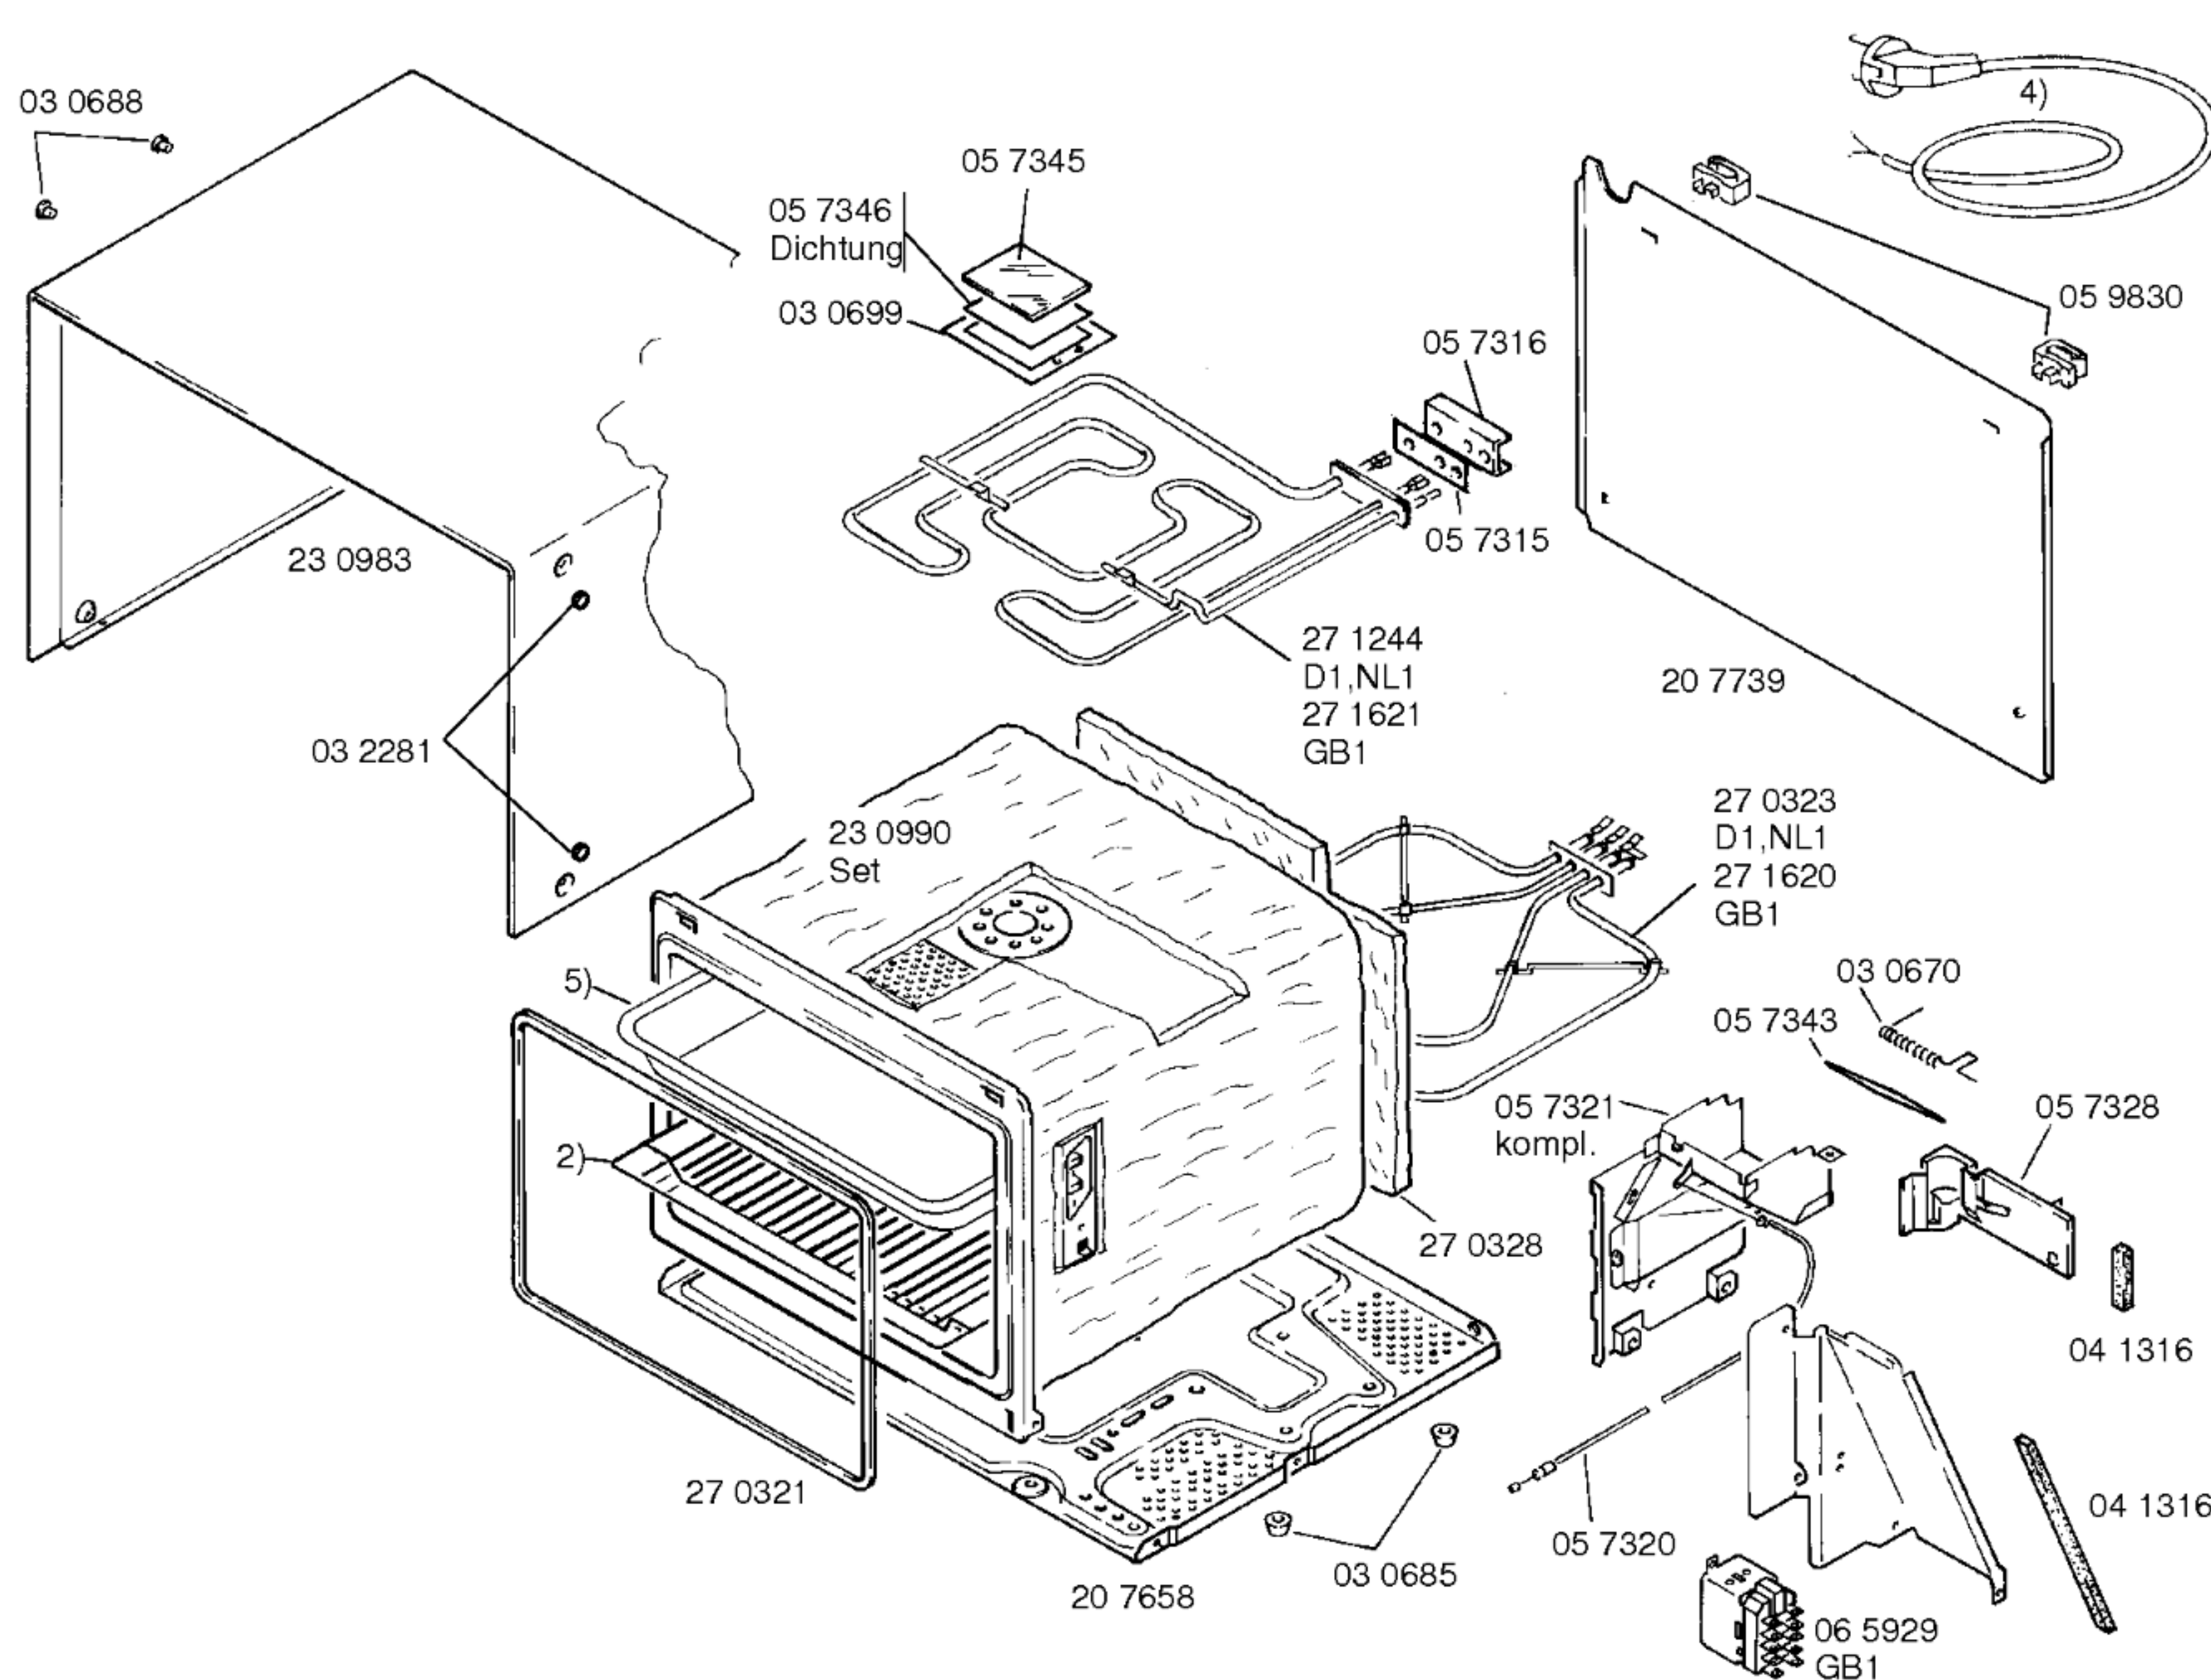

- 2) 11 4539
- 4) 08 8694
 NL1,D1
 09 2862
 GB1
- 5) 27 3844
 Kombipfanne
- 02 8732
 Anschlag-Backblech

