



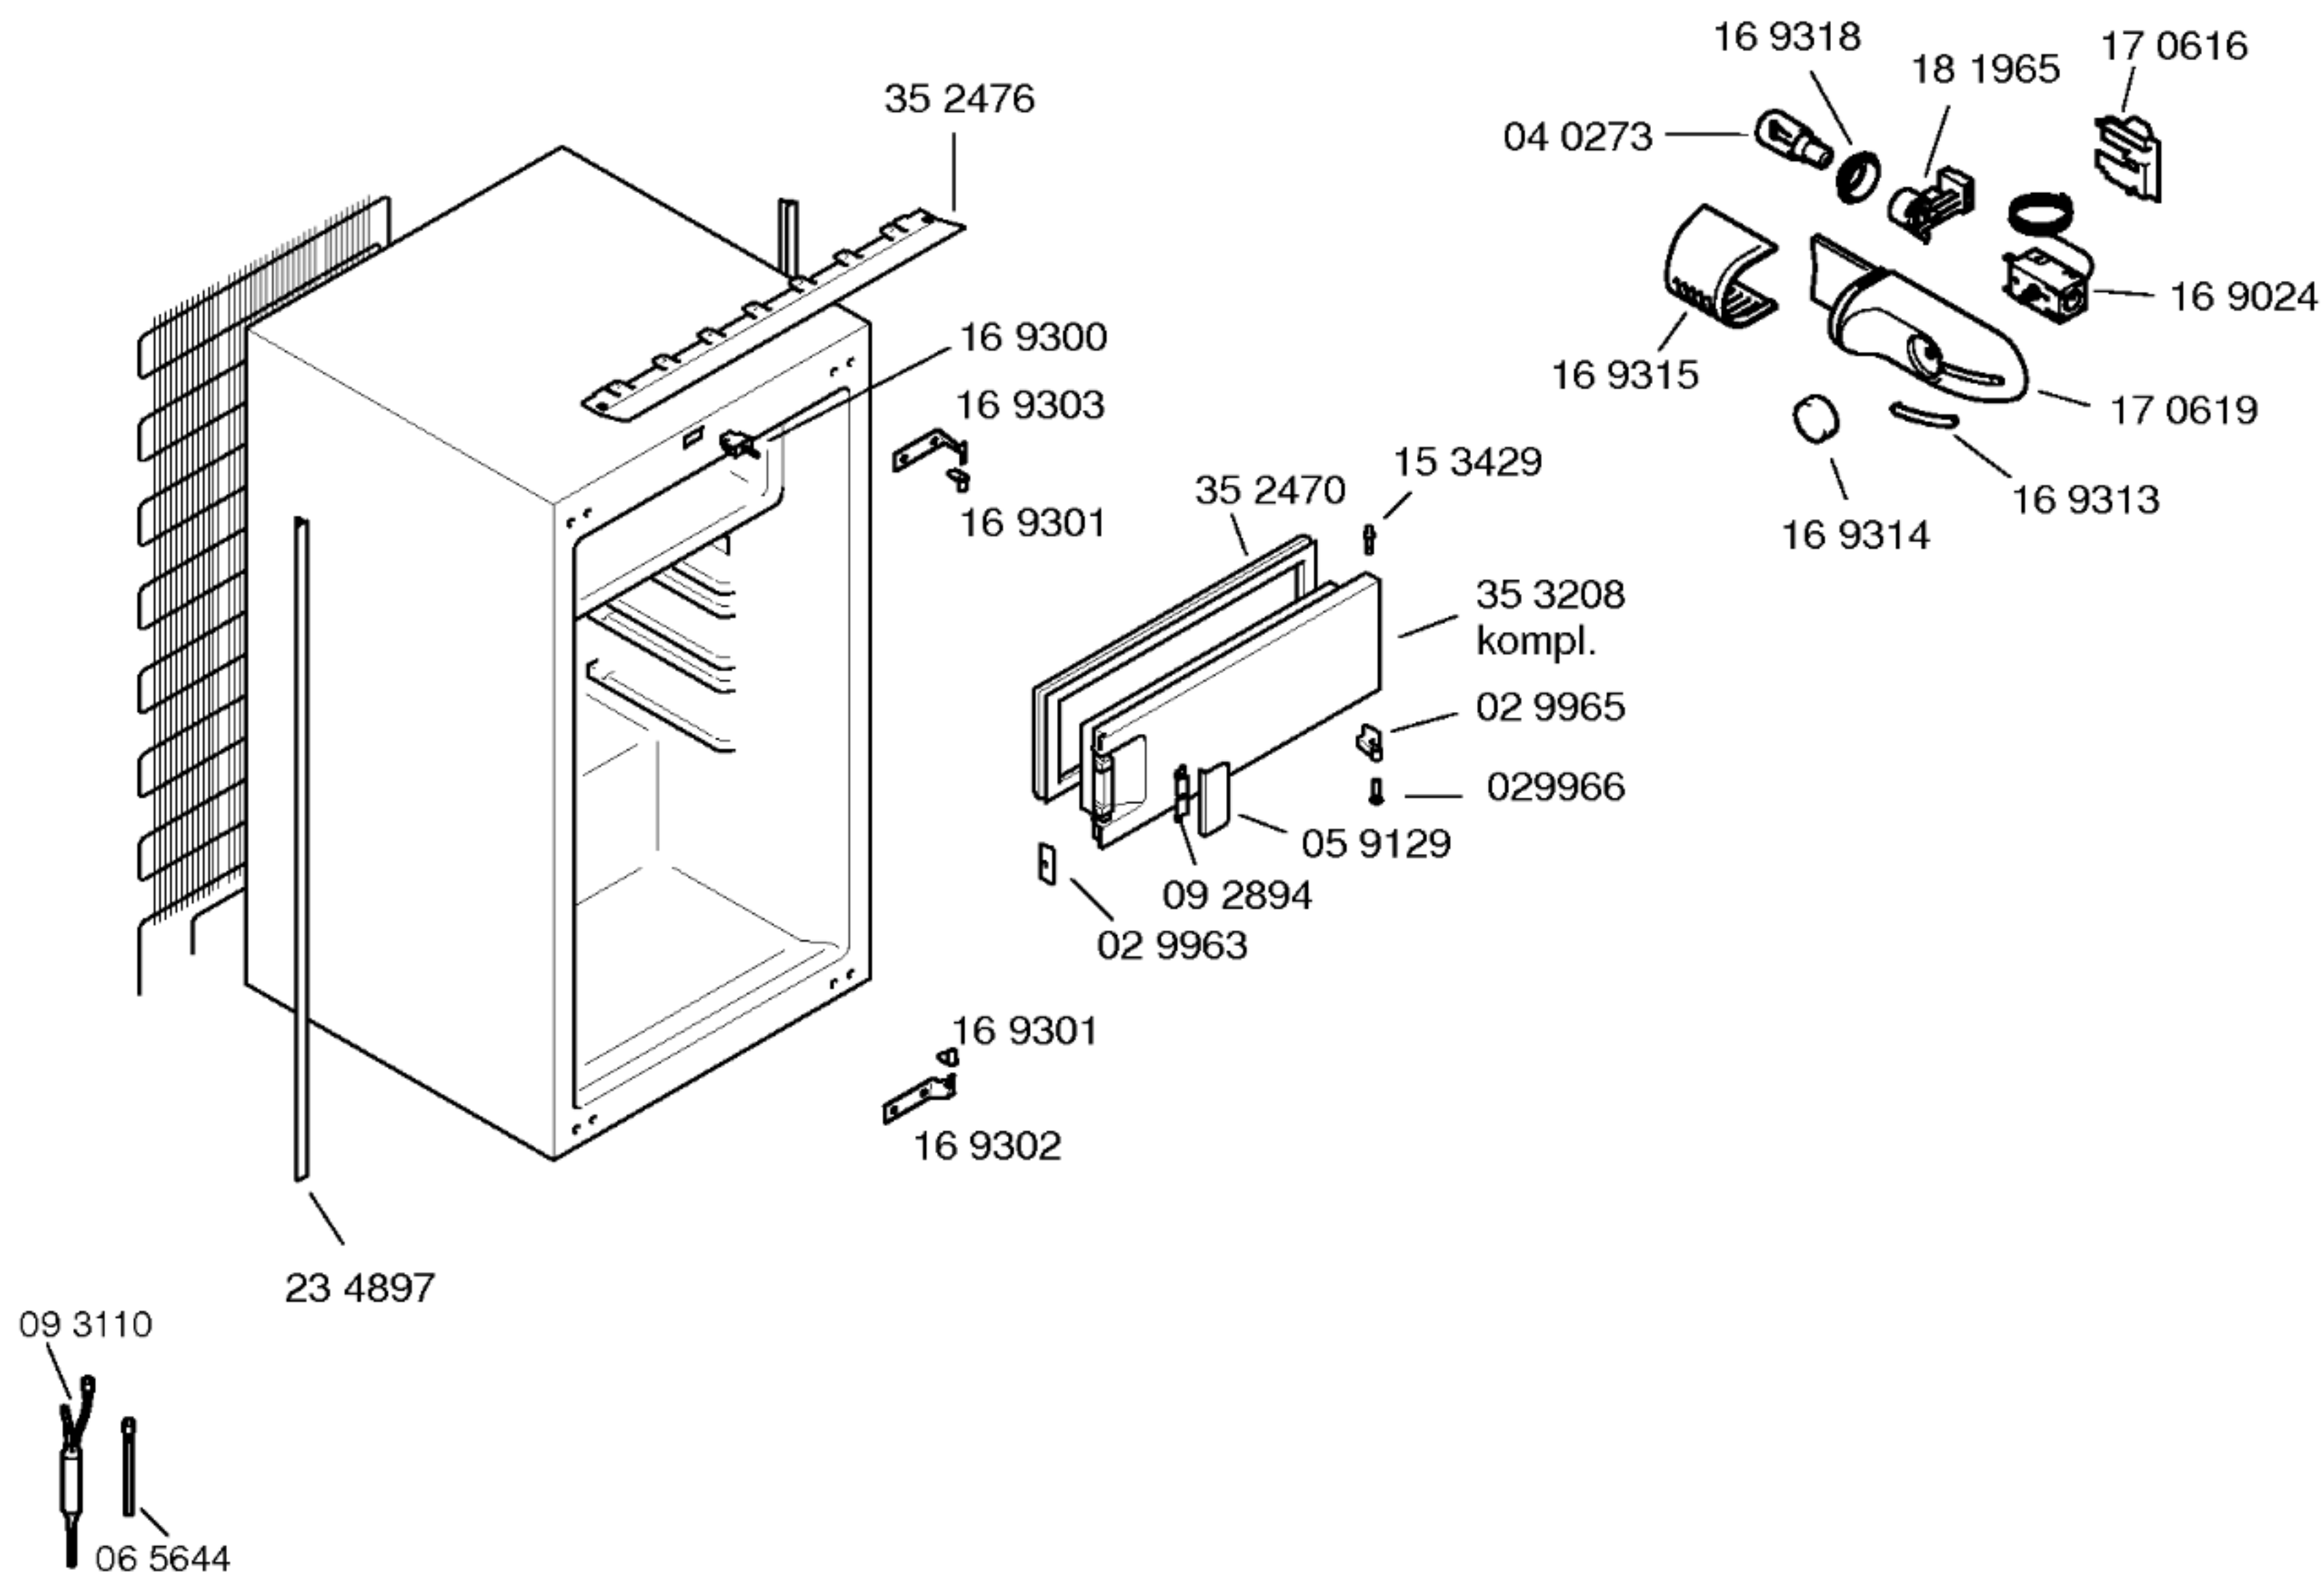


Gebrauchsanweisung
52 2511
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 4862

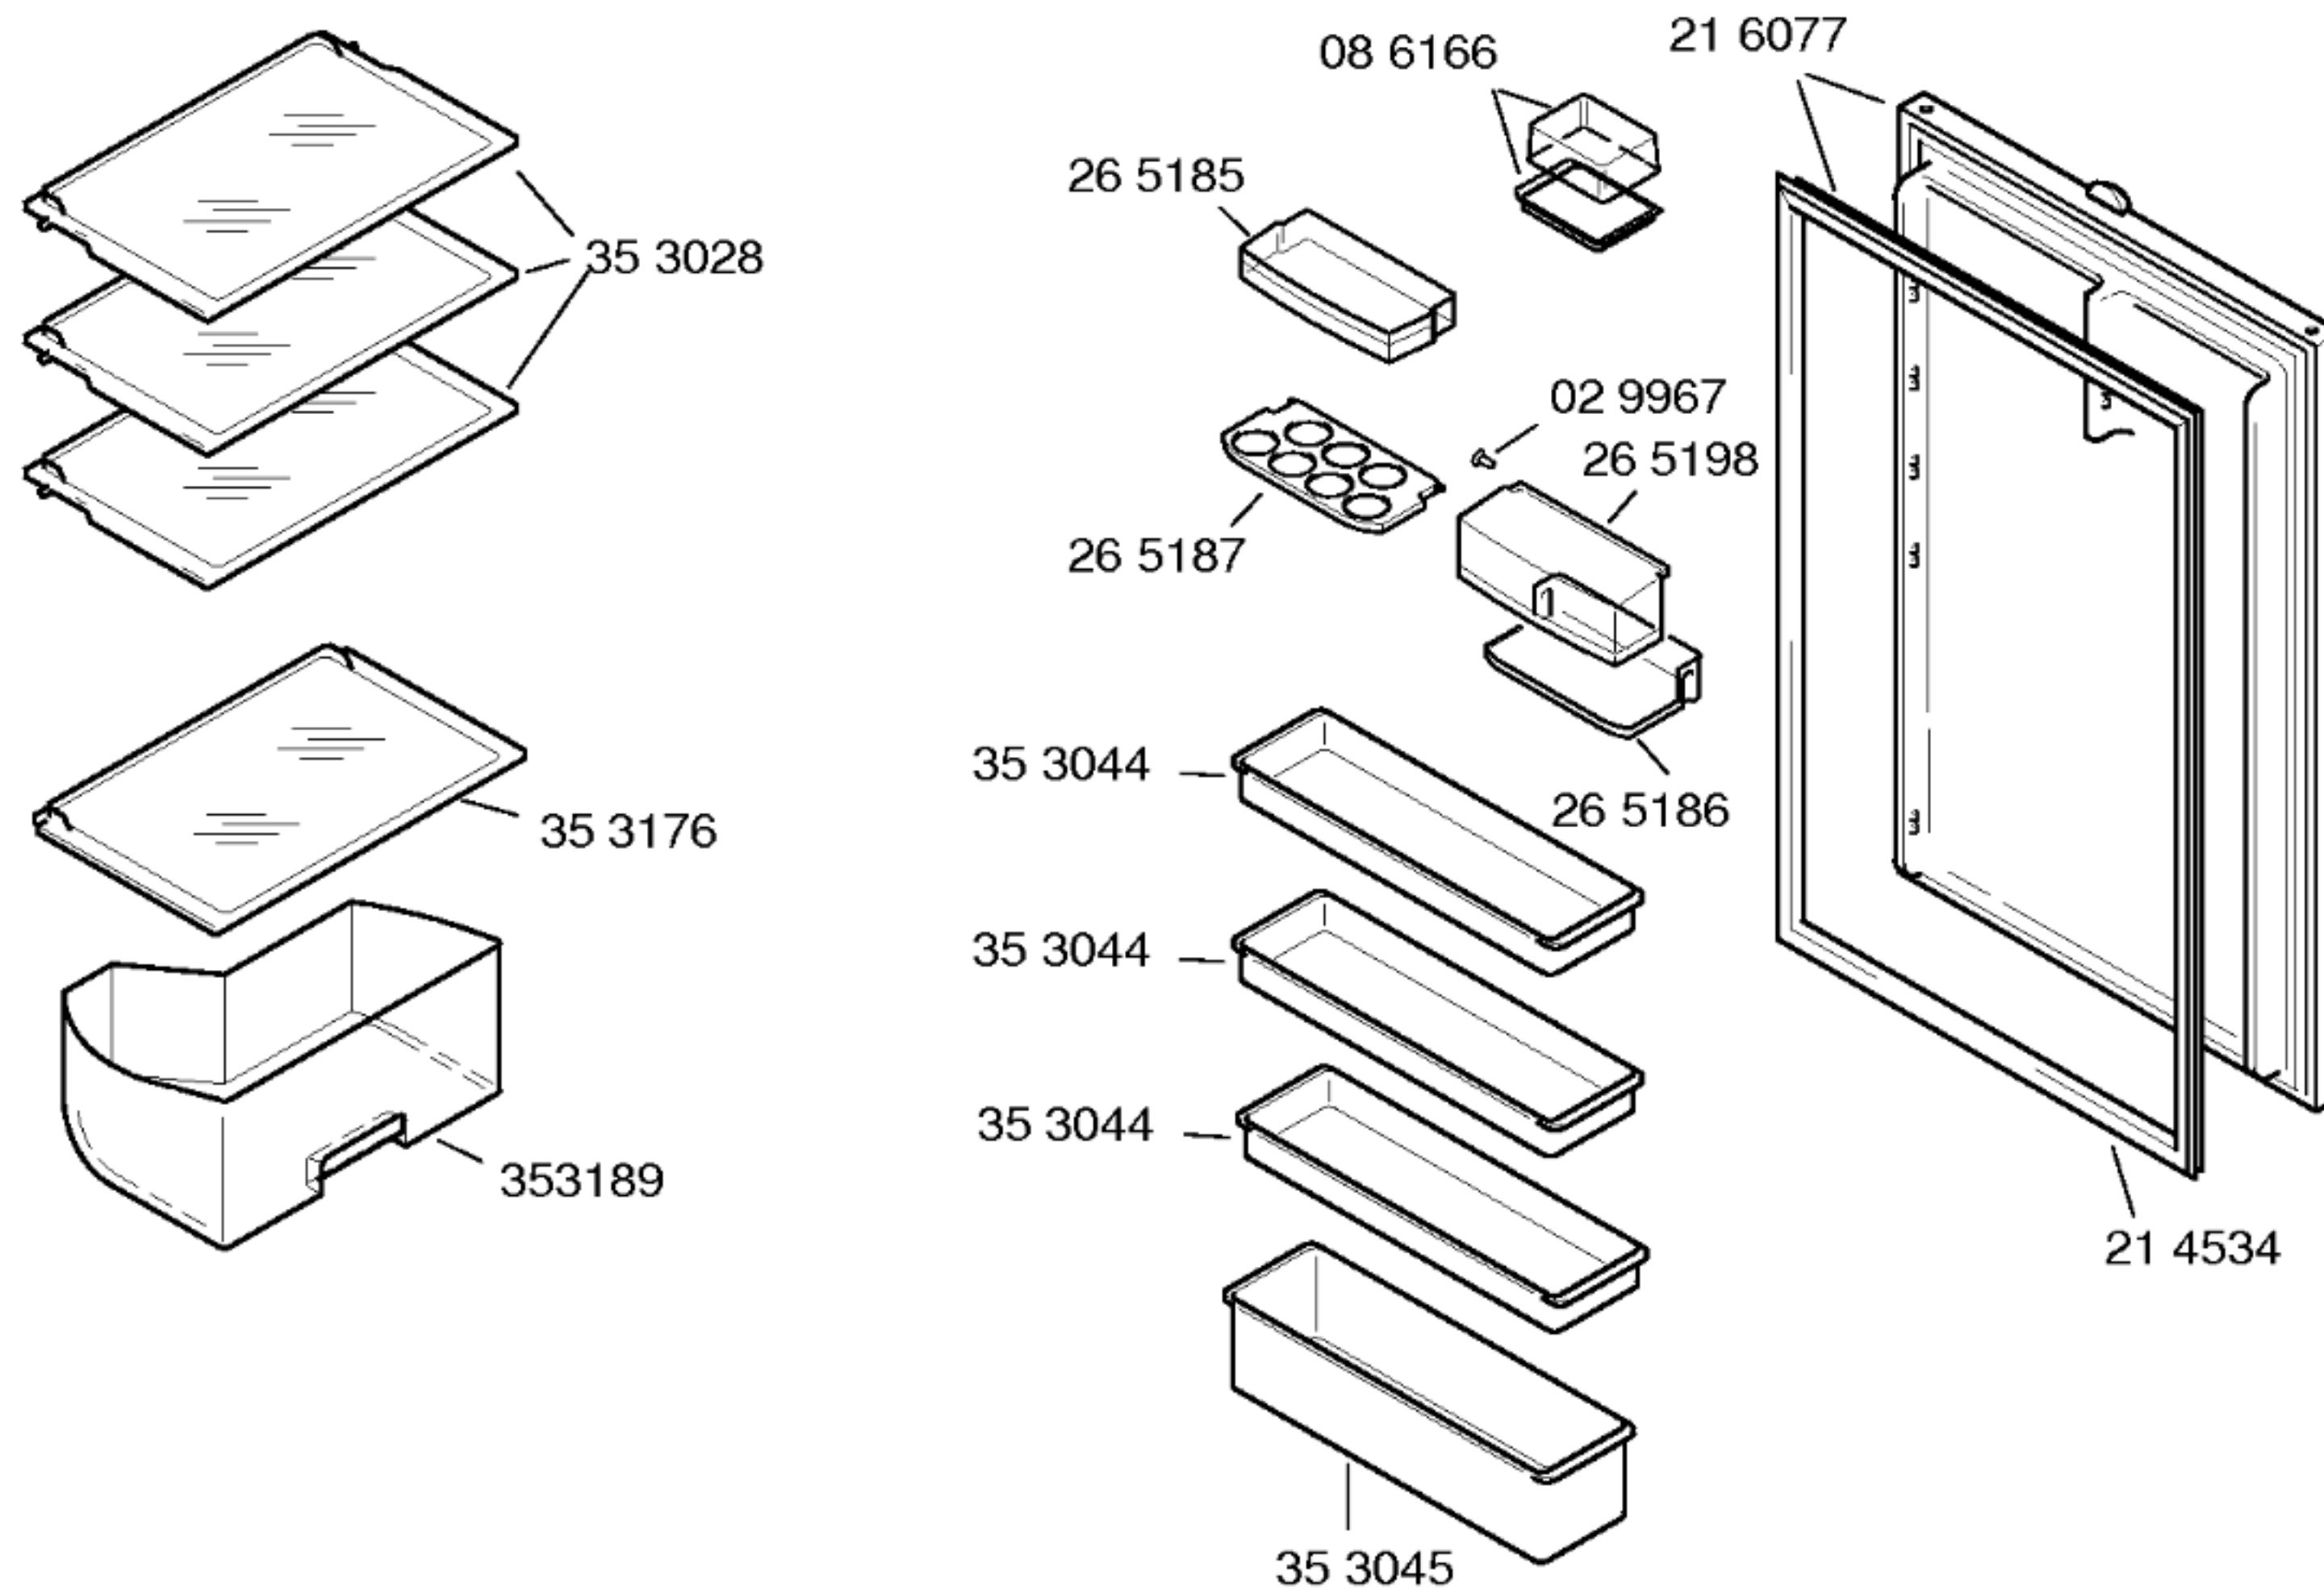

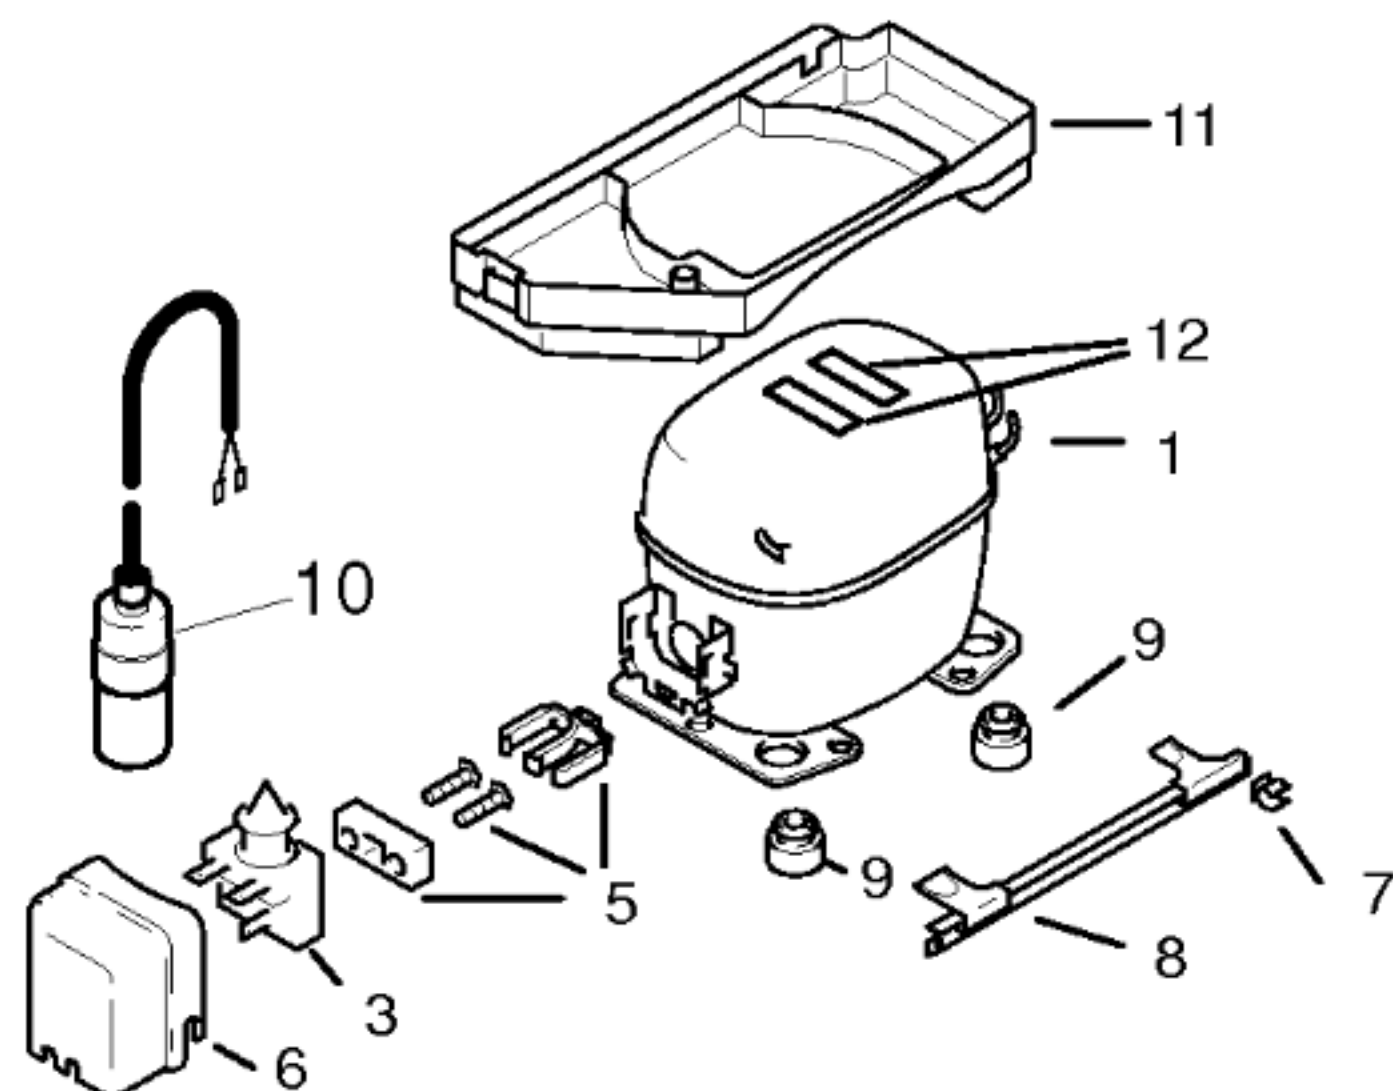Mat. – Nr. – Konstante
3740

	V01	V02	
Pos.	Aspera BPK 1084Y	Goldstar ND69NAEM	
1	14 2101	14 1999	
2			
3	18 0819	17 0743	
4			
5	17 0882	17 0745	
6	17 0881	17 0744	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10			
11	36 5099	36 5099	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera	Goldstar	
Typ/Type		BPK 1084Y	ND69NAEM	
Förderleistung/Delivery/Débit		l/h	1201	1242
Anlaufstrom/Starting current/Cour de démarrage		A	3,6	6,9
Widerstand/Resistance/Résistance Ha/main/prin		Ω	29,6	20,3
Hi/aux		Ω	39,1	28,2
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		"warm"	+4,0	+4,0
Valeurs de commutation		"kalt"	-32,0	-12,0
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	79	79
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild