



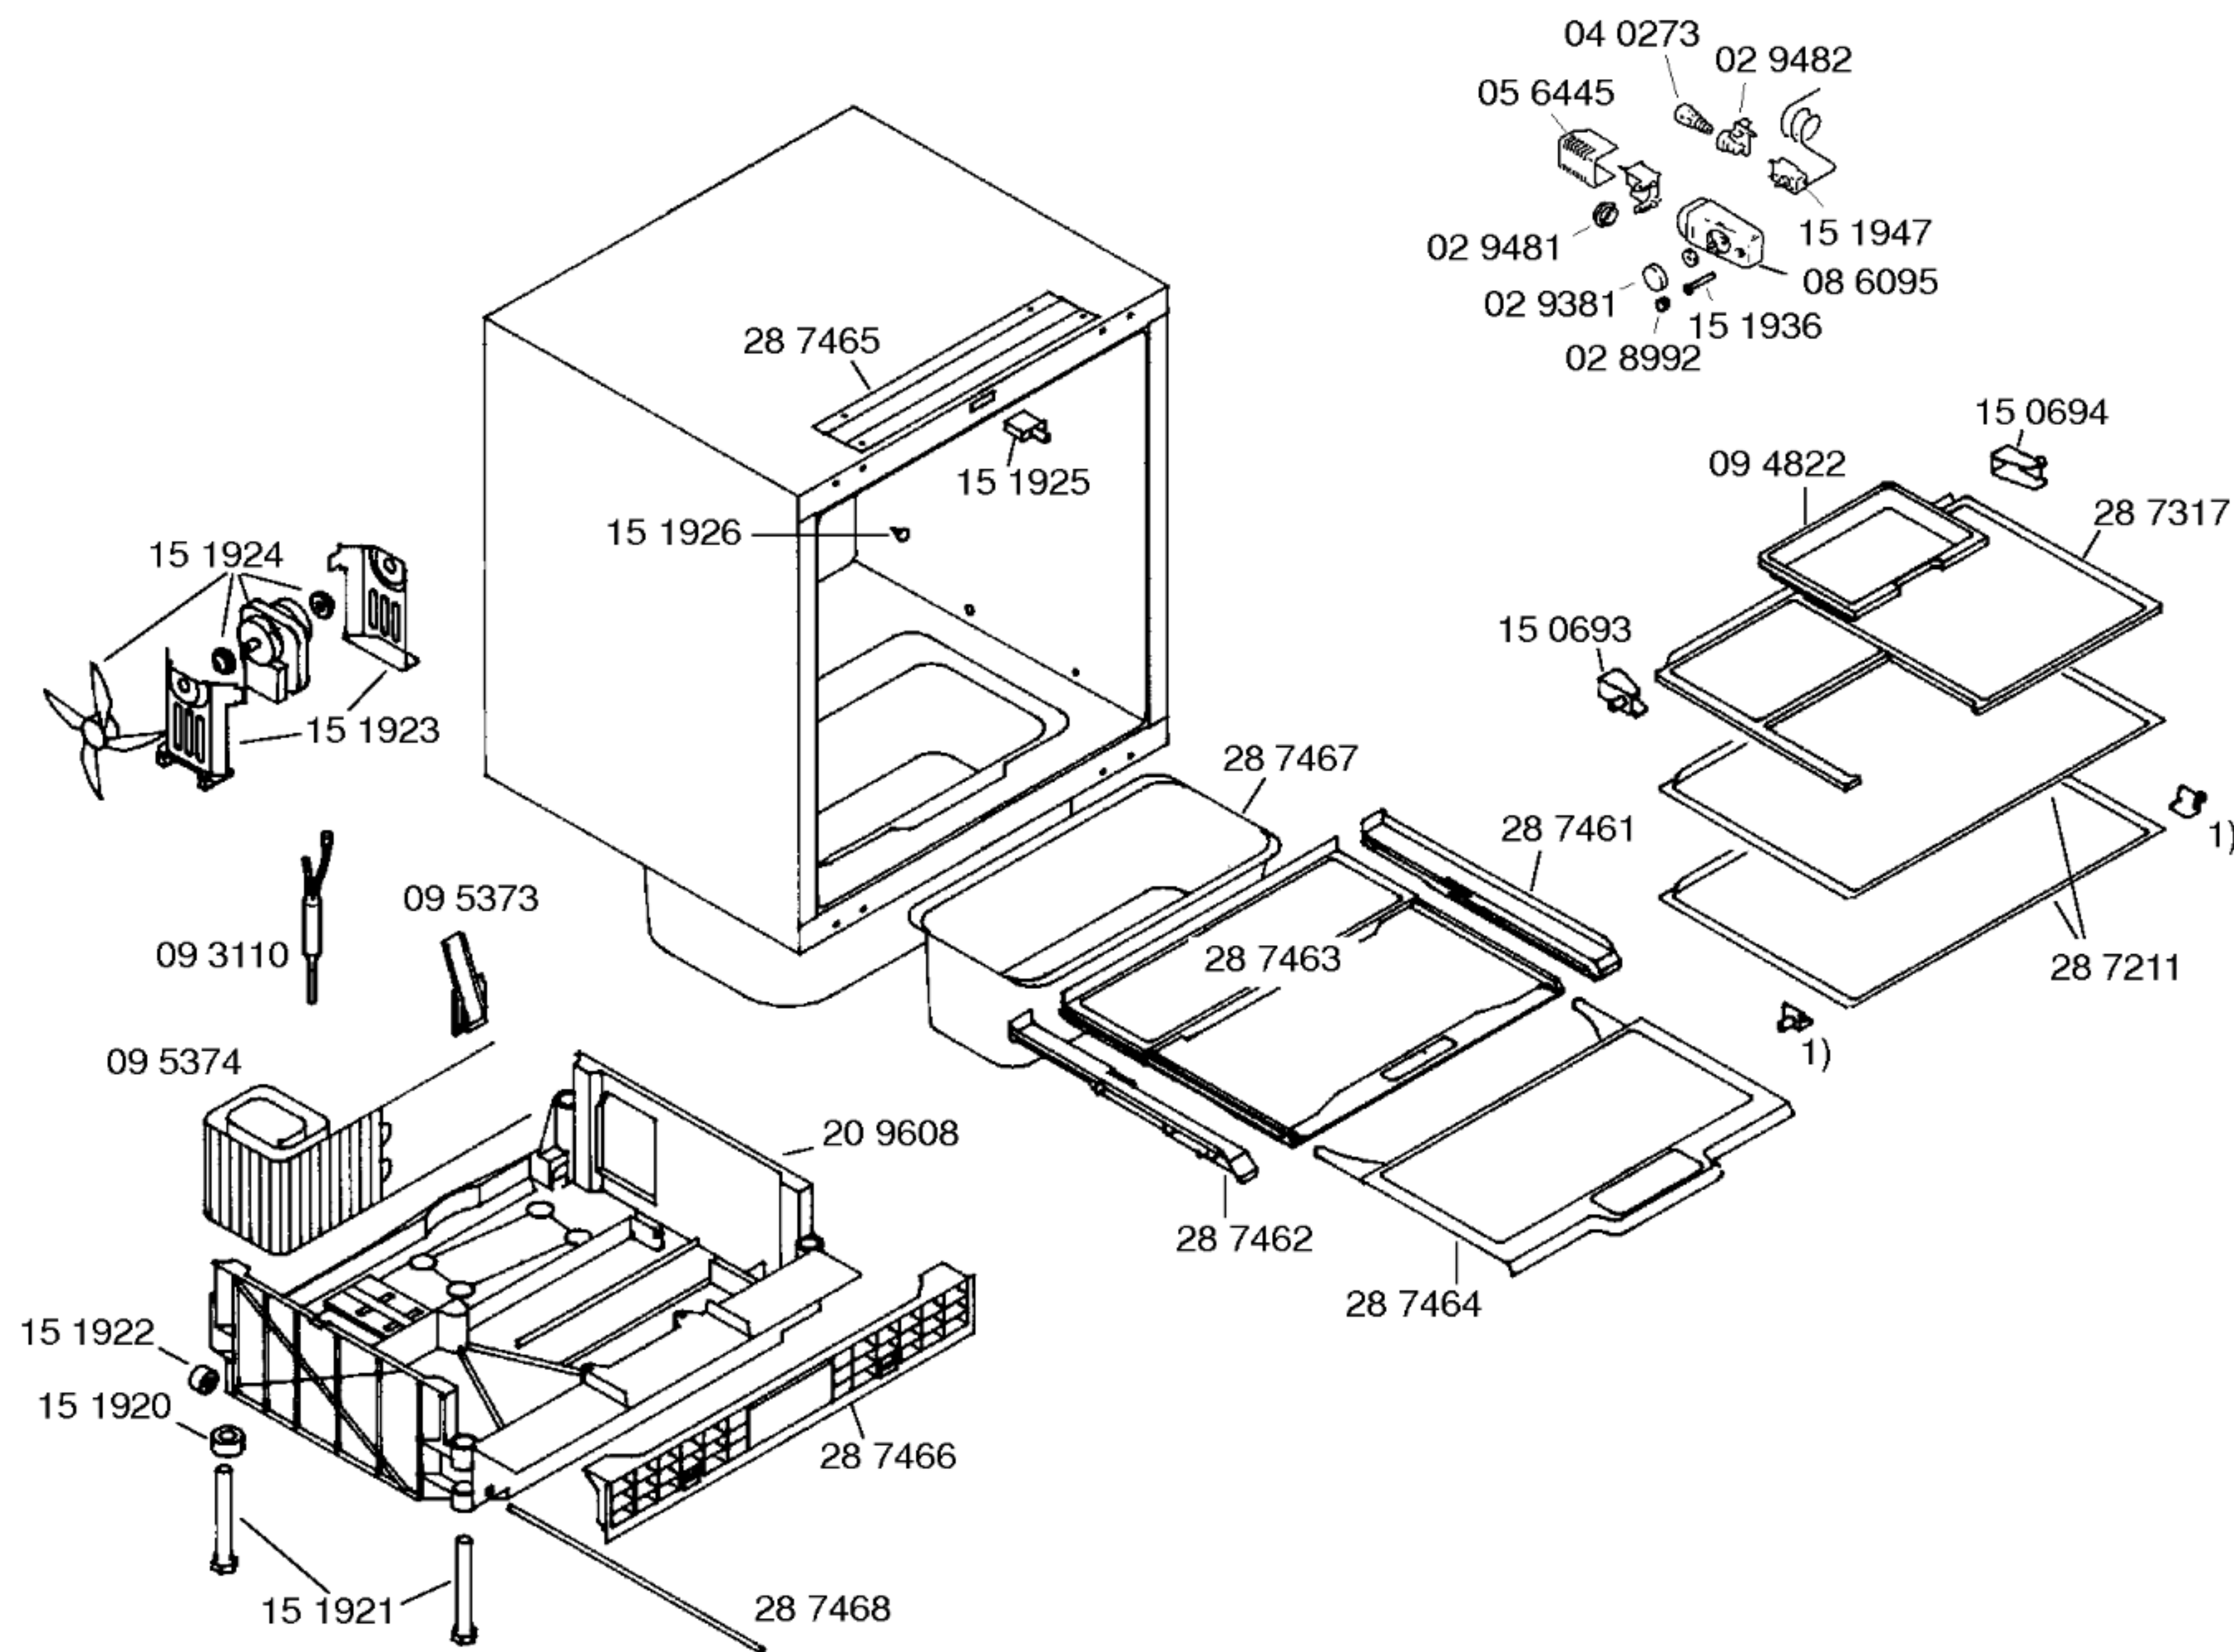


Gebrauchsanweisung
51 7442
Montageanleitung
51 7414

1) 15 0692

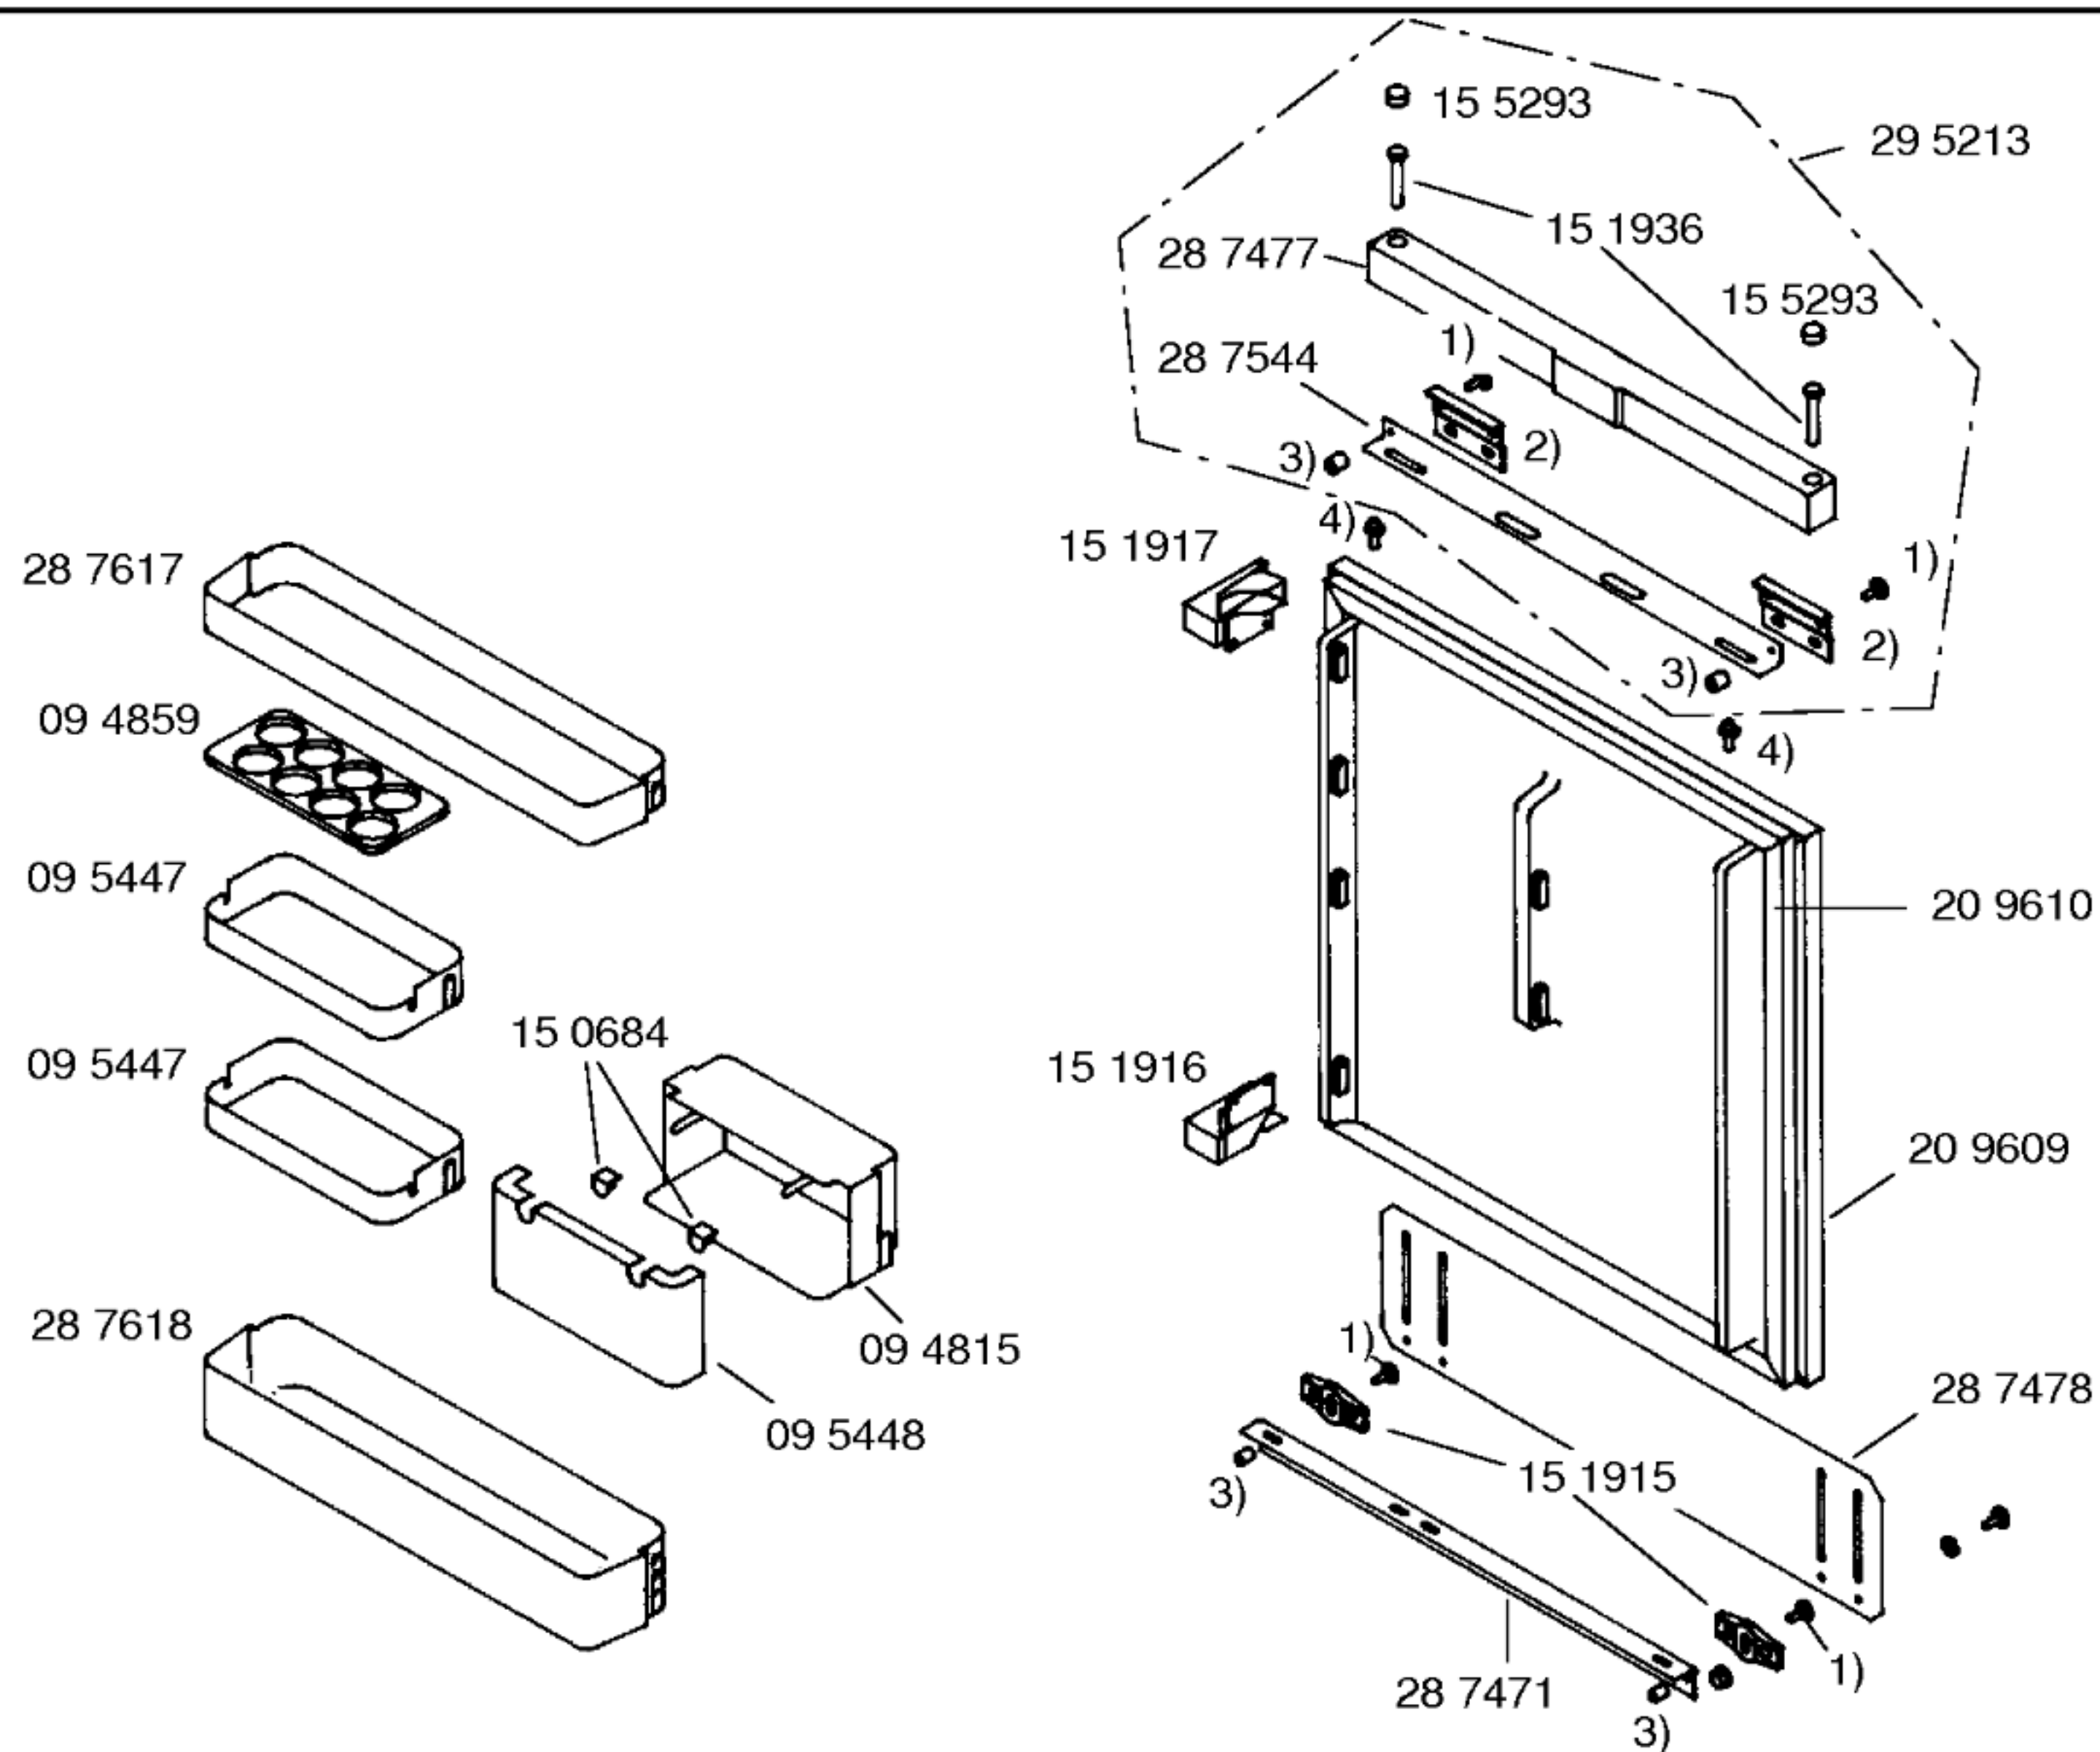

- 1) 15 1934
- 2) 15 1914
- 3) 15 1931
- 4) 15 1823

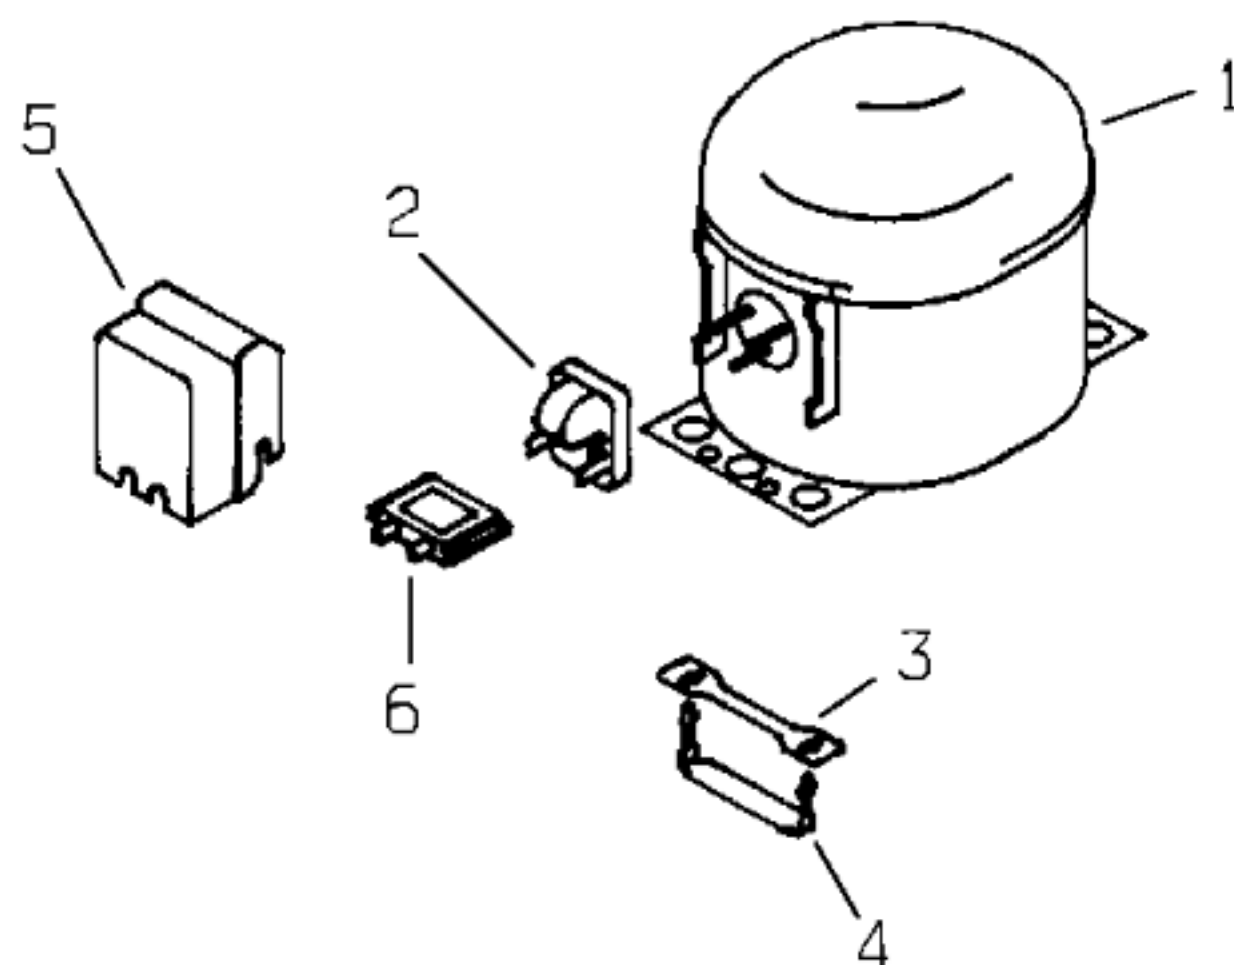

Pos.			
	Danfoss		
	TLES 6 K		
1	14 1306		
2	15 1055		
3	15 1919		
4	15 1918		
5	15 1072		
6	15 1053		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur			Danfoss	Danfoss
Typ/Type			TLS 6 K	TLES 6 K
Förderleistung/Delivery/Débit		l/h	1027	1027
Anlaufstrom/Starting current/Cour de démarrage		A	7,5	7,6
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	24,3	18,9
		Hi/aux Ω	15,5	15,3
Temp.-Regler/Thermostat			Ranco	
Typ/Type			K57-1	
Reglerstellung/Position			kalt	warm
Schaltwerte/Switching values/		°C	+4	+8
Valeurs de commutation			-26	-17
		(„abtauen“ od.)		
		„alarm“		
Füllmenge/Fill.quantity/Charge		R600a g	*	*
Anschlußwert/Conn.load/Puiss. connectée		W	90	90
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur			MES F61-10	
Widerstand/Resistance/Résistance		Ω	680	
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild