



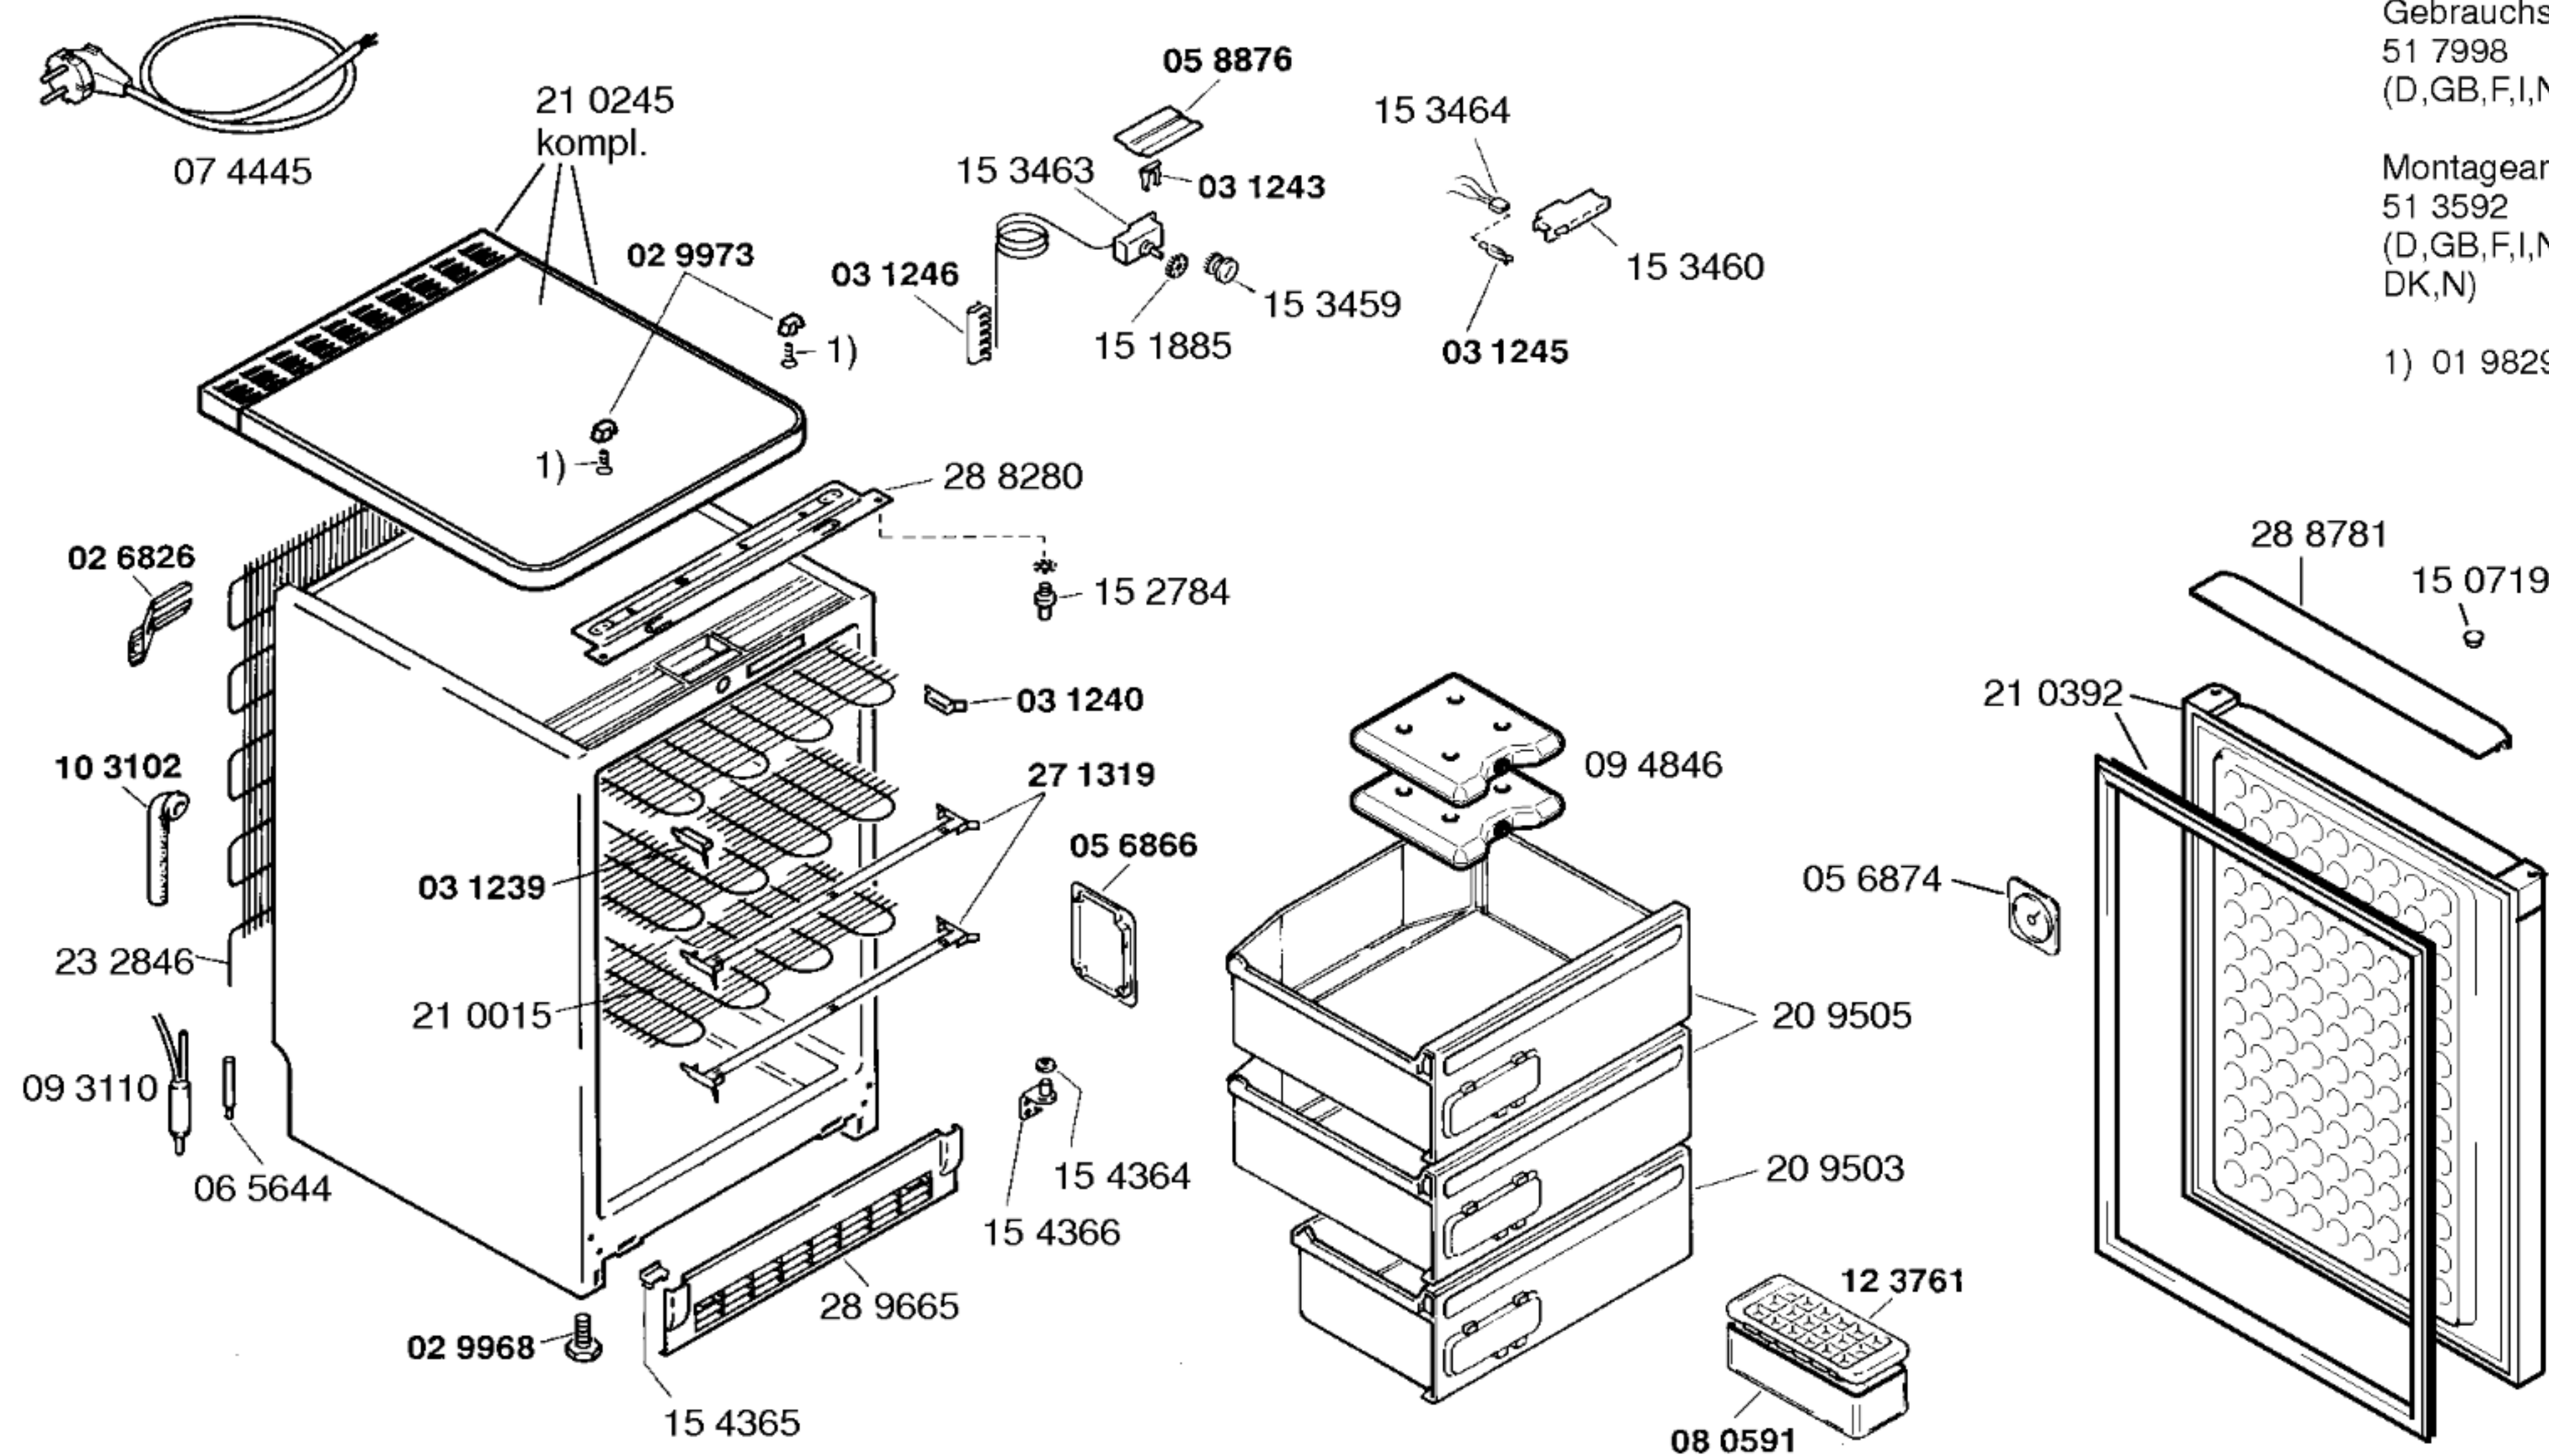

Gebrauchsanweisung
51 7998
(D,GB,F,I,NL,SF)

Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9829

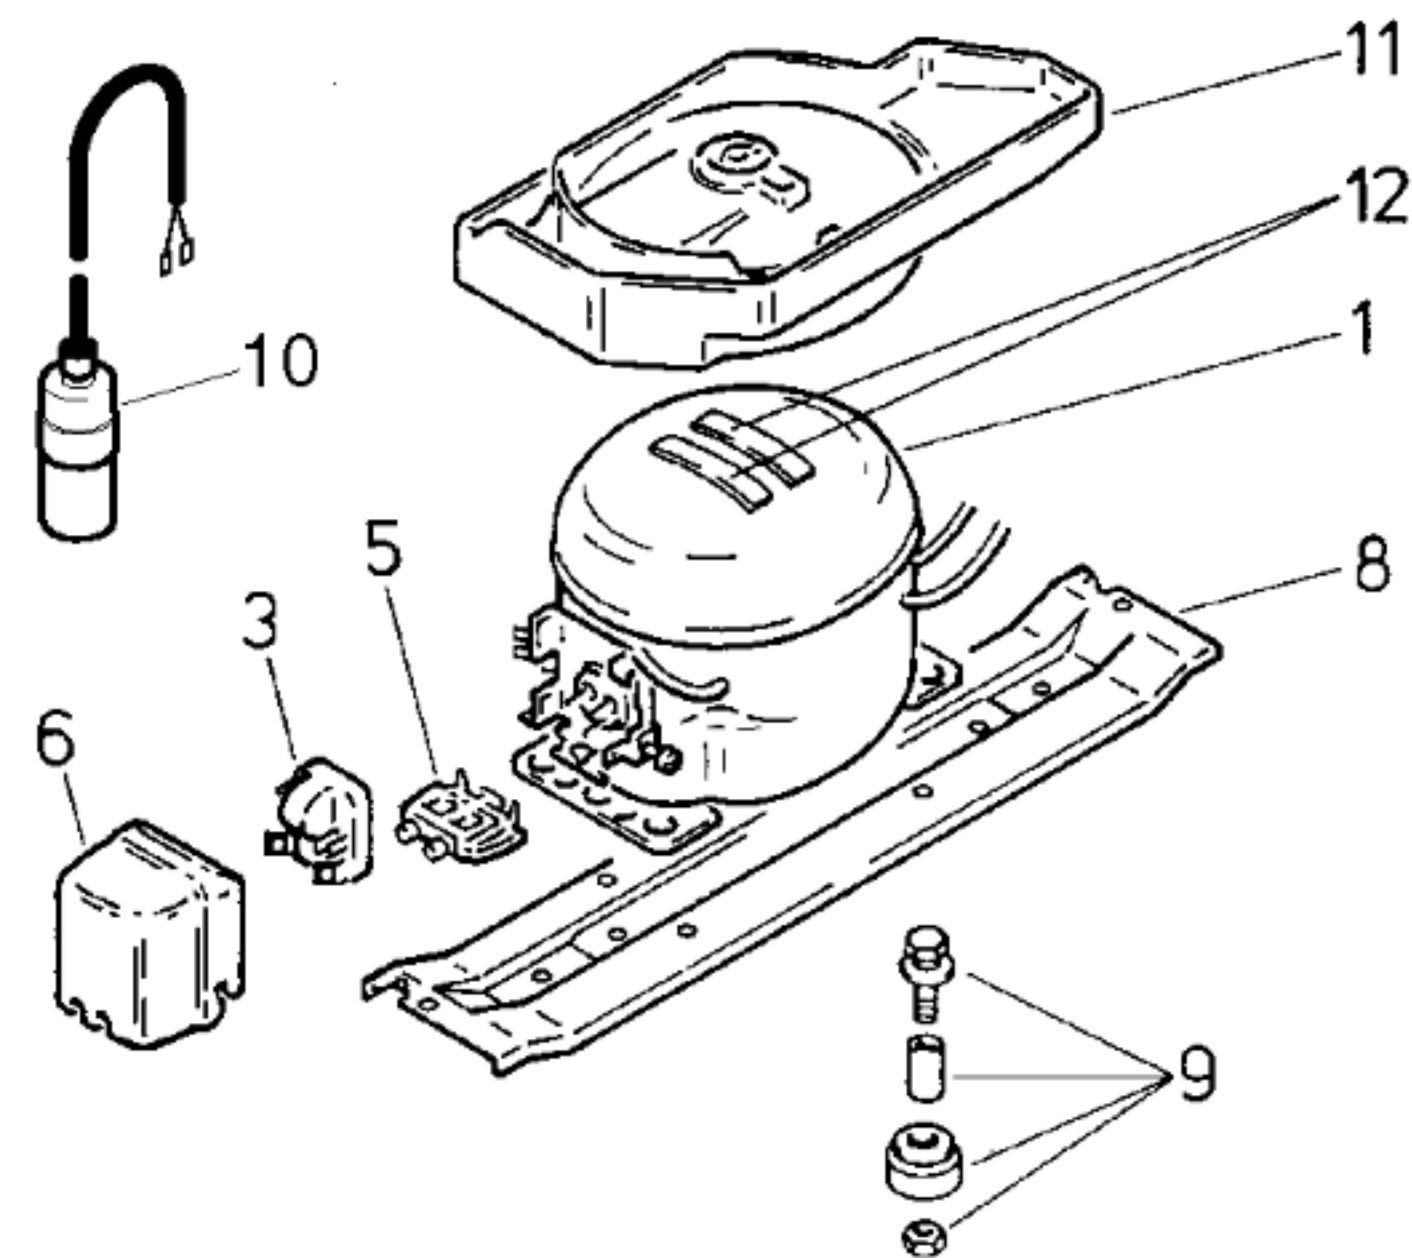

Pos.			
	Danfoss		
	TLES 9 K		
1	14 1308		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 9 K		
Förderleistung/Delivery/Débit		1589		
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω		
		Hi/aux Ω		
Temp.-Regler/Thermostat		Danfoss		
Typ/Type		BE 002		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		°C		
Valeurs de commutation		-25 -17		
		-33 -23		
		-19,5 -13		
Füllmenge/Fill.quantity/Charge		R600a	g	45
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		