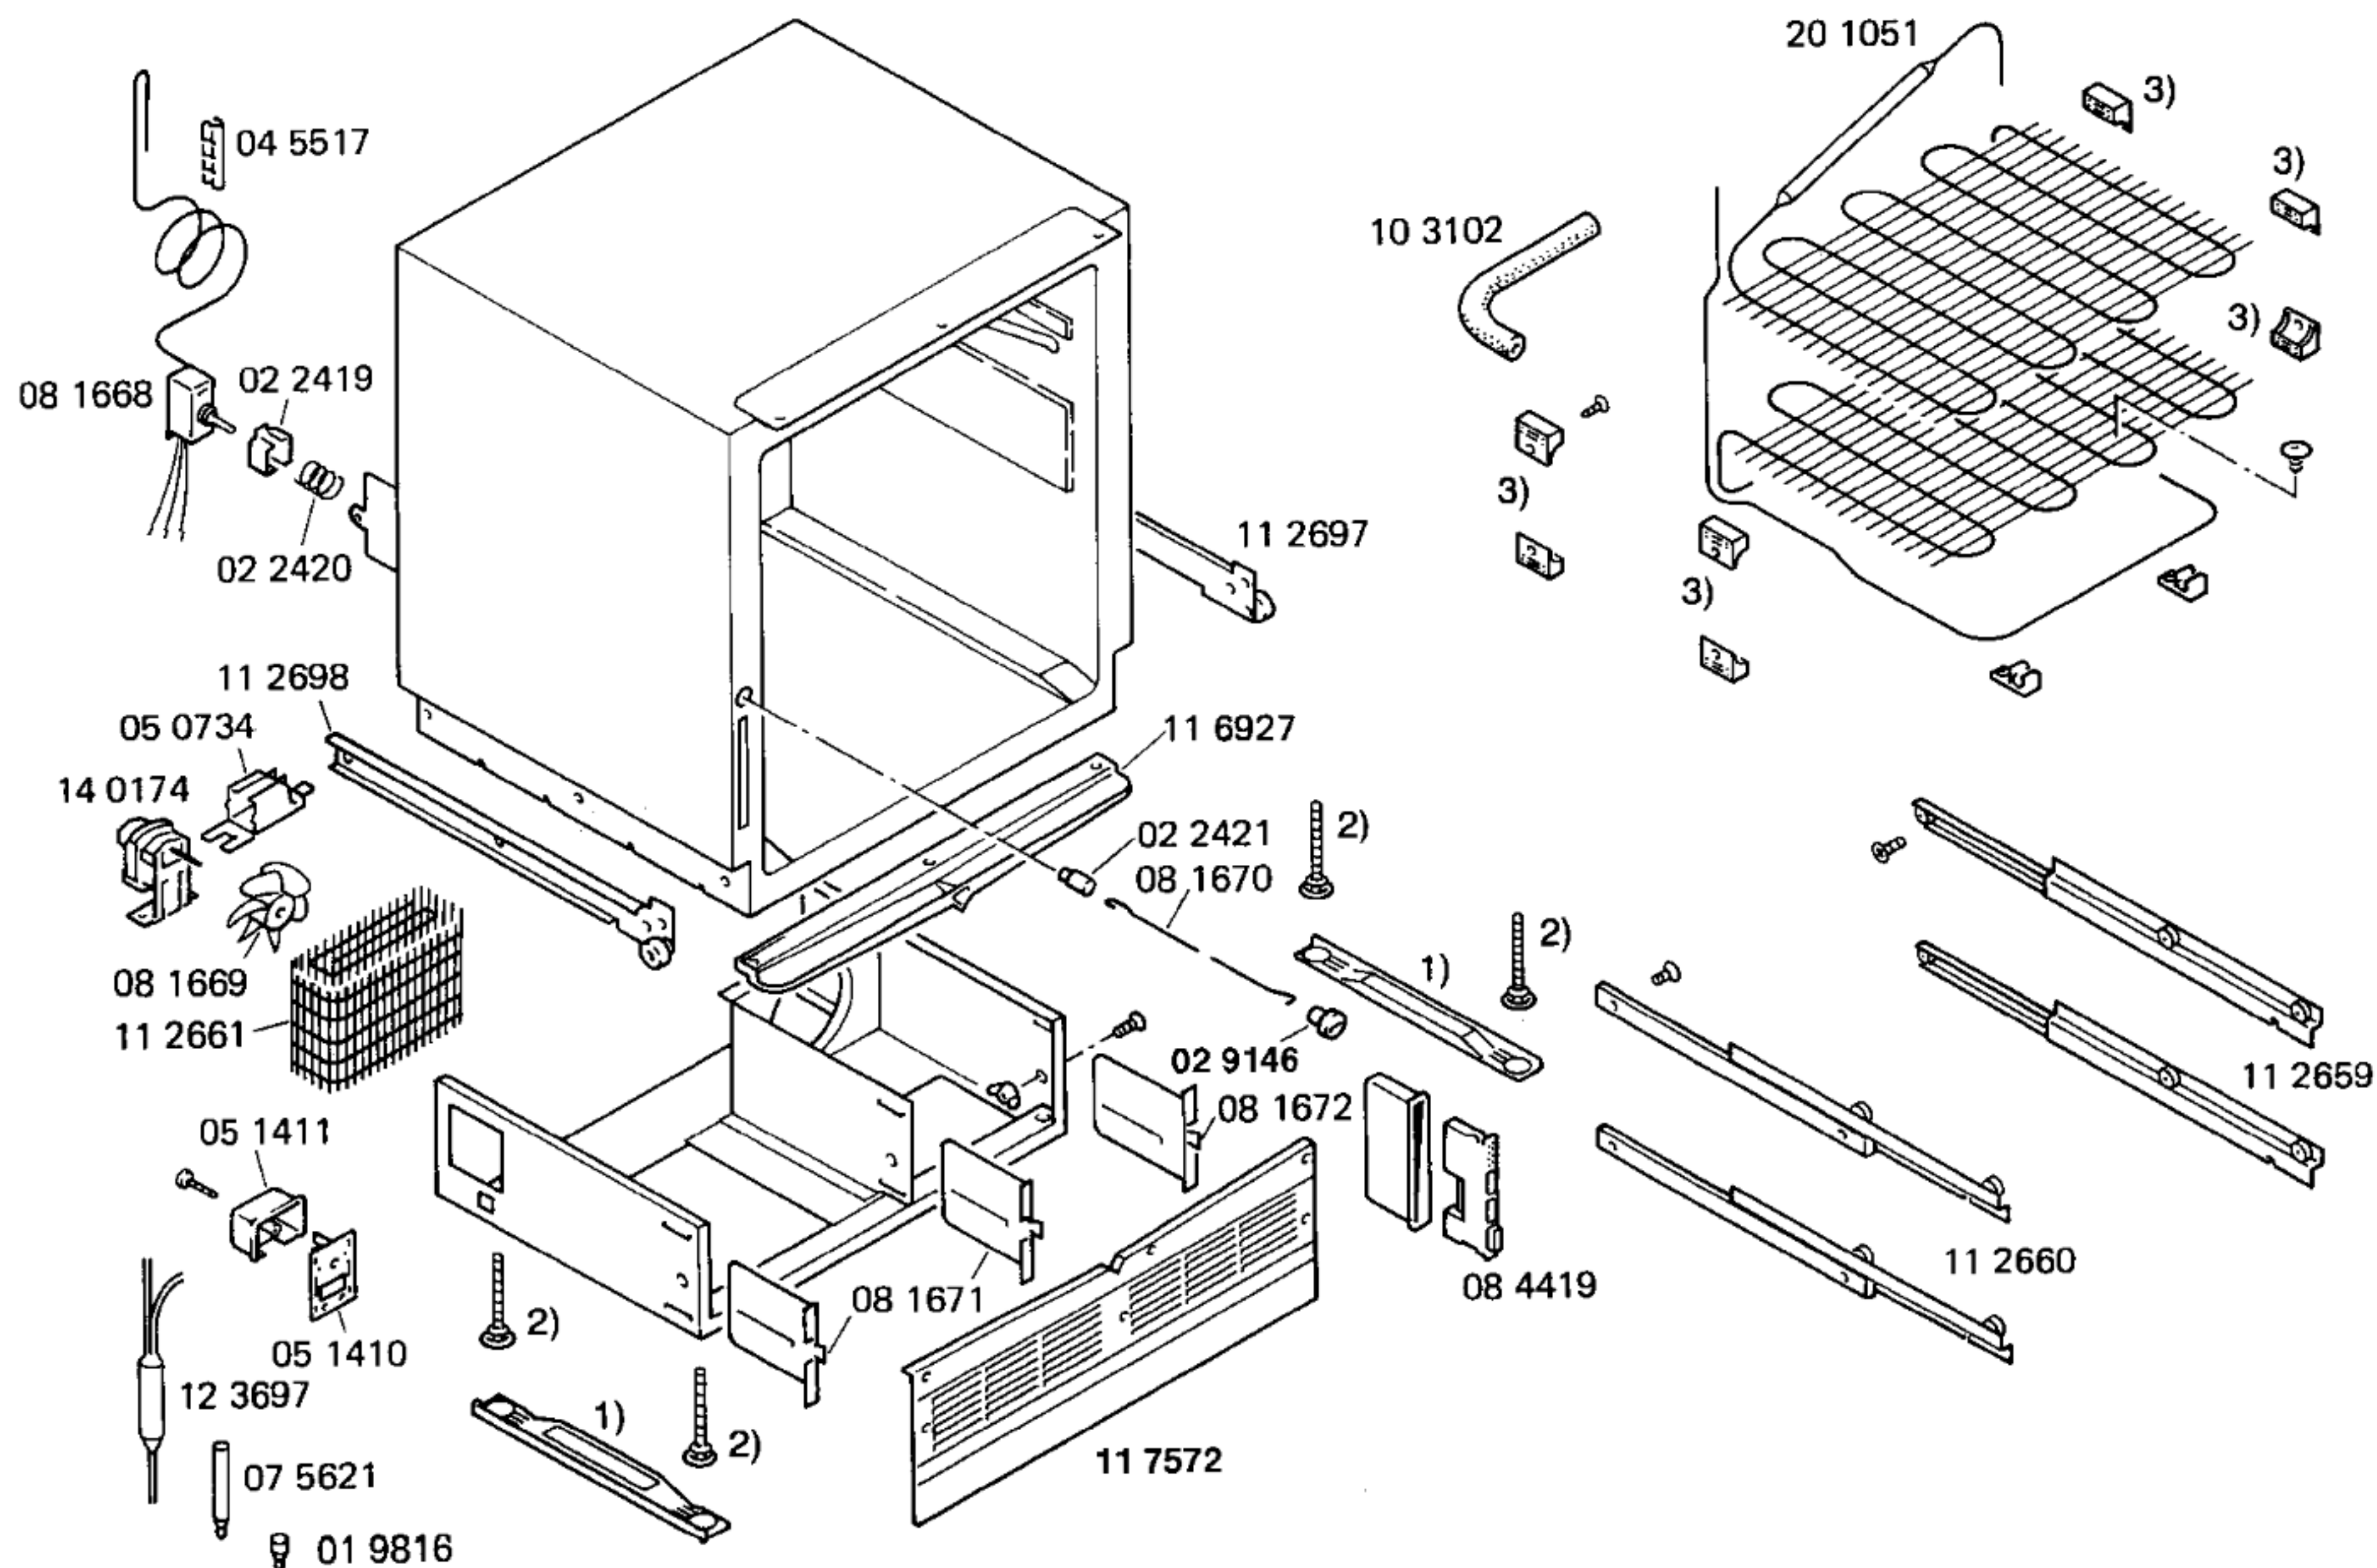


Ident – Nummern – Konstante
3740

51 1314
EU1,F1,SF1,CH1
Gebrauchsanweisung
(D,GB,F,I,NL,N,E,SF)
51 1315
EU1,F1,SF1,CH1
Montage-Anleitung
(D,GB,F,I,NL,N,E,SF)


1) 11 2700

2) 05 4927


3) 02 2423



Ident – Nummern – Konstante
3740

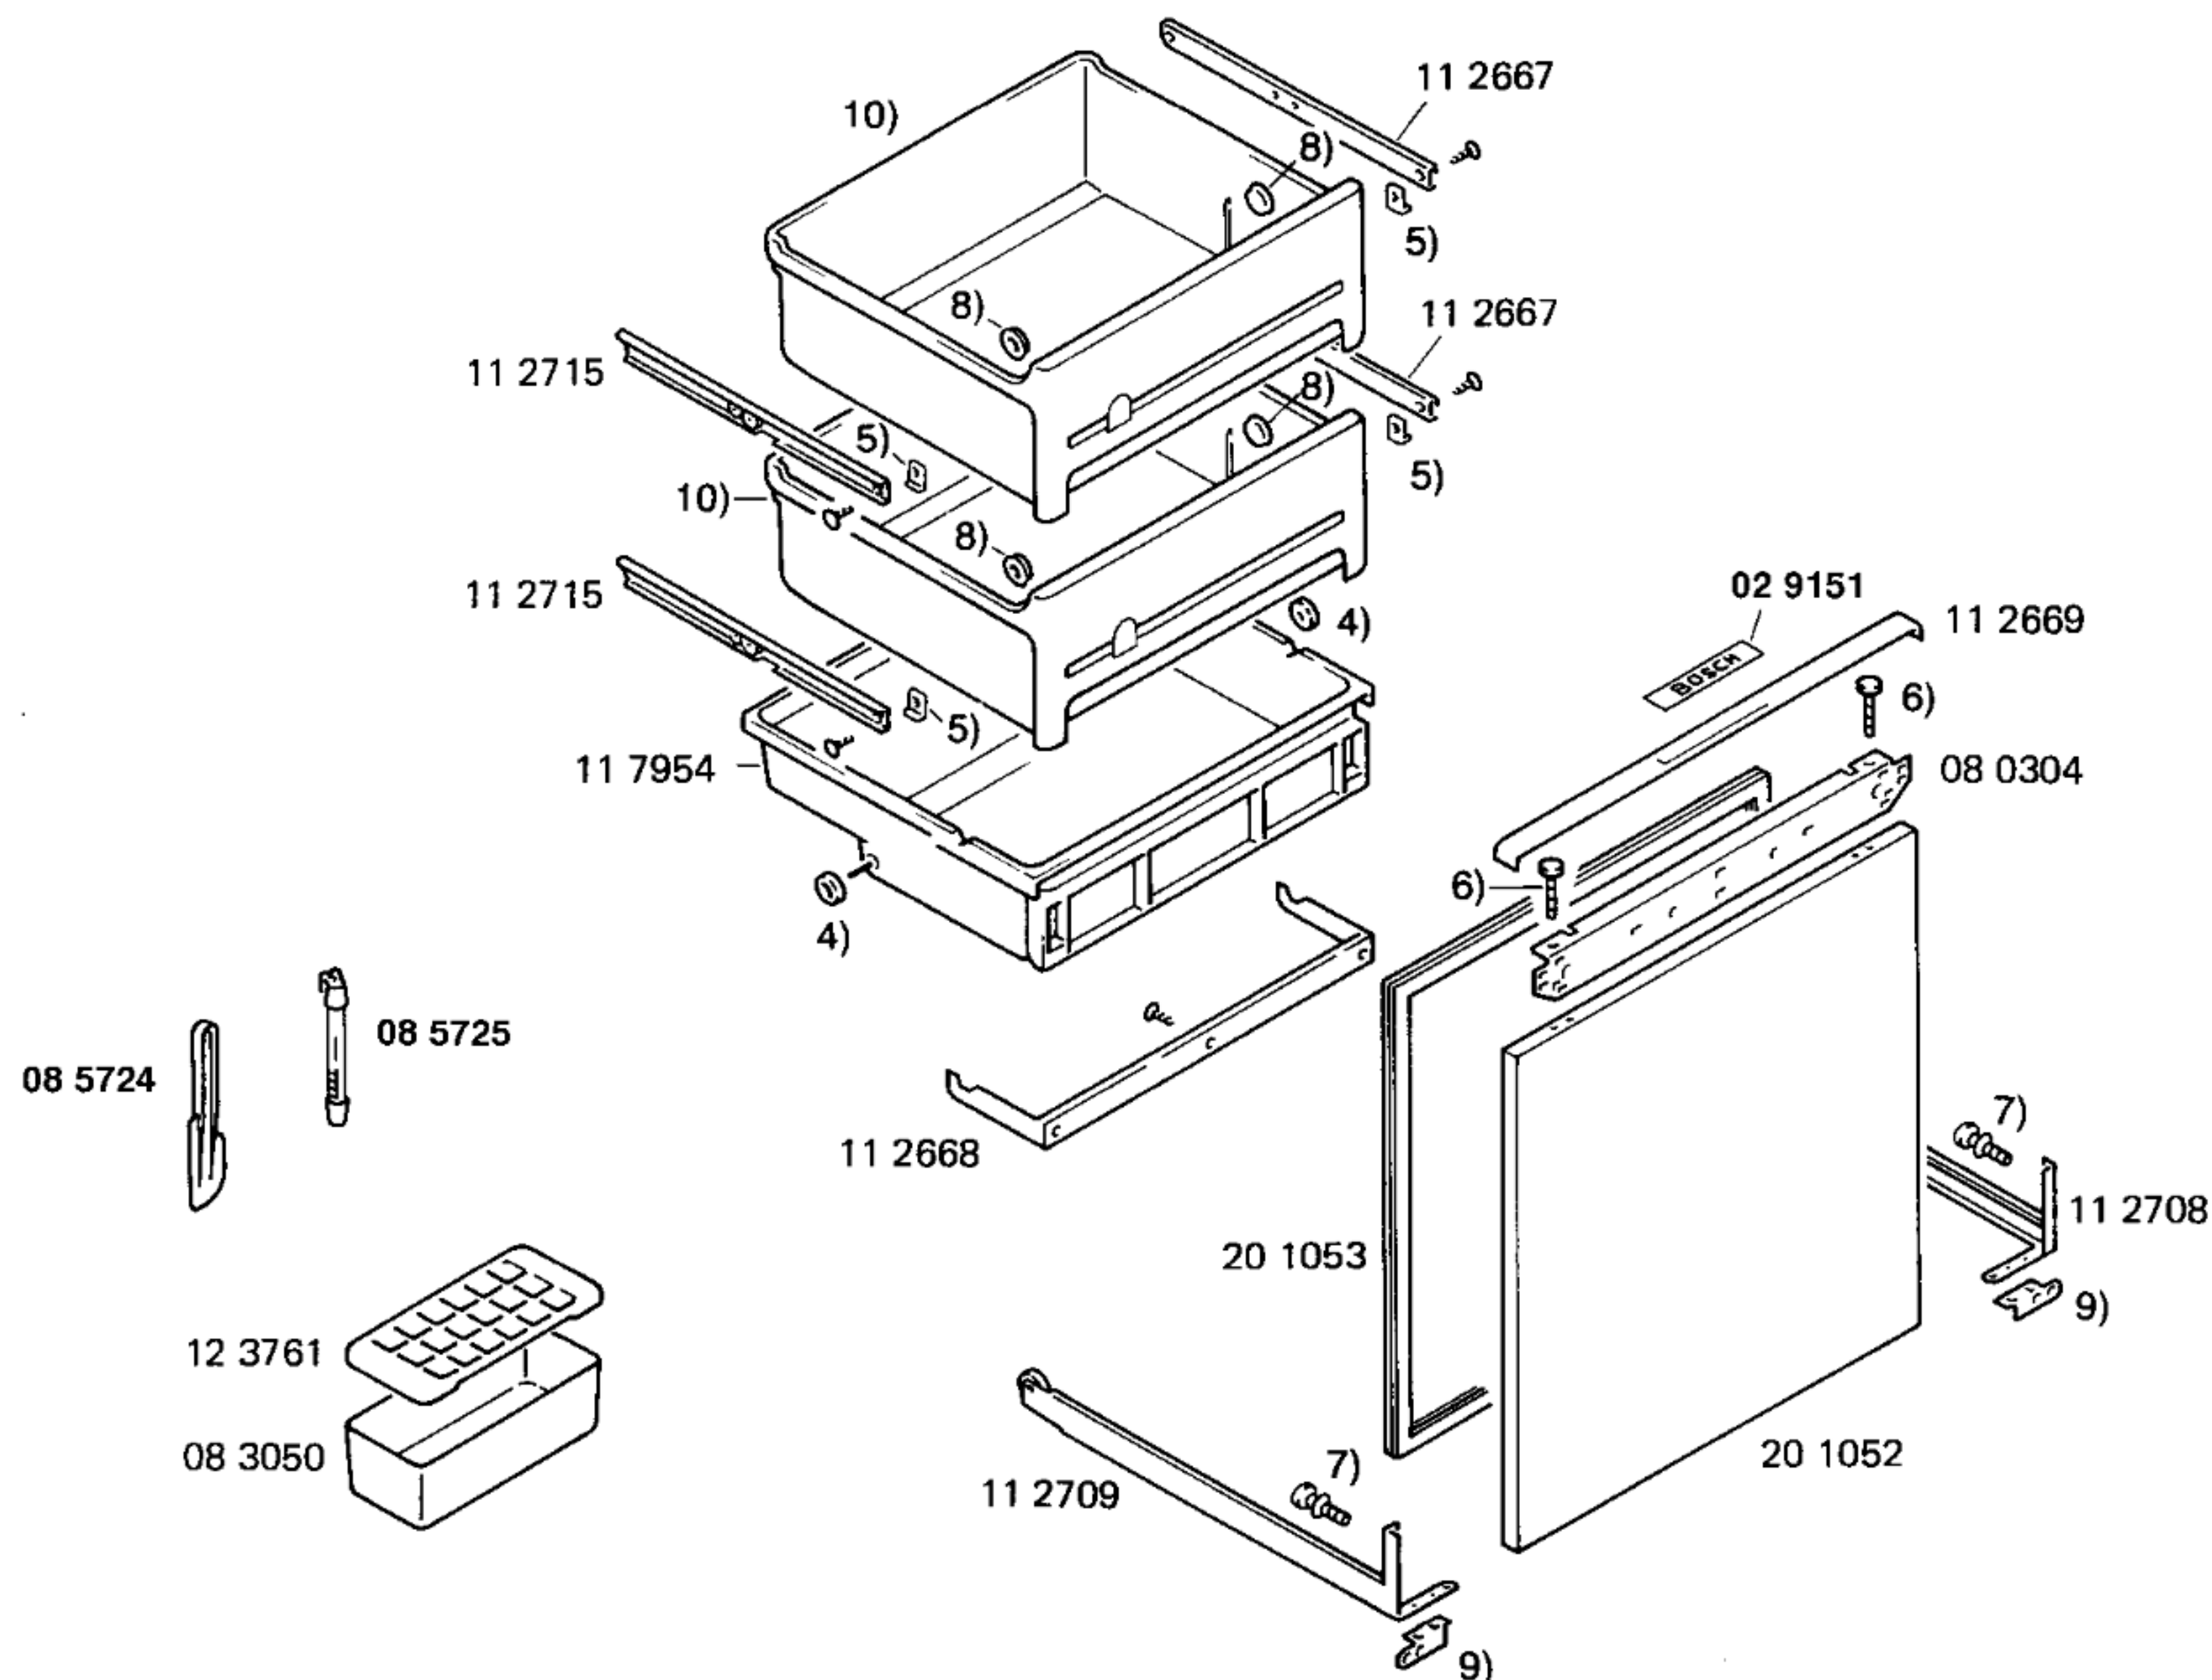

- 4) 02 2424
- 5) 02 2425
- 6) 02 0422
- 7) 02 2426
- 8) 02 2427
- 9) 05 0482
- 10) 11 8000

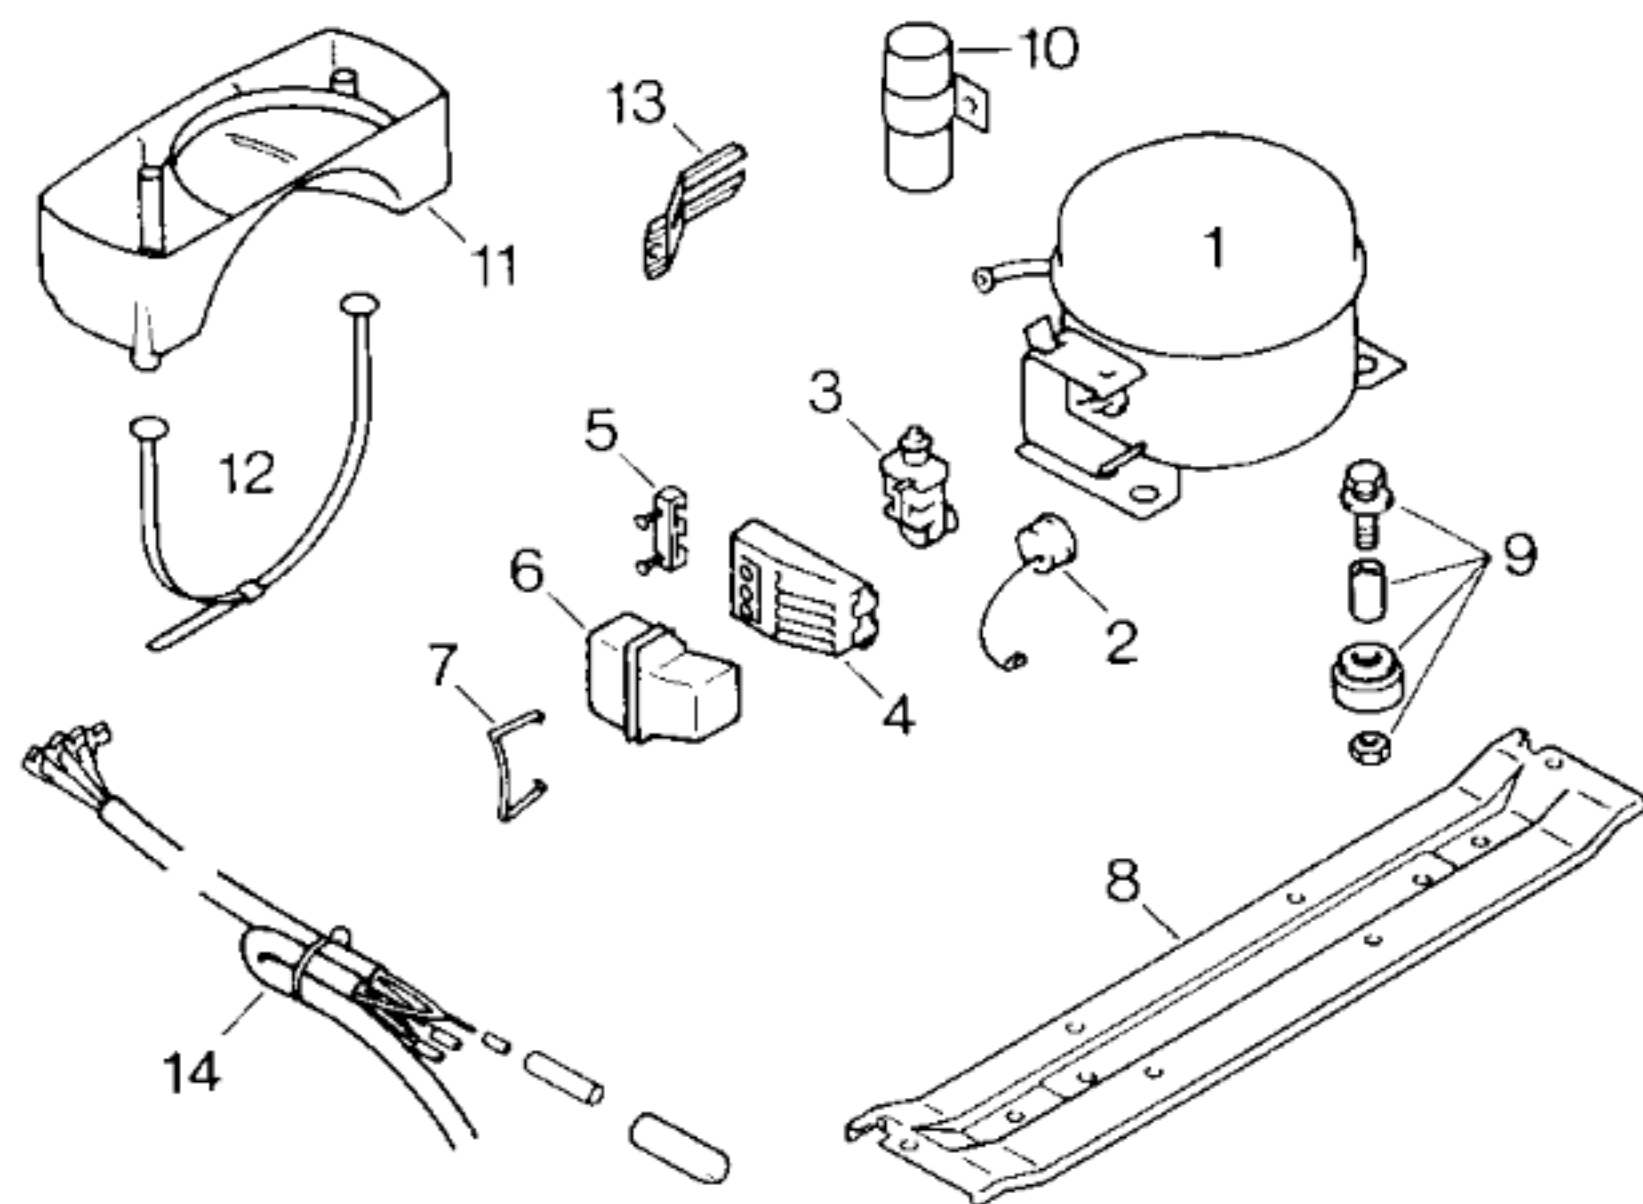Ident – Nummern – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Aspera			
Typ/Type	BY 1112 A			
Förderleistung/Delivery/Débit	l/h 1060			
Anlaufstrom/Starting current/Cour. de démarrage	A 8,5			
Widerstand/Resistance/Résistance	Ha/main/prin. Ω 17,9			
	Hi/aux Ω 43,7			
Temp.-Regler/Thermostat	M & J			
Typ/Type	TF 57 SF 2			
Reglerstellung/Position	kalt warm			
Schaltwerte/Switching values/	-25 -17			
Valeurs de commutation	-37 -27			
(„abtauen“ od.)	-20 -13			
Füllmenge/Fill.quantity/Charge	R12 g 150			
Anschlußwert/Conn.load/Puiss. connectée	W 130			
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω 6000			
Leistung/Power/Puissance	W 8			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω 285			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	Aspera			
1	14 0166			
2	02 2337			
3	02 2342			
4	05 1748			
5				
6	05 1746			
7	02 2339			
8				
9	05 0166			
10				
11				
12				
13				
14				