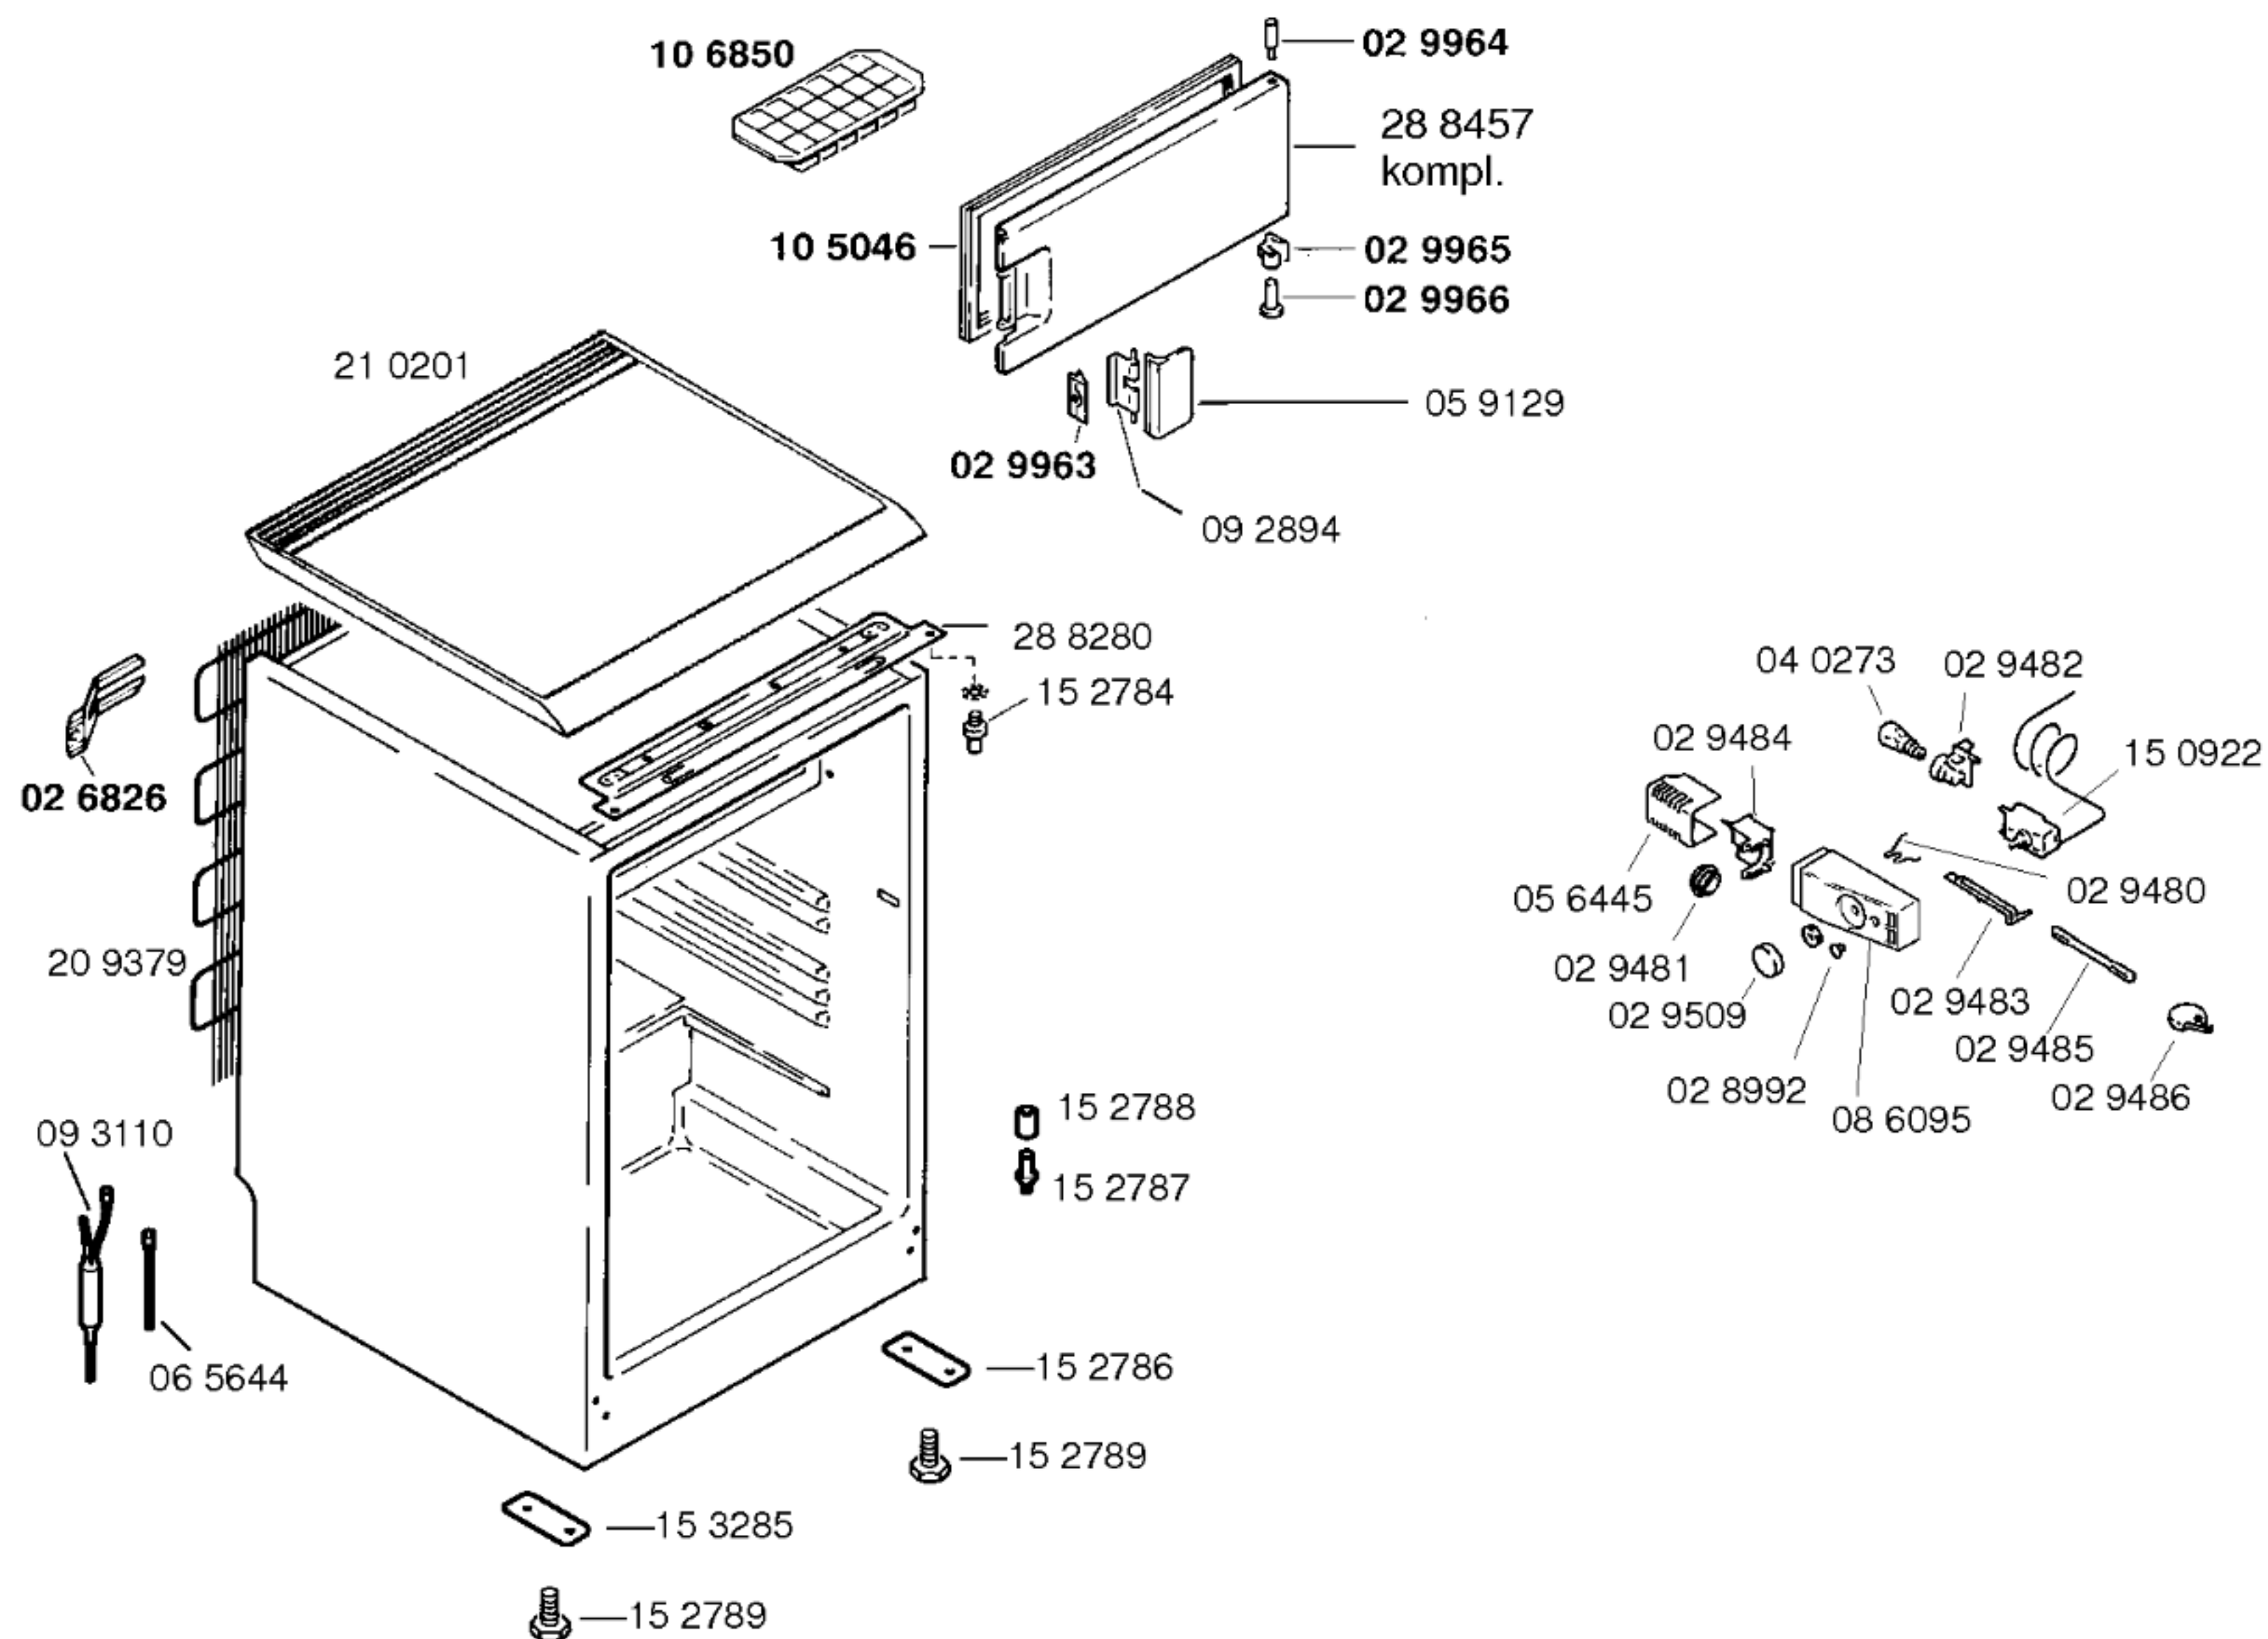 
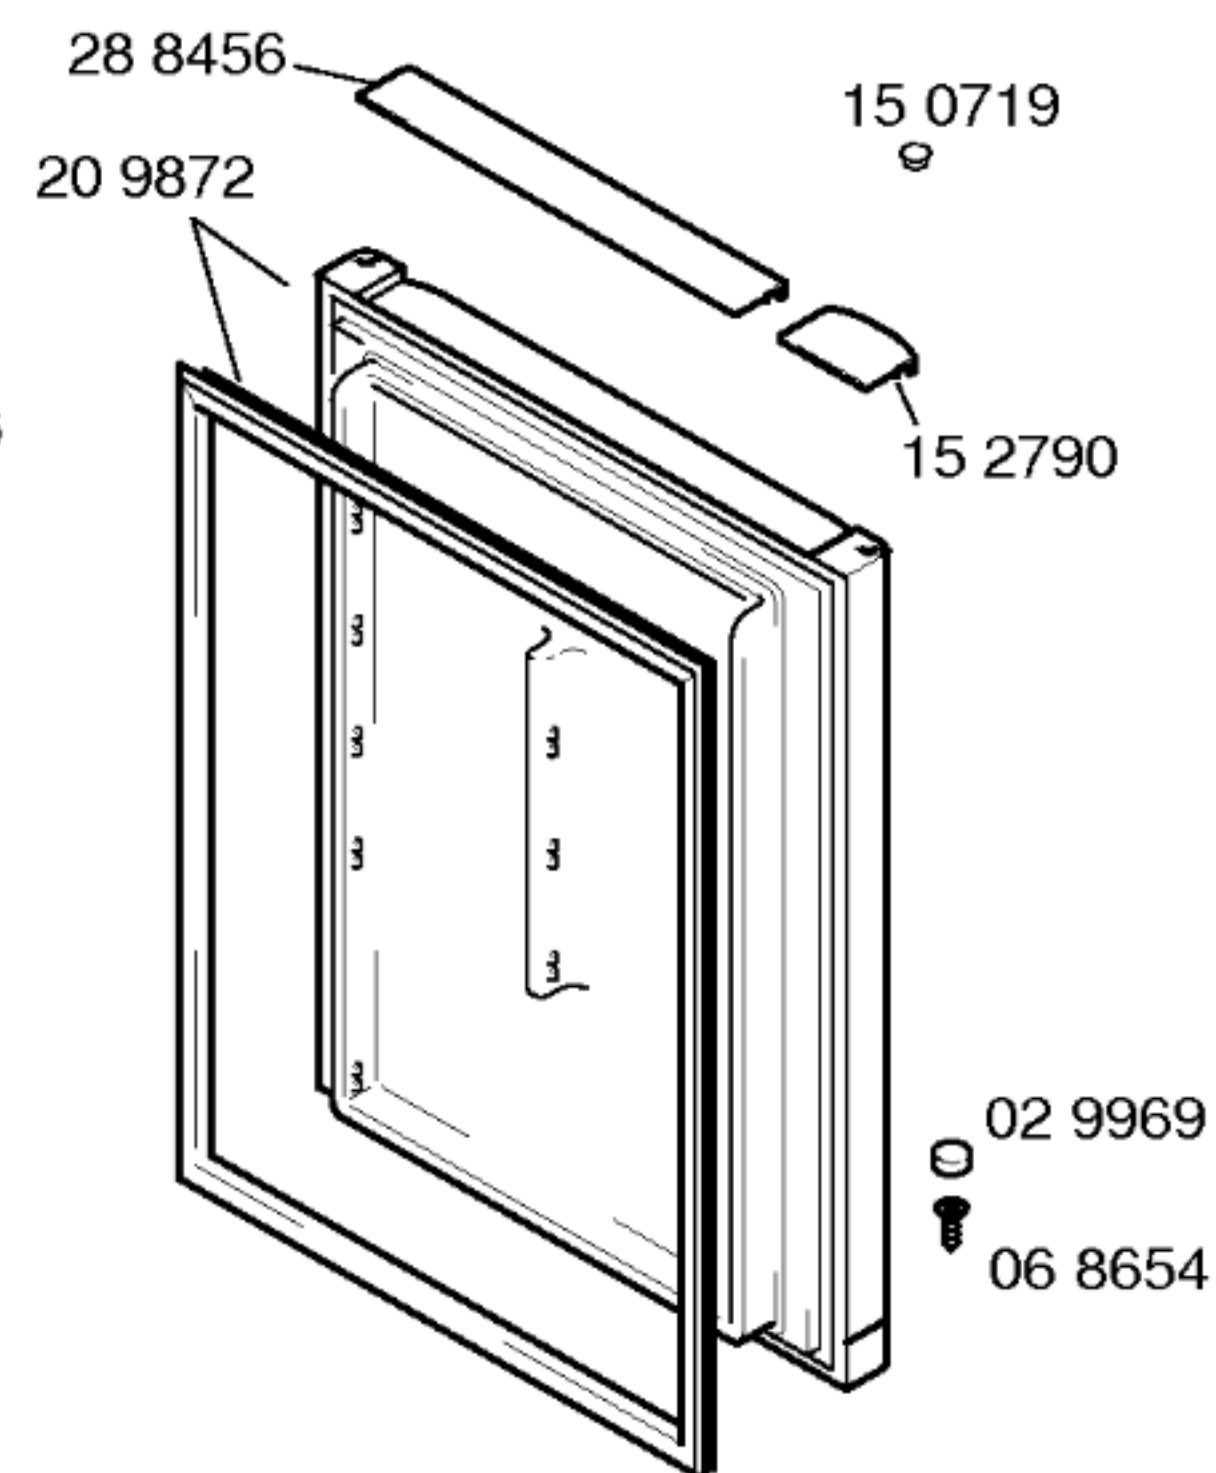 
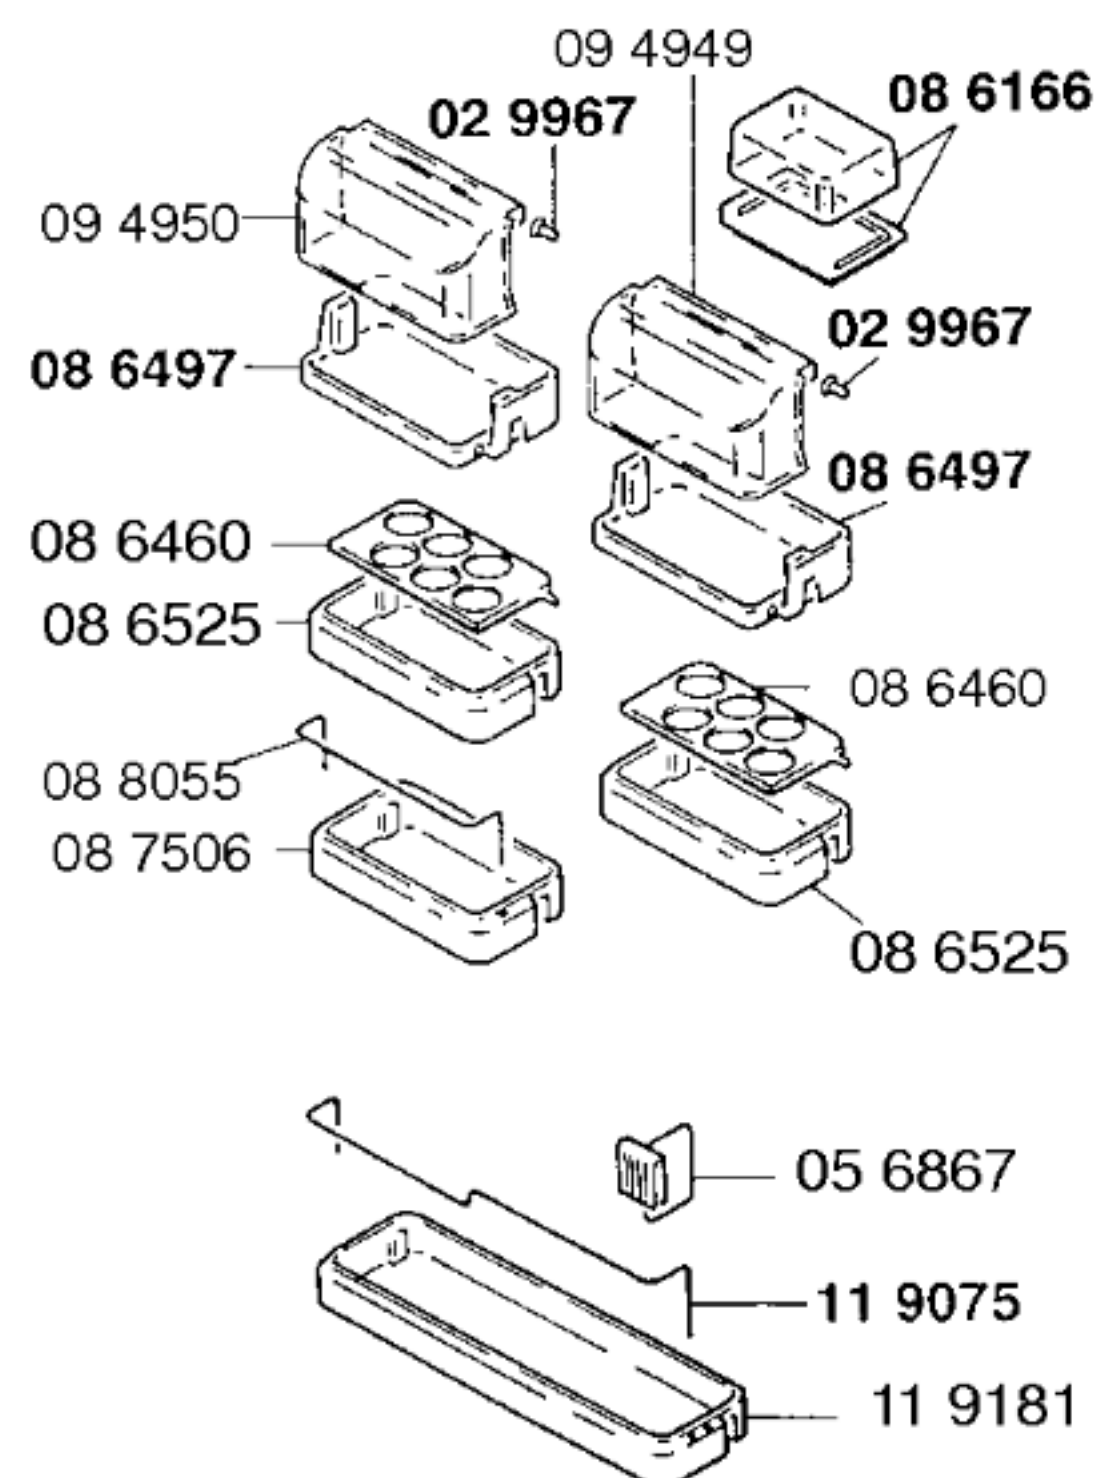 
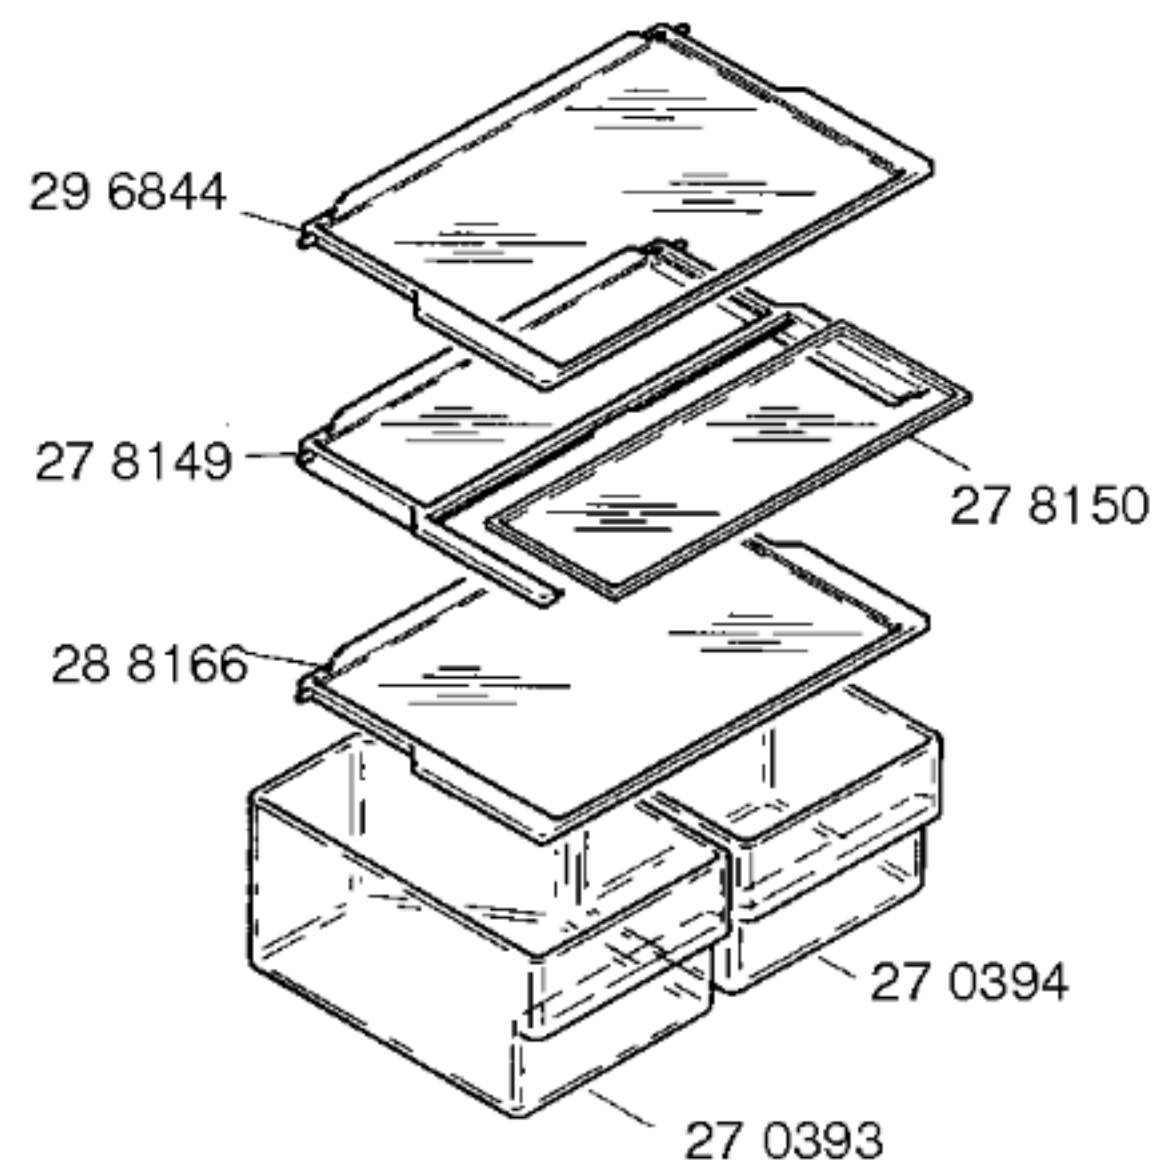 
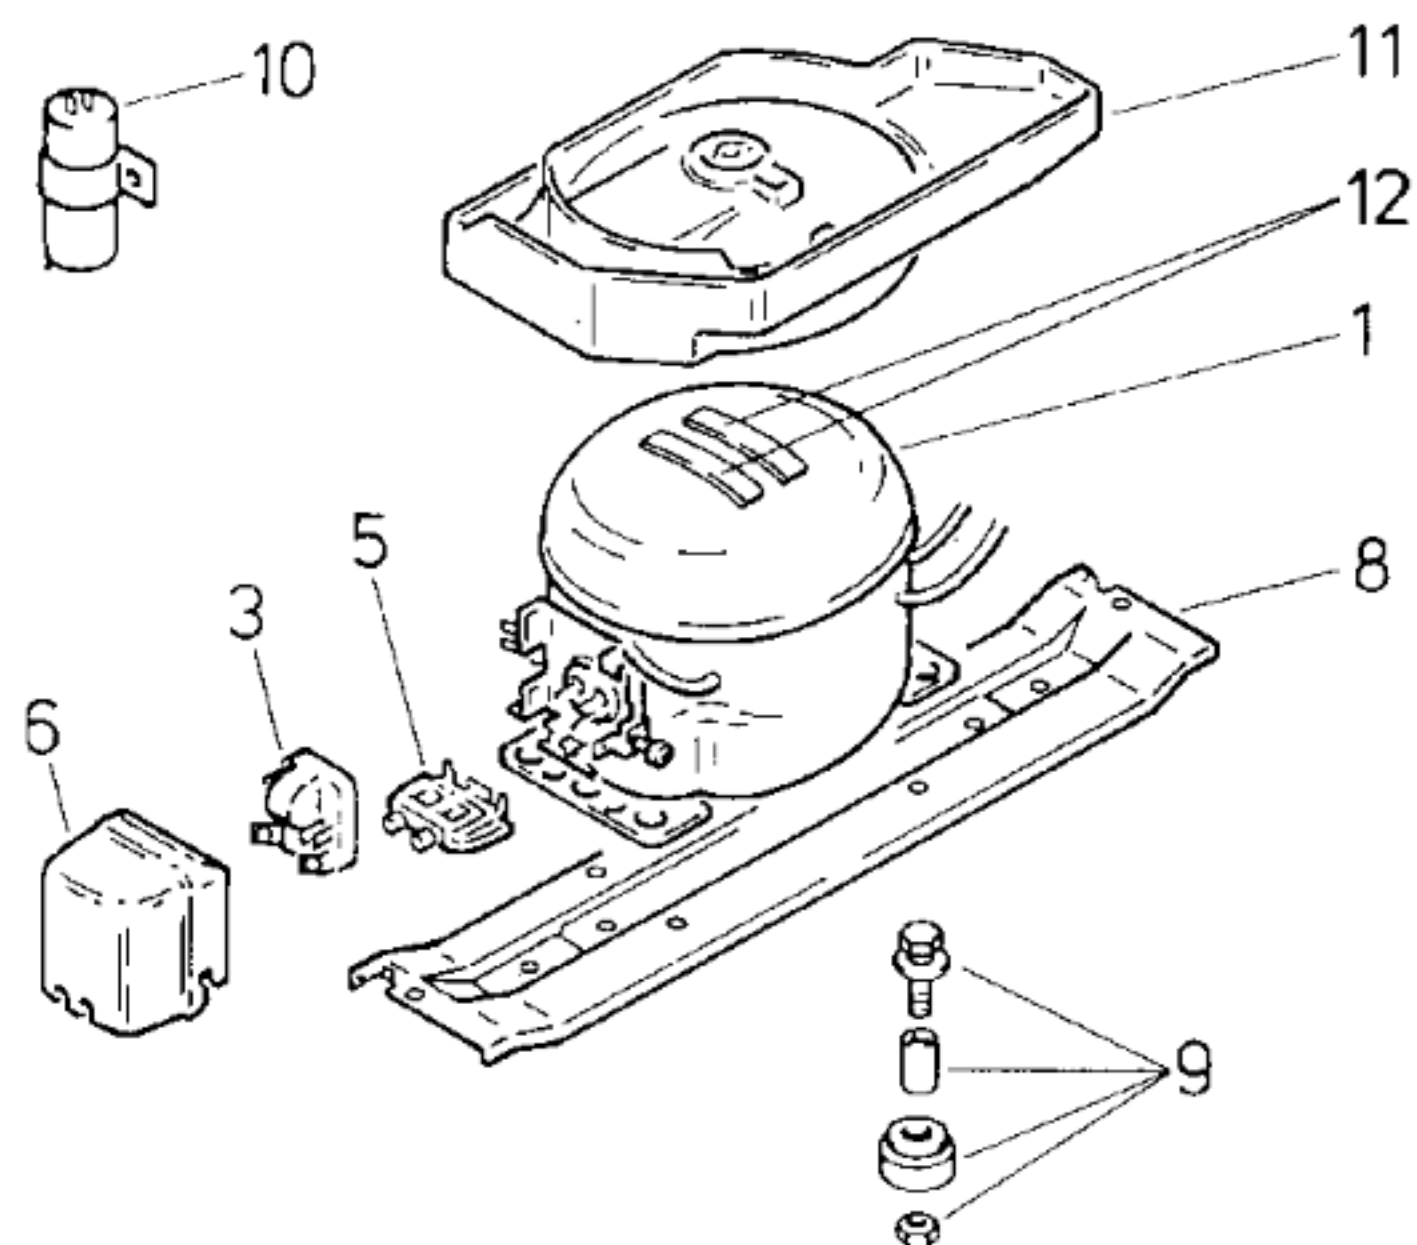 


Ident – Nummern – Konstante
3740Gebrauchsanweisung
51 3590
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

Ident – Nummern – Konstante
3740

Ident – Nummern – Konstante
3740

Pos.	V01		
	Danfoss		
	TLY 6 K		
1	14 1680		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TLY 6 K			
Förderleistung/Delivery/Débit		l/h	1026		
Anlaufstrom/Starting current/Cour de démarrage		A	–		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	34,0	
		Hi/aux	Ω	41,0	
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K 59			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	+5,2	
		„aus“ („abtauen“ od.)	„alarm“	–31,0 –13,5	
Füllmenge/Fill.quantity/Charge		R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée		W	79		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Schaltuhr/Timer/Minuterie de contact					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild