



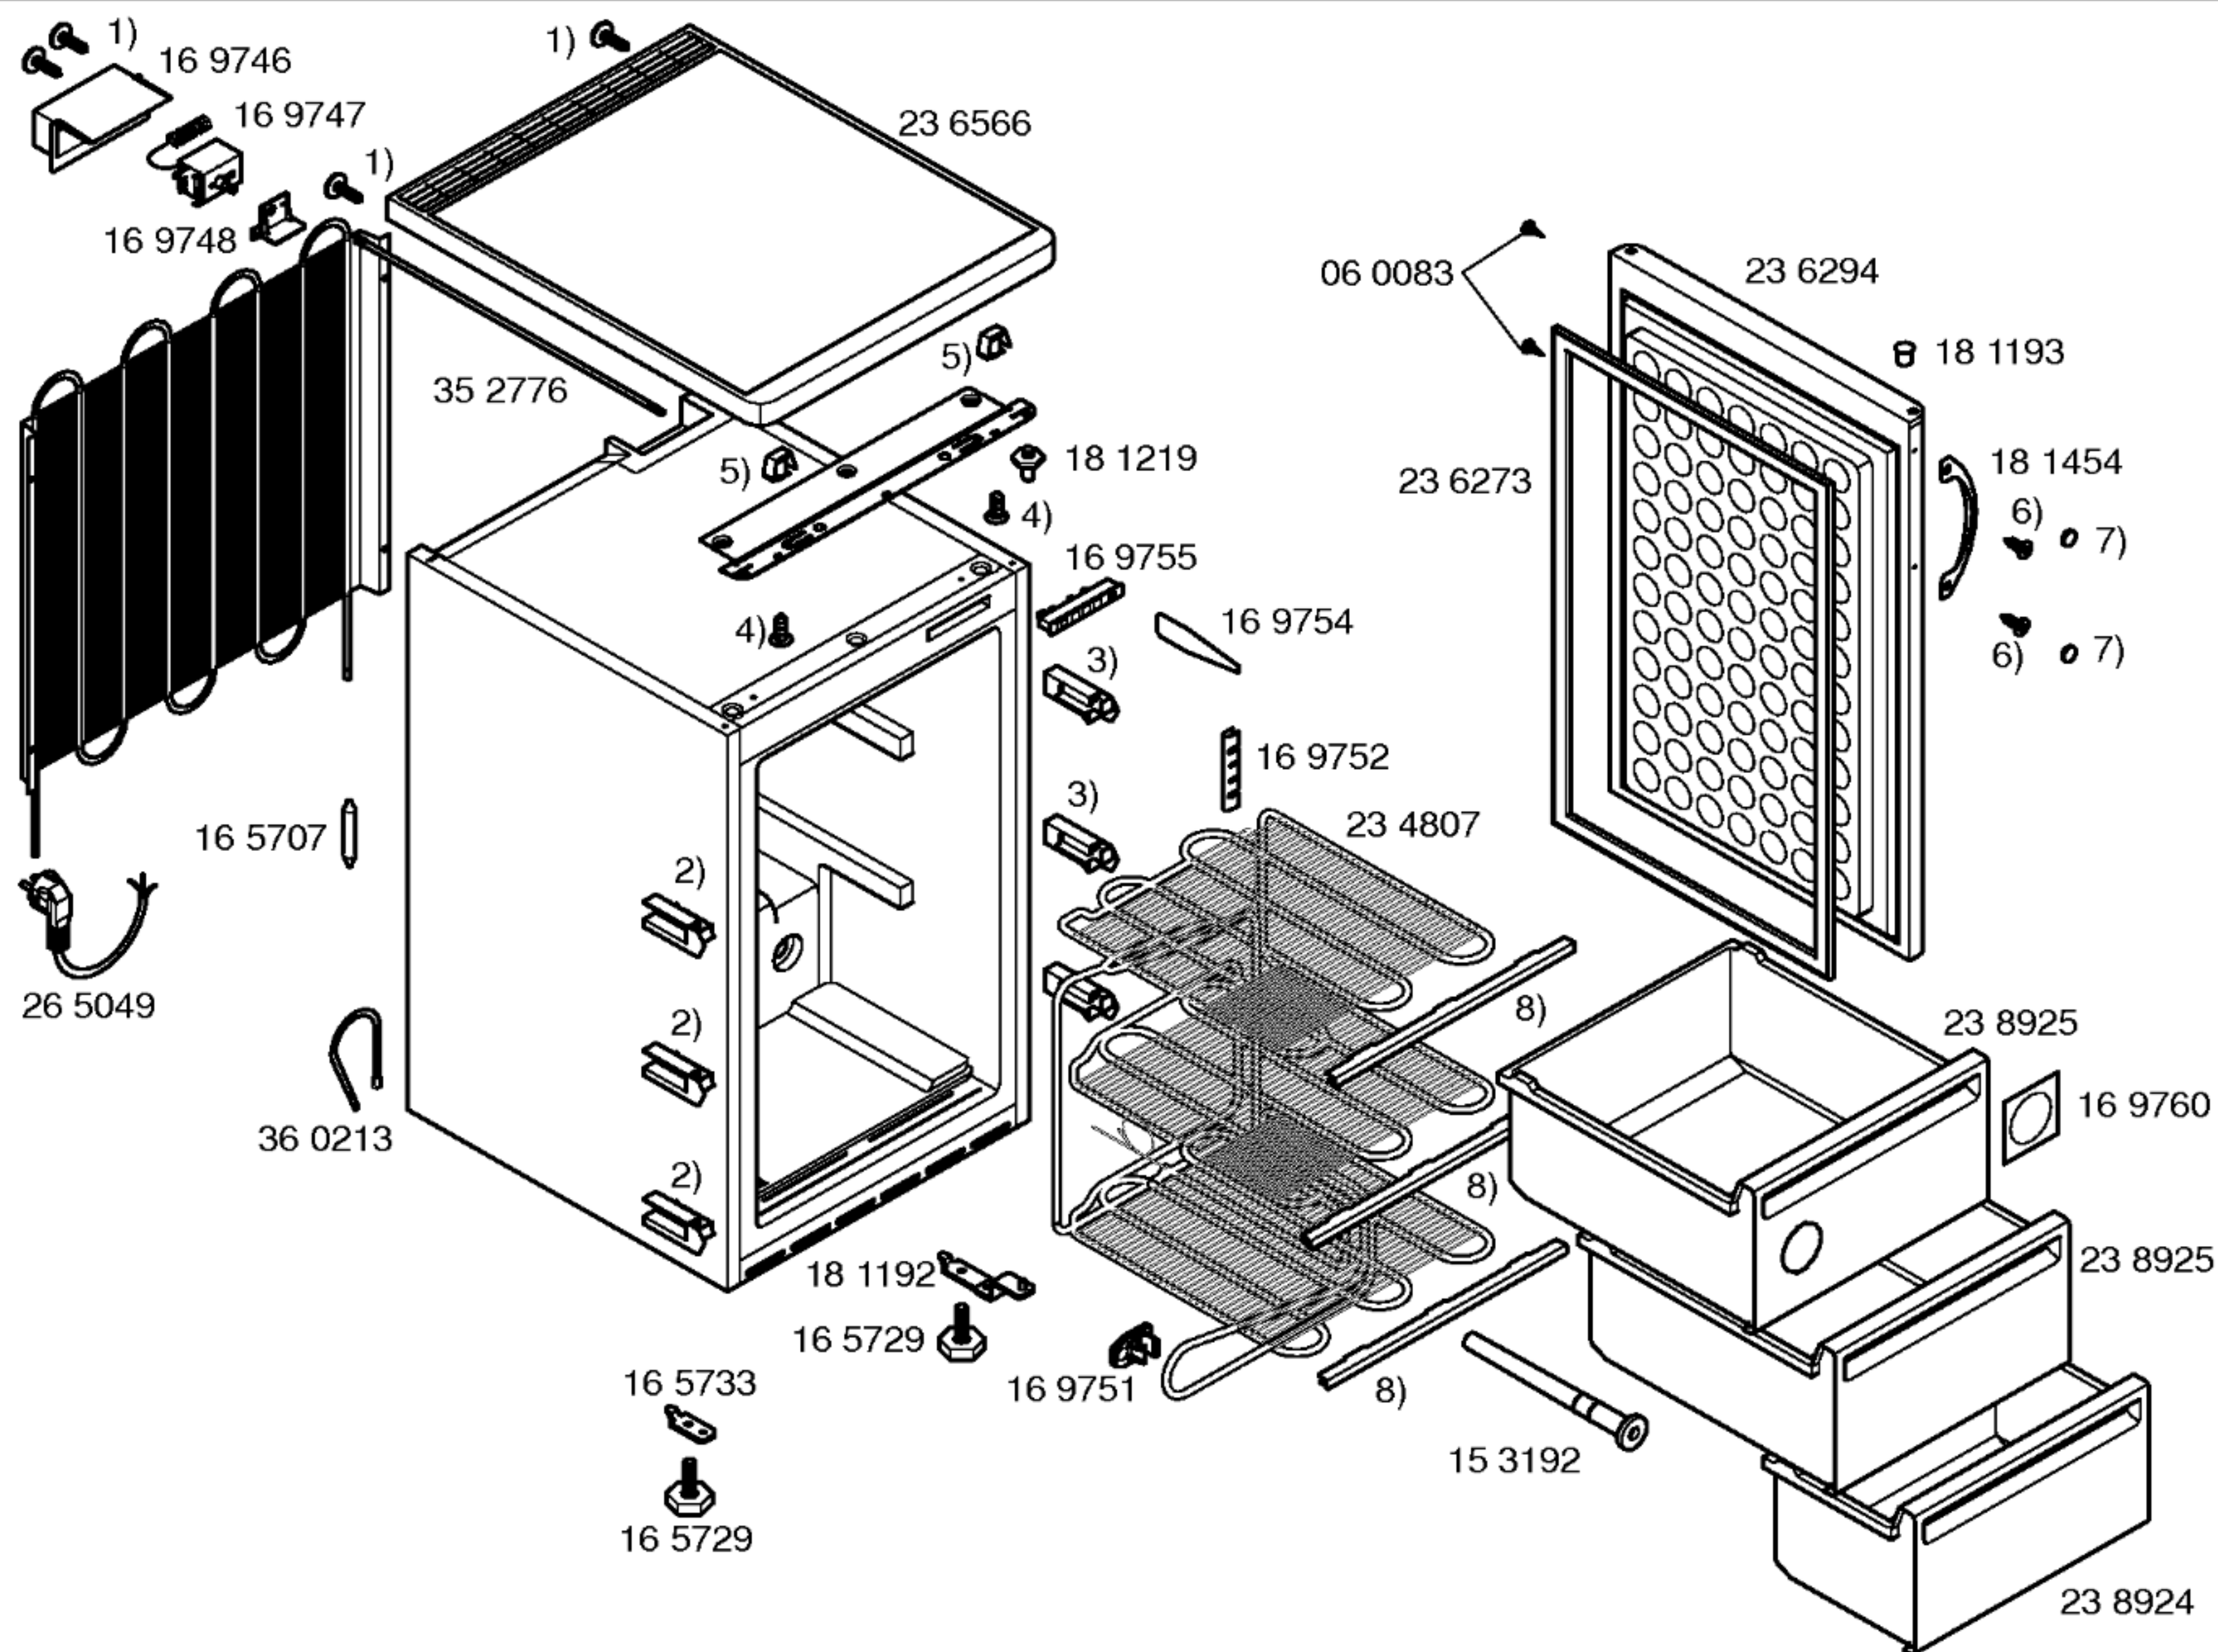

Gebrauchsanweisung

58 2837
(de,en,fr,it,nl,sv
fi,no,dk,es,pt)

- 1) 16 5709
- 2) 16 9749
- 3) 16 9753
- 4) 16 5727
- 5) 16 5720
- 6) 17 2274
- 7) 06 0115
- 8) 35 2777

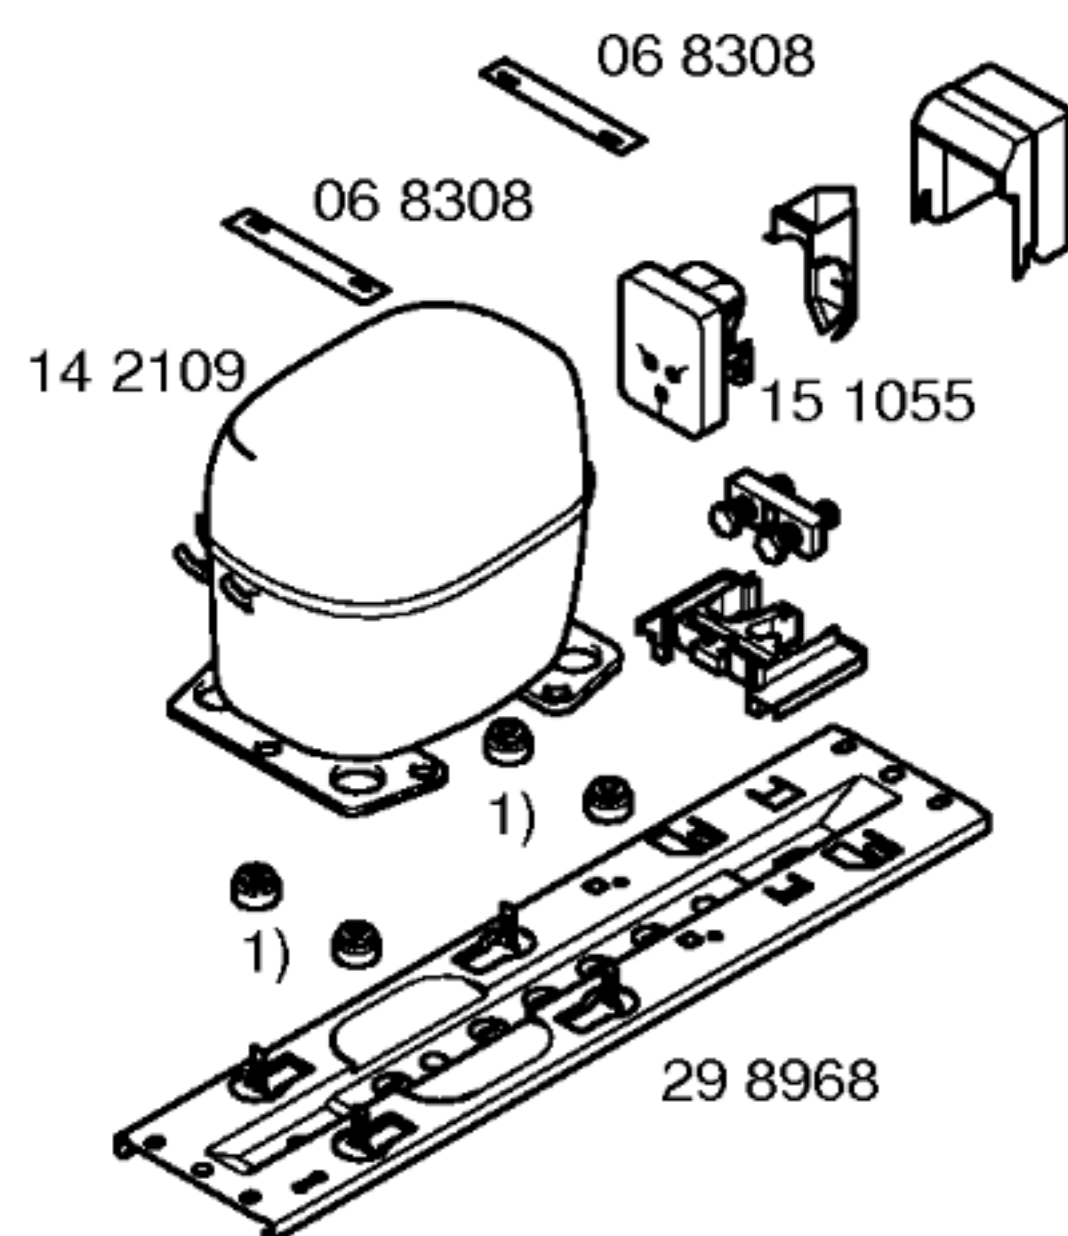

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor		DANFOSS	
Typ/Type/Tipo		TLES9KK2	
Förderleistung/Delivery/Debit/Aspiración l/h		1589	
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A		4.5	
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		16.5	
Hi/aux.		19.9	
Temp.Reyler/Thermostat/Termostato		DANFOSS	
Typ/Type/Tipo		077B2507	
Reglerstellung/Position/Conexión		Kalt Warm.	
Schaltwerte/Switching values/	..ein" C	-25 -17	
Valeurs de commutation/Desconex.	..aus".	-33 -23	
(..abtaven' od)	..alarm"	-19.5 -13	
Füllmenge/Fill. quantily/Charge/Carga R600a		g 40	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.		W 90	

1) 06 0182