



51 1423
EU1, GB1
Gebrauchsanweisung
(D, GB, F, I, NL, E)

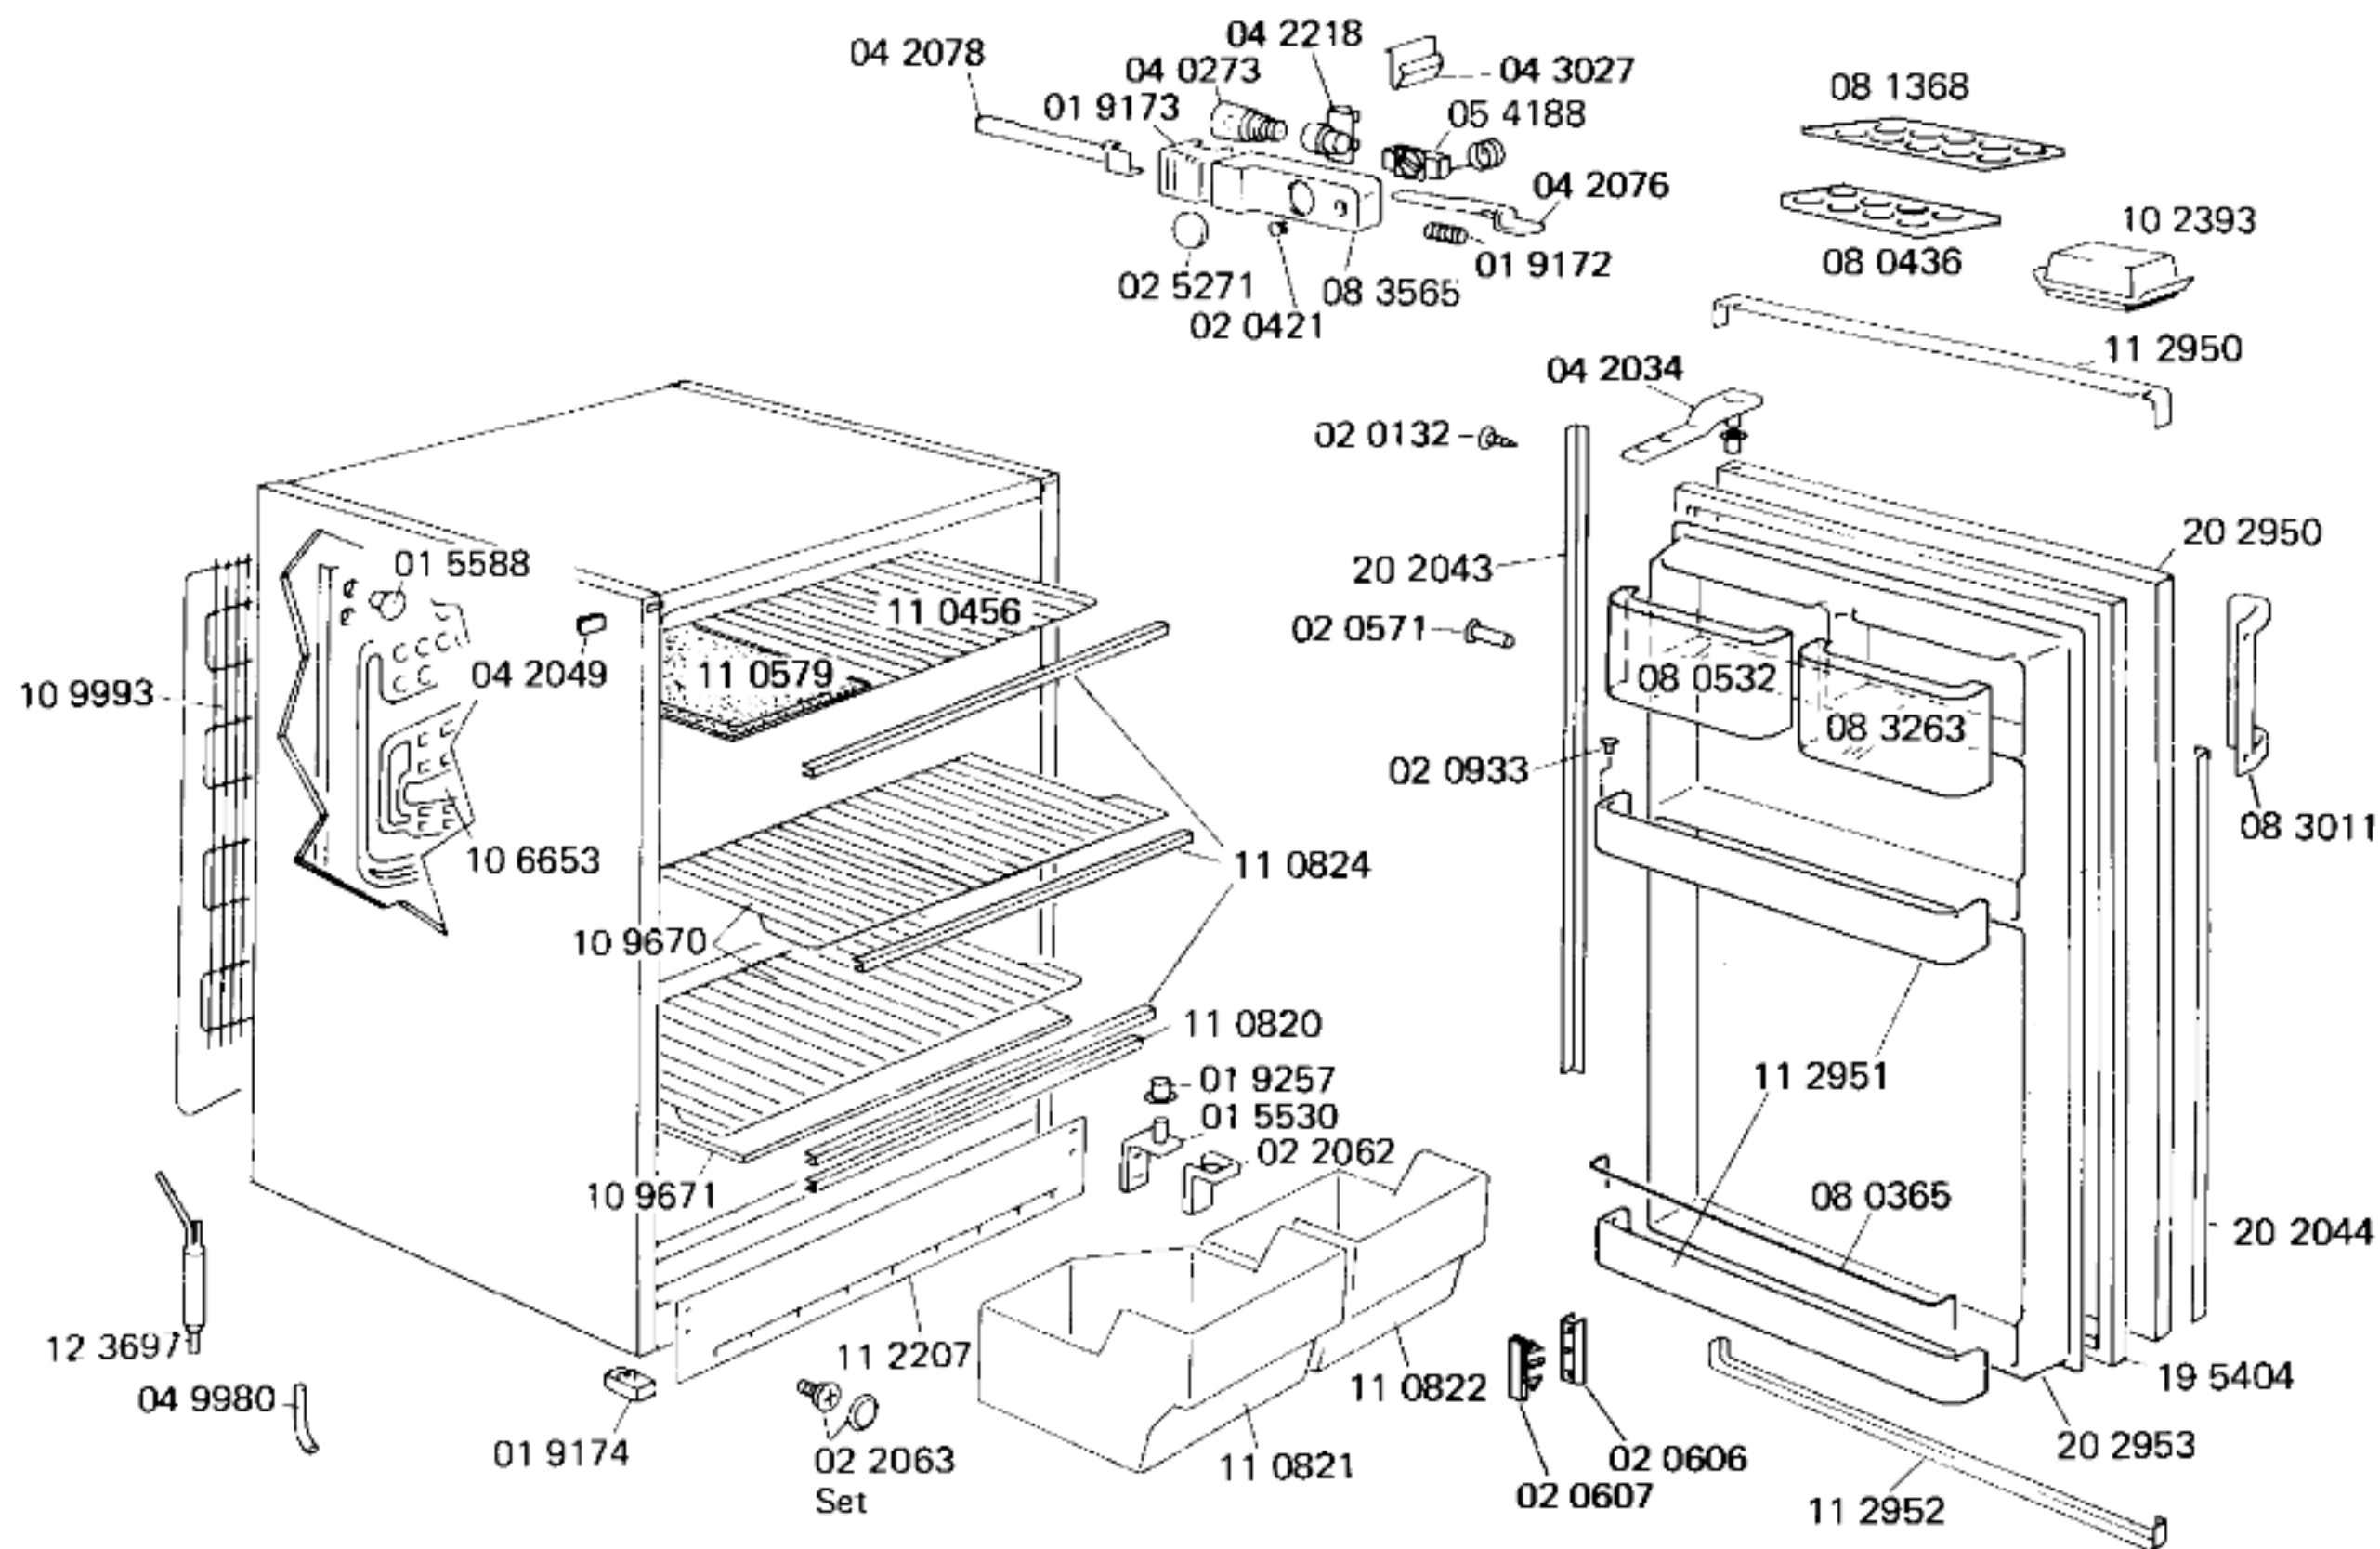

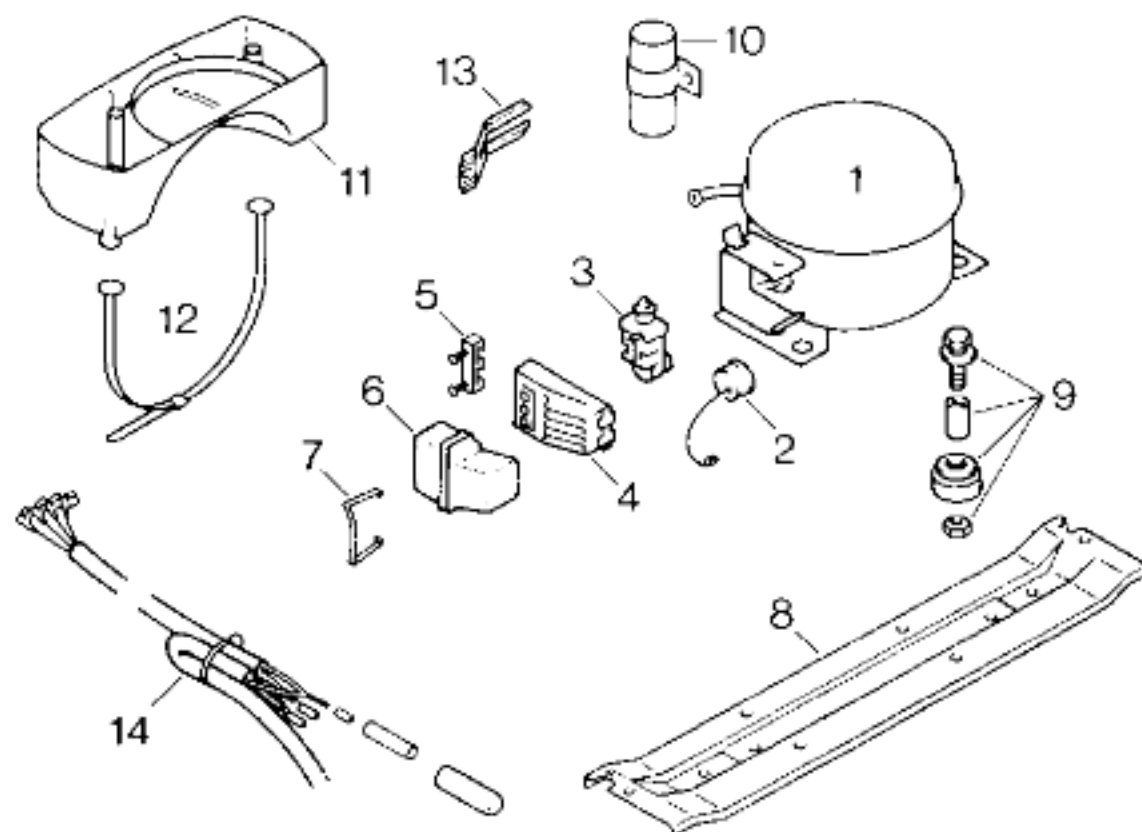

Pos.	EU1, GB1	EU1, EU2	ab FD 6606
	Necchi	Danfoss	
1	14 0110	14 0364	
2	02 1627		
3	02 1577	02 0108	
4	04 9990		
5		02 7310	
6	04 9991	05 1413	
7	04 9996		
8	11 1567	11 1567	
9	05 0166	05 0166	
10			
11	07 5162	08 4744	
12	02 1562		
13	04 1568	04 1568	
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Necchi	Danfoss		
Typ/Type	M 3,5 J	TL 3 A		
Förderleistung/Delivery/Débit	l/h	630	576	
Anlaufstrom/Starting current/Cour. de démarrage	A	6,3	7,2	
Widerstand/Resistance/Résistance	Ha/main/prin.	30,6	31,7	
	Hi/aux	49,0	17,0	
Temp.-Regler/Thermostat	Ranco			
Typ/Type	A 59			
Reglerstellung/Position	kalt	warm		
Schaltwerte/Switching values/	„ein“	+ 4	+ 4	
Valeurs de commutation	„aus“	-26,5	-11	
	(„abtauen“ od.)	„alarm“		
Füllmenge/Fill quantity/Charge	R12	g	80	
Anschlußwert/Conn. load/Puiss. connectée	W	100		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			