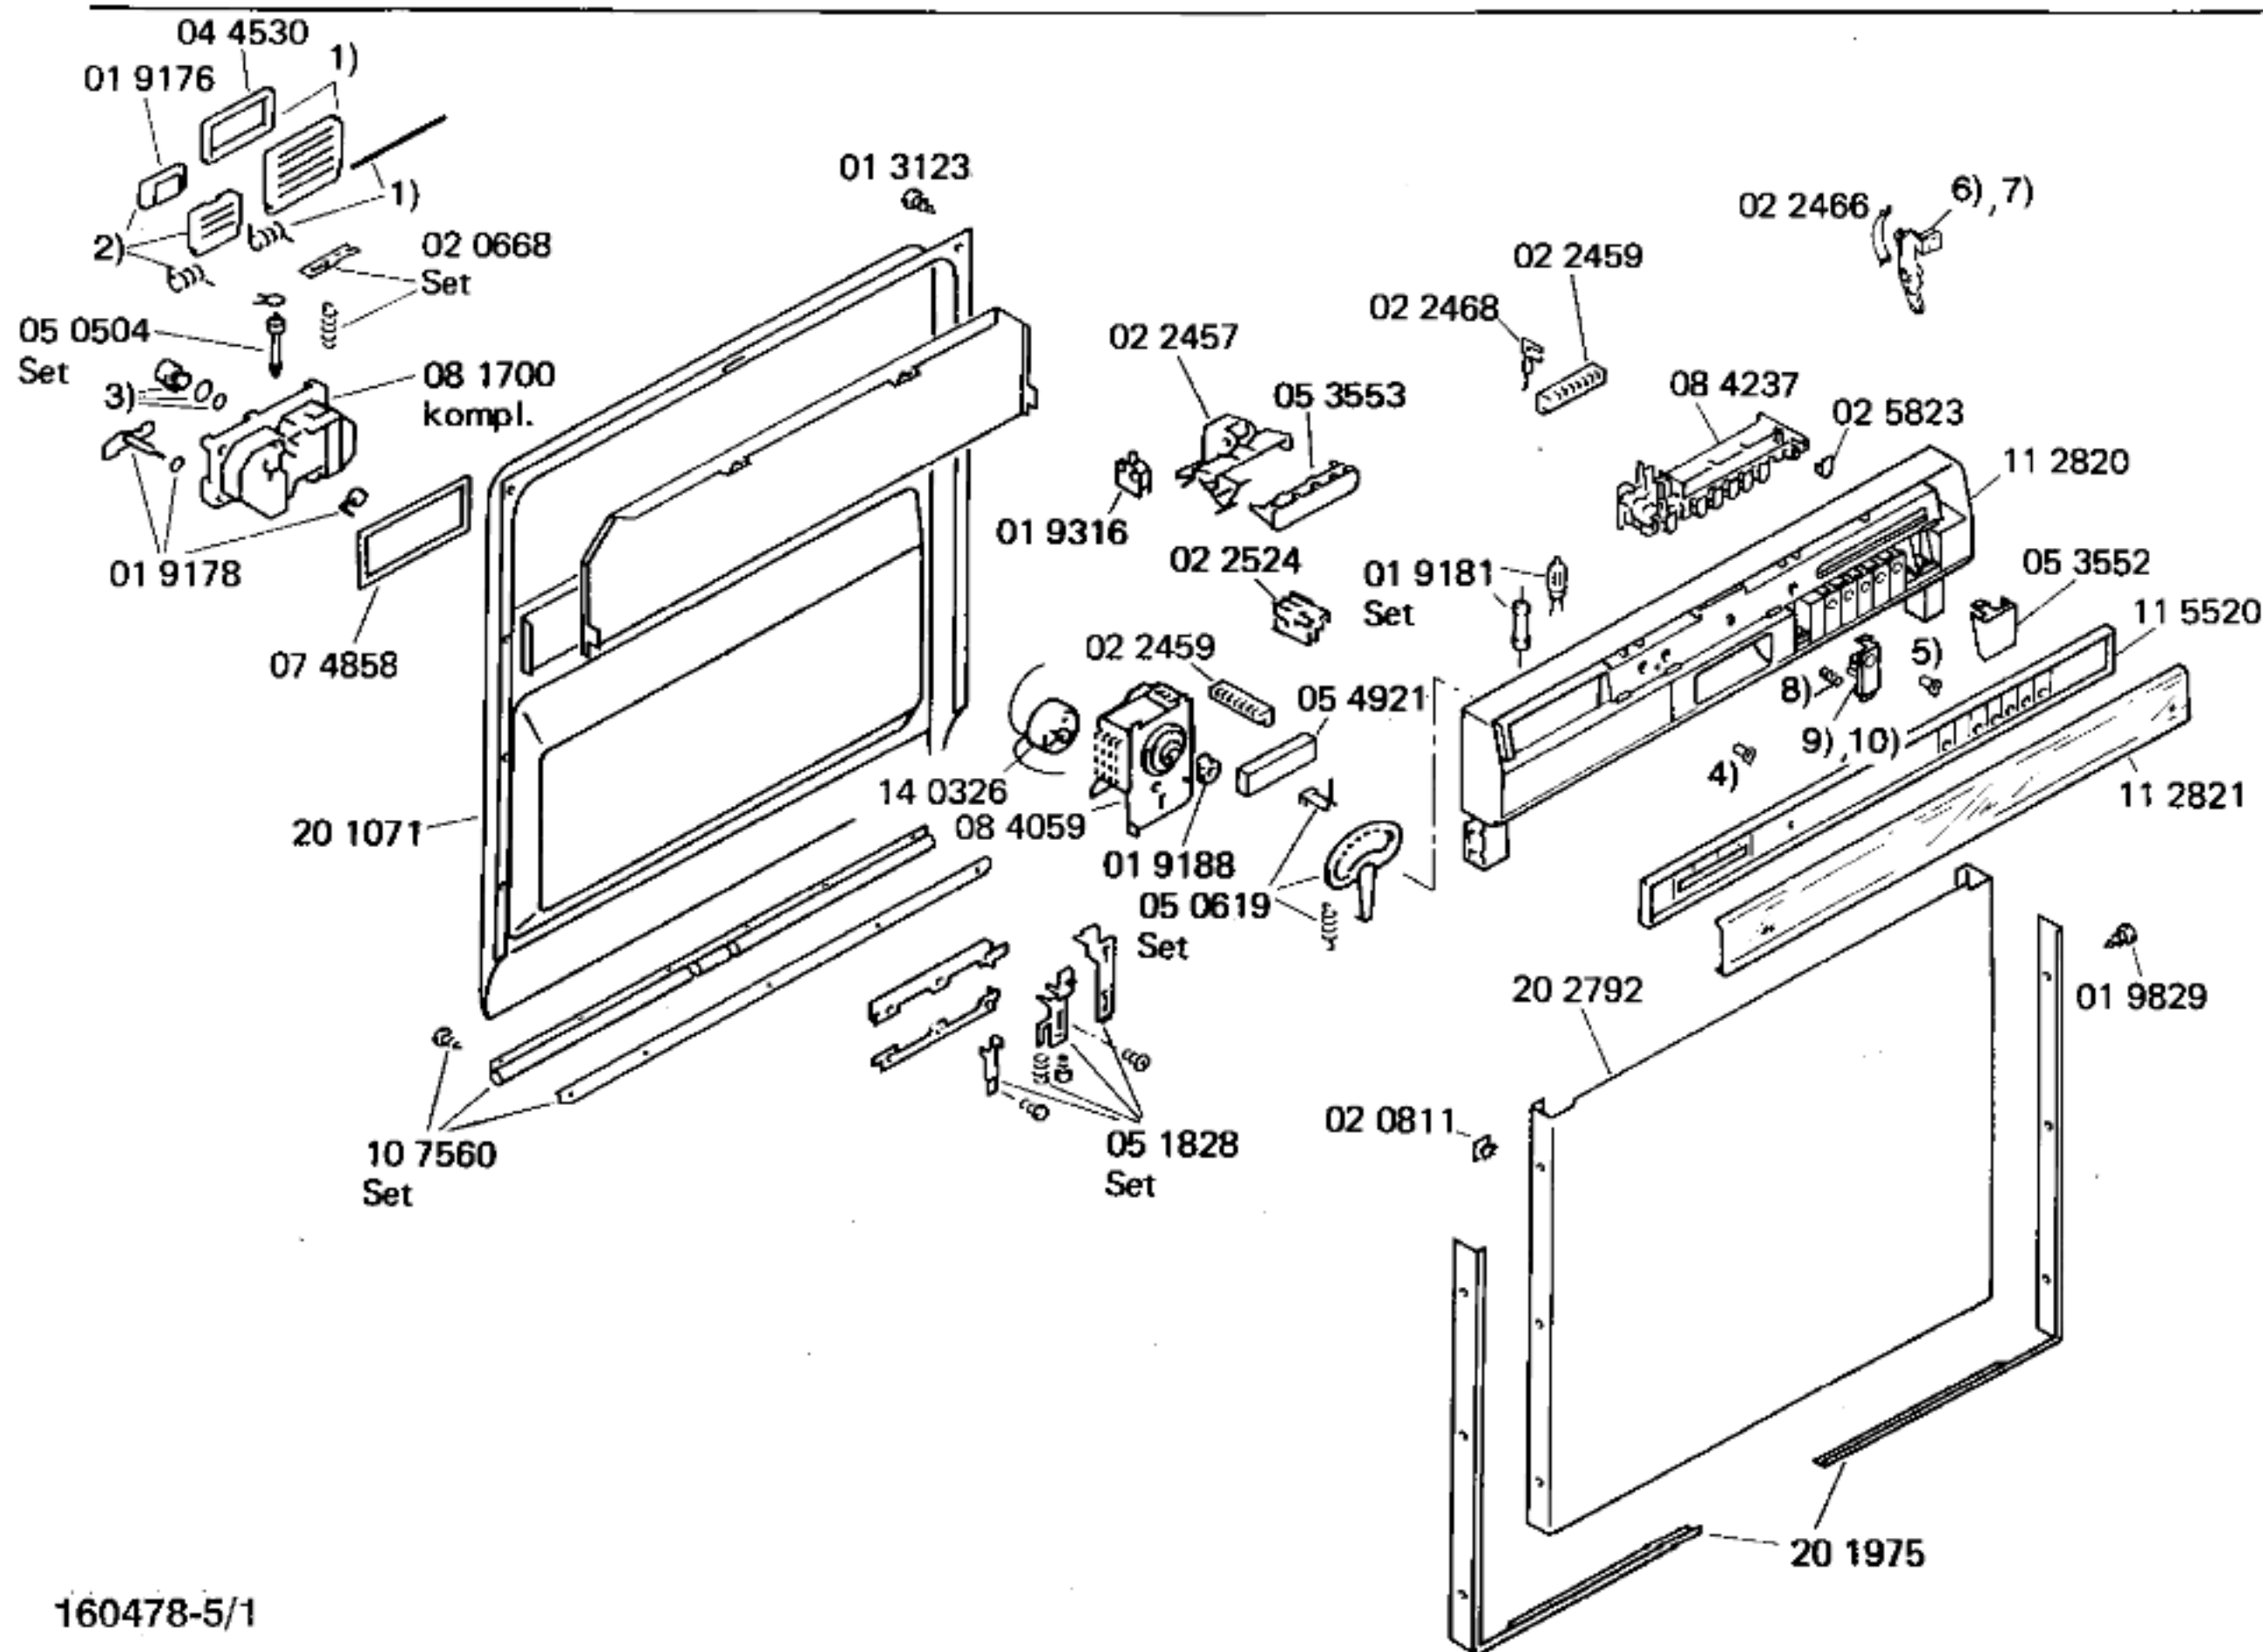


**BOSCH**

SMS 6110 – 0 730 101 024 – AUS1

GESCHIRRSPÜLGERÄTE  
StandgeräteIdent-Nummern-Konstante  
3740 .....51 1770  
AUS1  
Gebrauchsanweisung  
(GB)51 2277  
Aufstellanleitung1) 04 2085  
Set2) 04 2105  
Set3) 01 9177  
Set

4) 02 5122


5) 02 5123

6) 02 5657  
rot7) 02 5658  
grün

8) 02 5824


9) 02 5125  
Taste hell10) 02 5126  
Taste dunkel

Ident.-Nummern-Konstante  
3740 ...

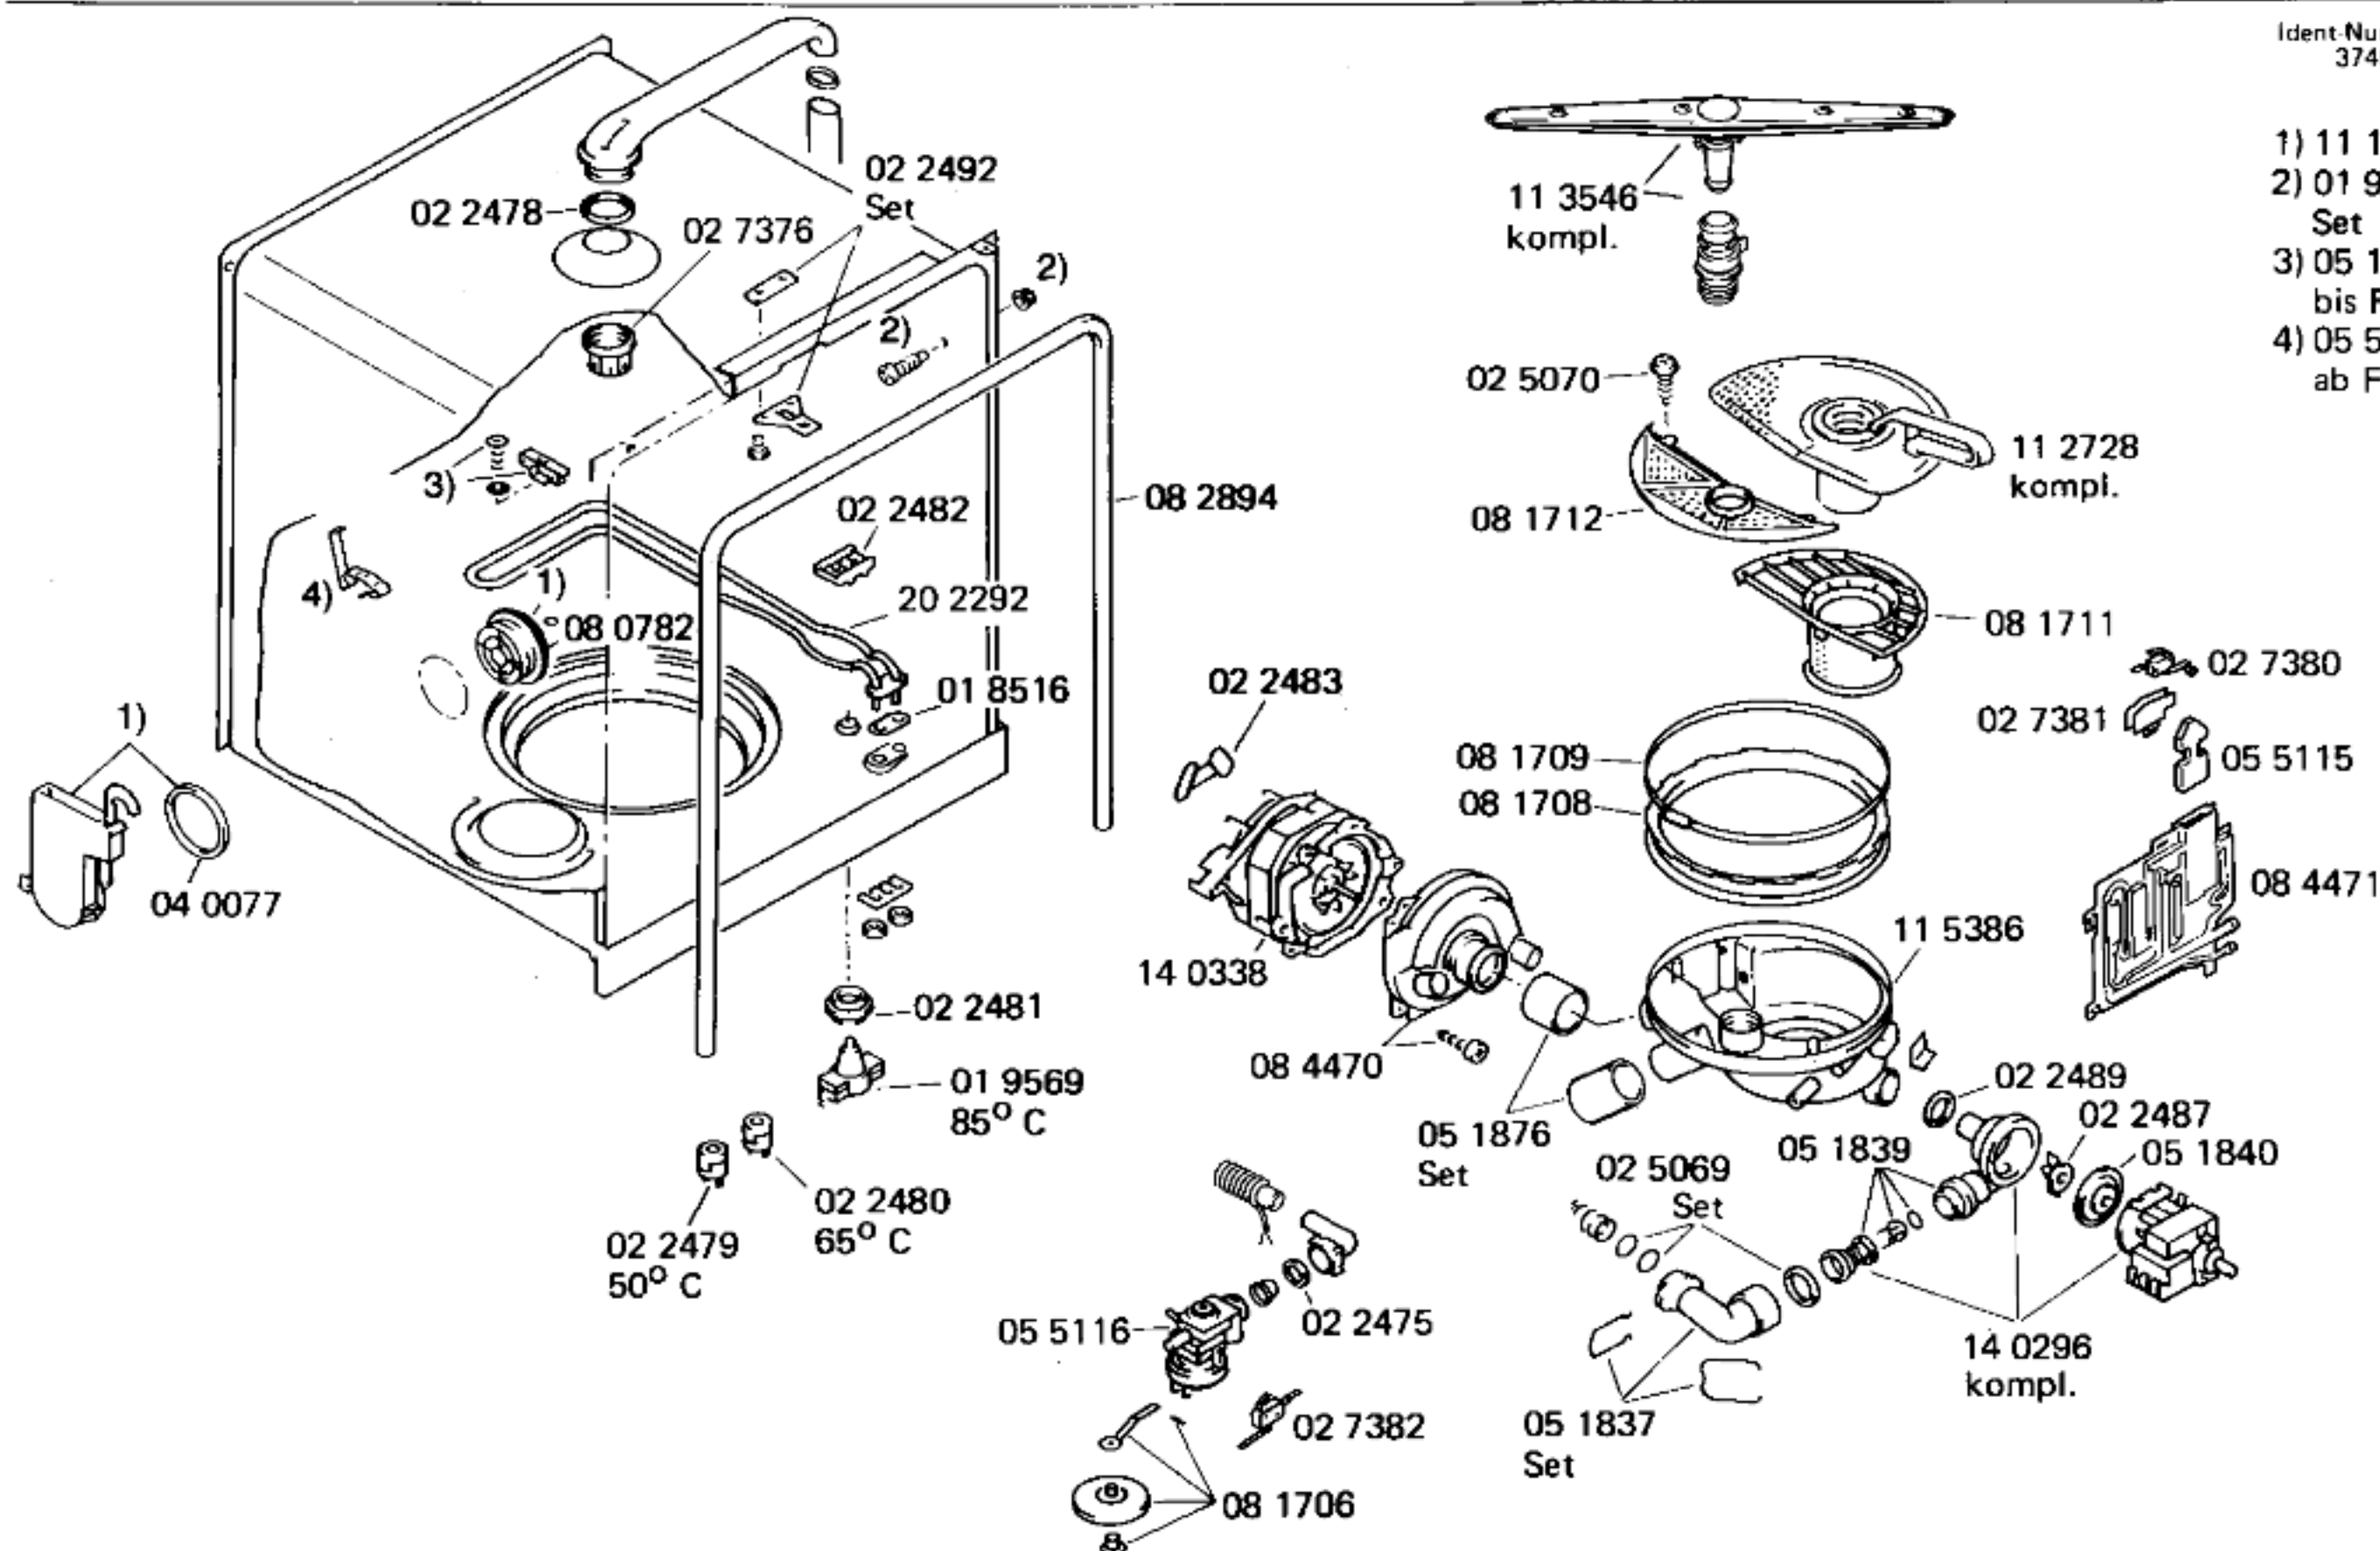


- 1) 11 1482
- 2) 01 9204 Set
- 3) 05 1838 bis FD 6504
- 4) 05 5117 ab FD 6505

Ident-Nummern-Konstante  
3740 .....

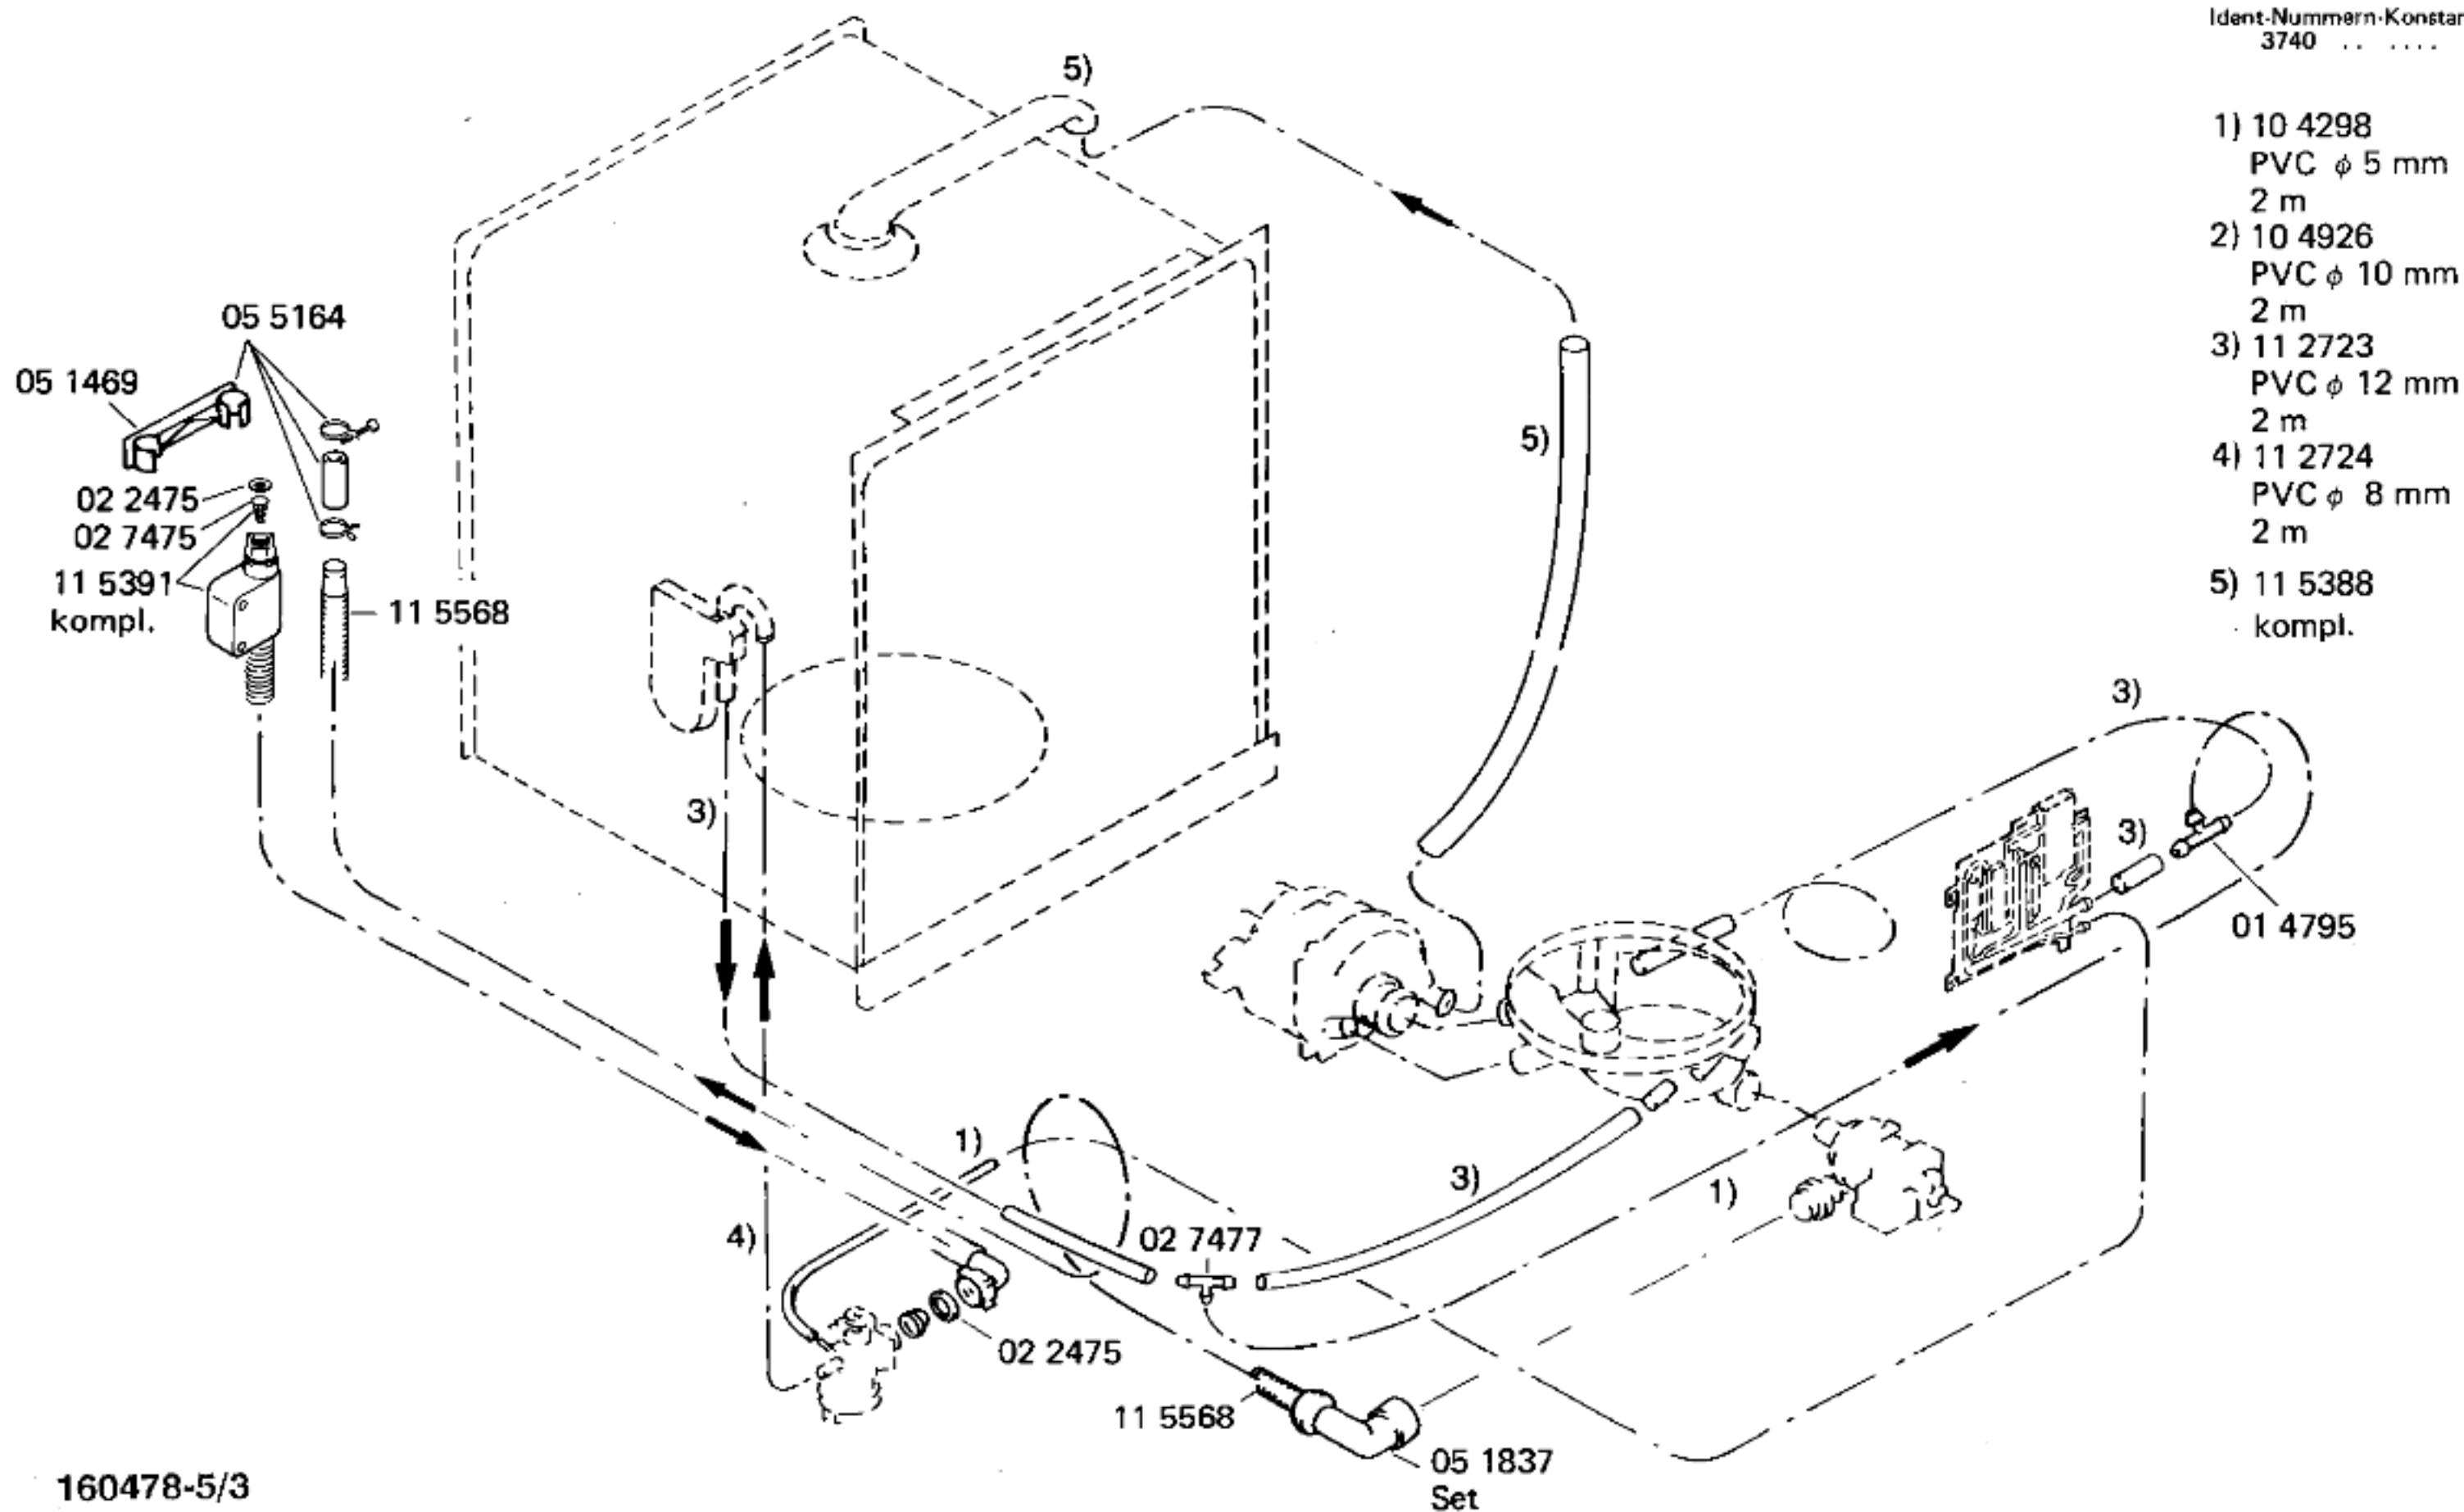


**BOSCH**

SMS 6110 — 0 730 101 024—AUS

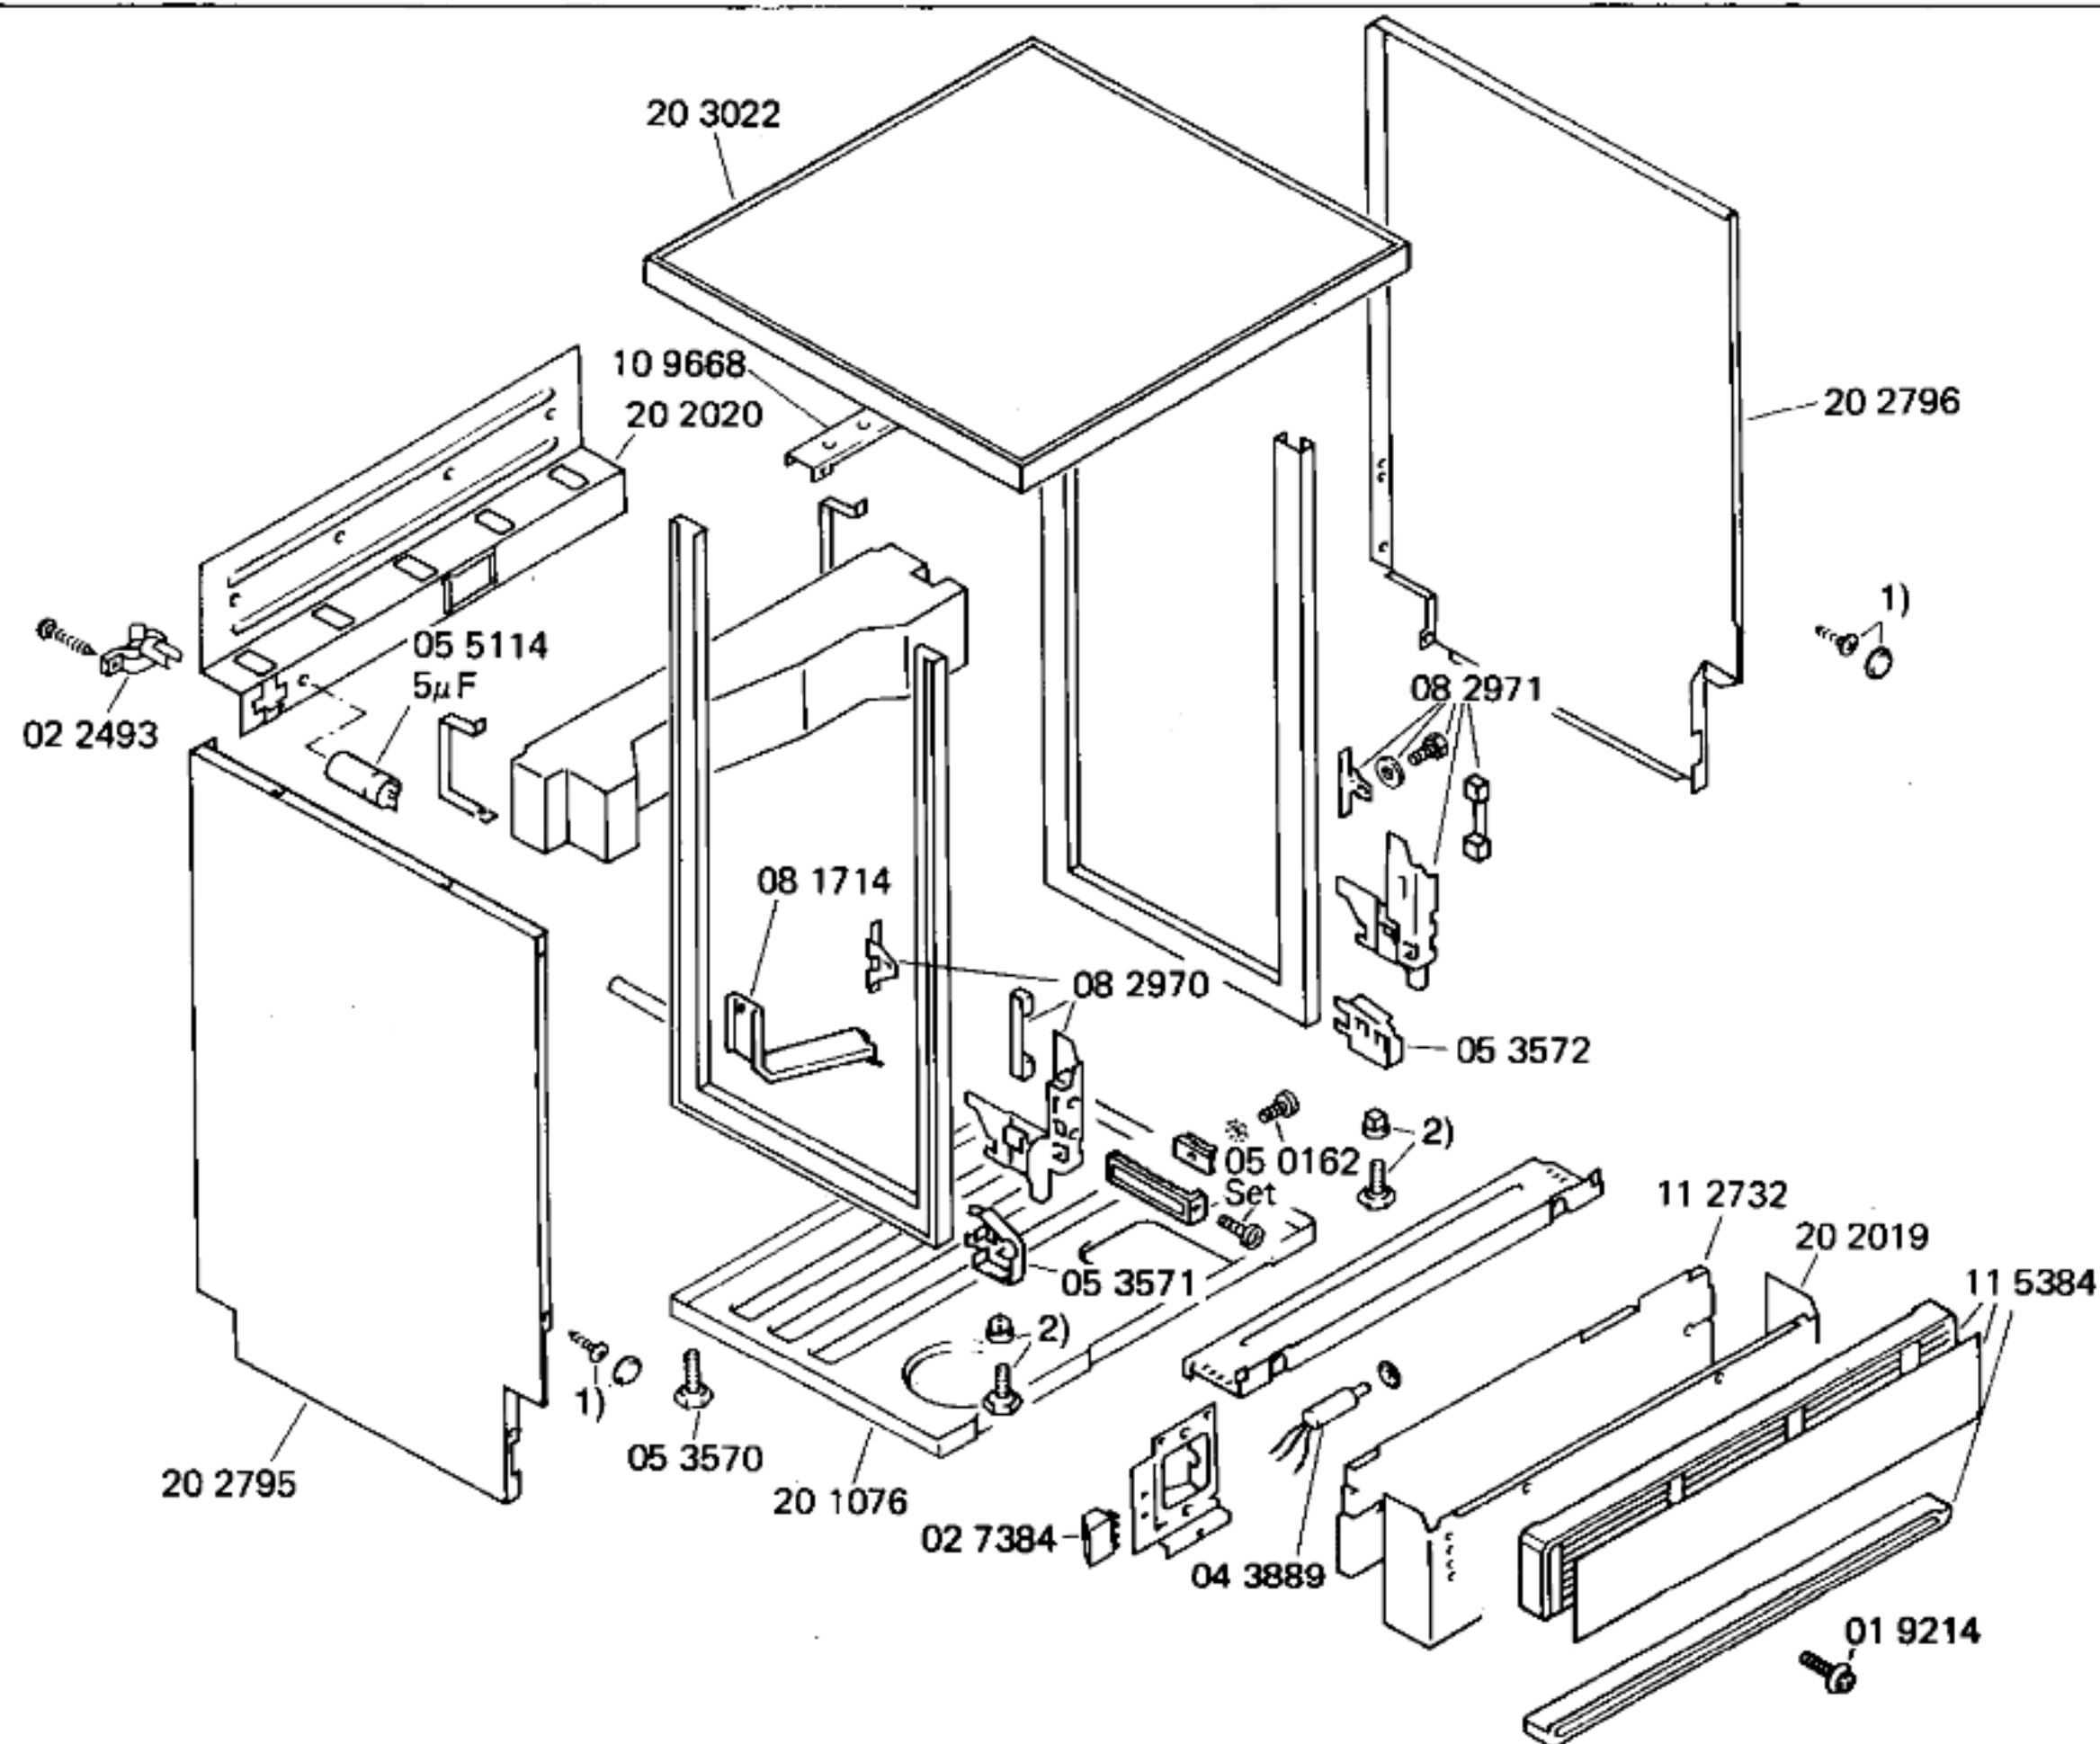GESCHIRRSPÜLGERÄTE  
StandgeräteIdent Nummern-Konstante  
3740 .. .. .

**BOSCH**

SMS 6110 — 0 730 101 024—AUS

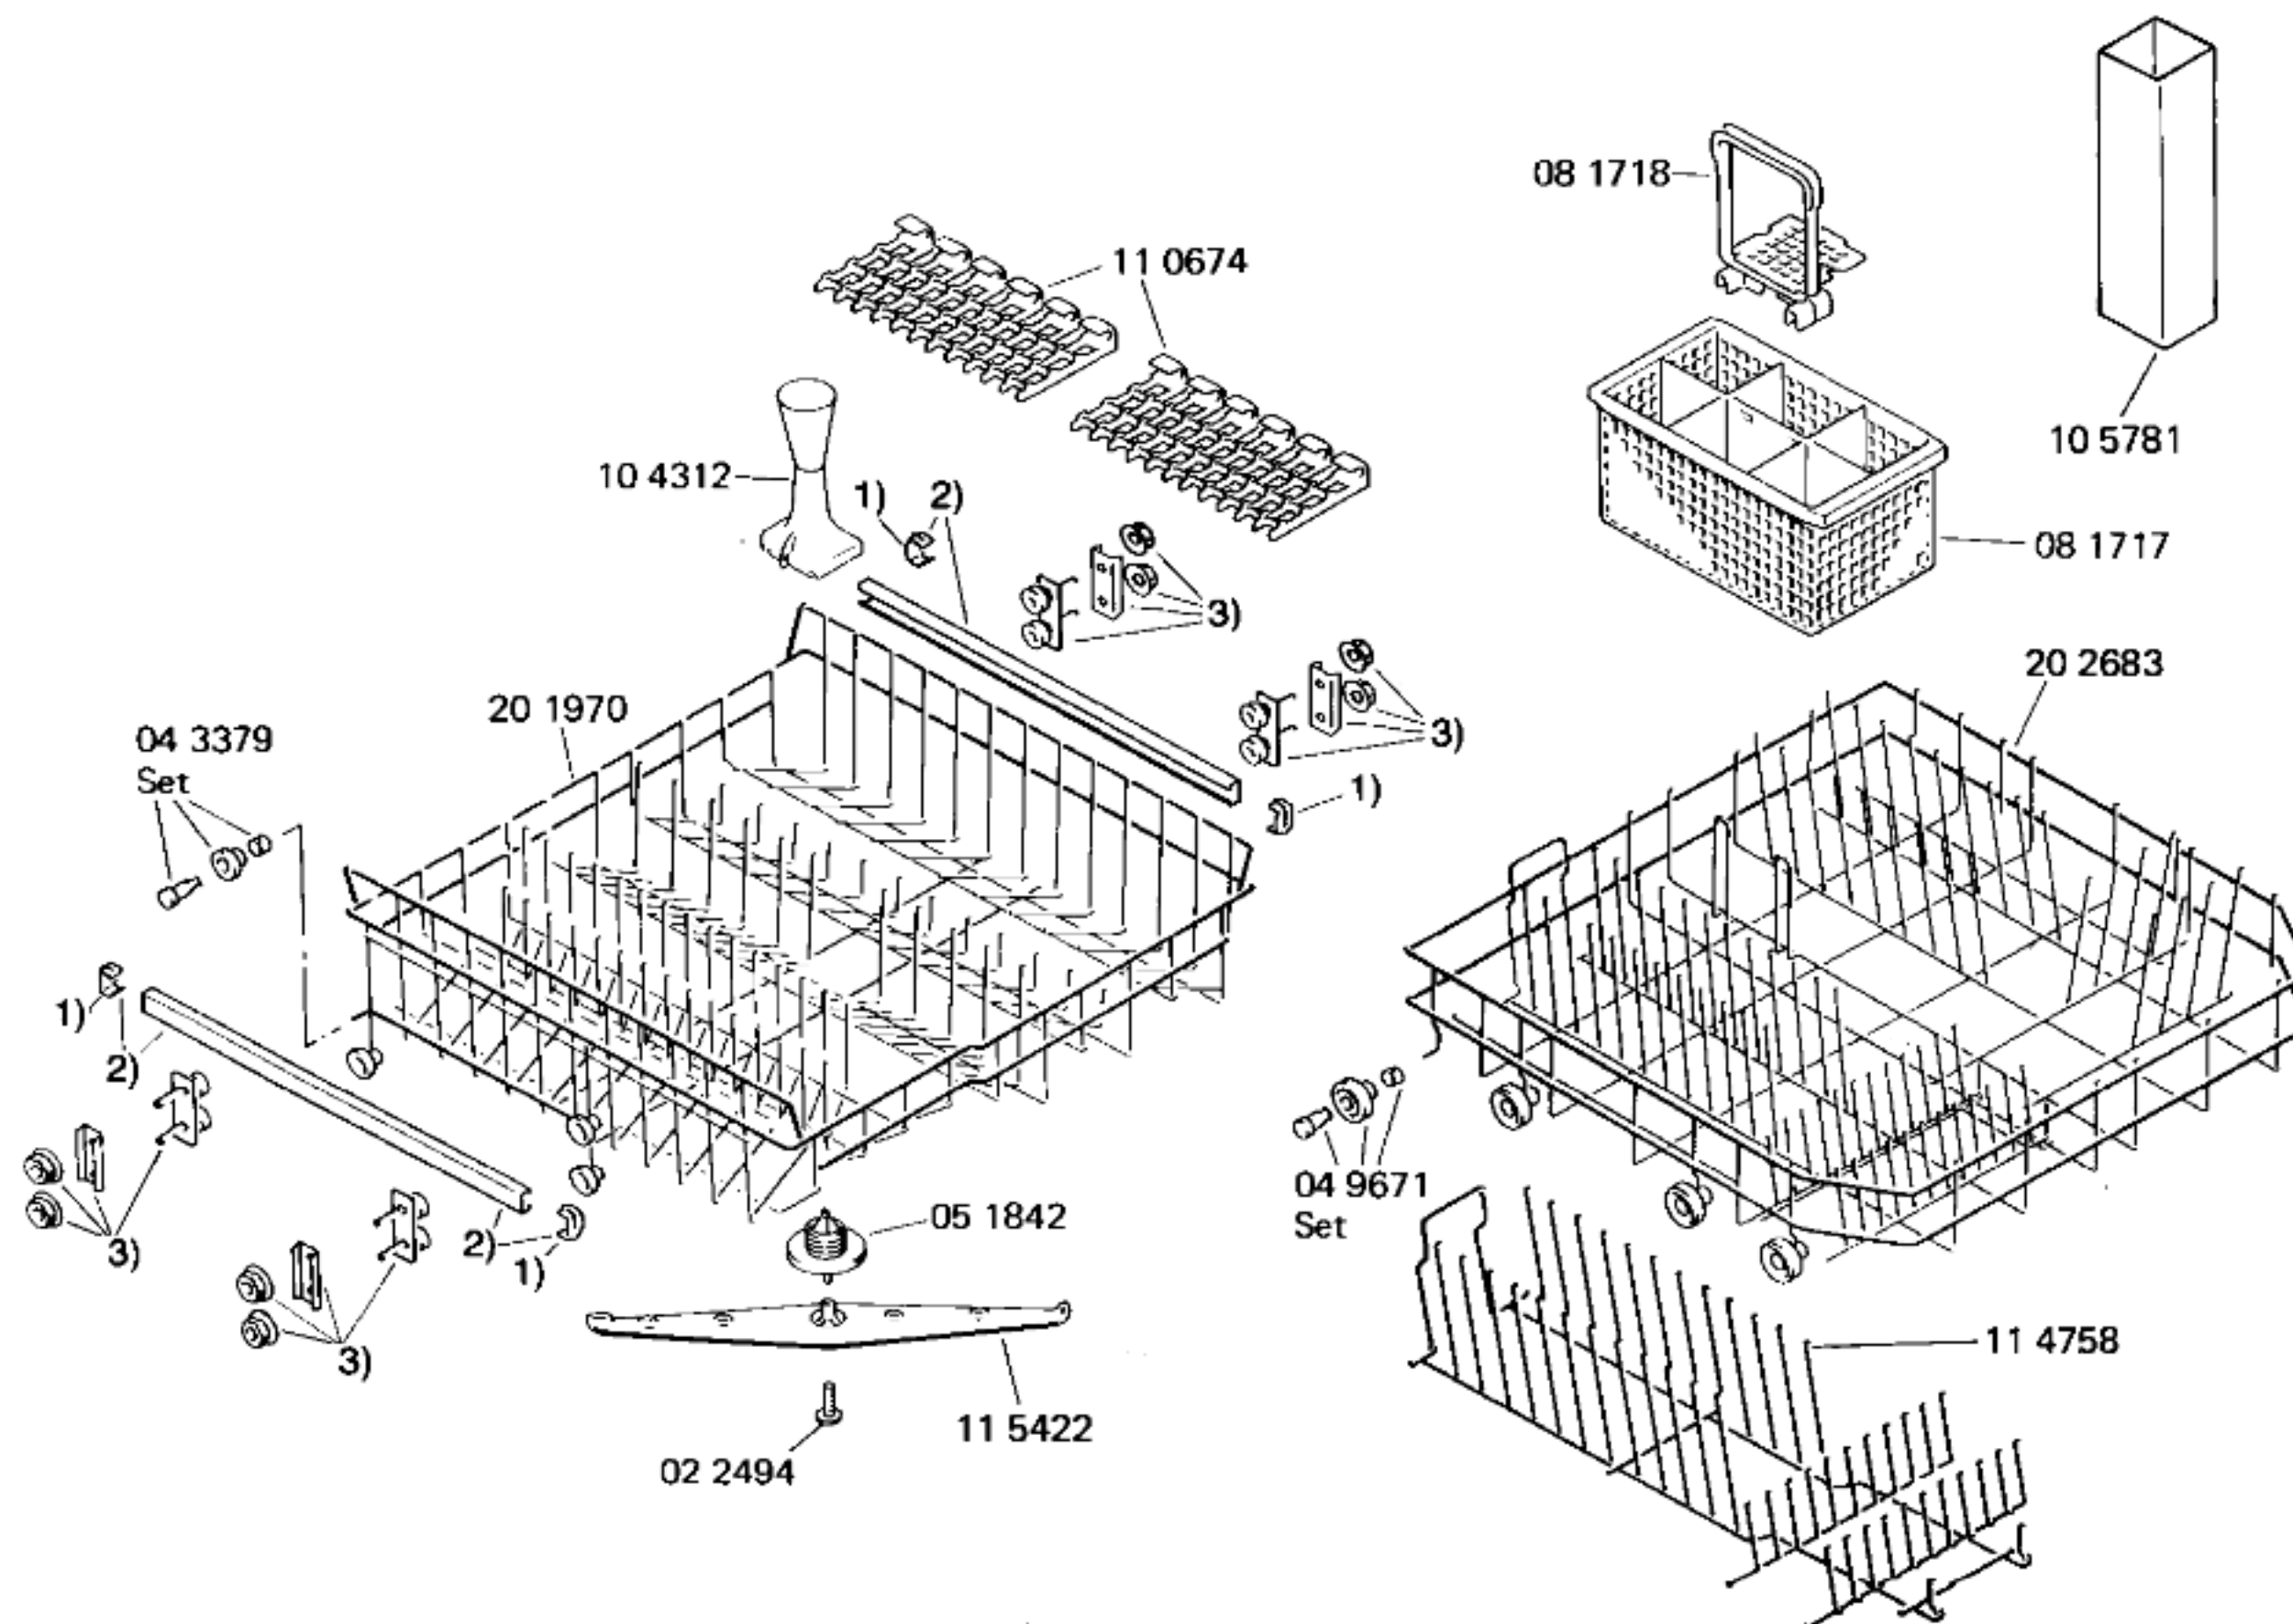GESCHIRRSPÜLGERÄTE  
StandgeräteIdent-Nummern-Konstante  
3740 .....

- 1) 01 9202
- 2) 11 0668  
Set
- 3) 05 1287  
Set