



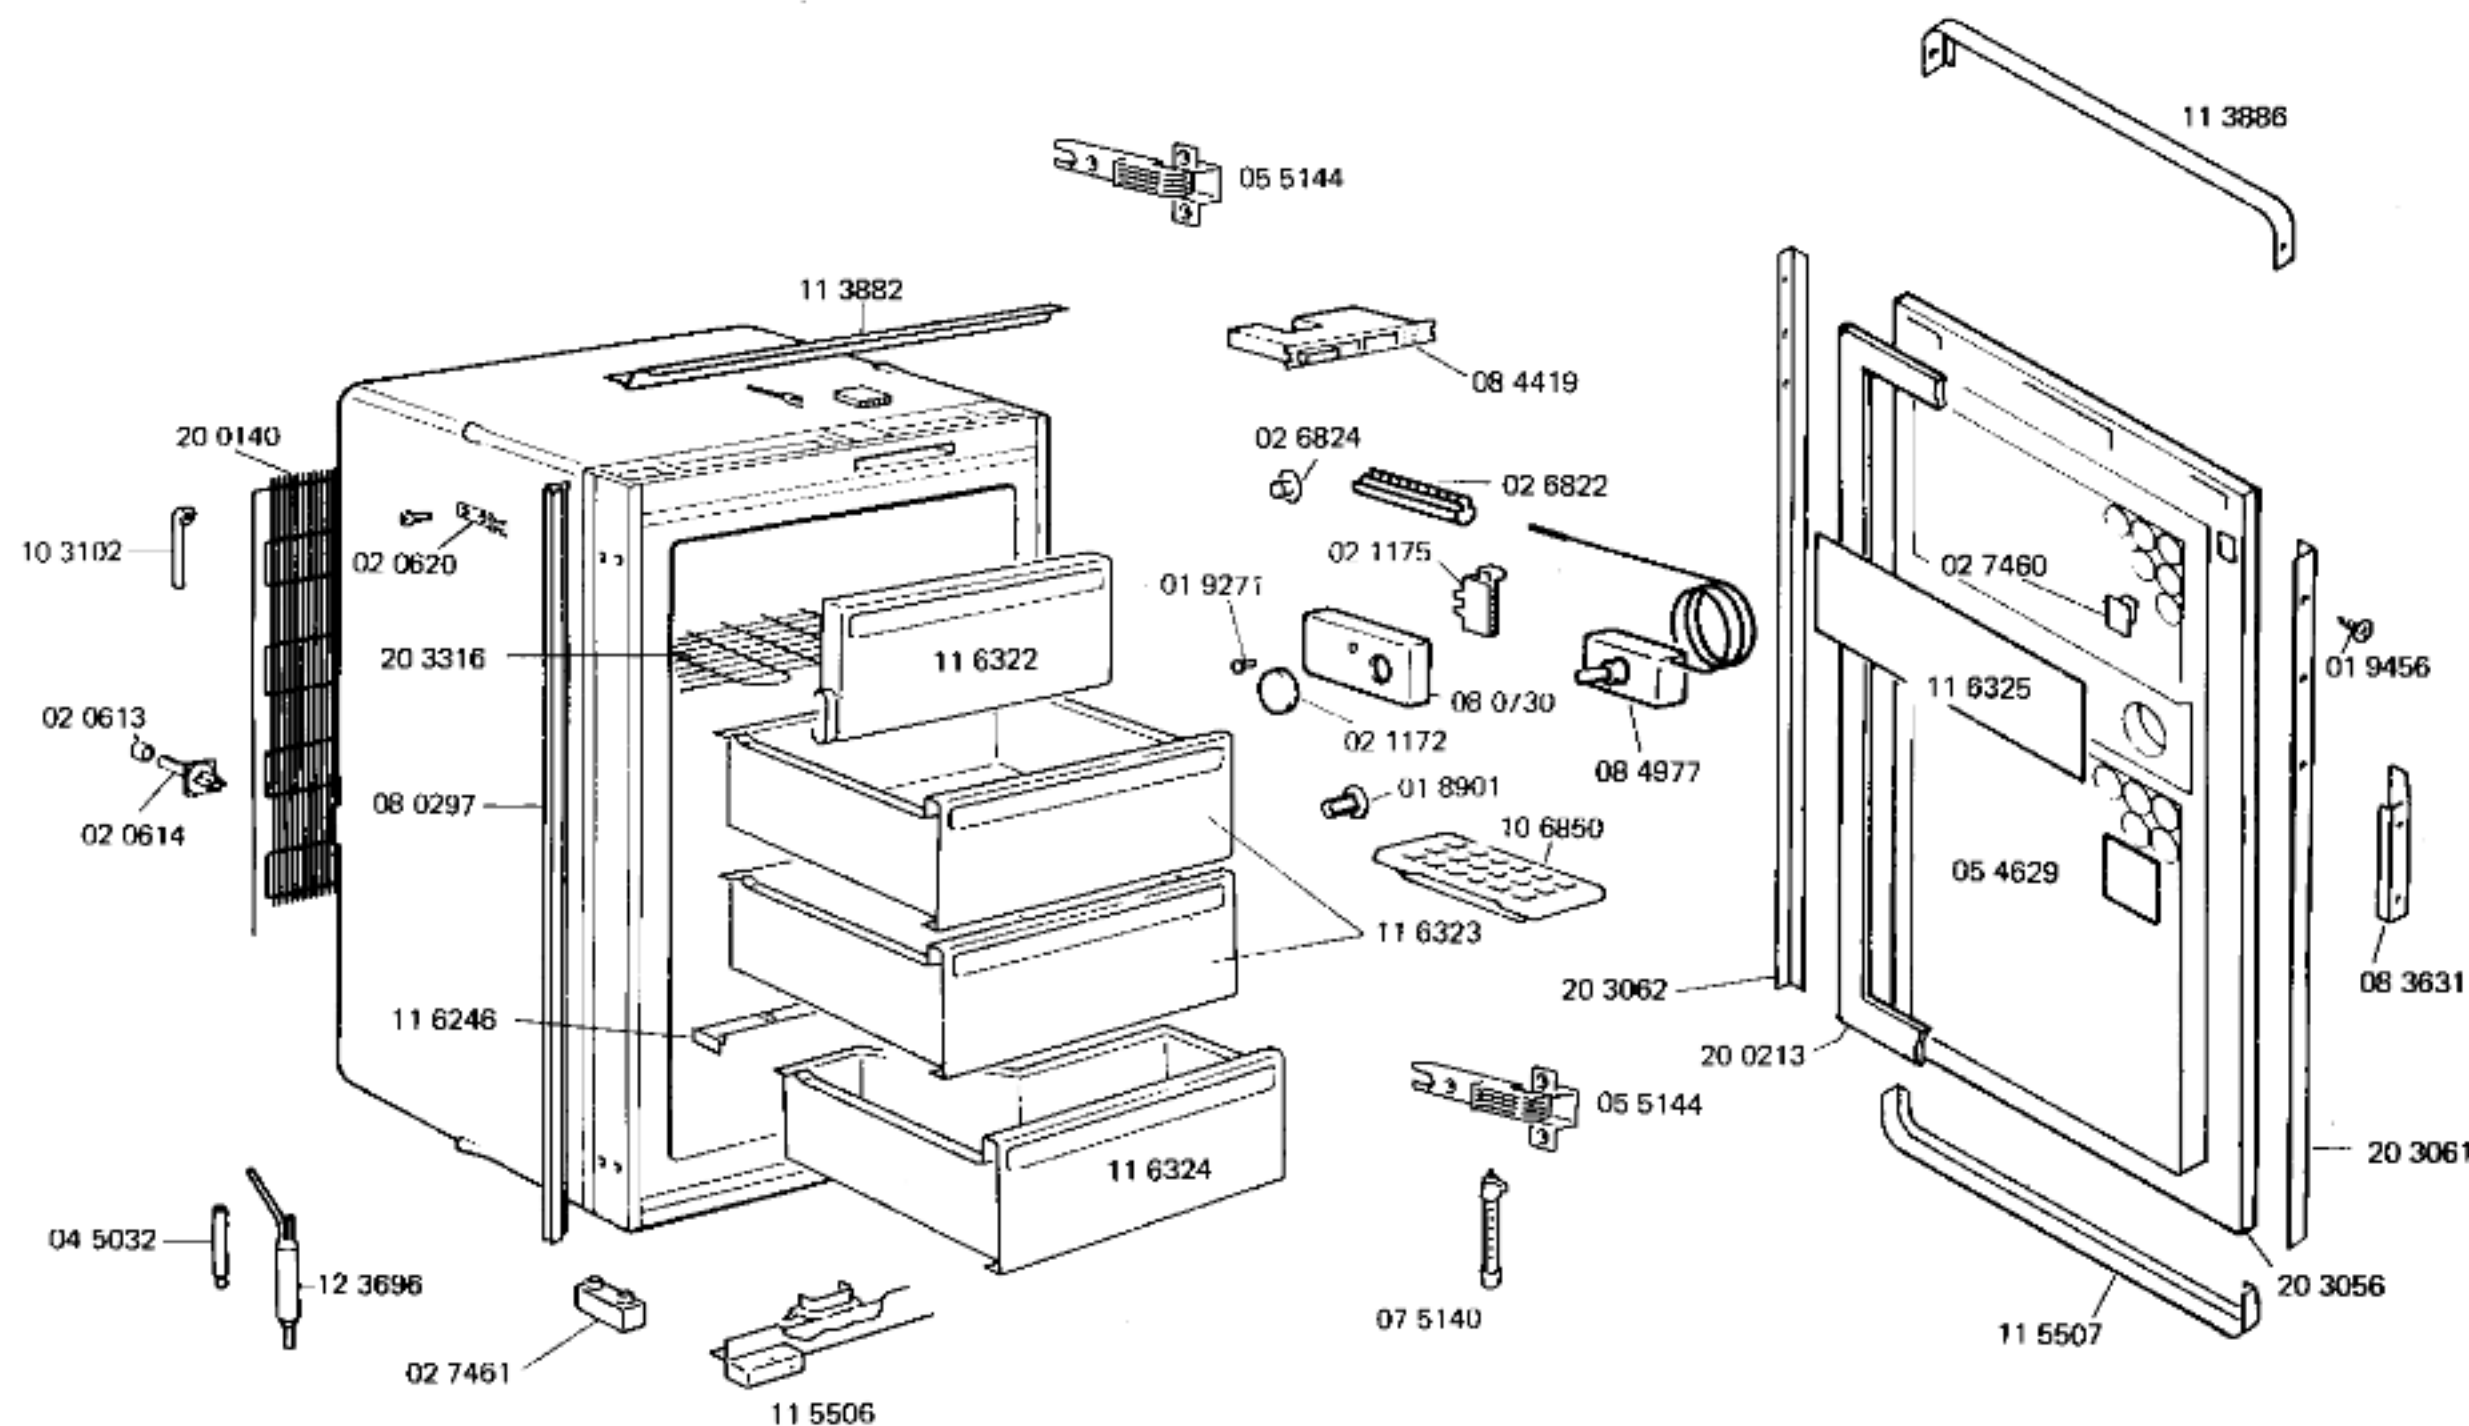

Ident – Nummern – Konstante
3740

51 2674
D1
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)
51 2304
D1
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N,DK)

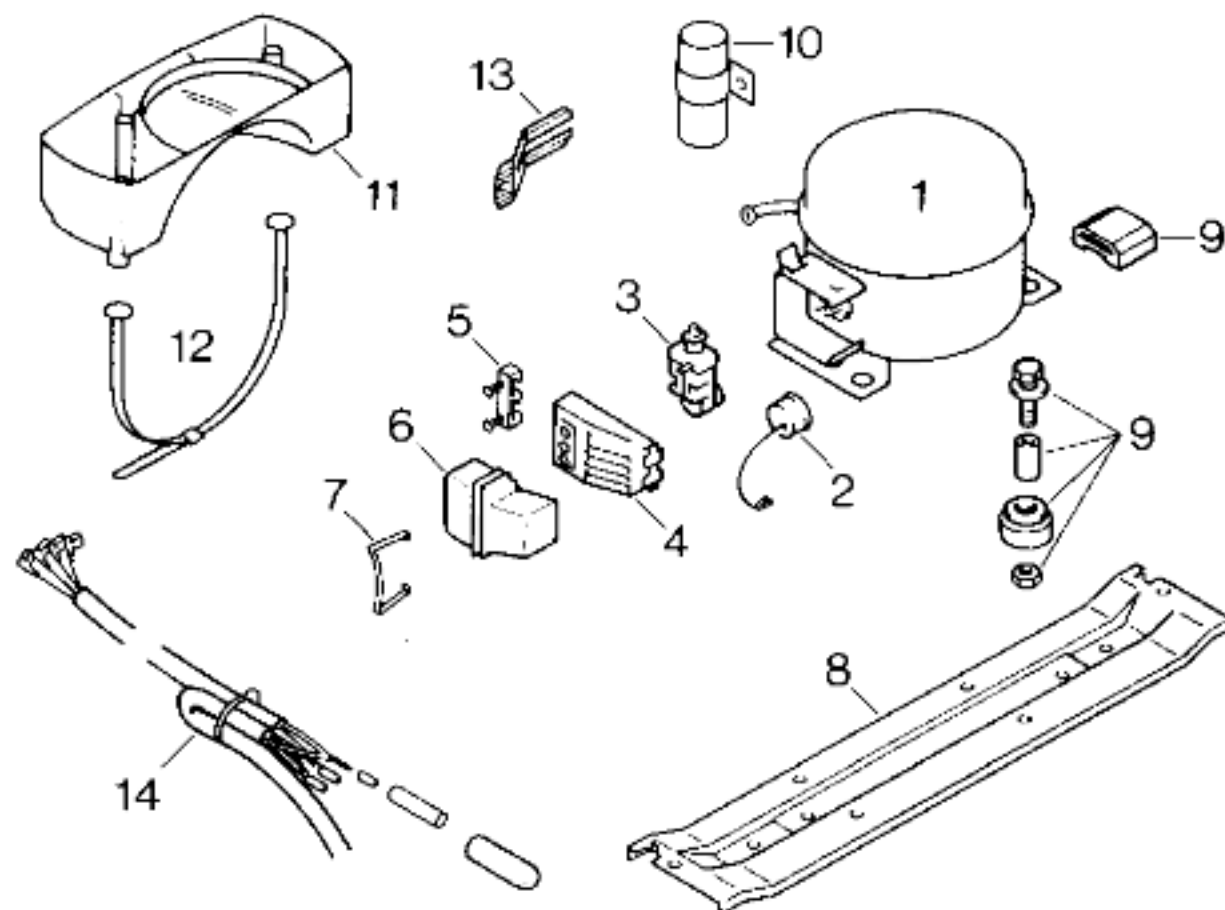

Ident – Nummern – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		TL 5 A				
Förderleistung/Delivery/Débit	l/h	V 920				
Anlaufstrom/Starting current/Cour. de démarrage	A	9,0				
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω 15,7				
	Hi/aux	Ω 18,8				
Temp.-Regler/Thermostat		M & J				
Typ/Type		TF 57 SF 2				
Reglerstellung/Position		kalt warm				
Schaltwerte/Switching values/	„ein“	$^{\circ}\text{C}$ - 24 - 16				
Valeurs de commutation	„aus“	- 34 - 24				
	(„abtauen“ od.)	„alarm“ - 19 - 12				
Füllmenge/Fill.quantity/Charge	R12	g	175			
Anschlußwert/Conn.load/Puiss. connectée		W	120			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance		Ω				
Leistung/Power/Puissance		W				
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		Ω				
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance		Ω				
Spannung/Voltage/Tension		V				

Pos.				
	Danfoss			
1	14 0065			
2				
3	02 0108			
4				
5				
6	05 1413			
7				
8	11 0437			
9	05 0166			
10				
11				
12				
13				
14				