 
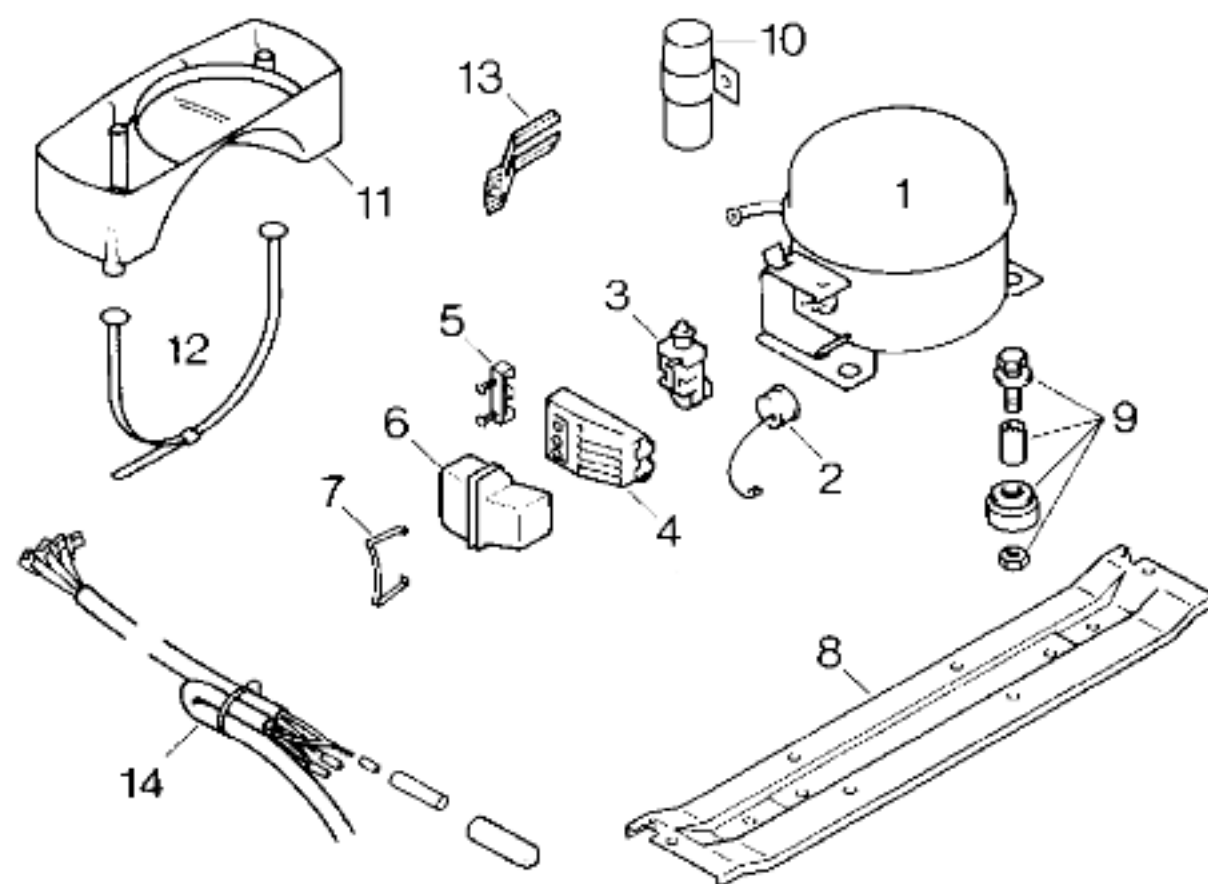


Ident-Nummern-Konstante  
3740 .. . . .

**BOSCH**

|                       |                      |                    |                     |
|-----------------------|----------------------|--------------------|---------------------|
| GEFRIERSCHRANK GS 218 | - 0 705 204 041-D1,  | GS 2180            | - 0 705 204 048-F2  |
|                       | - 0 705 204 043-CH1, | GS 218             | - 0 705 204 049-CH2 |
|                       | GS 2180              | - 0 705 204 044-F1 |                     |
|                       | GS 218               | - 0 705 204 046-D2 |                     |

 Ident-Nummern-Konstante  
 3740 ...

**TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES**

|                                                 |                          |             |  |  |  |
|-------------------------------------------------|--------------------------|-------------|--|--|--|
| Verdichter/Compressor/Compresseur               |                          | Danfoss     |  |  |  |
| Typ/Type                                        |                          | PW 5,5 K 11 |  |  |  |
| Förderleistung/Delivery/Débit                   | l/h                      | V 994       |  |  |  |
| Anlaufstrom/Starting current/Cour. de démarrage | A                        | 10,8        |  |  |  |
| Widerstand/Resistance/Résistance                | Ha/main/prin. $\Omega$   | 11,5        |  |  |  |
|                                                 | Hi/aux $\Omega$          | 44,3        |  |  |  |
| Temp. Regler/Thermostat                         |                          | Ranco       |  |  |  |
| Typ/Type                                        |                          | A 56        |  |  |  |
| Reglerstellung/Position                         |                          | kalt warm   |  |  |  |
| Schaltwerte/Switching values/                   | „ein“ $^{\circ}\text{C}$ | -26 -18     |  |  |  |
| Valeurs de commutation                          | „aus“                    | -34 -24     |  |  |  |
|                                                 | [„abtauen“ od.] „alarm“  | -20 -13     |  |  |  |
| Füllmenge/Fill.quantity/Charge                  | R12 g                    | 165         |  |  |  |
| Anschlußwert/Conn.load/Puiss. connectée         | W                        | 120         |  |  |  |
| Heizung/Heater/Chauffage                        |                          |             |  |  |  |
| Widerstand/Resistance/Résistance                | $\Omega$                 |             |  |  |  |
| Leistung/Power/Puissance                        | W                        |             |  |  |  |
| Ventilator/Blower/Ventilateur                   |                          |             |  |  |  |
| Widerstand/Resistance/Résistance                | $\Omega$                 |             |  |  |  |
| Magnetventil/Magnetic valve/Electrovanne        |                          |             |  |  |  |
| Widerstand/Resistance/Résistance                | $\Omega$                 |             |  |  |  |
| Spannung/Voltage/Tension                        | V                        |             |  |  |  |

| Pos. | D 1, CH 1, F 1 | D 2, CH 2, F 2 |  |  |
|------|----------------|----------------|--|--|
|      | Danfoss        | Danfoss        |  |  |
| 1    | 13 0958/45     | 14 0085/45     |  |  |
| 2    |                |                |  |  |
| 3    | 07 3711/25     | 02 0108/27     |  |  |
| 4    | 04 6239/19     |                |  |  |
| 5    |                |                |  |  |
| 6    | 04 6239/19     | 05 1413/05     |  |  |
| 7    |                |                |  |  |
| 8    | 11 1567/03     |                |  |  |
| 9    | 05 0166/05     |                |  |  |
| 10   |                |                |  |  |
| 11   |                |                |  |  |
| 12   |                |                |  |  |
| 13   |                |                |  |  |
| 14   |                |                |  |  |

\*) Bei Ersatz des Bosch-Verdichters mitbestellen  
 To be ordered when replacing the Bosch compressor  
 A commander lors du remplacement du compresseur Bosch