


**BOSCH**

SMS 710035 – 0730 100 632–GB1
 SMS 710035 – 0730 100 637–GB2

GESCHIRRSPÜLGERÄTE
 Standgeräte

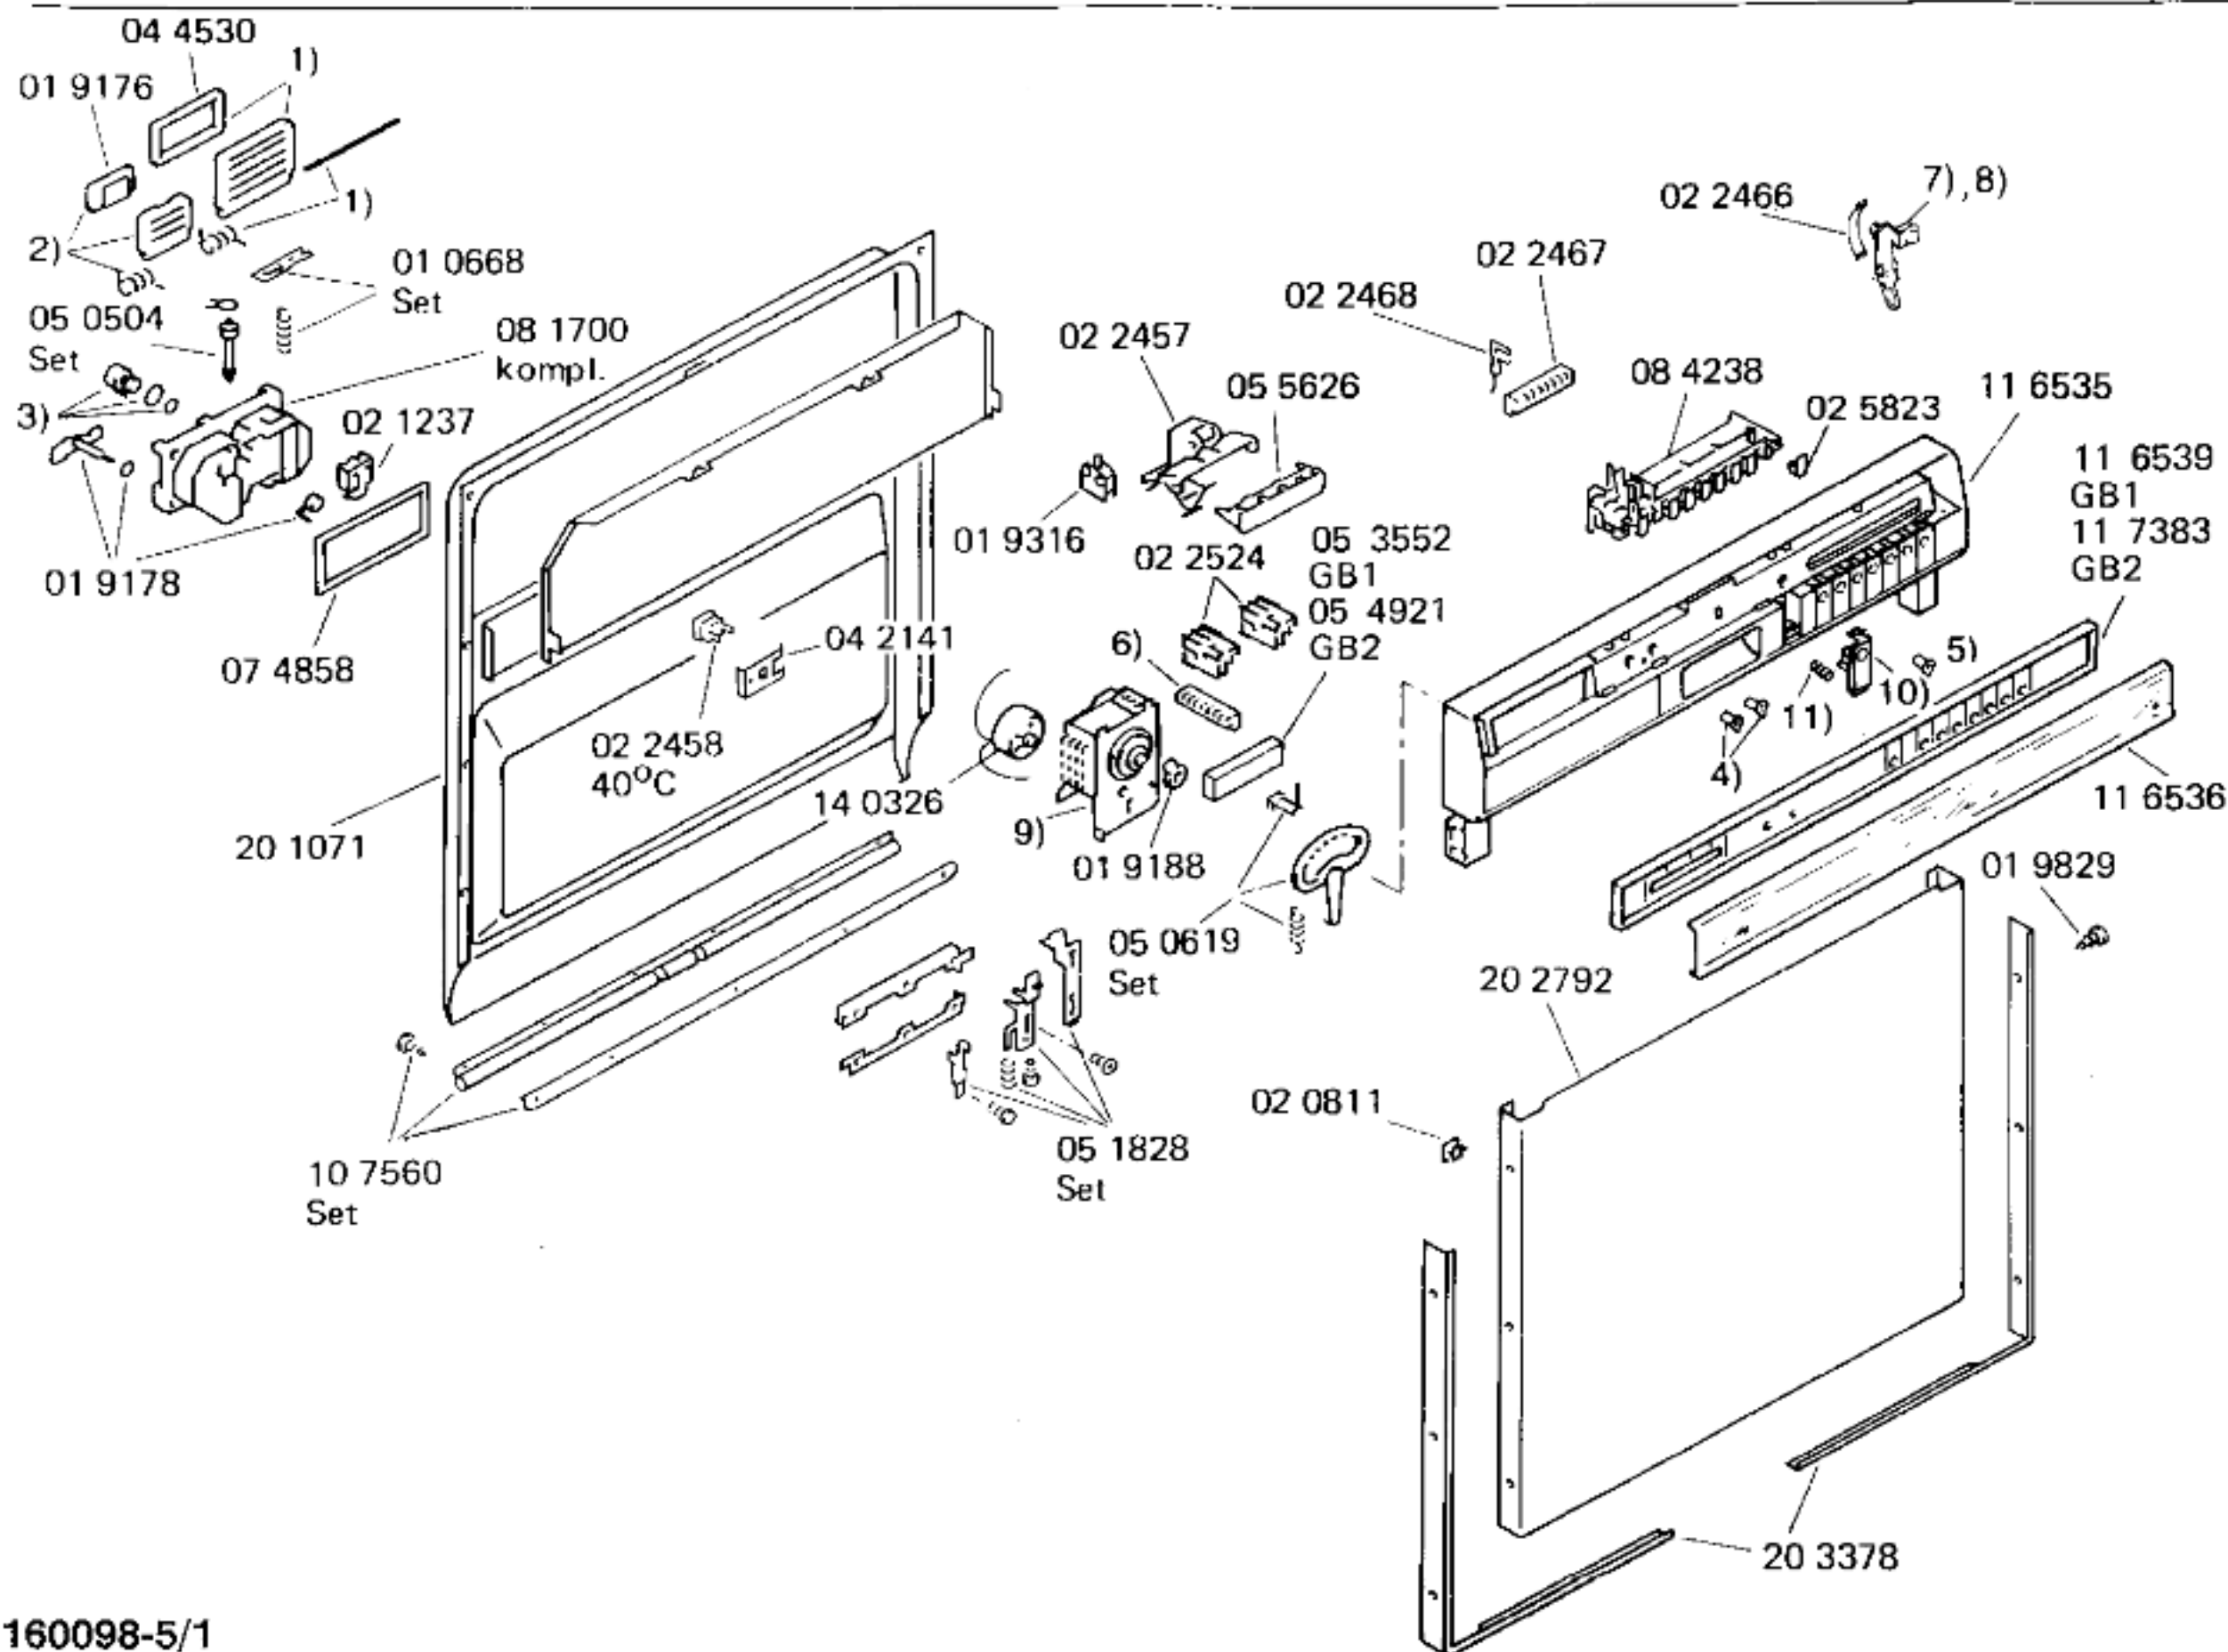

Ident-Nummern Konstante
 3740

Gebrauchsanweisung

51 1373

GB1

(D, GB, F, I, NL, DK)

bis FD 6604

51 2823

GB1

(D, GB, F, I, NL, DK)

ab FD 6605

51 3097

GB2

(GB)

51 2277

Aufstellanleitung

1) 04 2085

Set

2) 04 2105

Set

3) 01 9177

Set

4) 02 5122

5) 02 5123

6) 02 2459

7) 02 5657

rot

8) 02 5658

grün

9) 08 4059

bis FD 6609


08 5079

ab FD 6610

10) 02 8238

11) 02 5824

Ident-Nummern-Konstante
3740

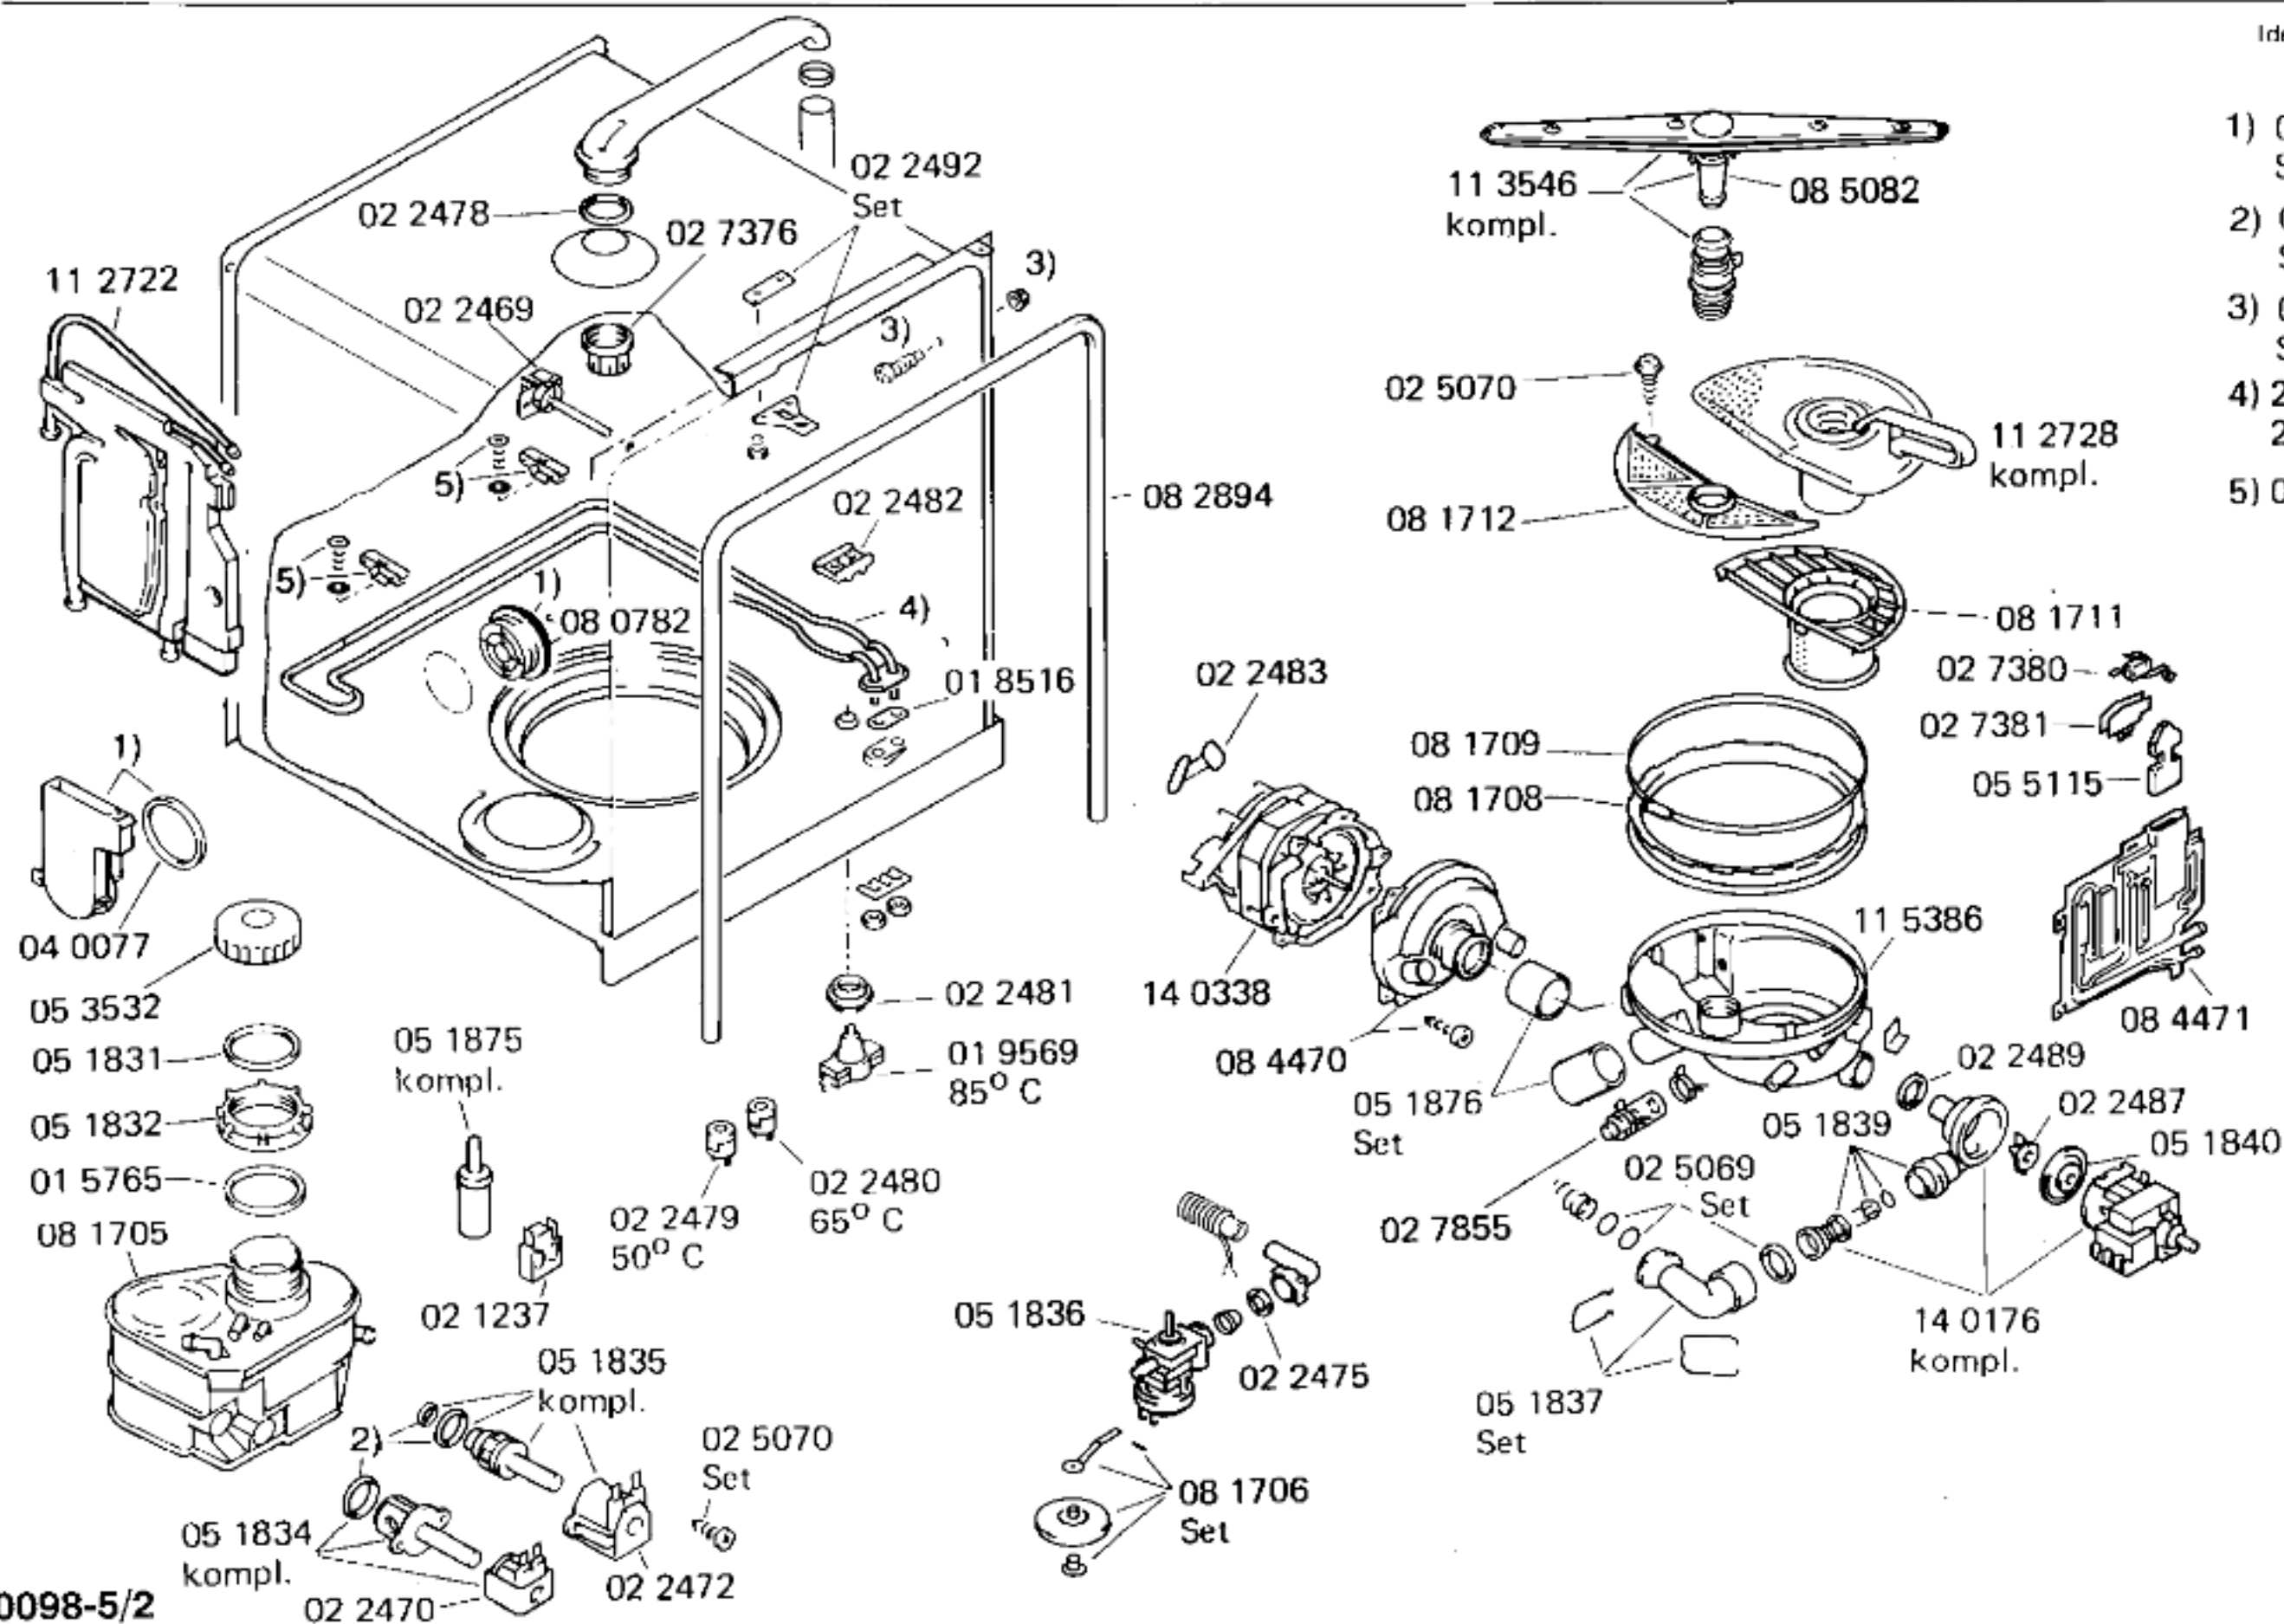


- 1) 08 0781 Set
- 2) 02 5067 Set
- 3) 01 9204 Set
- 4) 20 2256 2700 W
- 5) 05 1838

**BOSCH**

SMS 710035 - 0730 100 632-GB1
 SMS 710035 - 0730 100 637-GB2

GESCHIRRPÜLGERÄTE
 Standgeräte

Ident-Nummern-Konstante
 3740

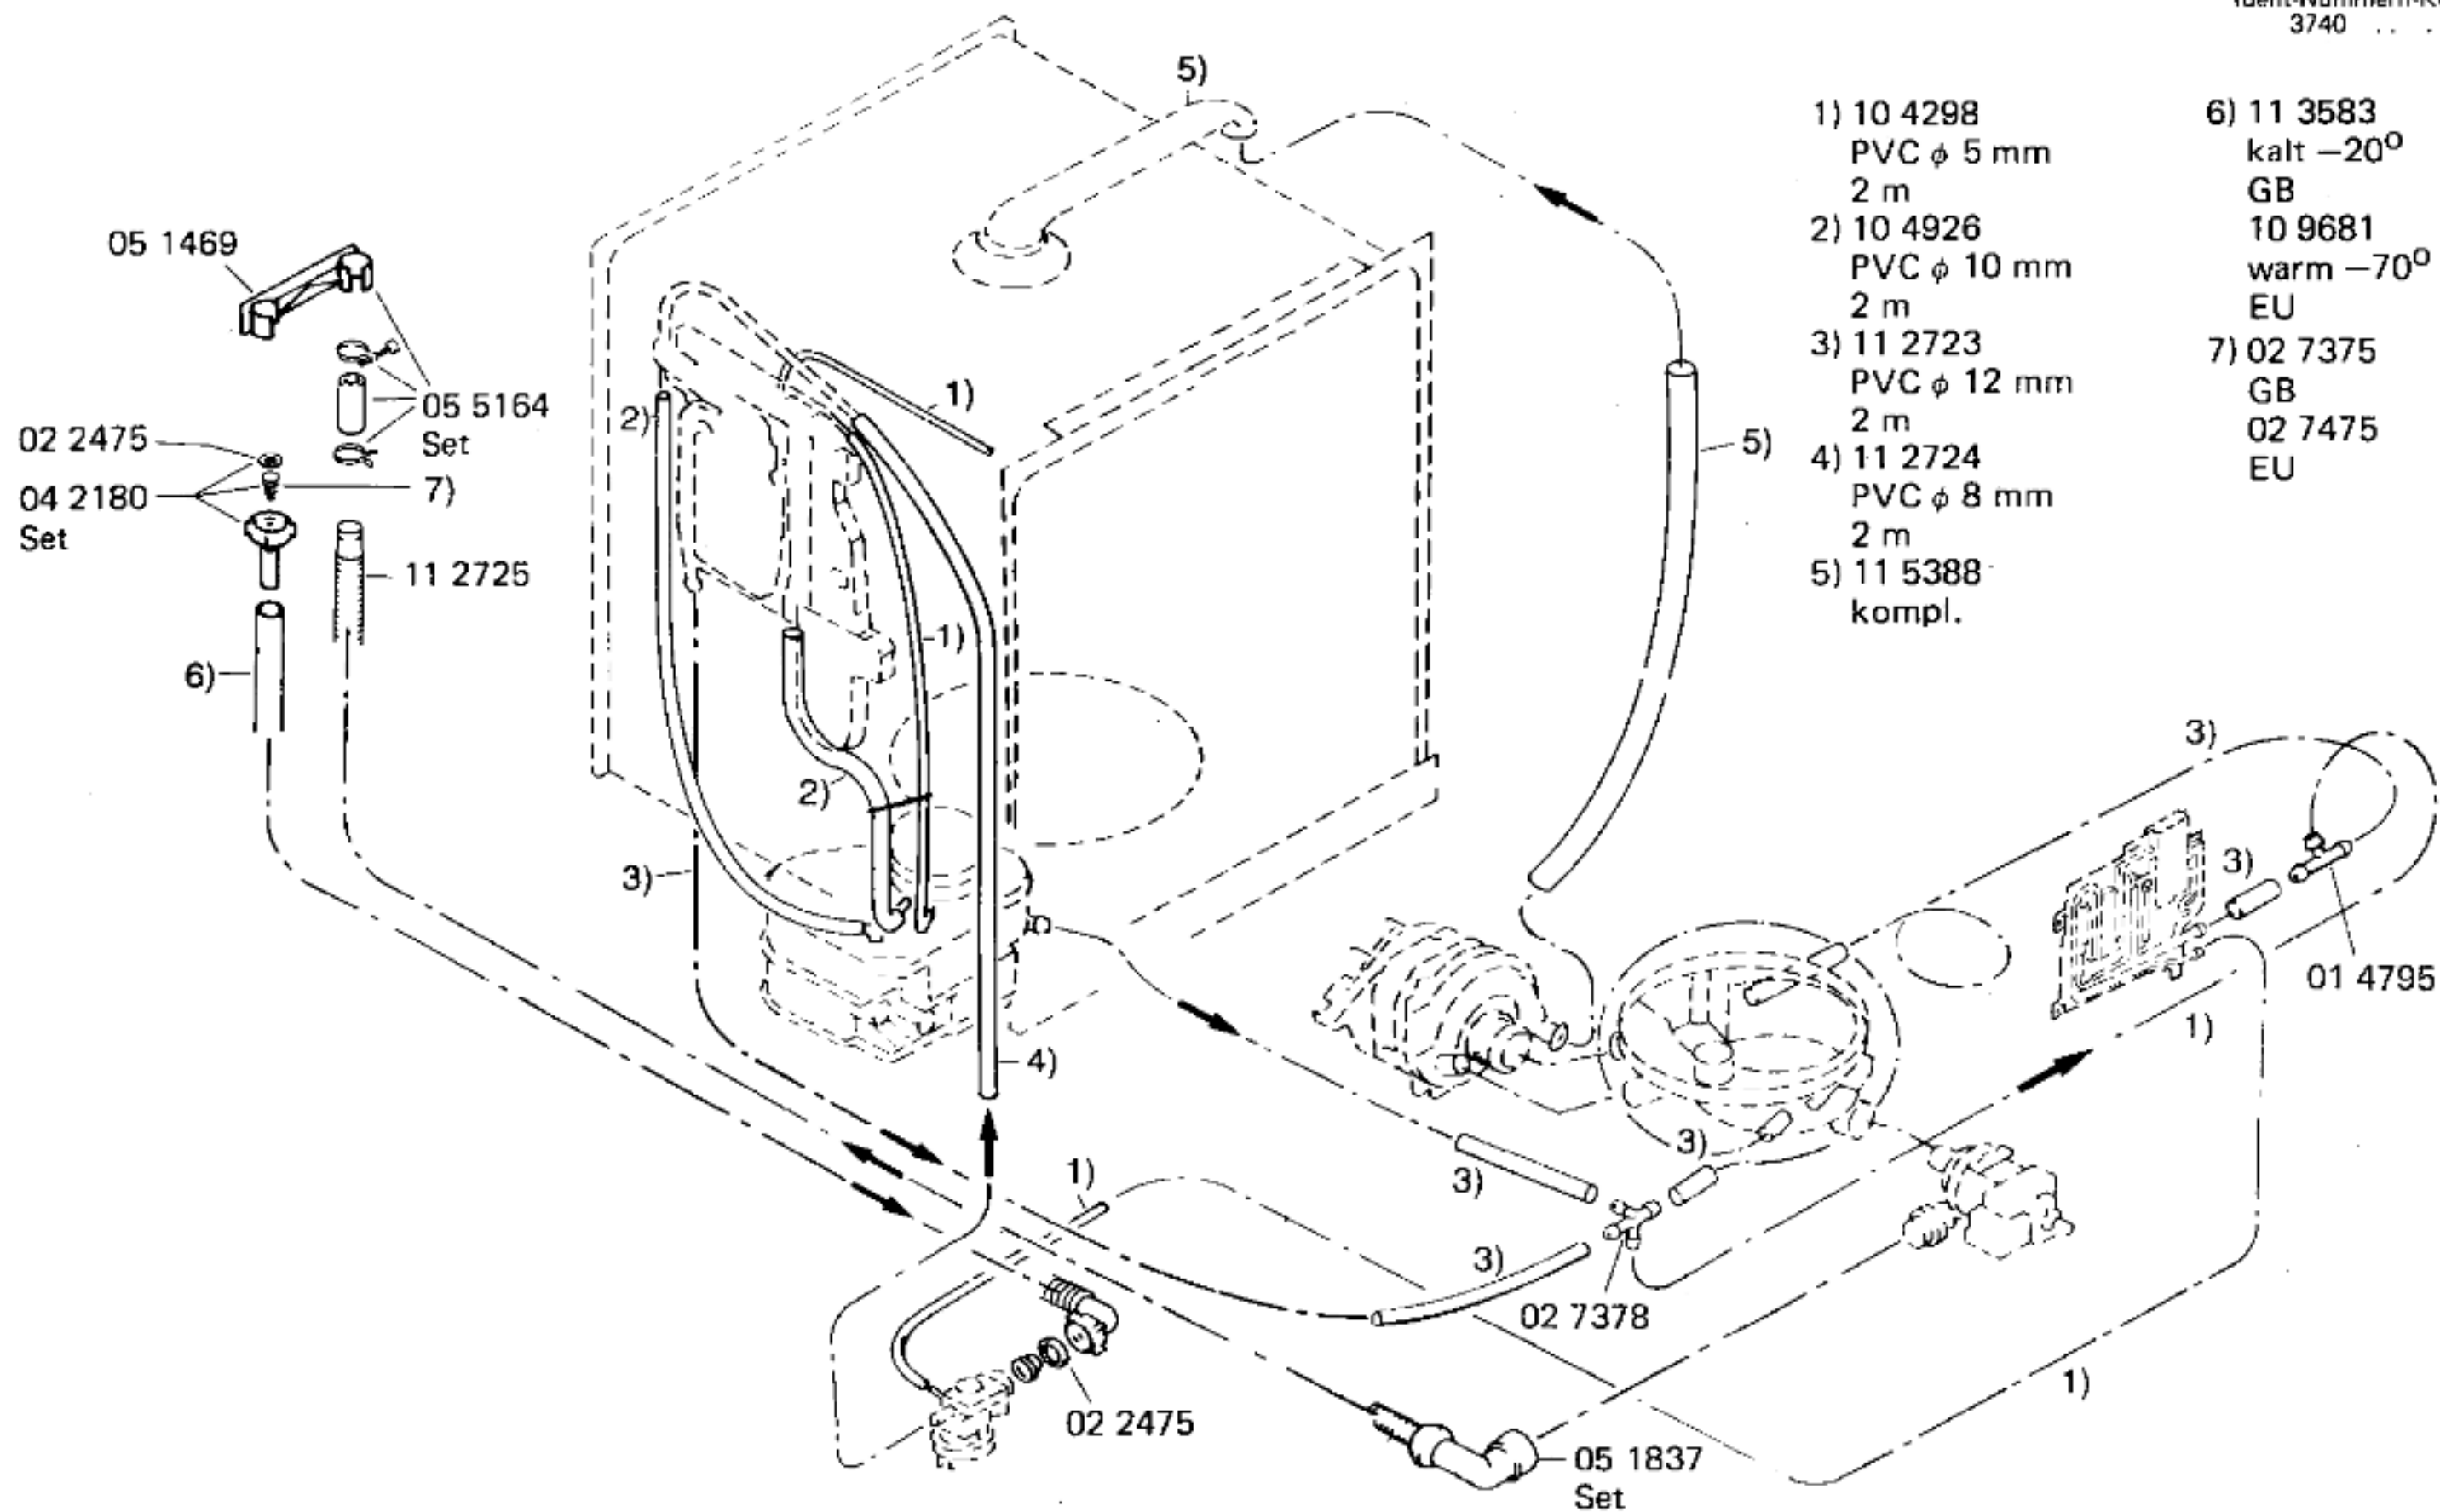


**BOSCH**

SMS 710035 -- 0730 100 632-GB1
SMS 710035 -- 0730 100 637-GB2


GESCHIRRSPÜLGERÄTE
Standgeräte

Ident-Nummern Konstante
3740

1) 01 3861
2) 02 7386
3) 05 0162
Set

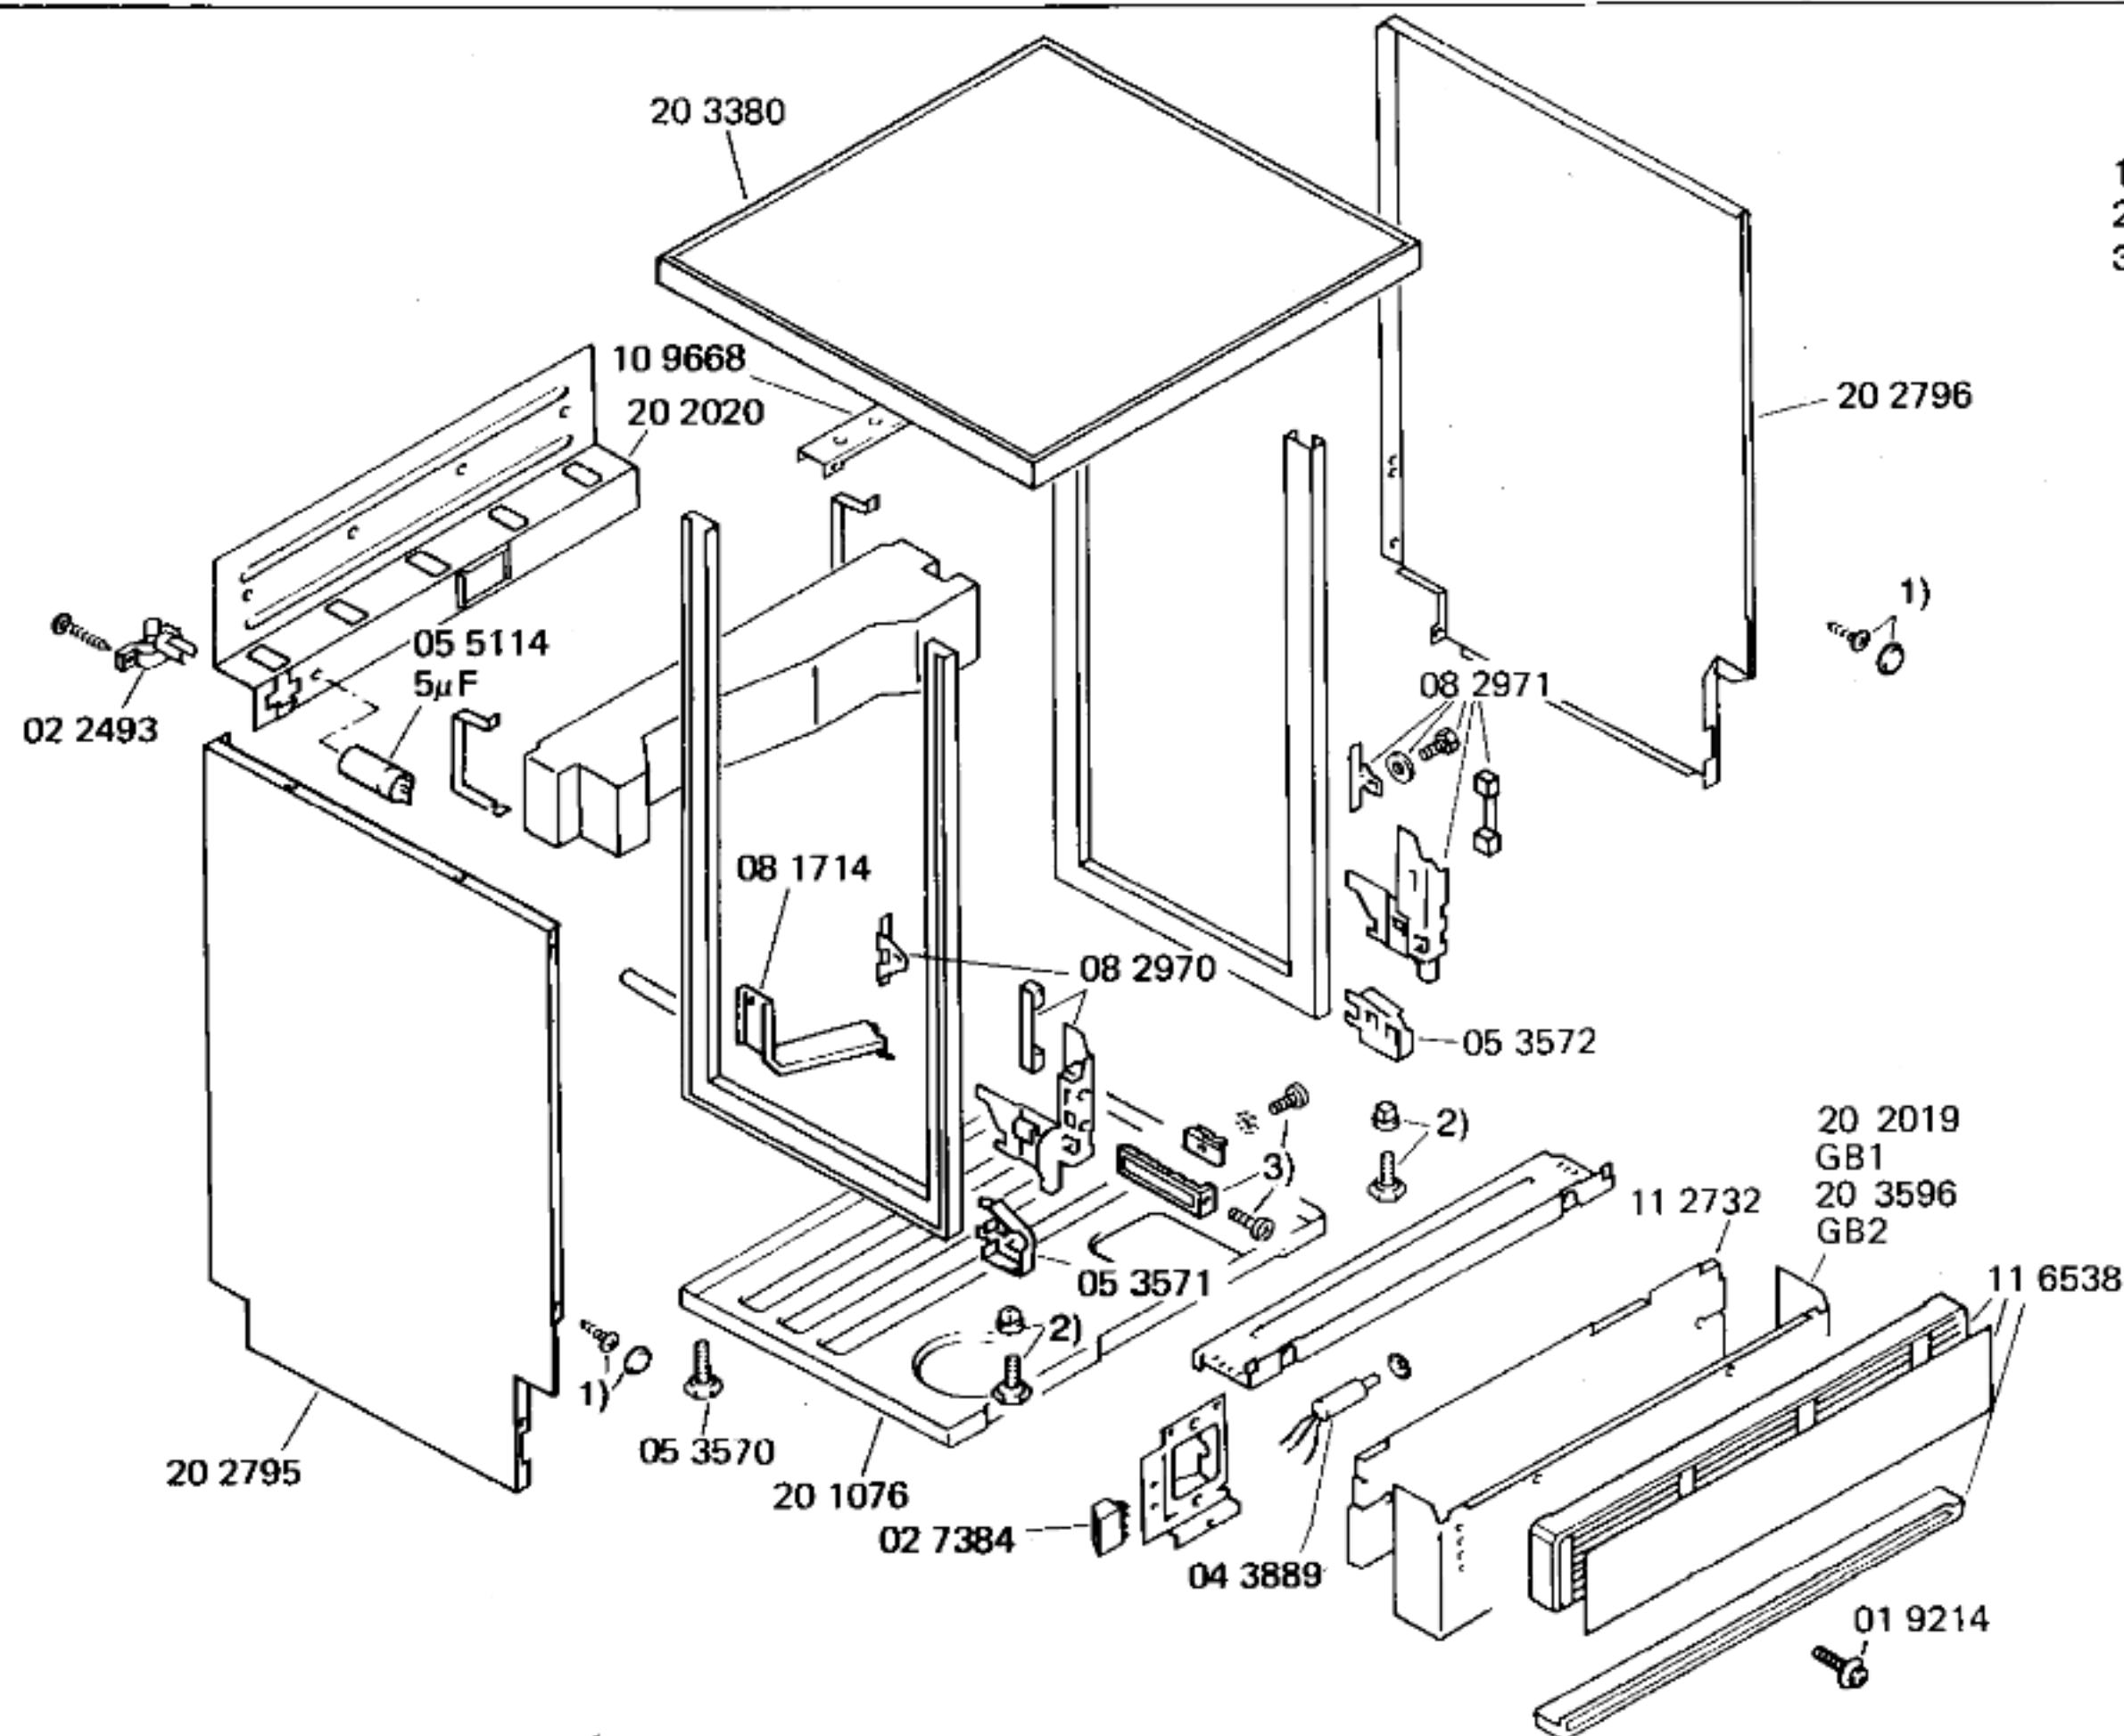

Ident-Nummern-Konstante
3740

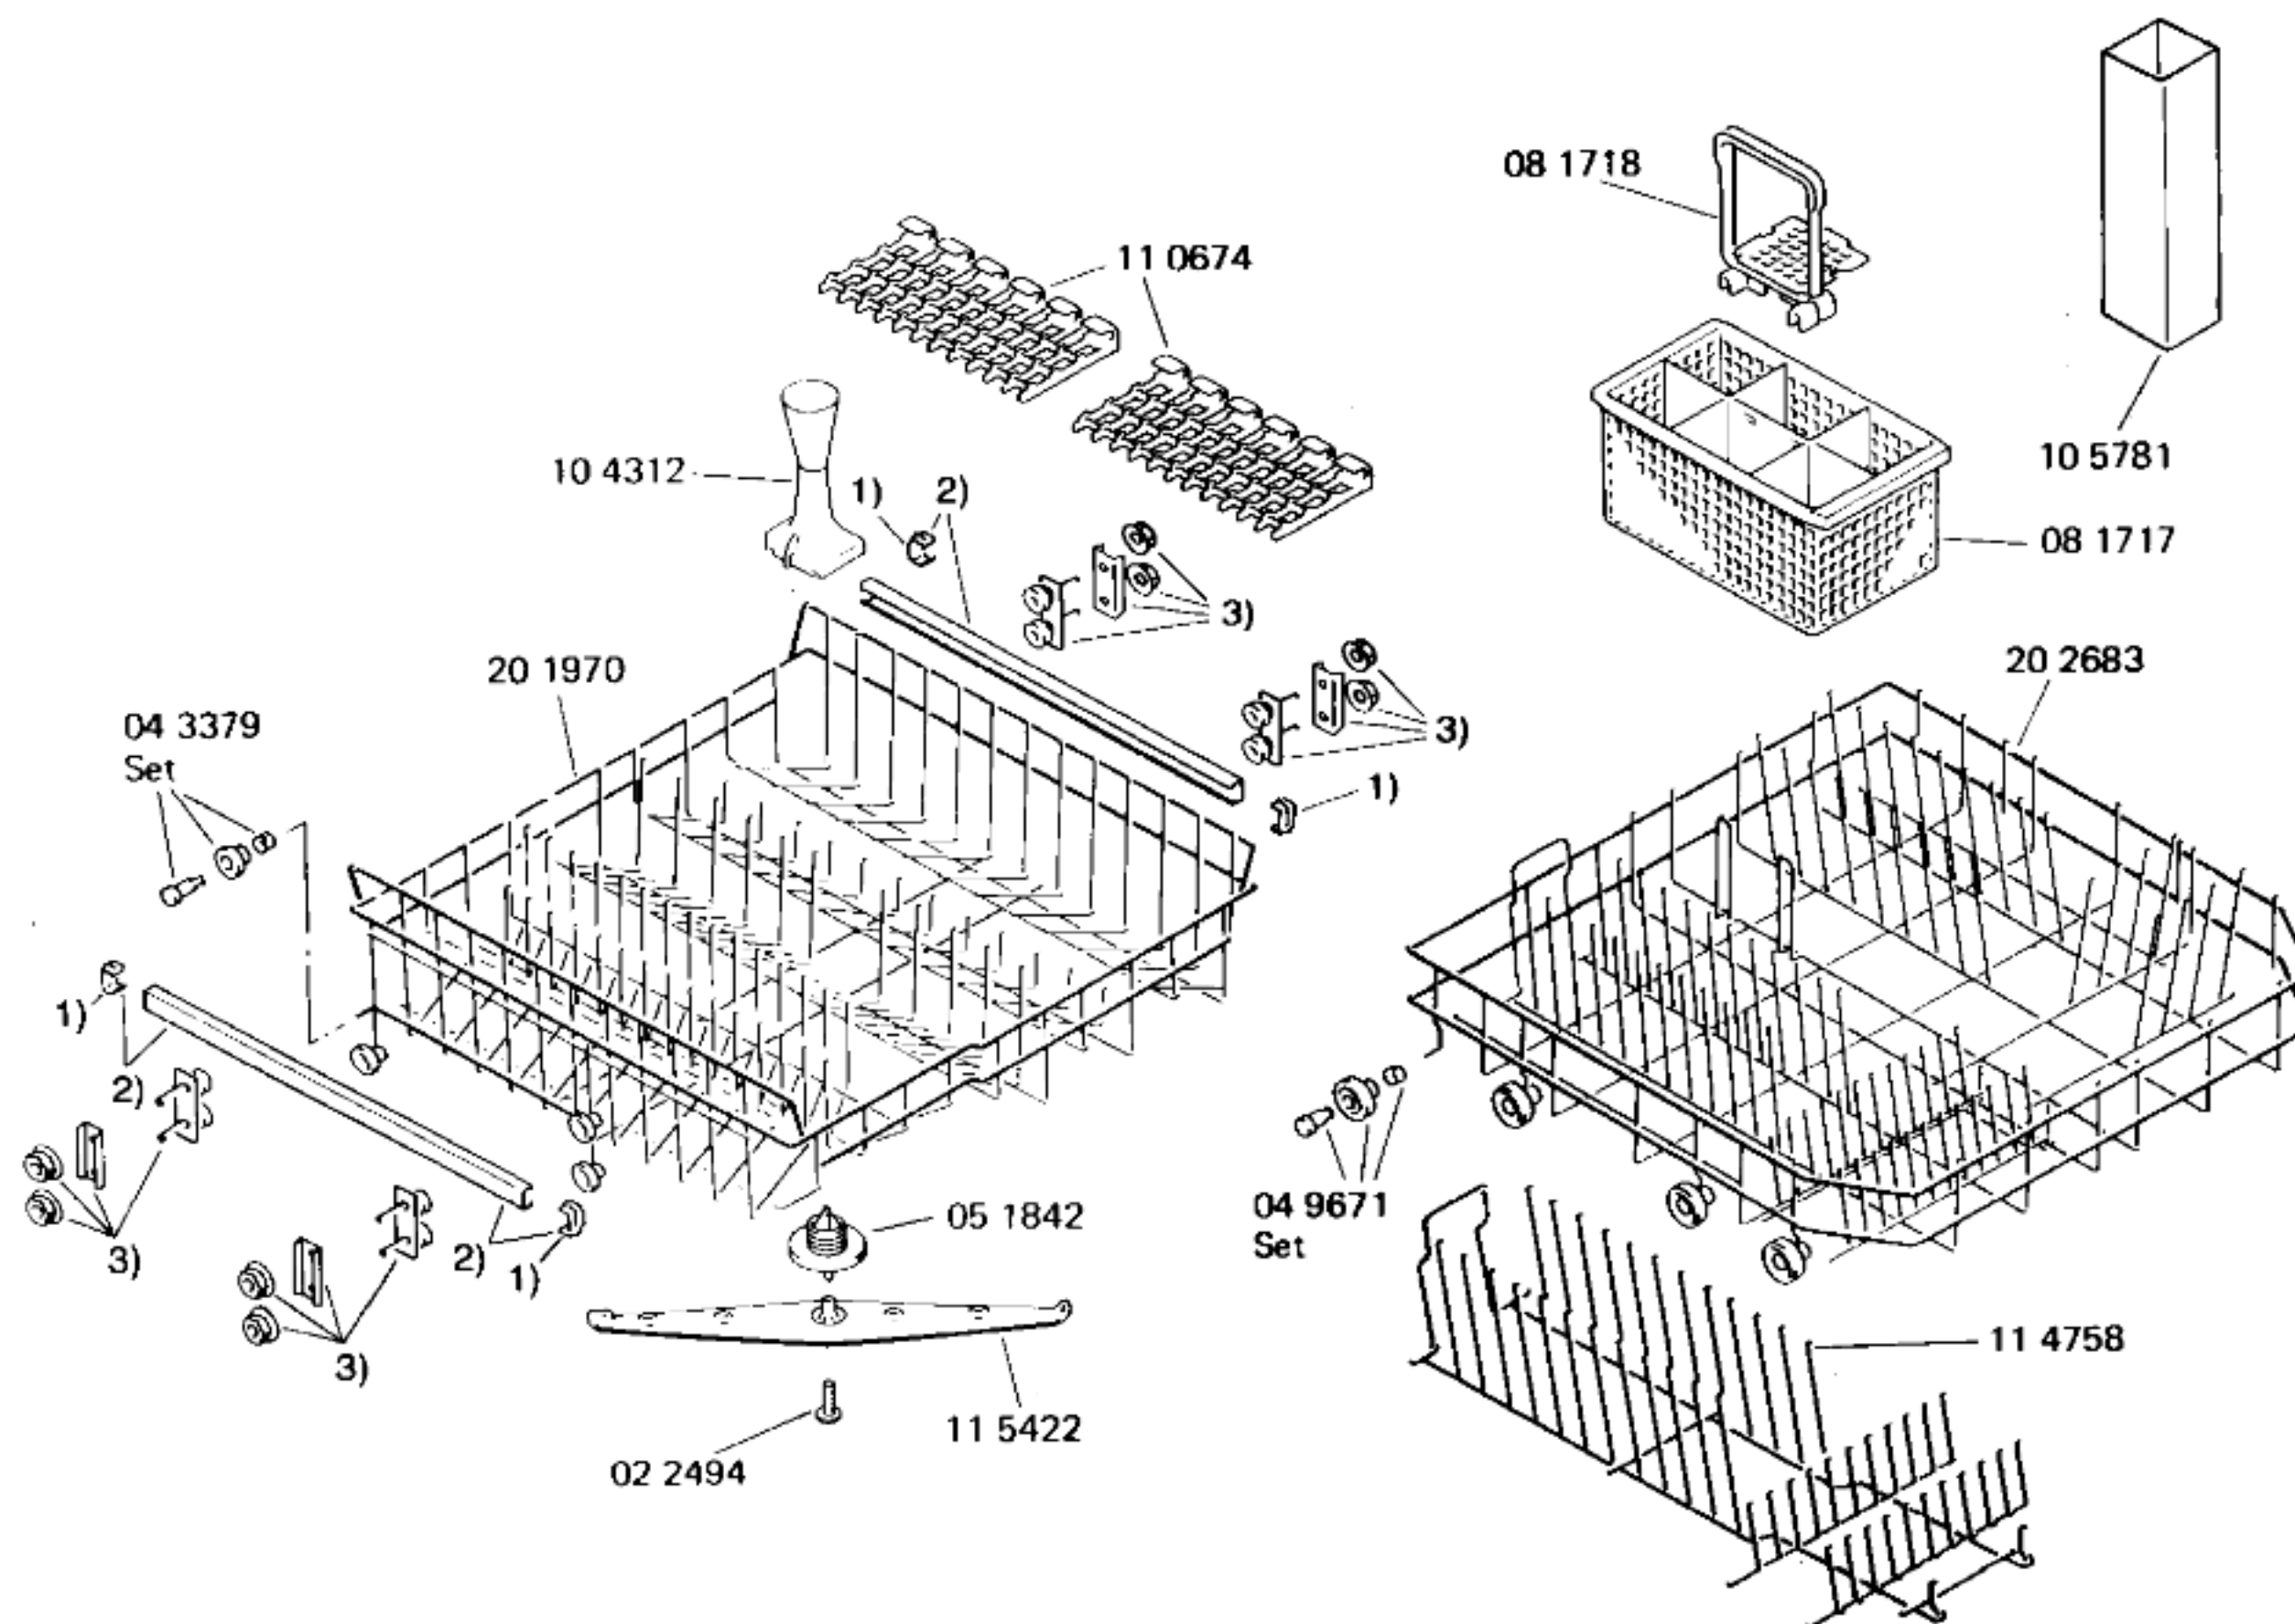

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set