

**BOSCH**


MUM 6010-0710014700-D1
 MUM 6110-0710014701-D2
 MUM 6040-0710014709-I1

MUM 6120-0710014710-D3
 MUM 6000-0710014712-A1,S1
 MUM 6001-0710014714-DK1

MUM 6002-0710014715-DS2

KLEINE HAUSGERÄTE
 Küchenmaschinen

Ident - Nummern - Konstante
 3740

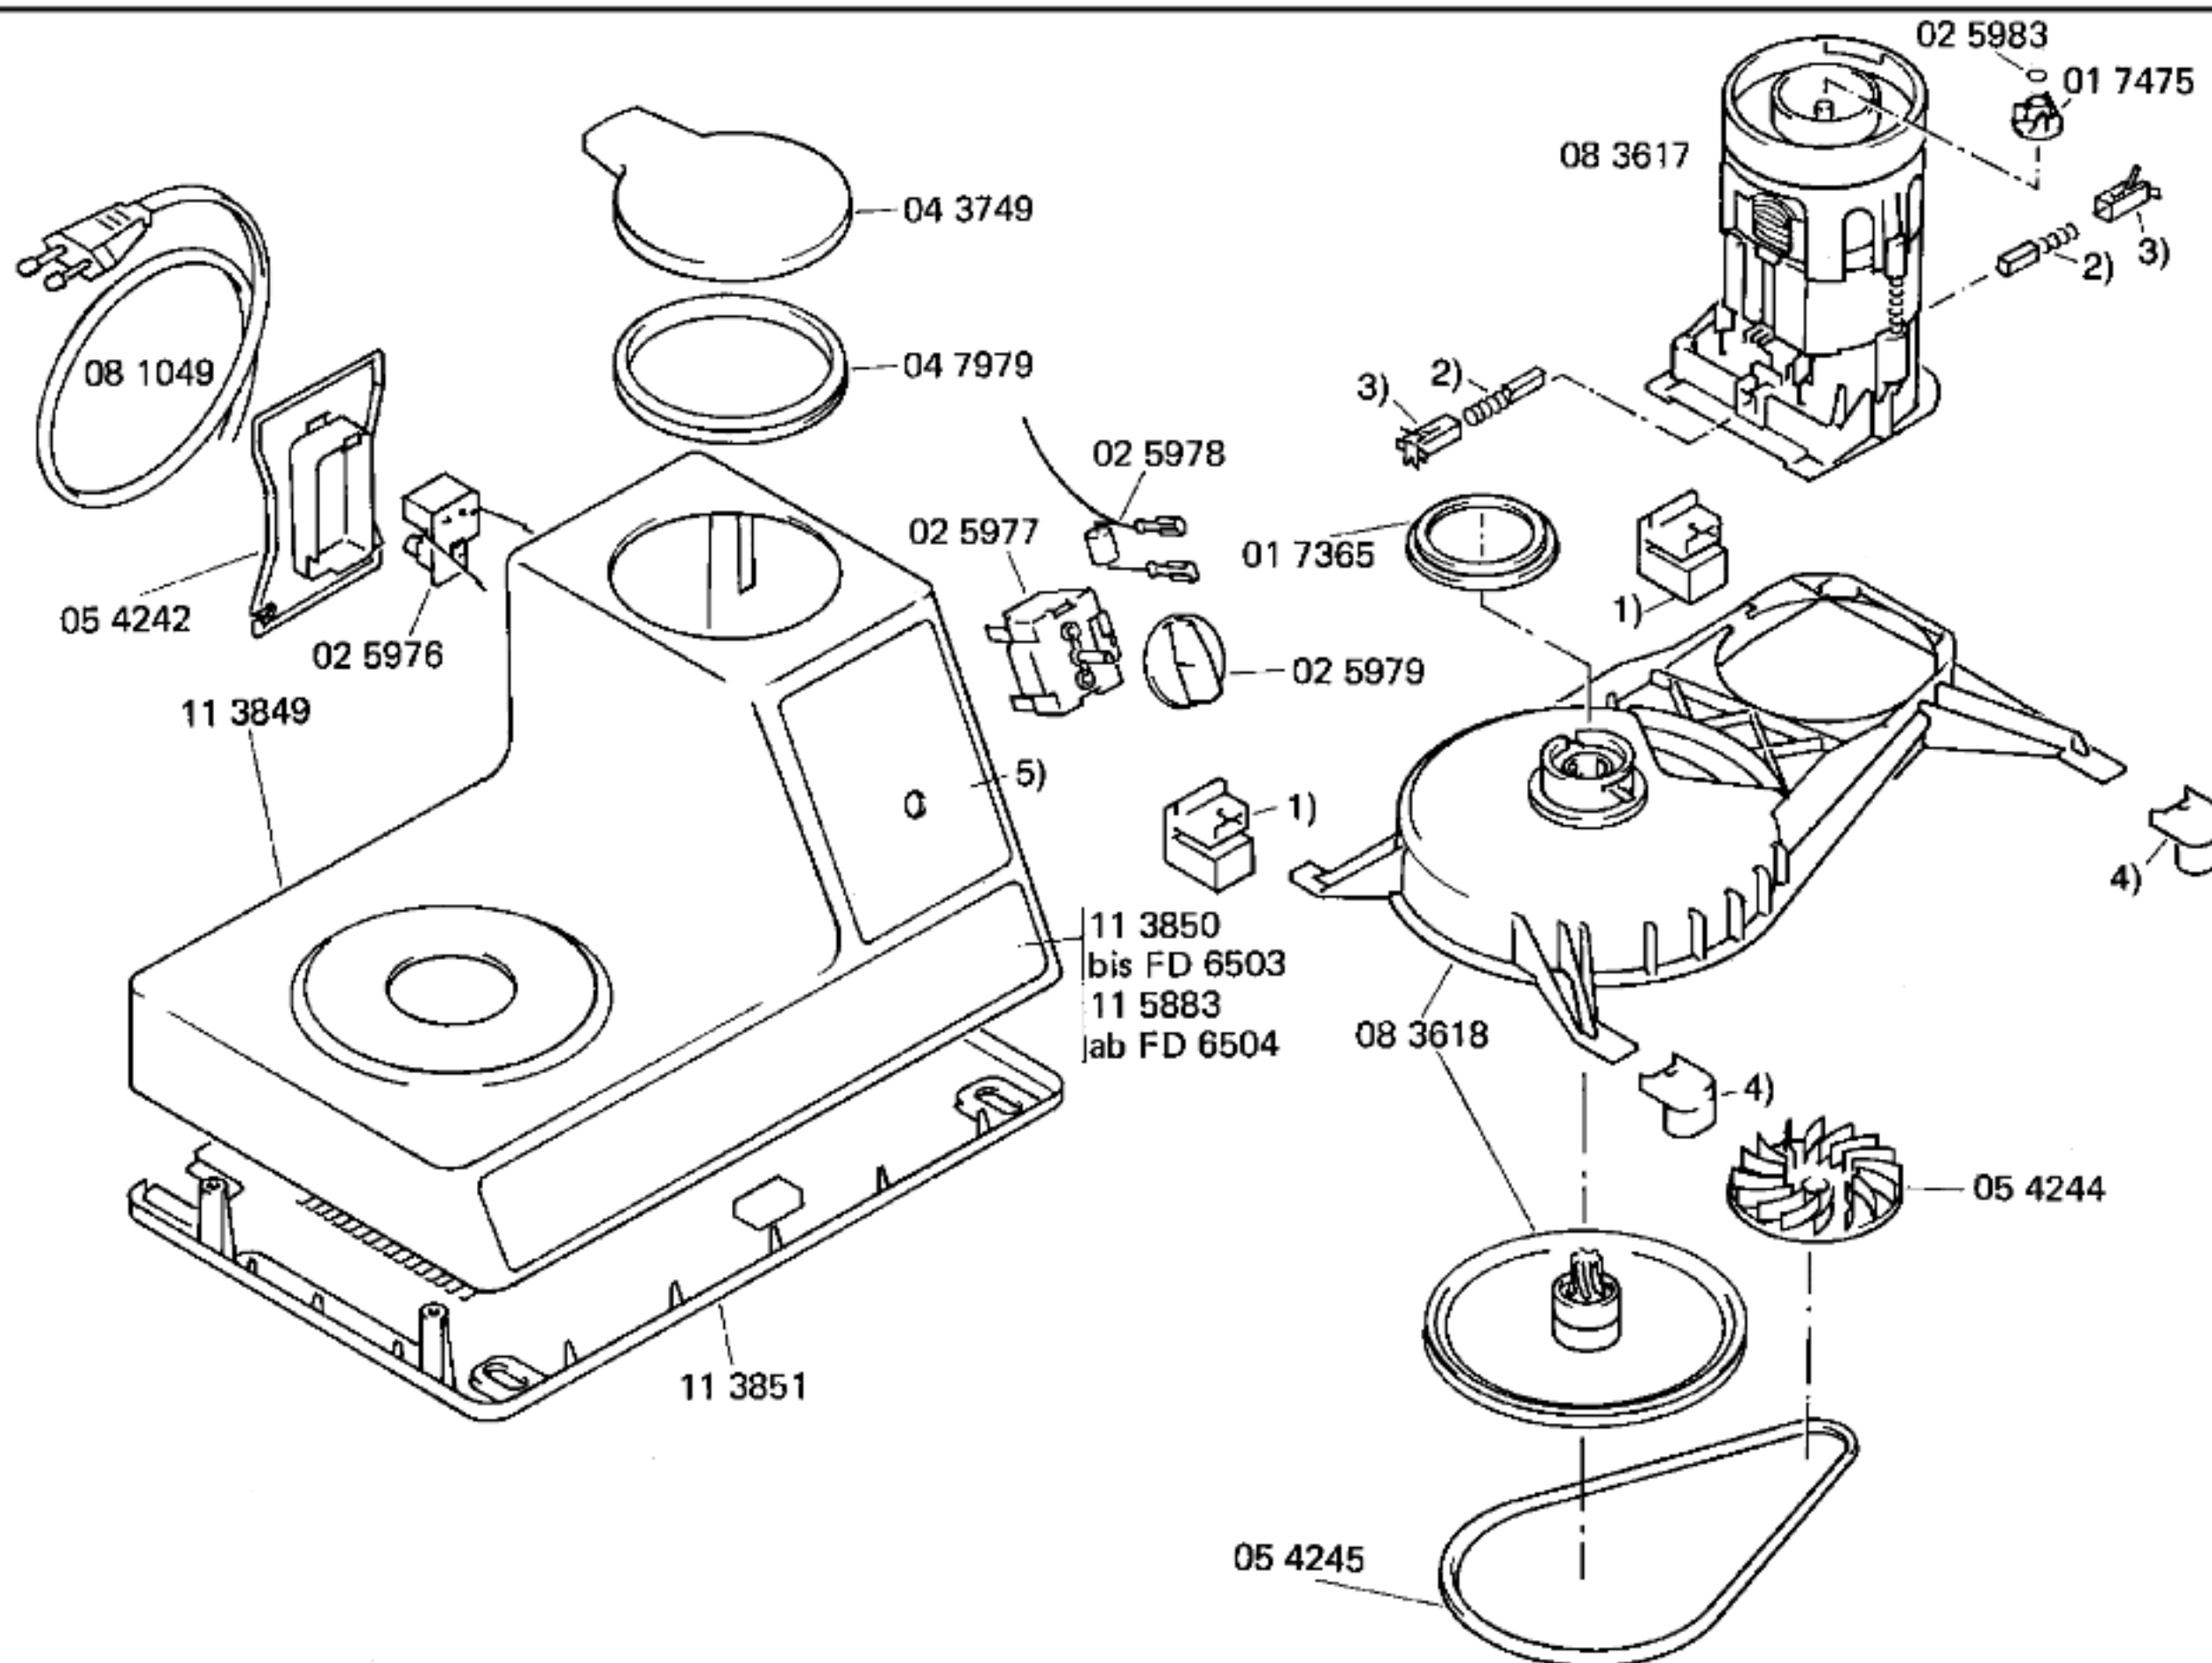

51 1725
 Gebrauchsanweisung
 D,GB,F,I,NL,DK,N,
 S,SF

- 1) 02 5980
- 2) 02 5981
- 3) 02 5982
- 4) 02 5984
- 5) 05 4243
 bis FD 6503
 05 5290
 ab FD 6504

**BOSCH**


MUM 6010-0710014700-D1
 MUM 6110-0710014701-D2
 MUM 6040-0710014709-I1

MUM 6120-0710014710-D3
 MUM 6000-0710014712-A1,S1
 MUM 6001-0710014714-DK1

MUM 6002-0710014715-DS2

KLEINE HAUSGERÄTE
 Küchenmaschinen

Ident - Nummern - Konstante
 3740

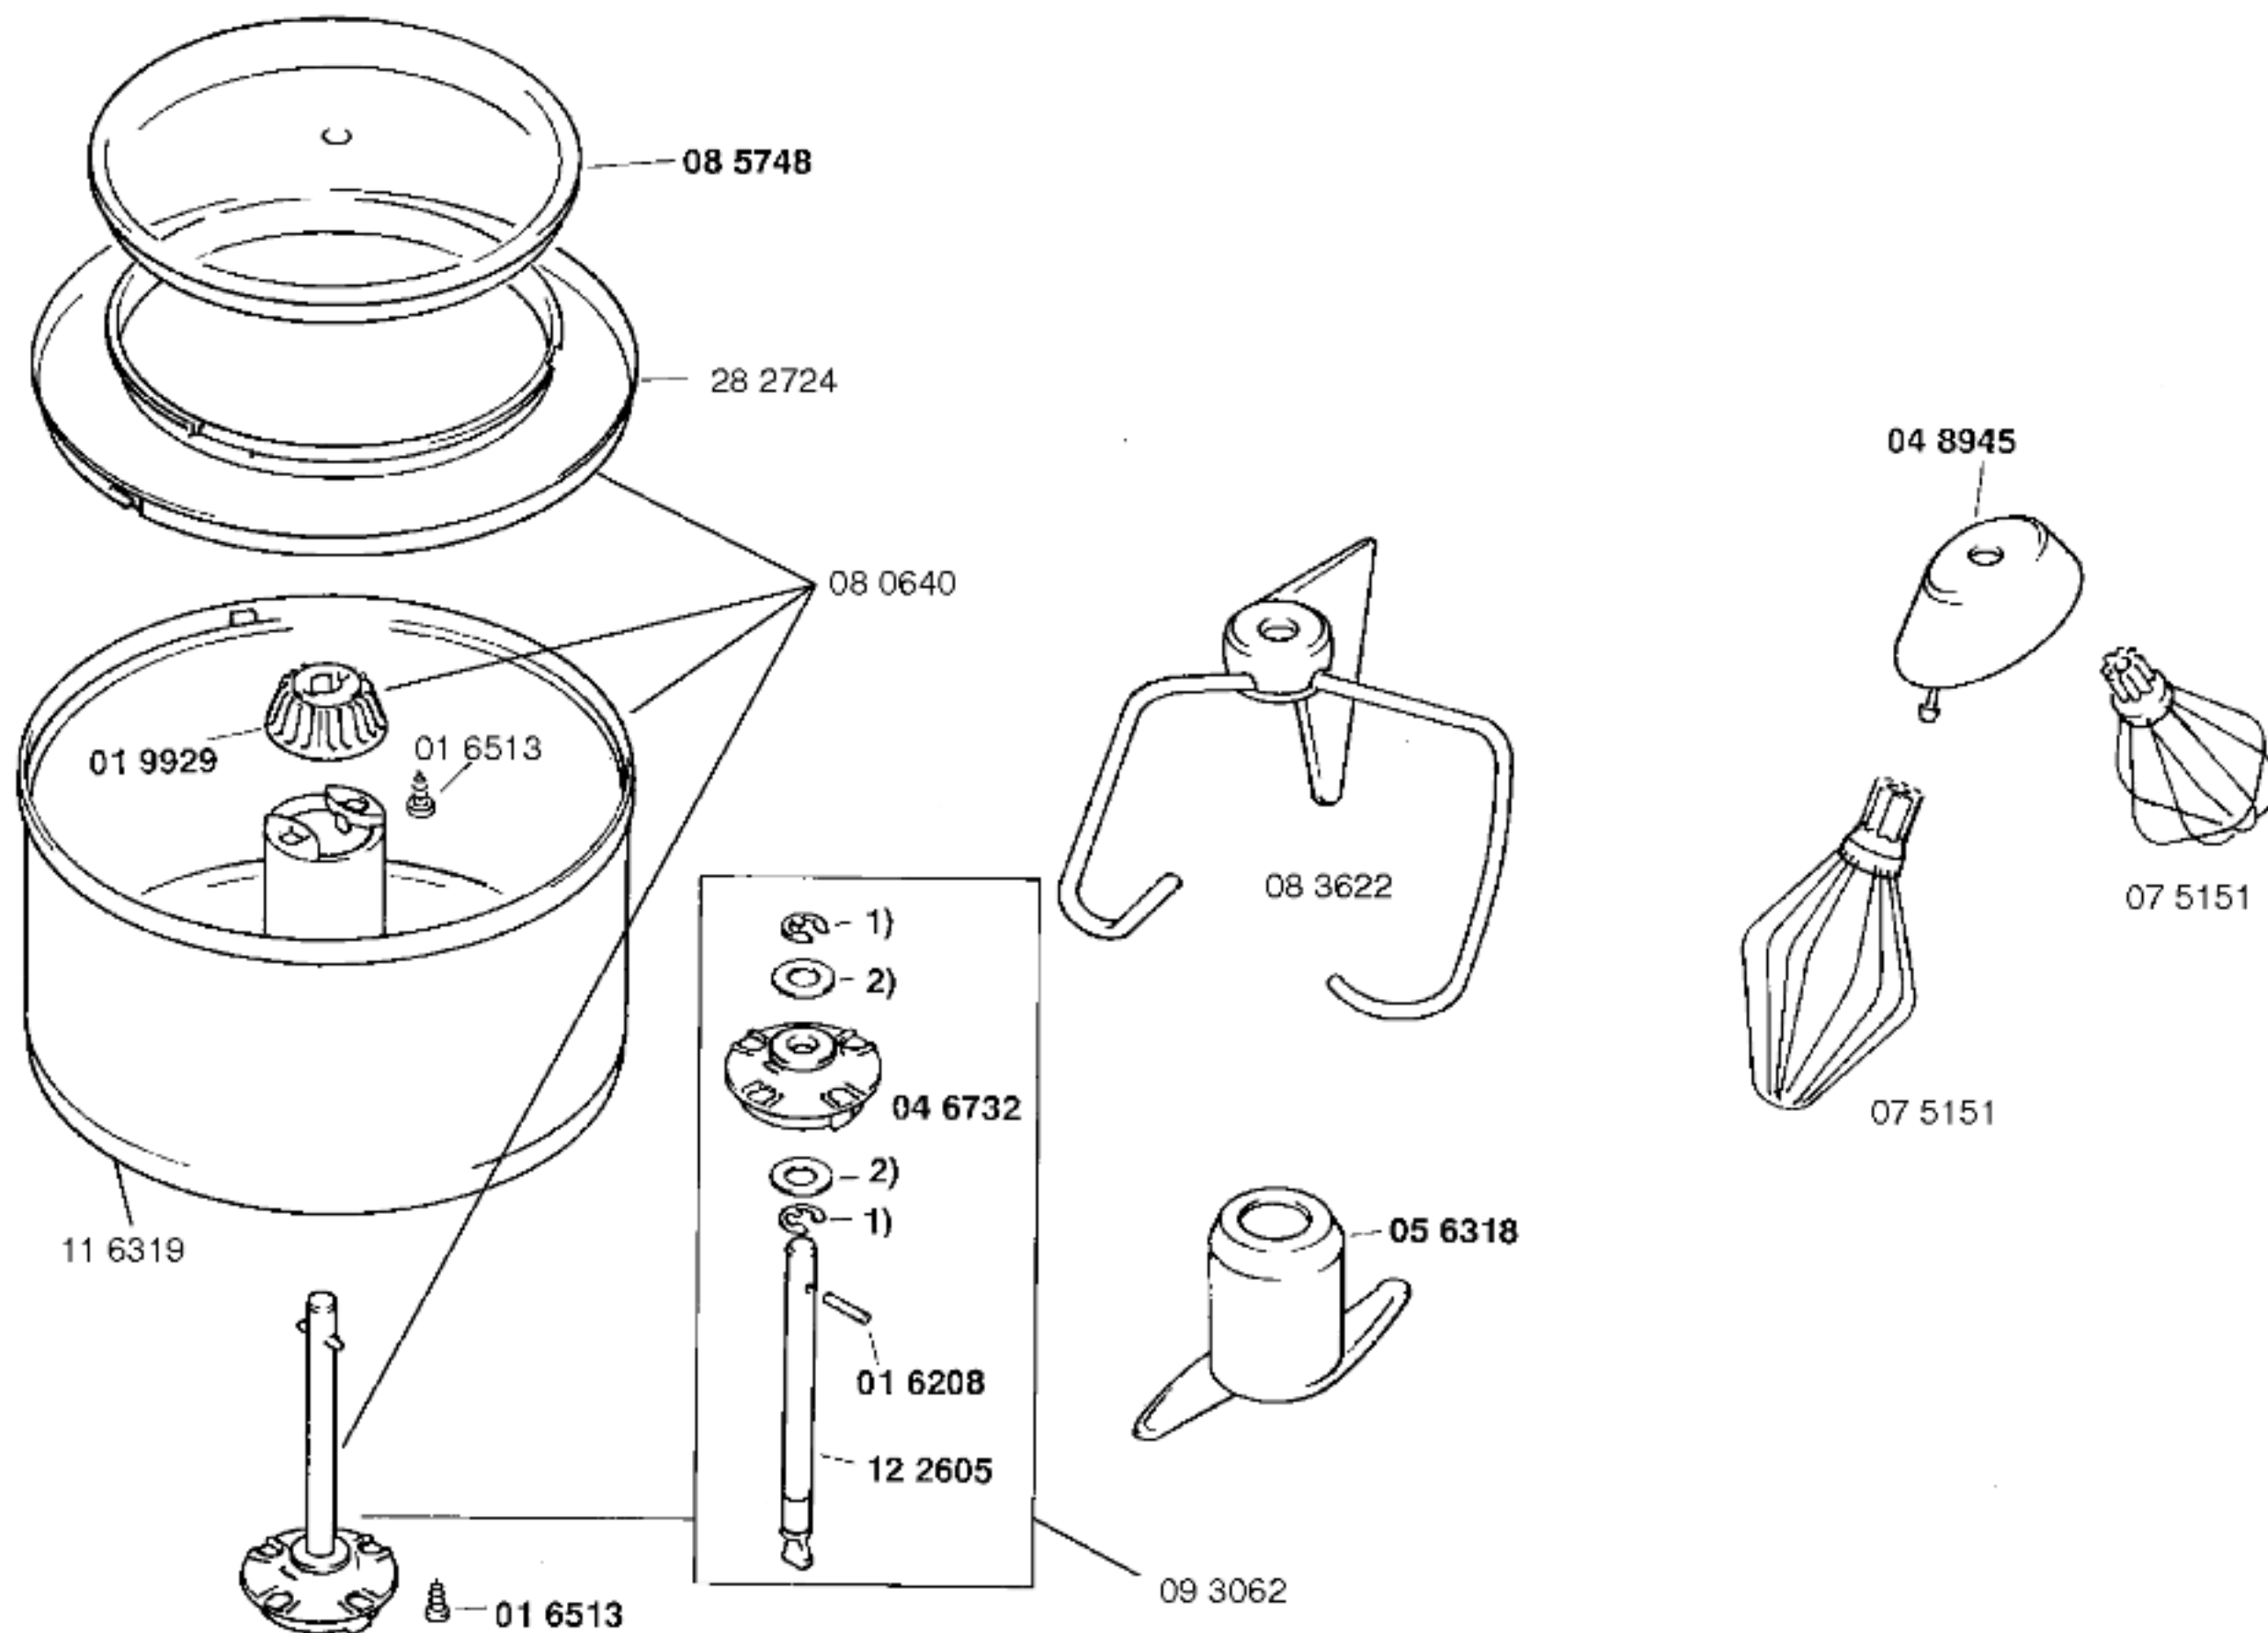

1) 02 7878
 2) 02 7877