



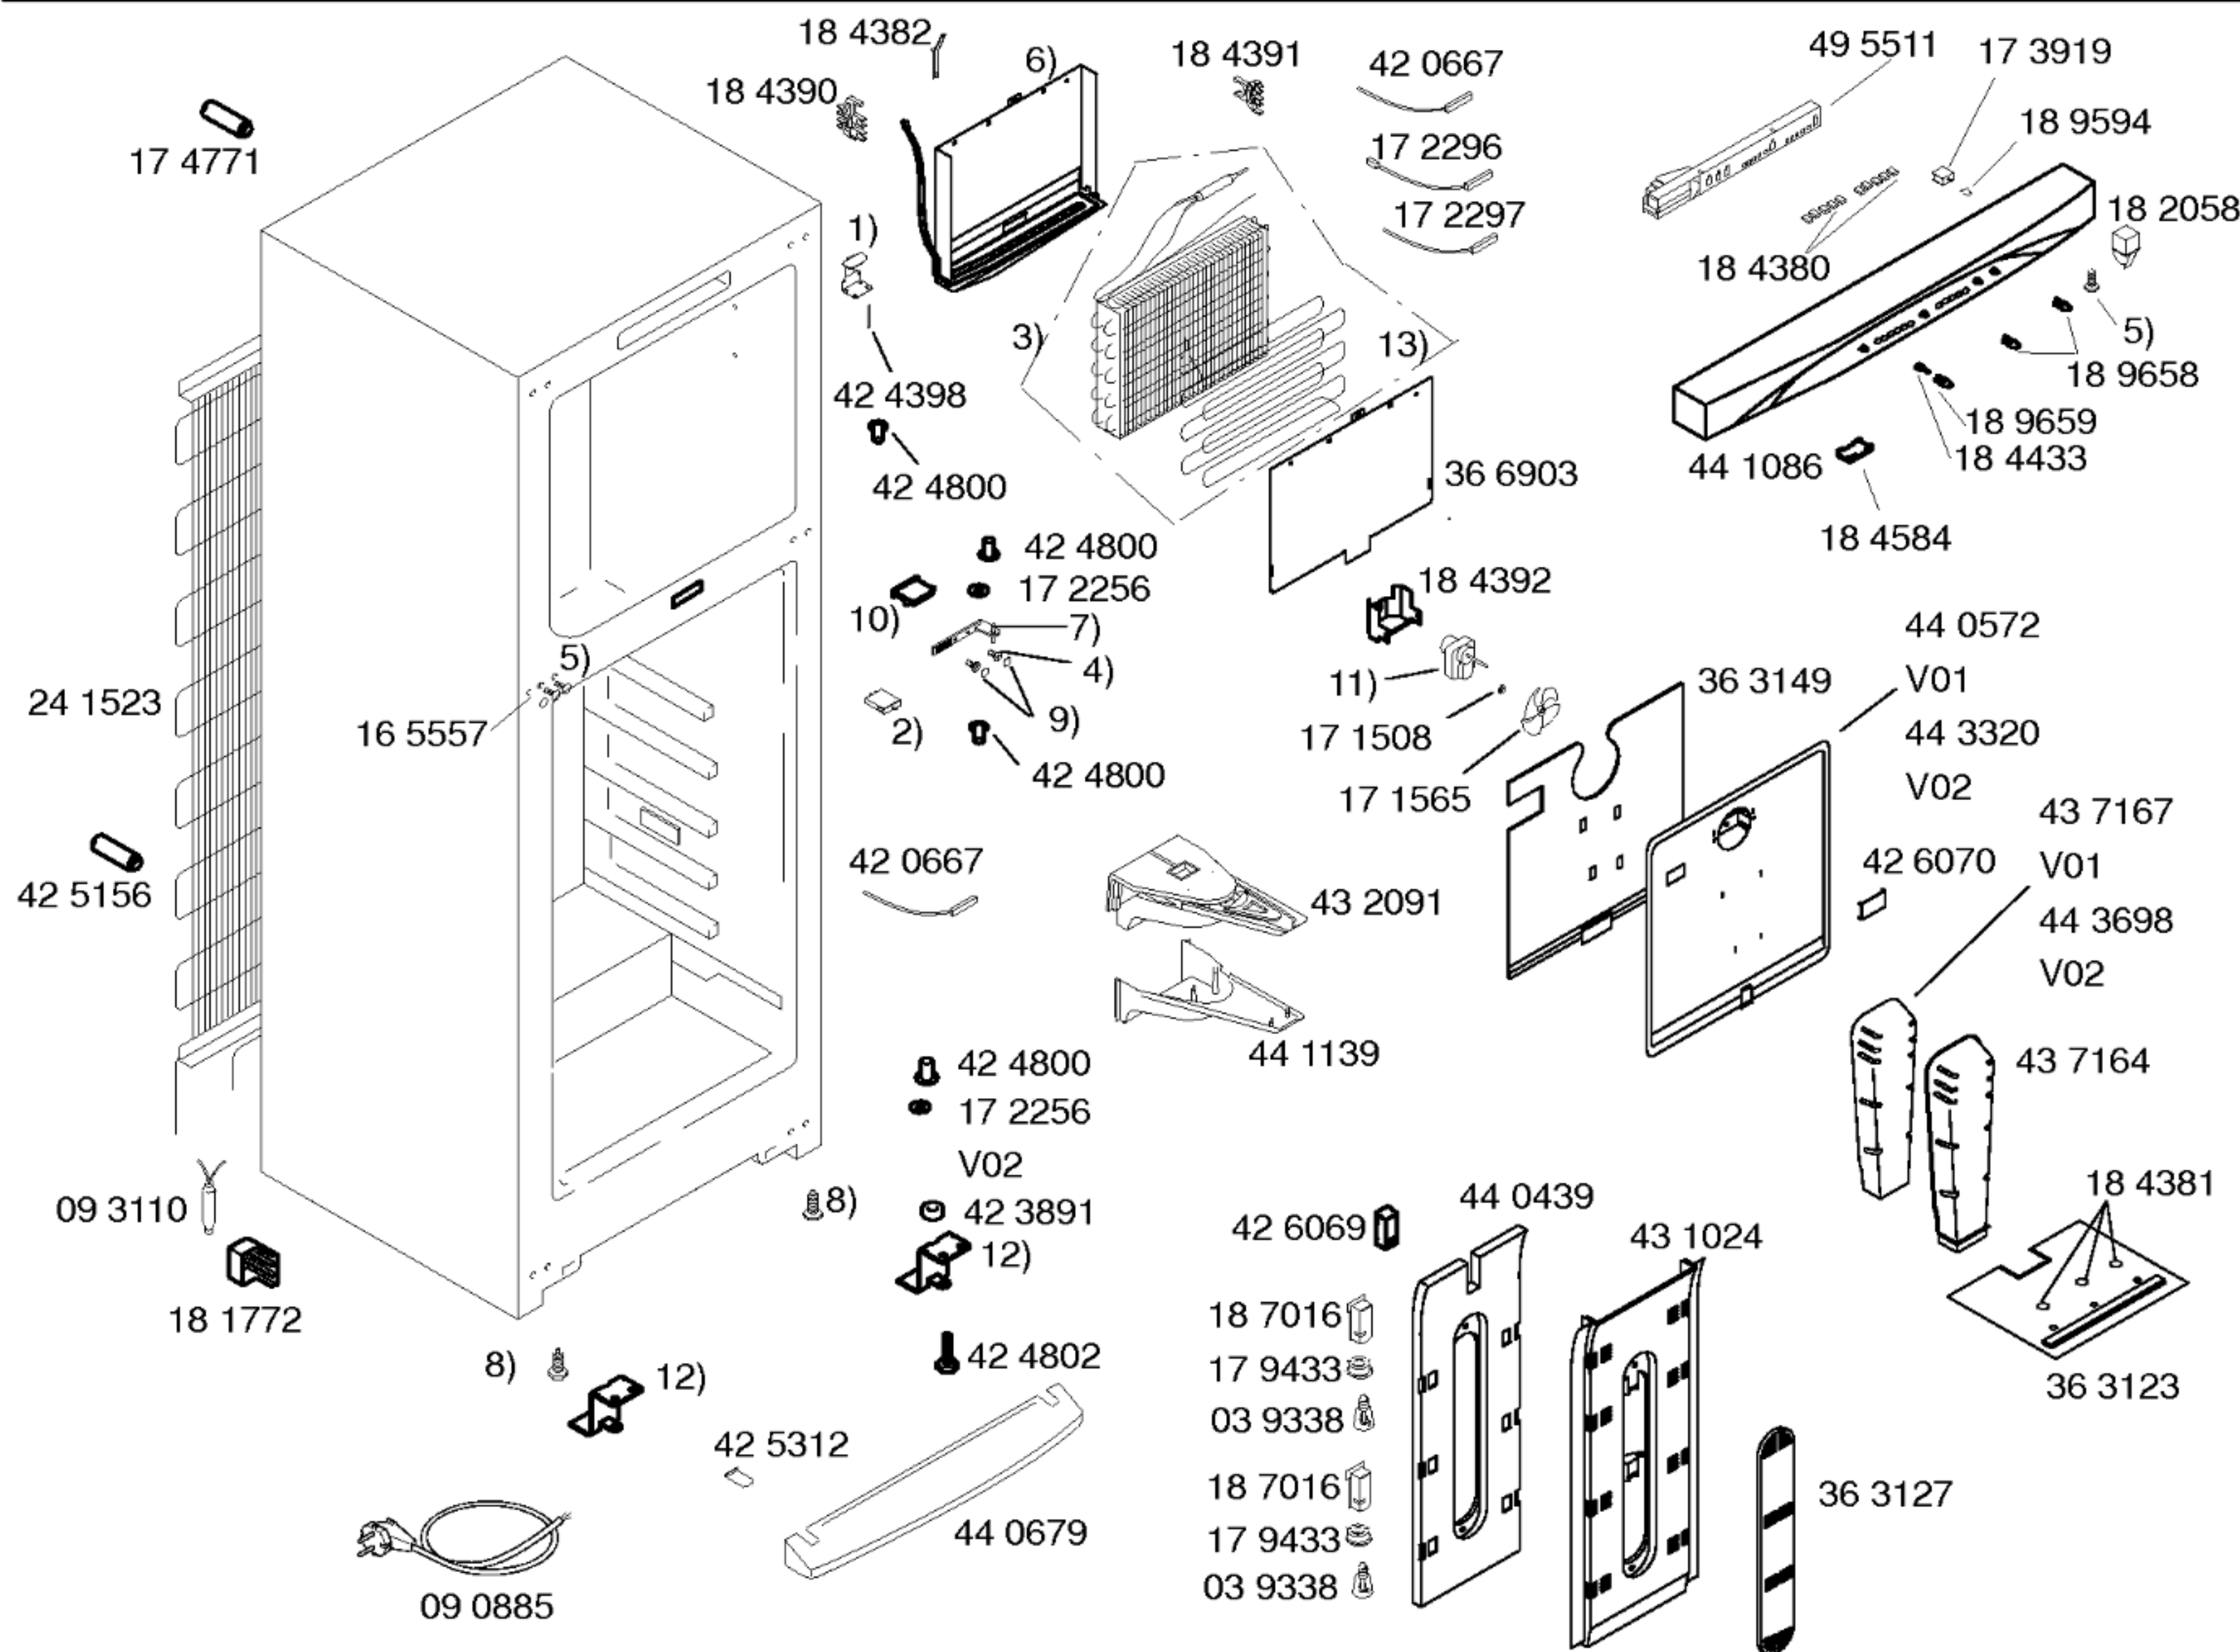


Gebrauchsanweisung
59 1140
(DE,GB,IT,ES,PT,NL)

- 1) 17 1312
- 2) 42 2142
- 3) 43 8725
- 4) 18 8196
- 5) 16 5552
- 6) 36 9509
- 7) 42 4824
- 8) 42 4340
- 9) 17 6137
- 10) 41 8128
- 11) 49 1665
- 12) 42 4801
- V01
- 42 8184
- V02
- 13) 36 9822

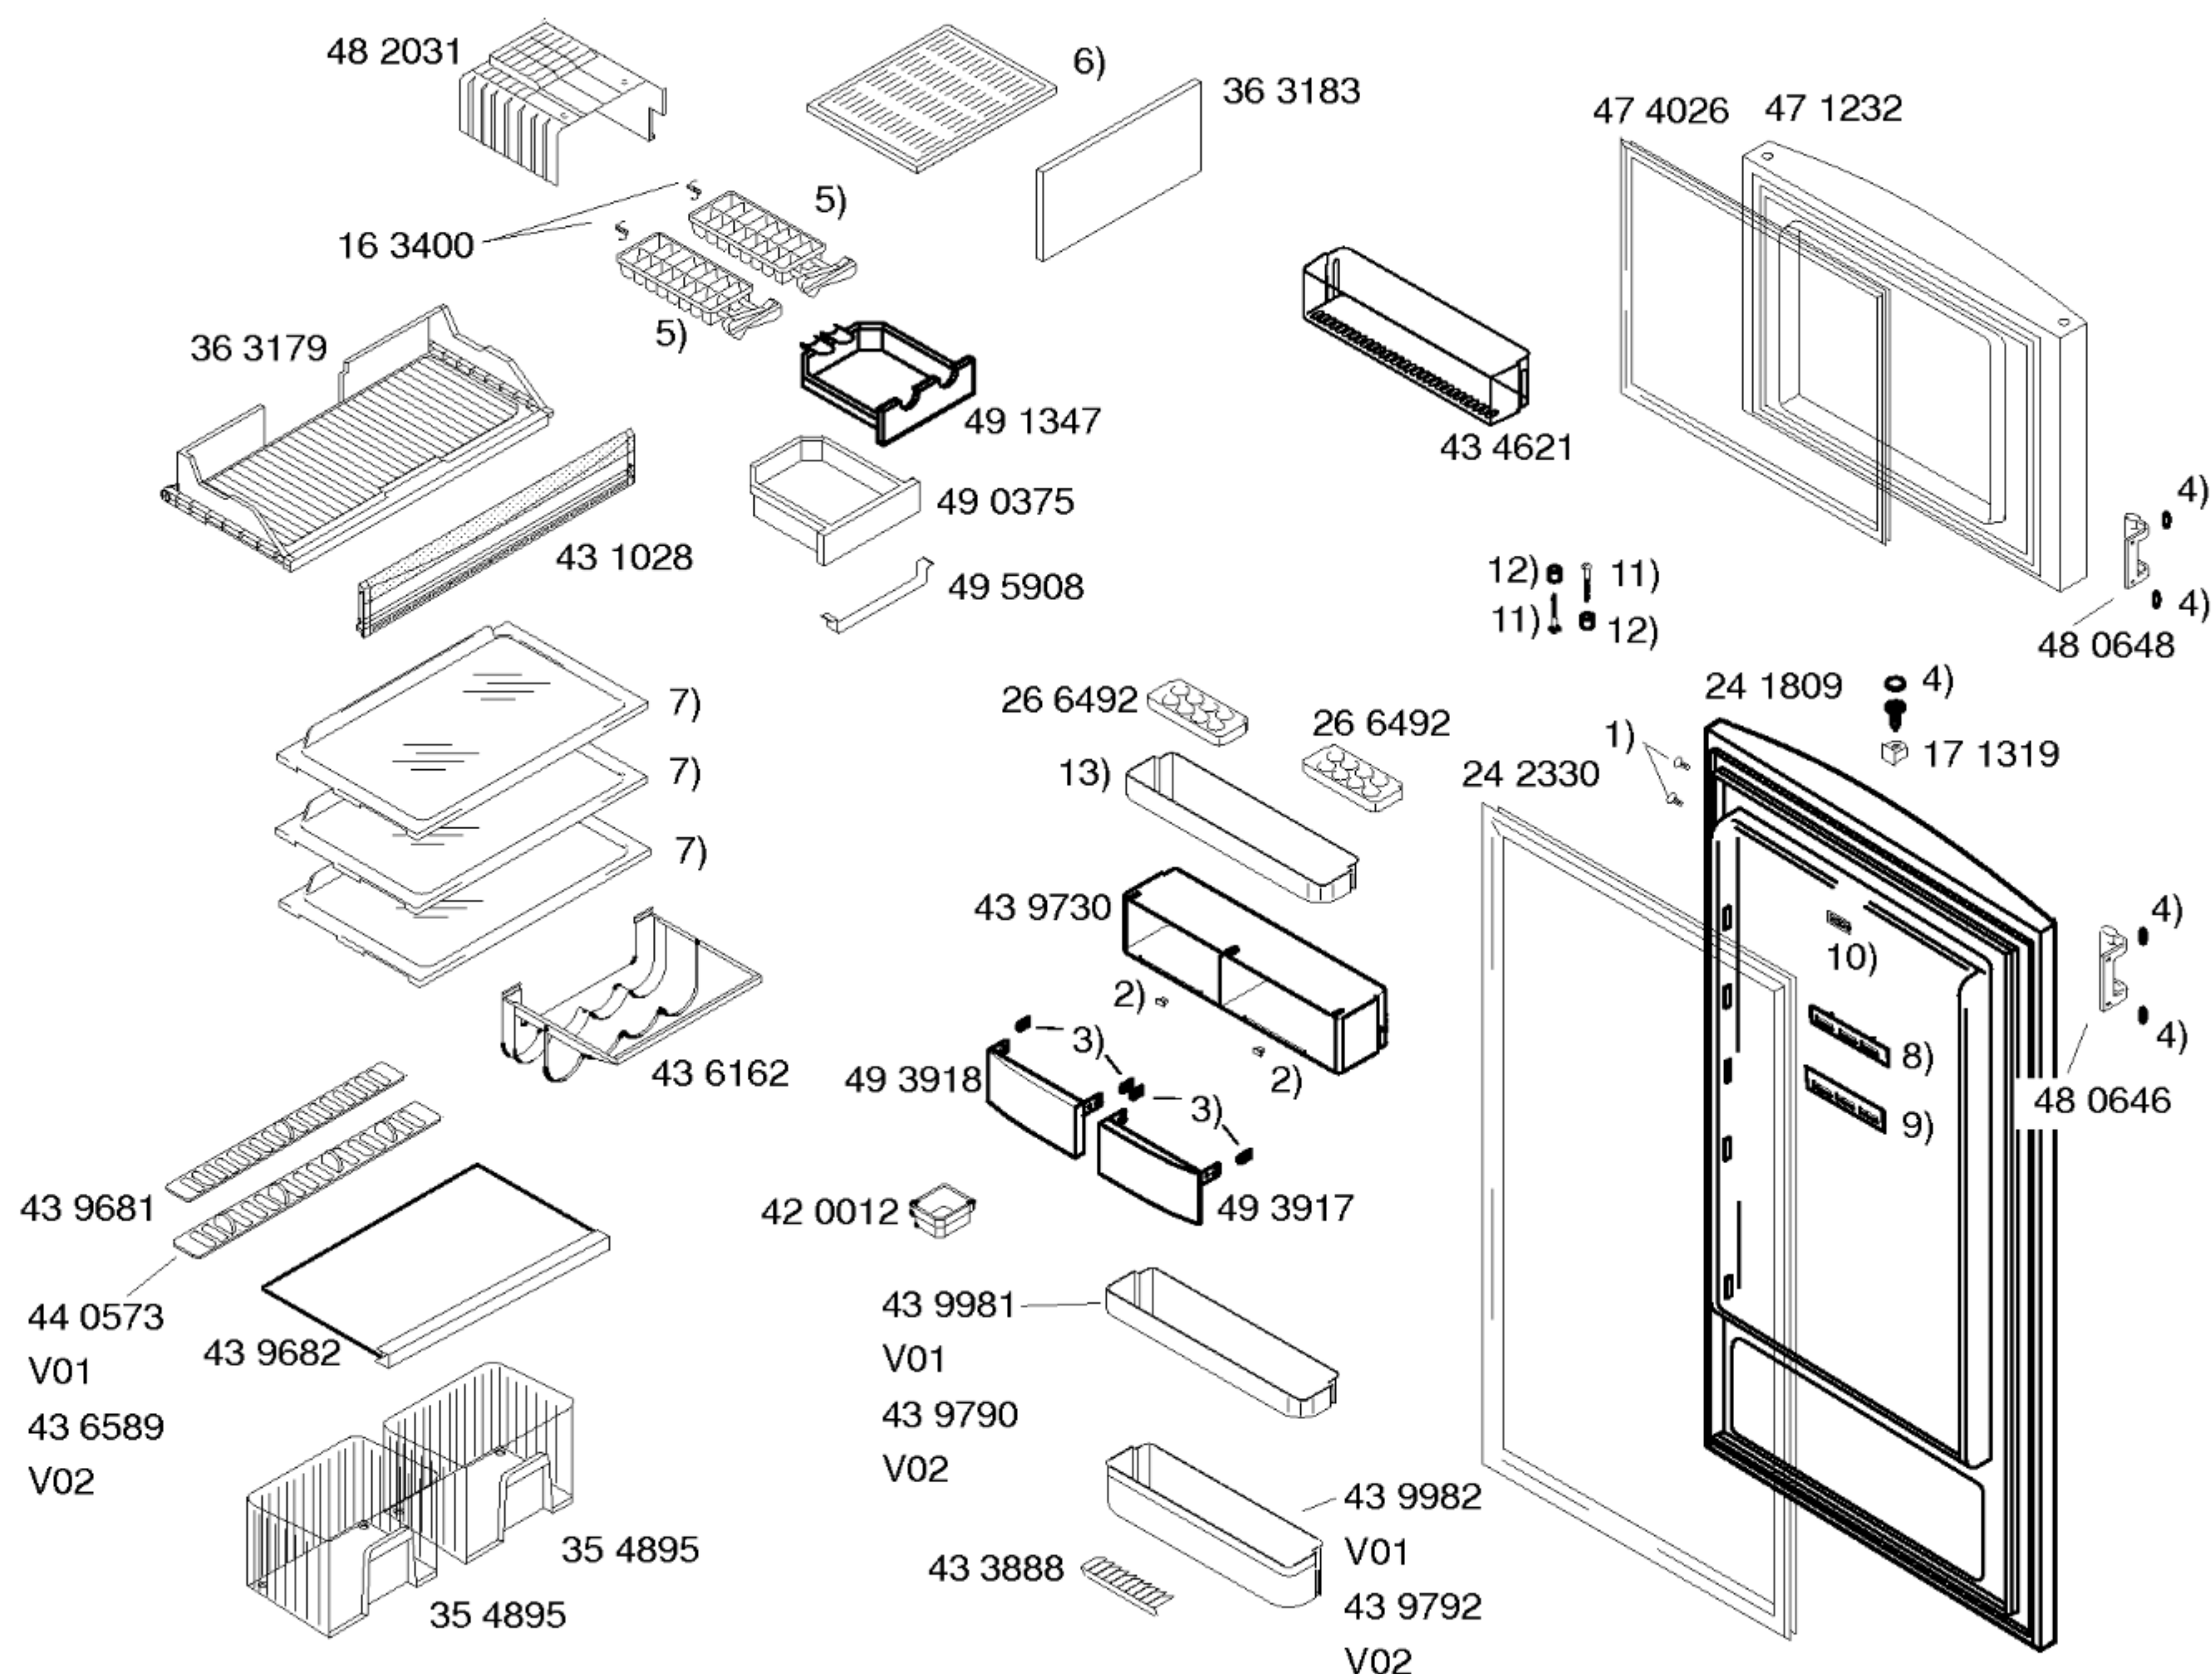

- 1) 06 0083
- V01
- 17 3747
- V02
- 2) 42 0752
- 3) 42 4431
- 4) 16 5557
- 5) 49 1361
- 6) 36 3171
- 7) 43 9140
- 8) 49 4865
- 9) 49 4864
- 10) 49 4877
- 11) 18 8194
- 12) 18 8188
- 13) 44 0125

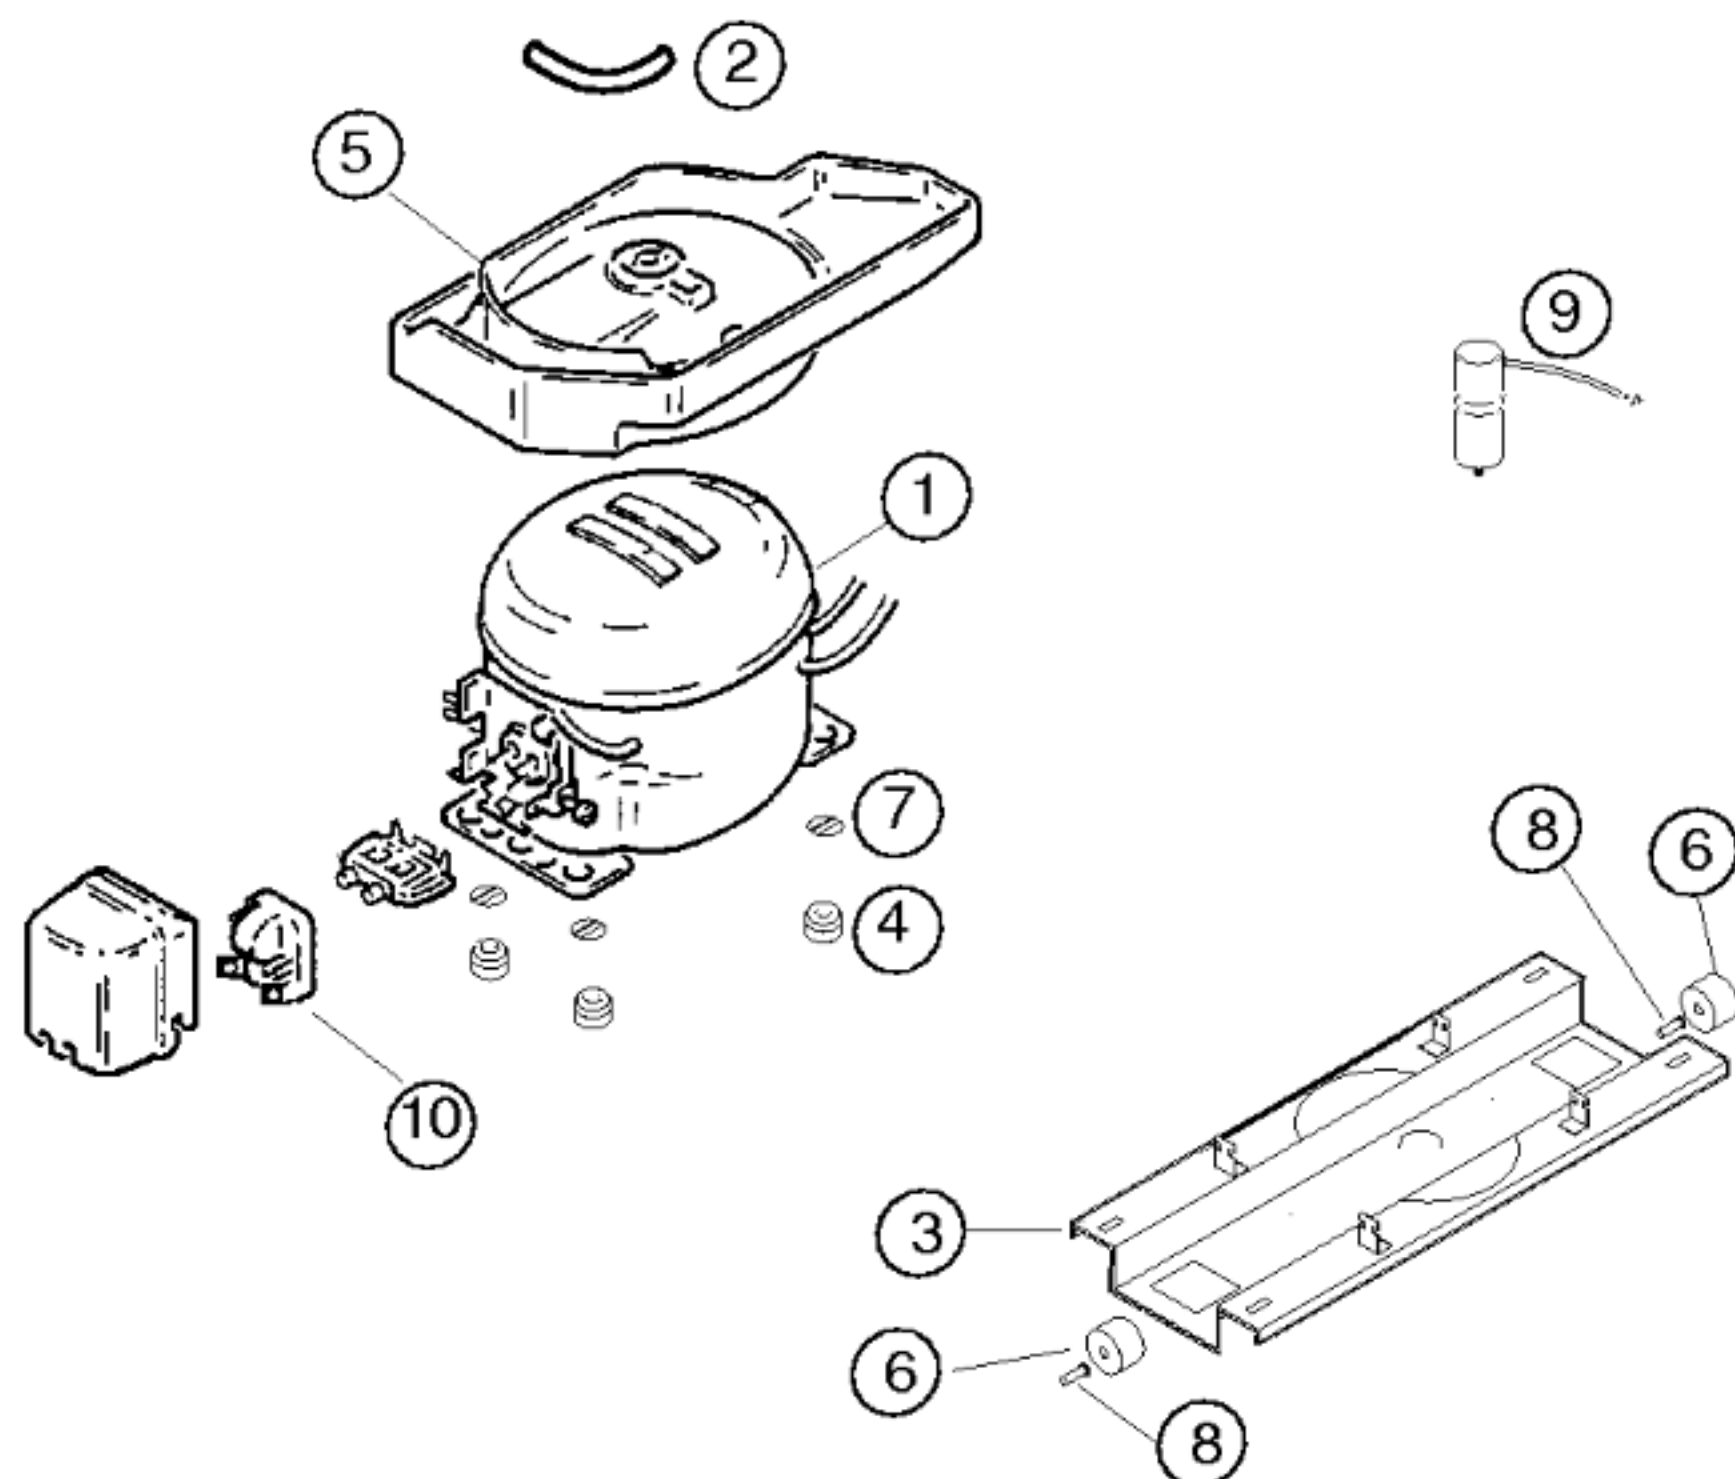

Pos.	Matsushita		
	DGX110E		
1	14 3524		
2	42 0376		
3	35 4583		
4	16 3427		
5	49 4670		
6	17 1318		
7	17 1519		
8	18 1014		
9	42 0857		
10	42 6071		
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör

Typ/Type/Tip

Förderleistung/Delivery/Verim/h

Anlaufstrom/Starting current/Giris akimi

A

Widerstand/Resistance/Rezistans Ha/

 Ω

Hi/aux.

Mats.
DGX110E

Temp.Reyler/Thermostat/Termostat

Typ/Type/Tip

Reglerstellung/Position/Termostat pozisyonu

Schaltwerte/Acta kapama degerleri

..ein/acma °C

Valeurs de commutation/Termostat degeri

..aus"/kapama

(..abtaven' od)

..alarm'

Füllmenge/Fill quantity/ Dolum miktarı

R600

g

51

Anschlusswert/Comm. load/Giris gucu

W

Heizung/Heater/Rezistans

Widerstand/Resistance/Direnc

 Ω

Leistung/Power/Guc (Annehmbare min Wete in 220V)

W

Ventilador/Blower/Vantilatör

Widerstand/Resistance/Rezistans

 Ω

Magnetventil/Magnetic valve/Manyetik valf

Widerstand/Resistance/Rezistans

 Ω

Spannung/Voltage/Gerilim

V

Temp.Reyler/Thermostat/Termostat

* Siehe Typenschild/Mamul etiketine bakiniz