


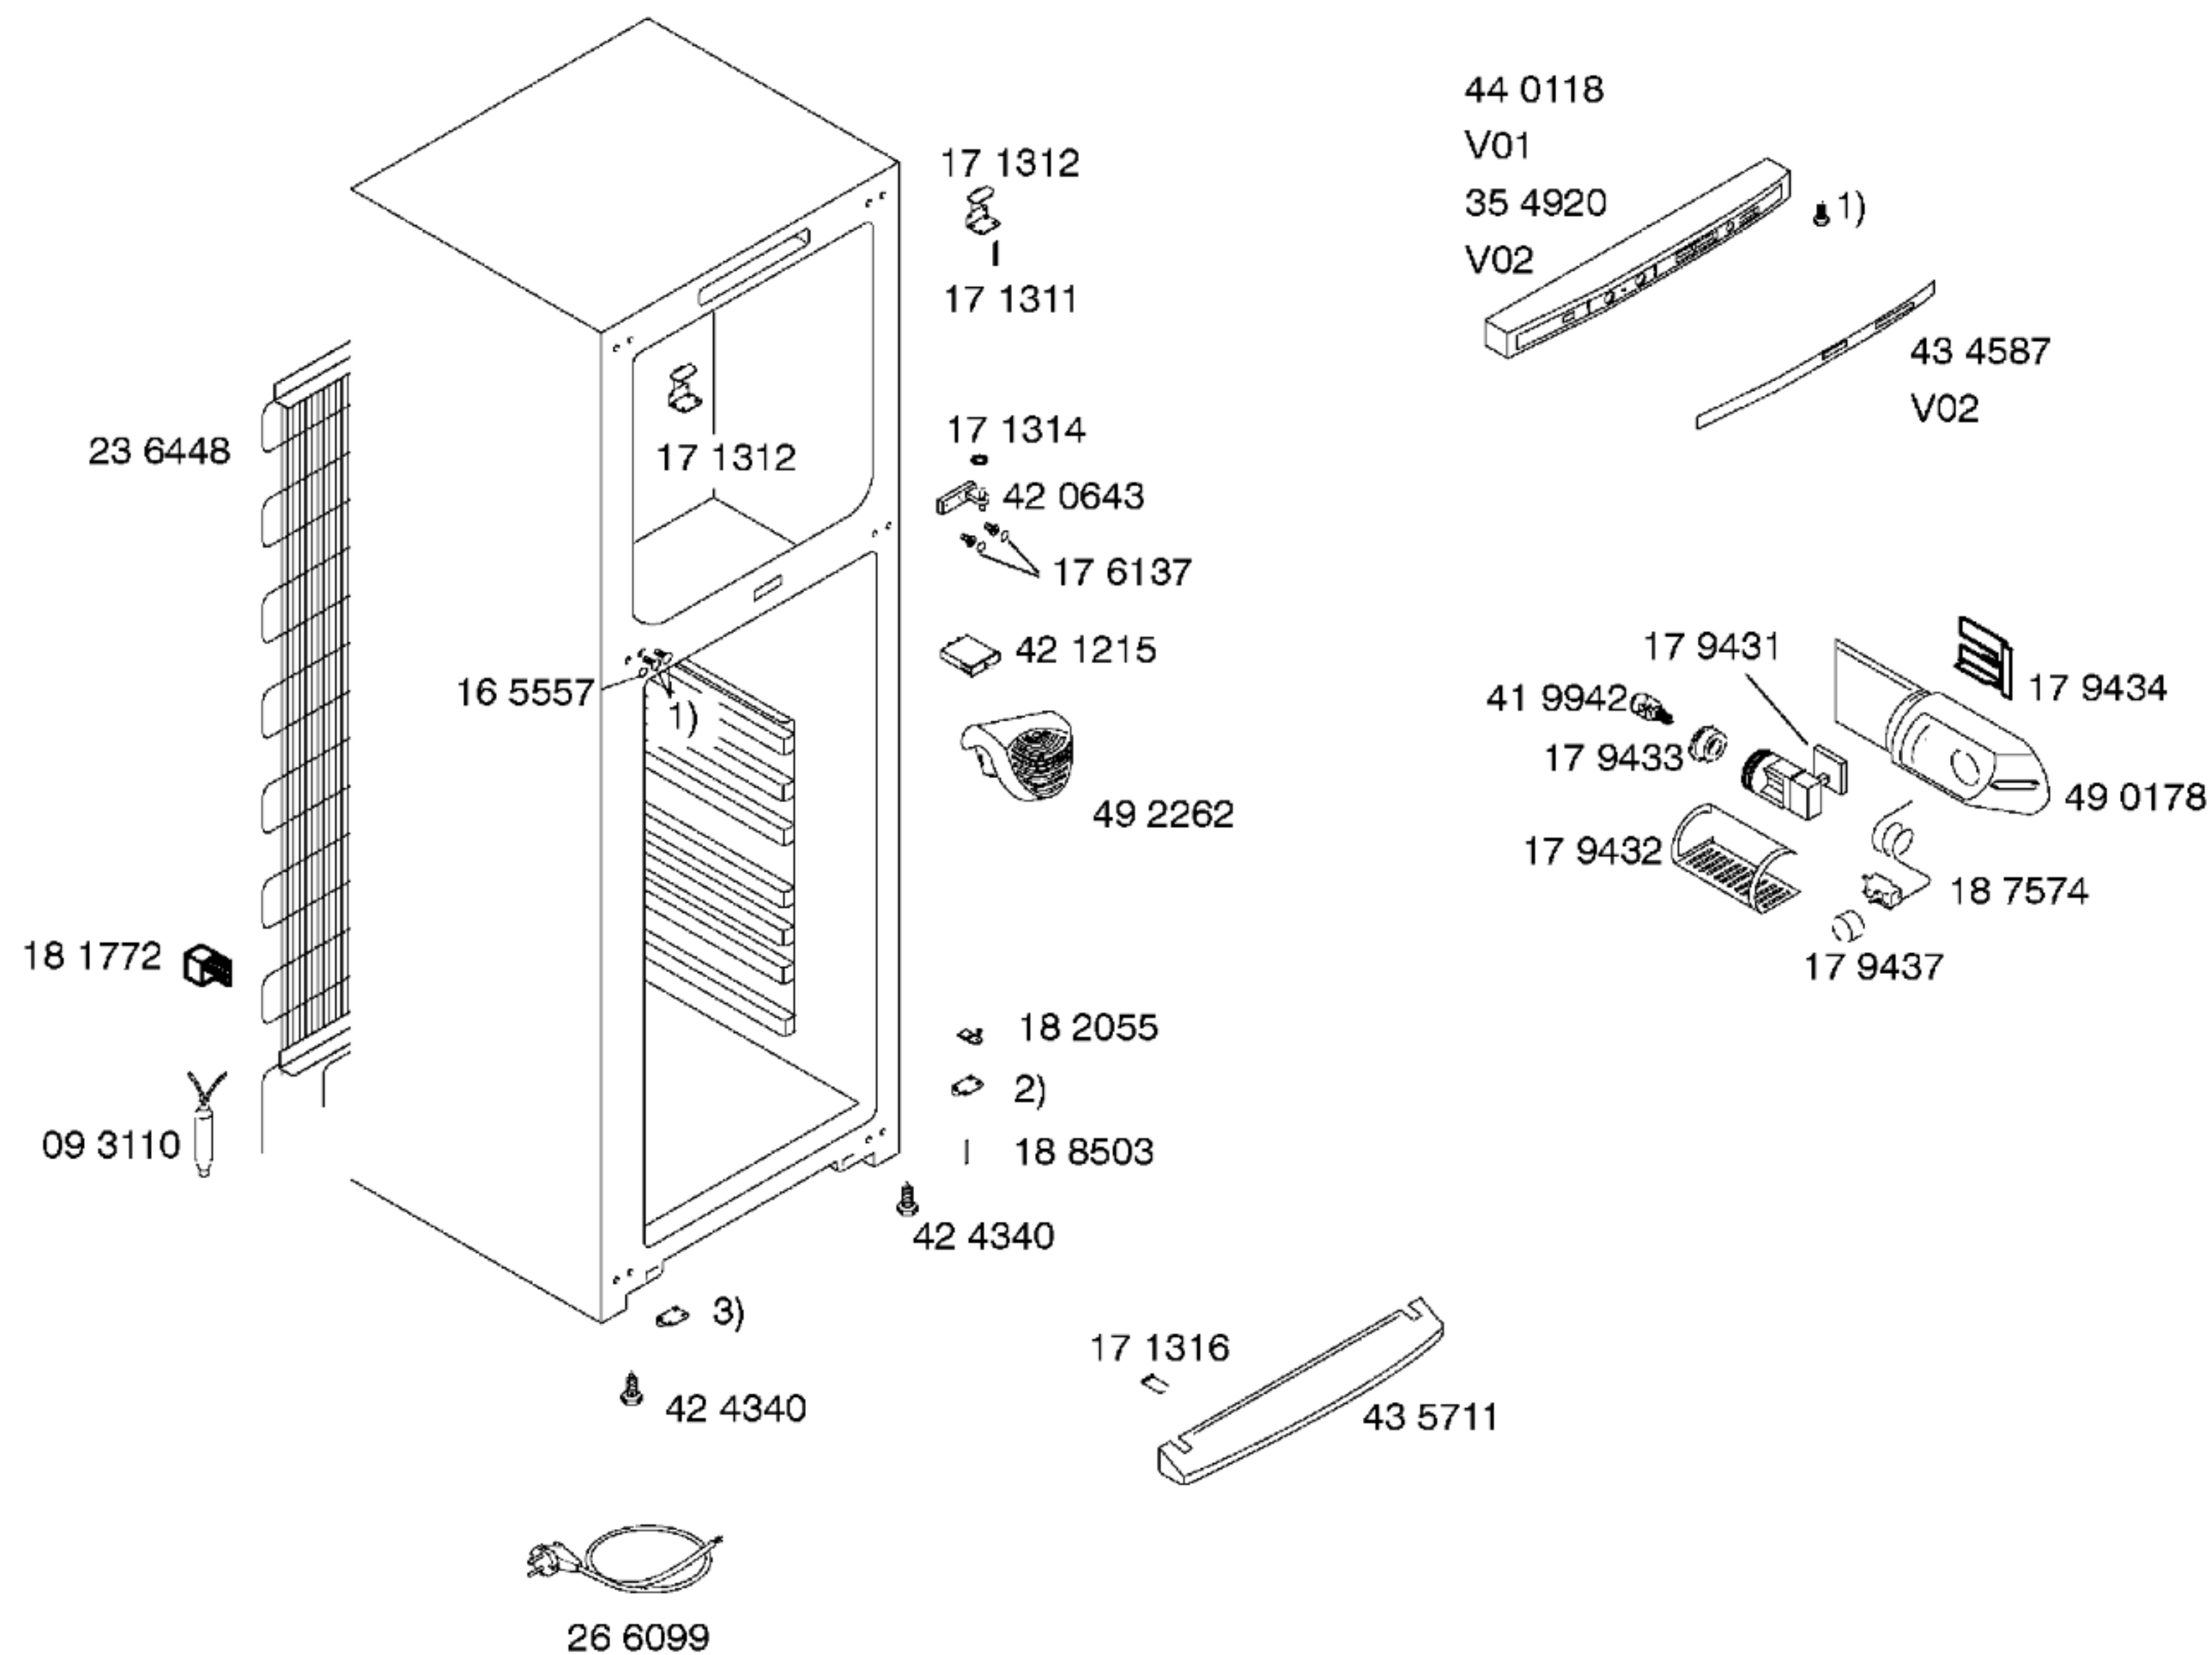


Mat. - Nr. - Konstante
3740


Gebrauchsanweisung
59 1359
(DE,TR)

- 1) 16 5552
- 2) 42 1601
- 3) 42 1602

Mat. - Nr. - Konstante
3740

- 1) 35 4780
- 2) 17 1321
- 3) 36 0391
- 4) 16 6484

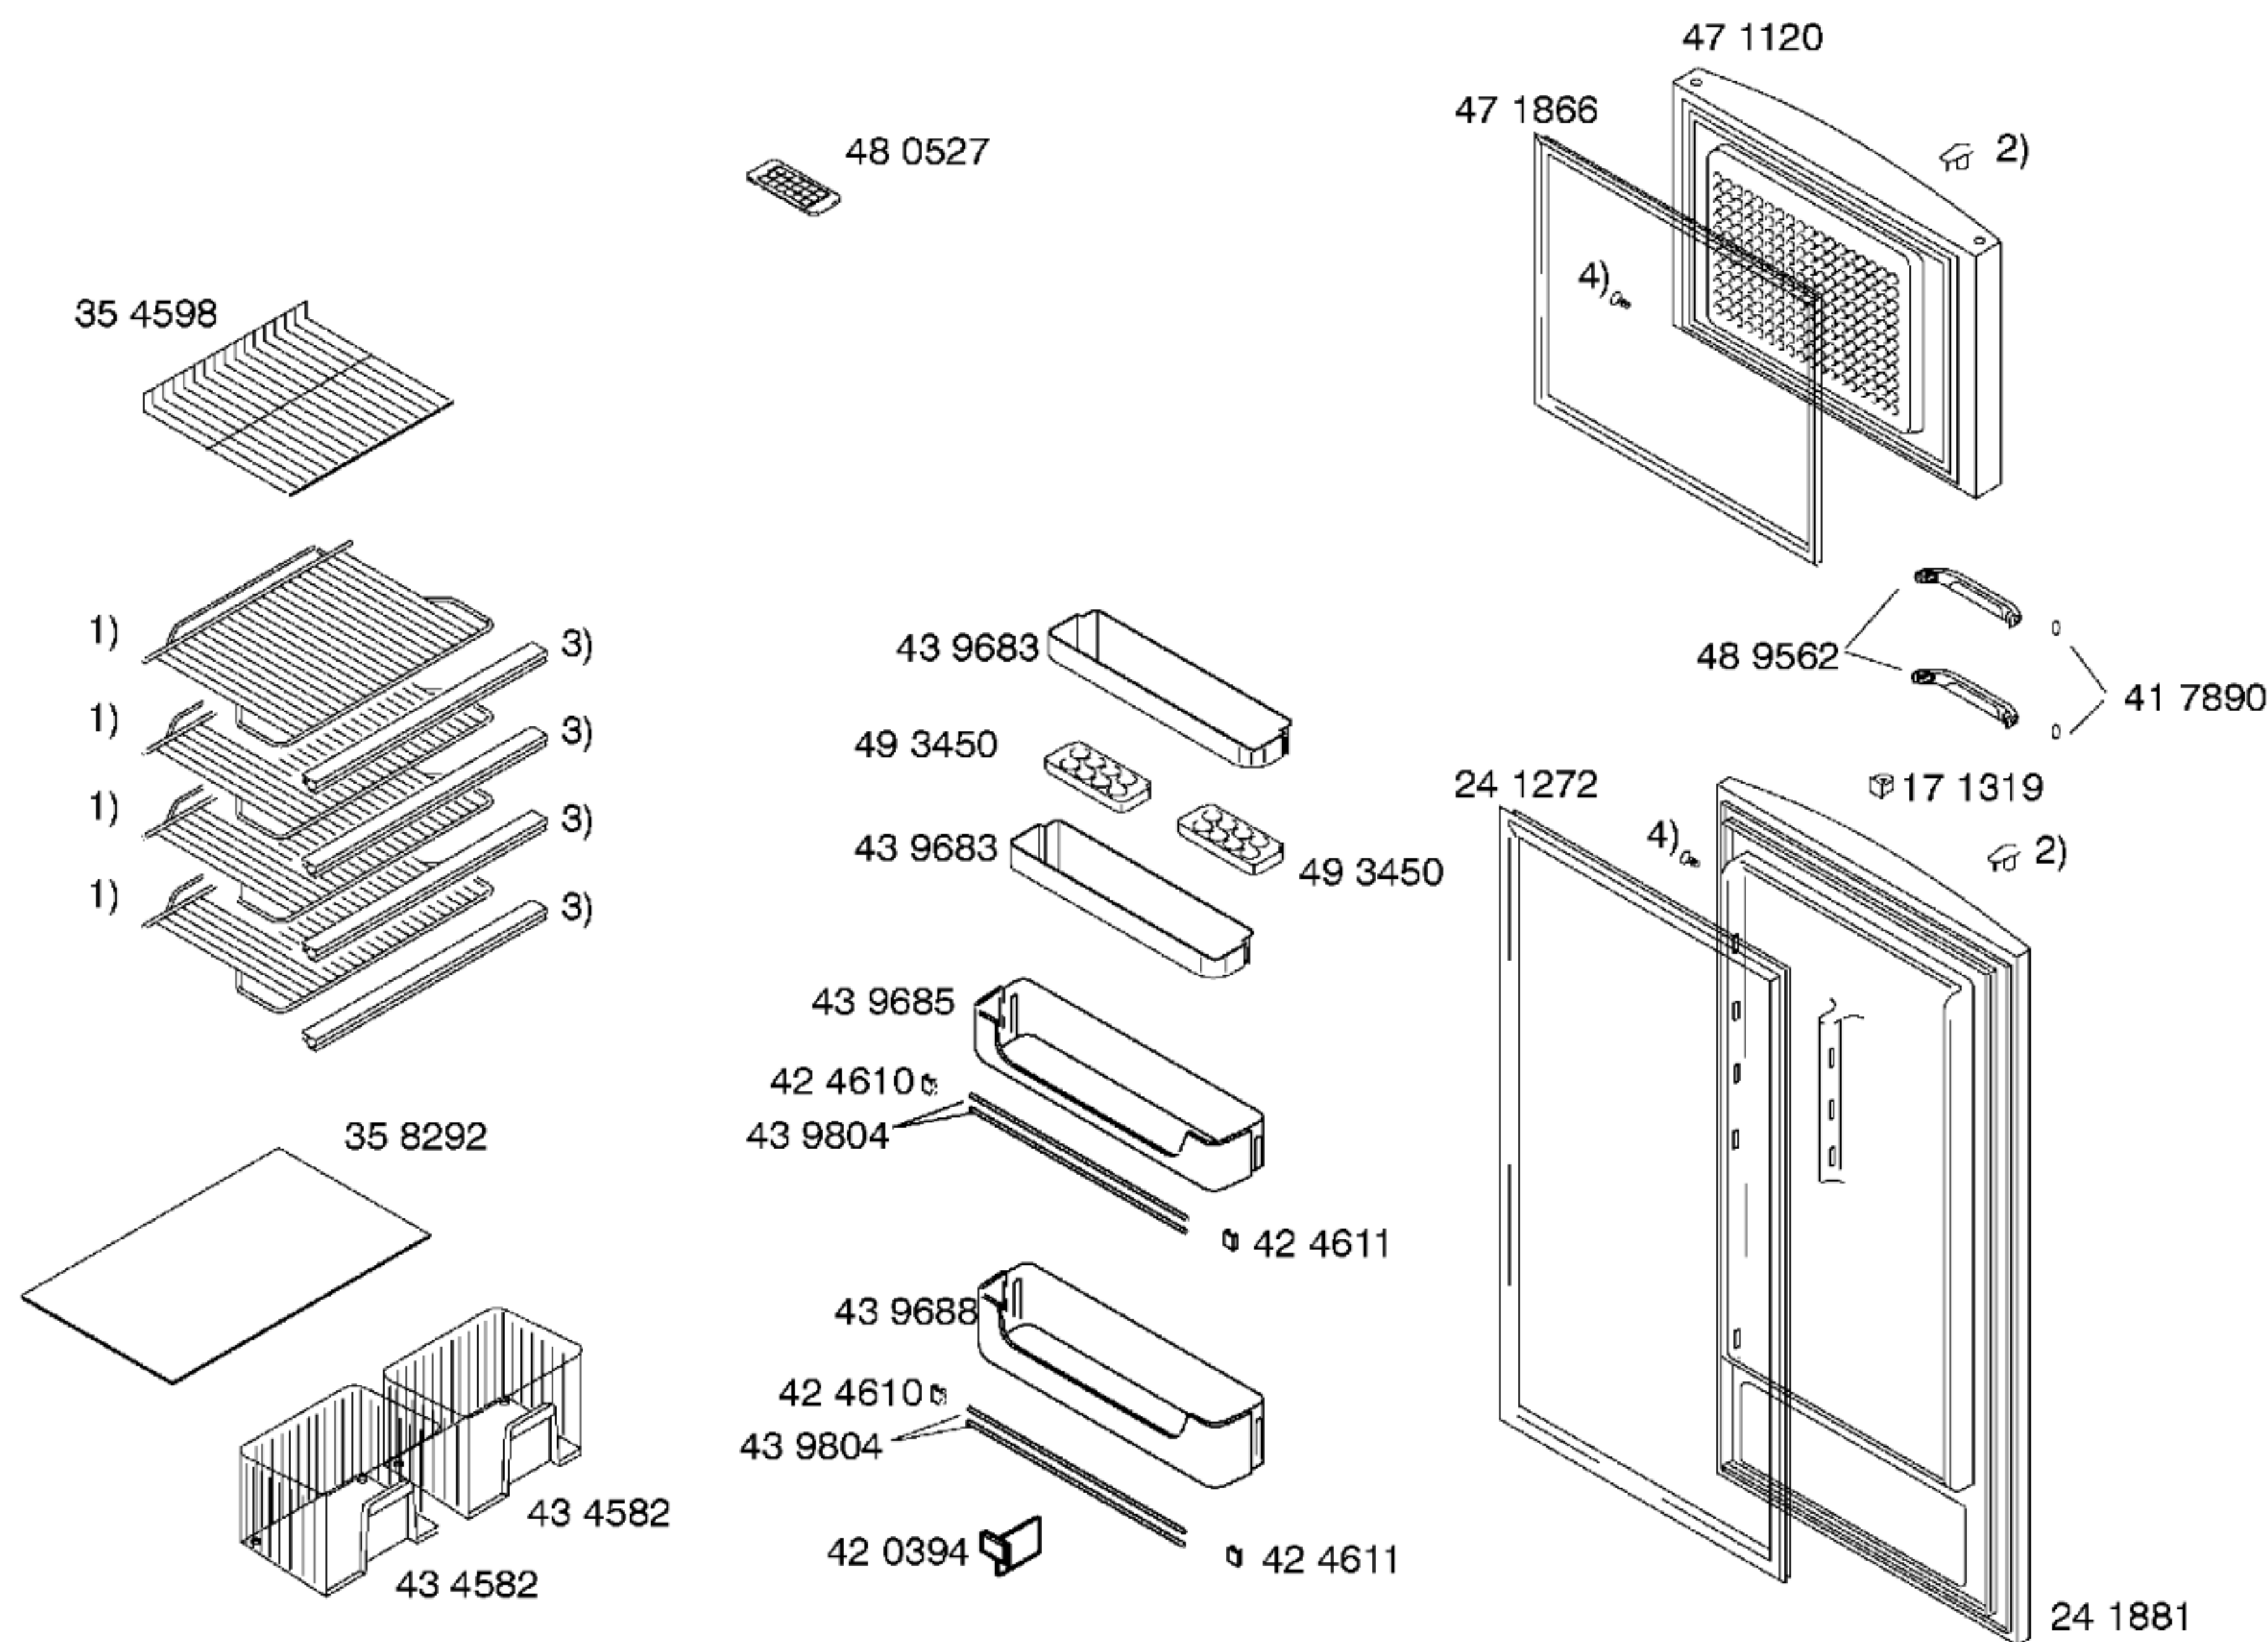

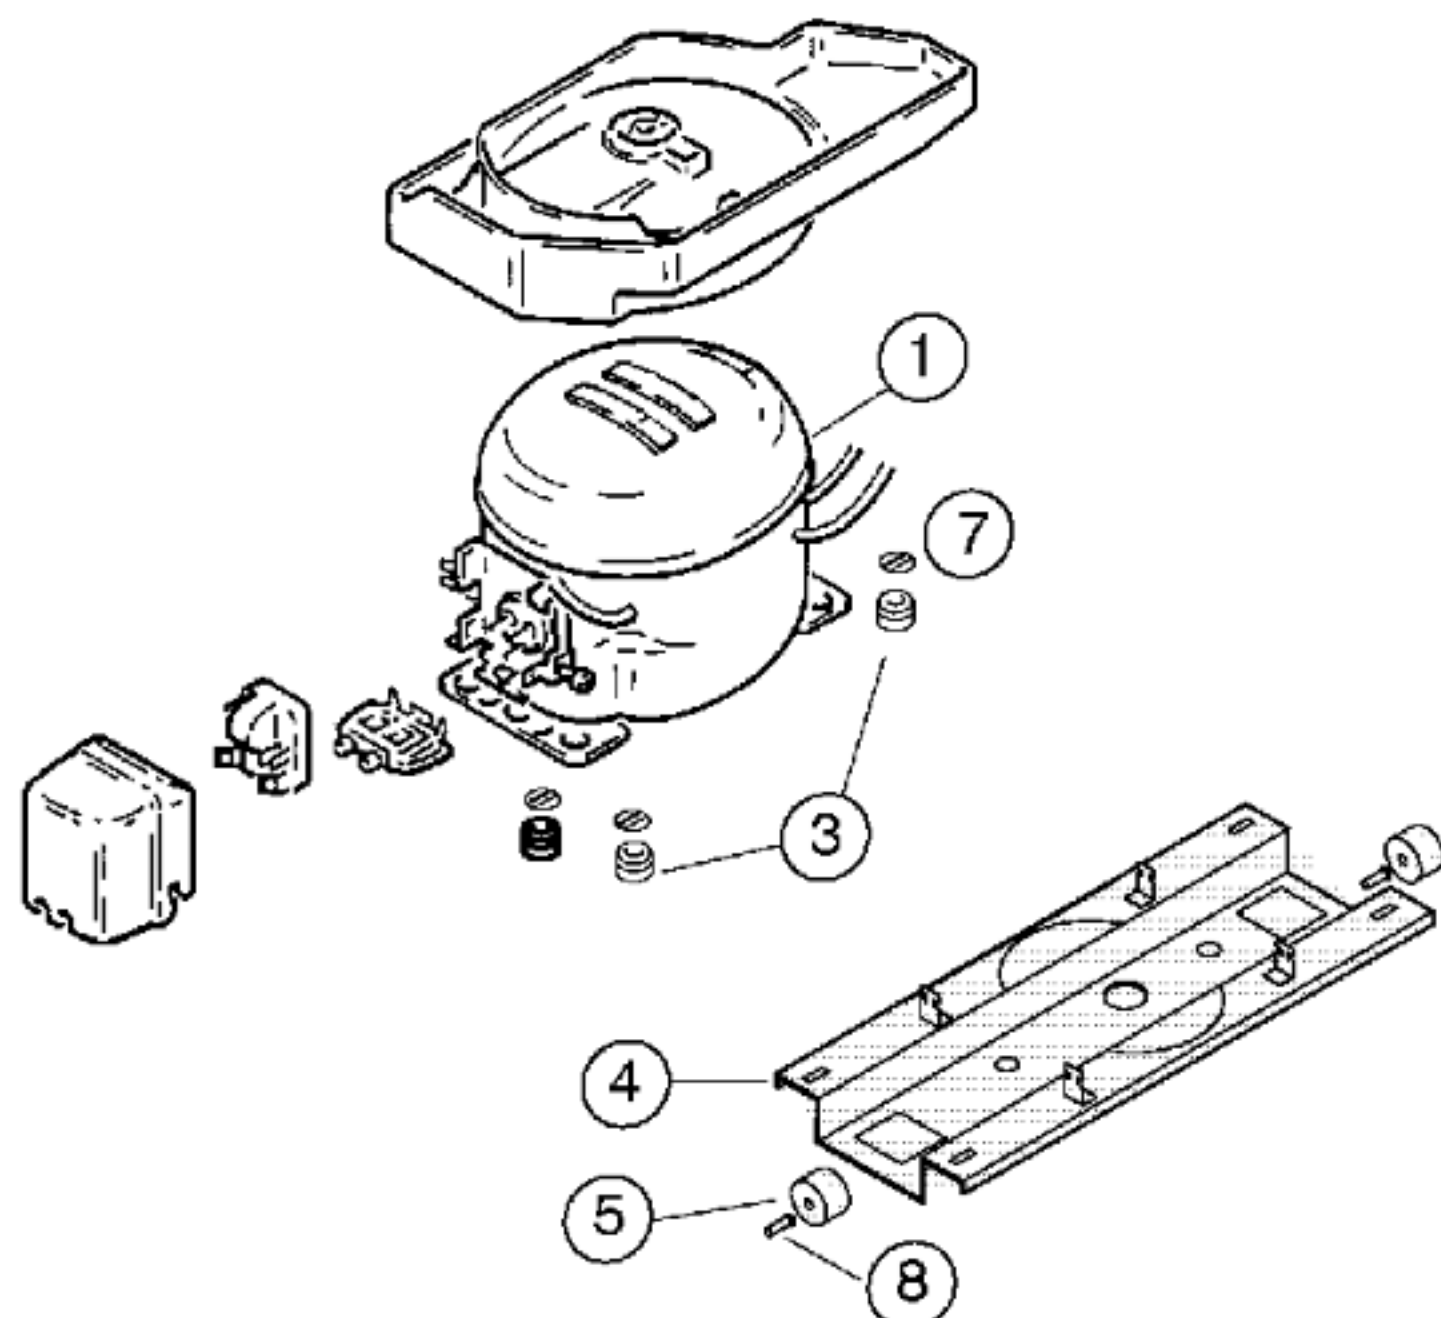Mat. - Nr. - Konstante
3740

Pos.	JIAXIPERA		
	NC1114Y		
1	14 5568		
2			
3	16 3427		
4	35 4583		
5	17 1318		
6			
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	JIAXIPERA NC1114Y		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu		W	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc		Ohm W	
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans		Ohm	
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim		Ohm V	
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz