



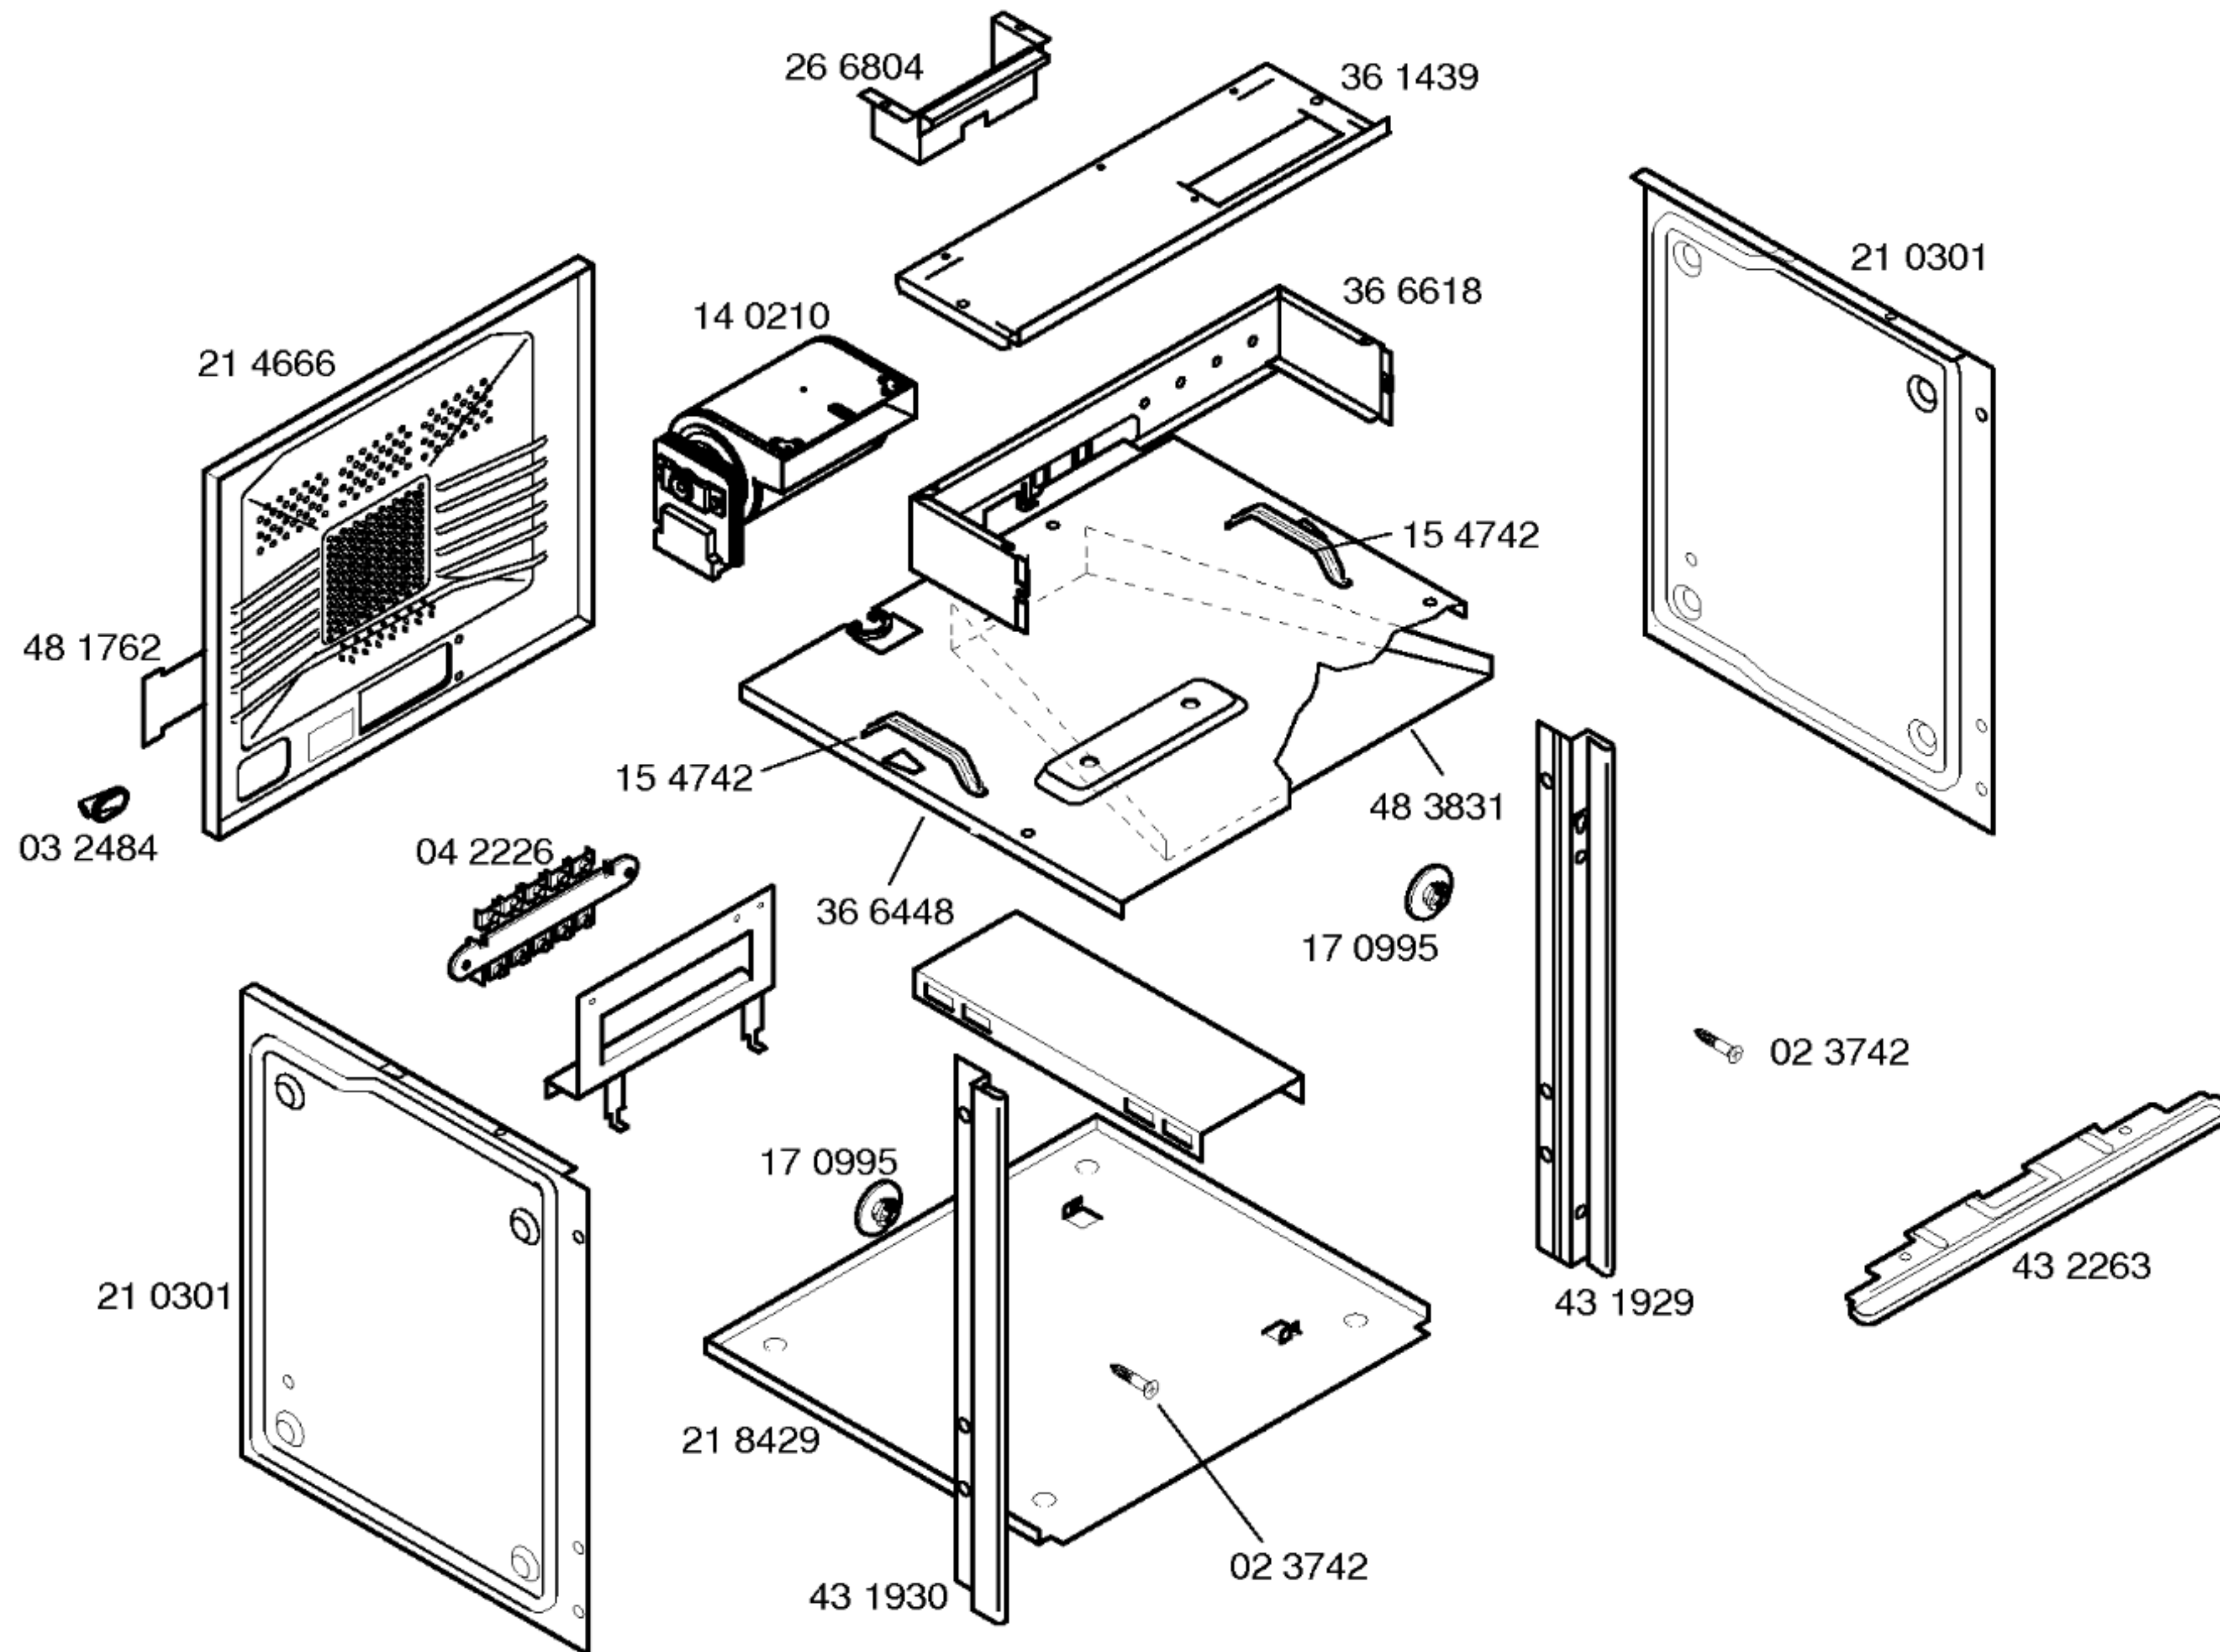


Gebrauchsanweisung
 58 4688
 (de)

Zubehör:


Back- u. Bratrost-
 engmasching
 Z1440X0
 Back- u. Bratrost
 gekröpft
 Z1430X0
 Backblech Alu
 Z1330X0
 Backblech Email
 Z1340X2
 Universalpfanne u.
 Bratrost
 Z1230X2

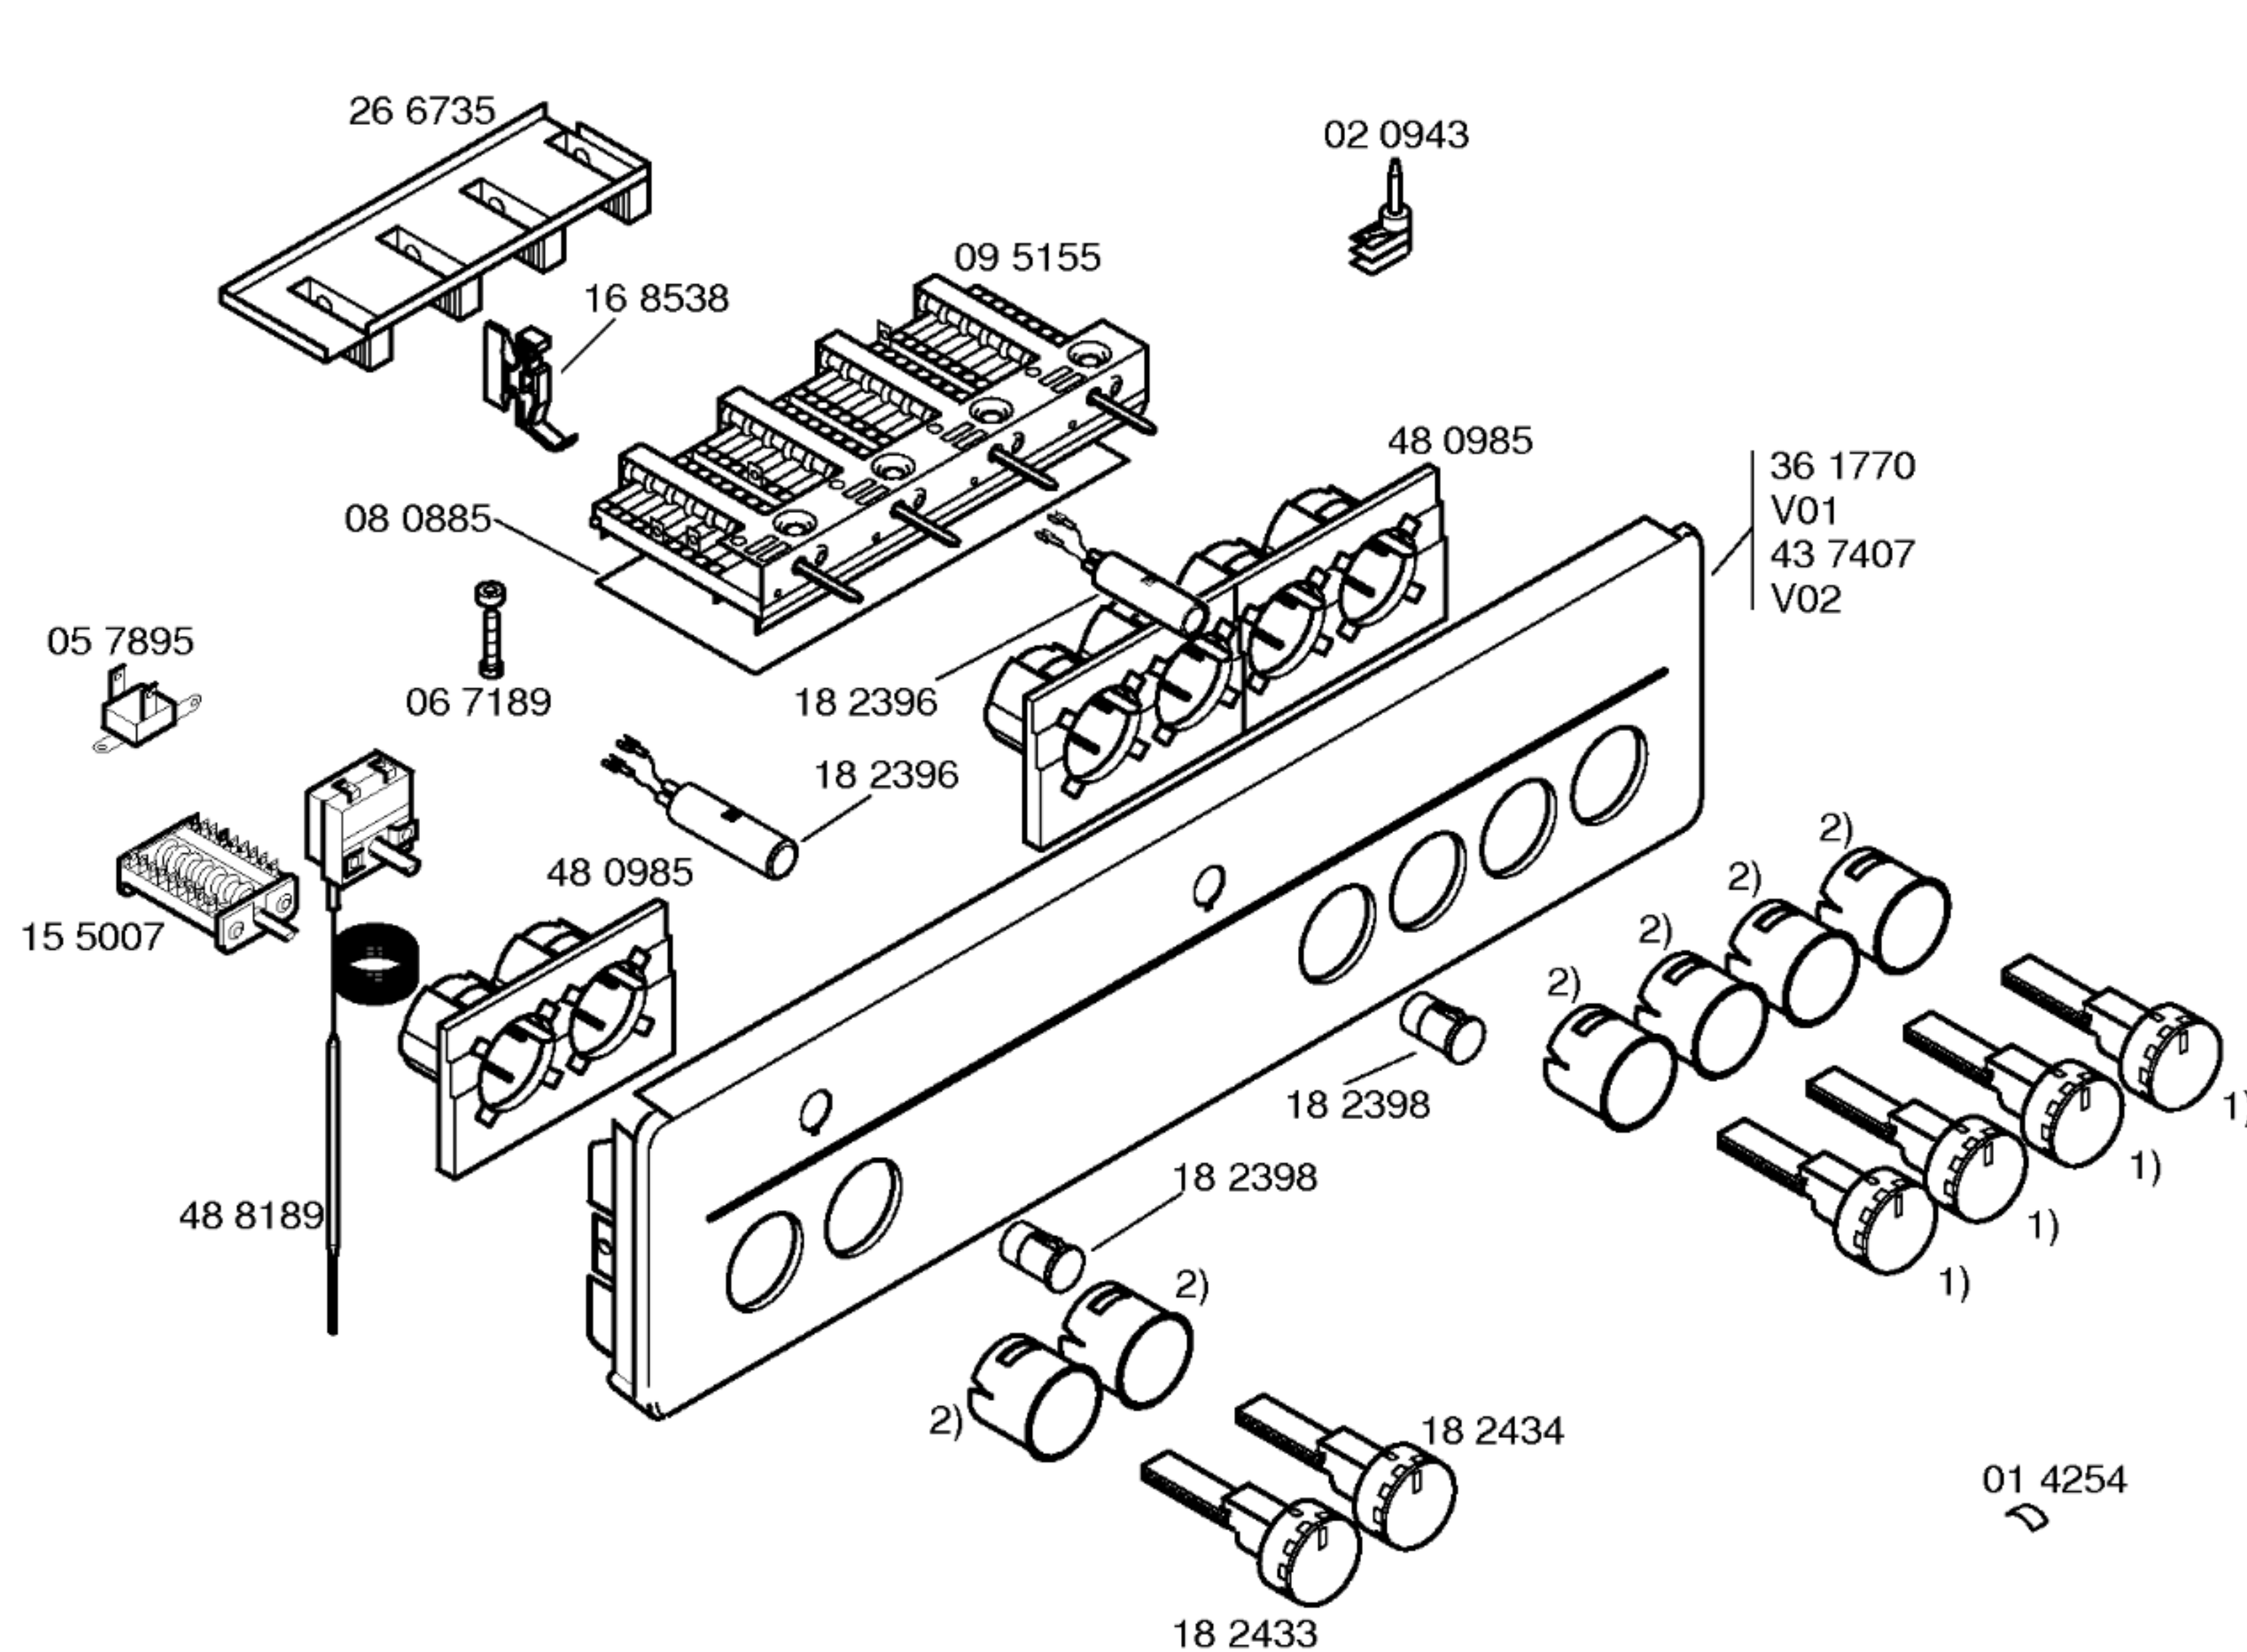

1) 18 2432
2) 18 2431

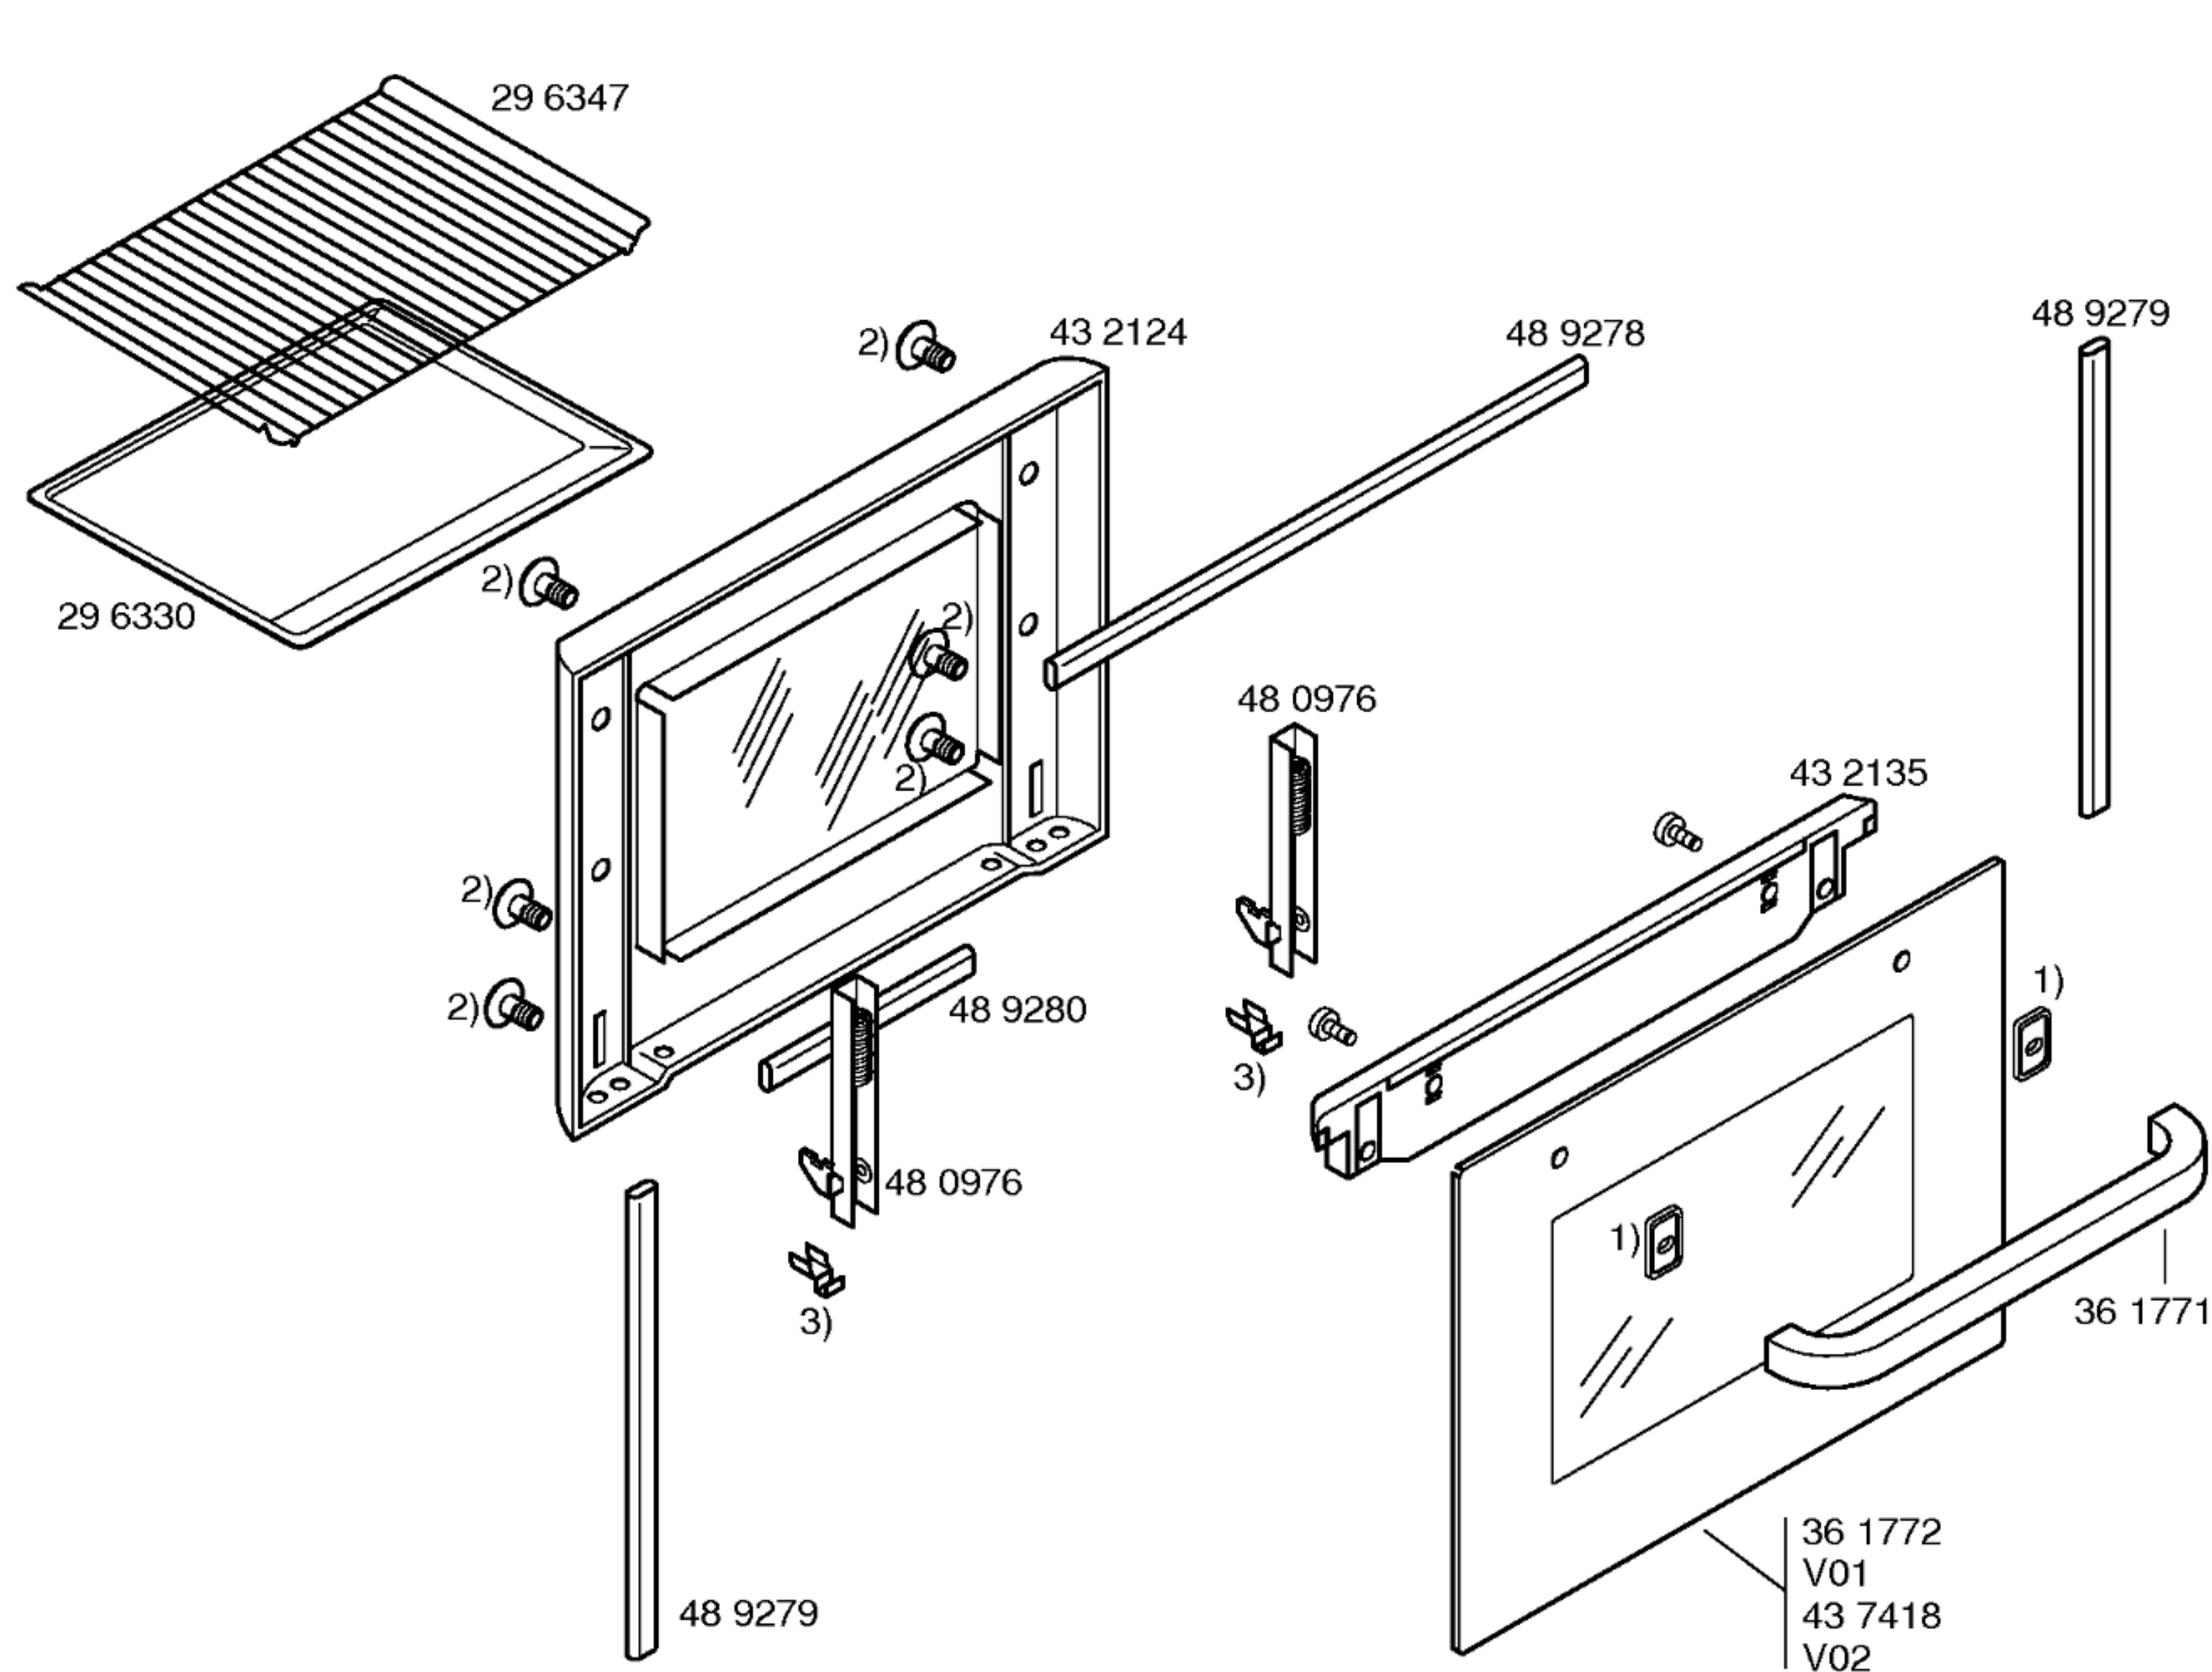

- 1) 18 2778
 2) 17 2646
 3) 18 2427

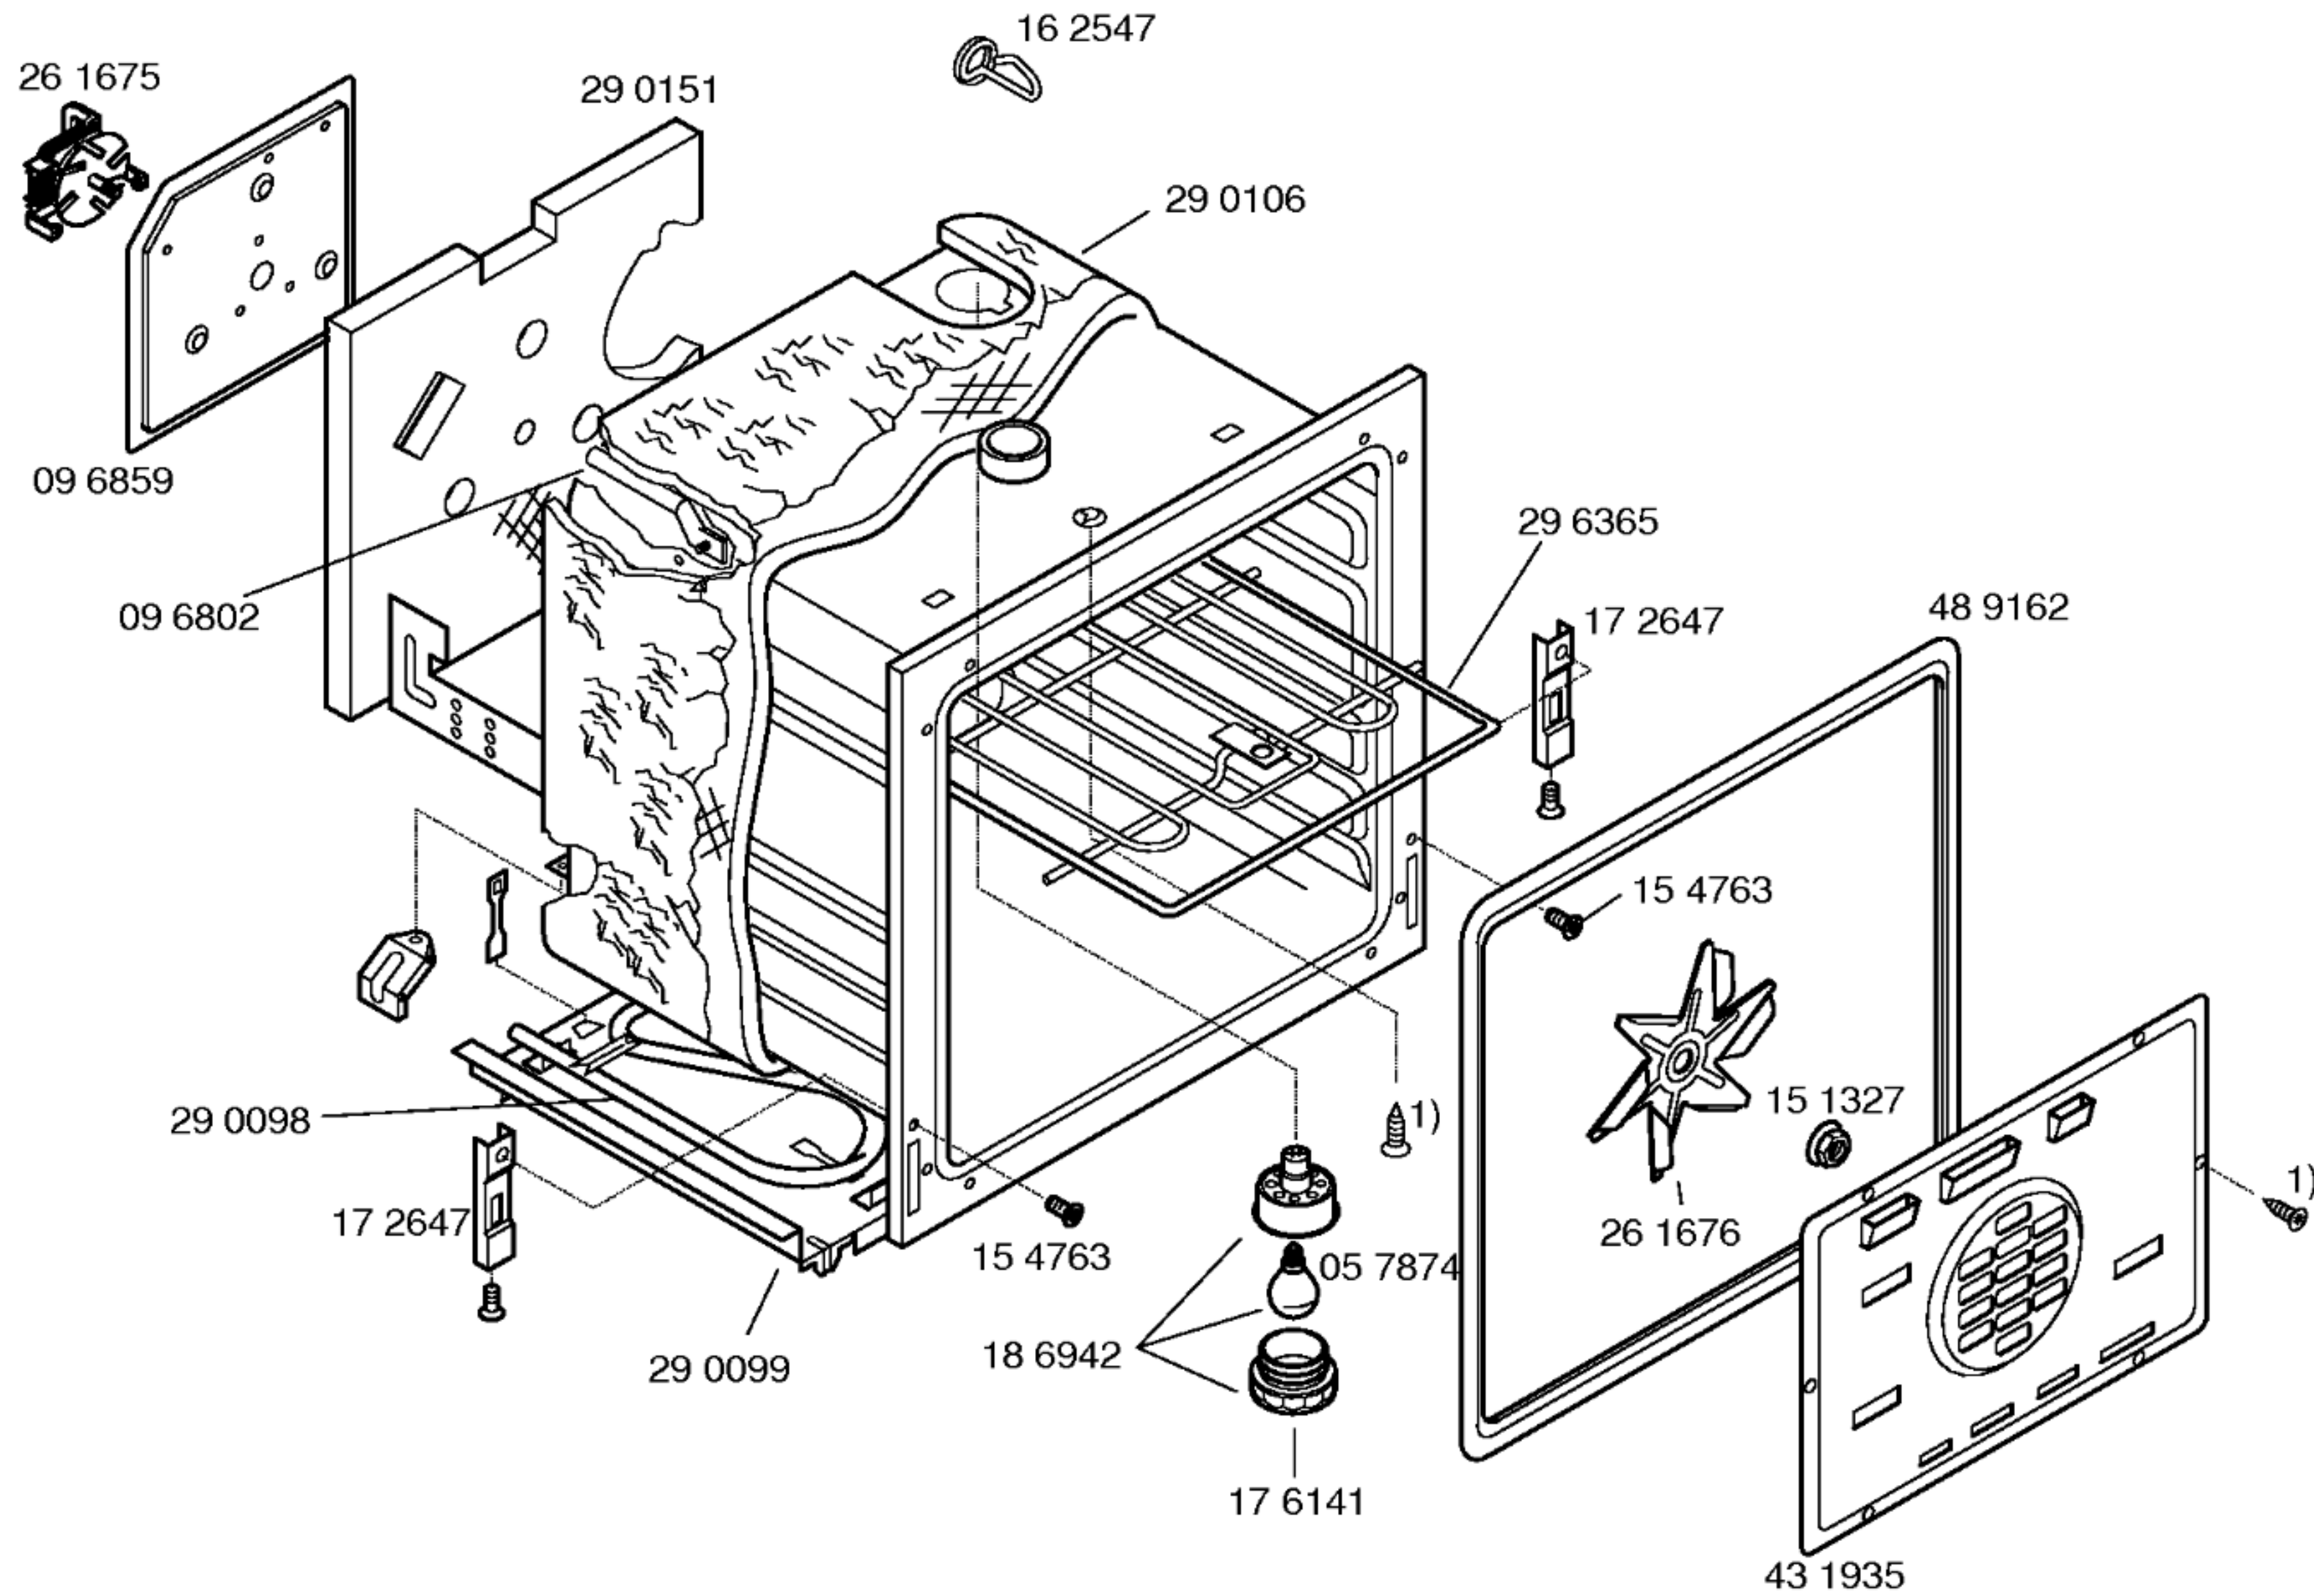

1) 41 8562