



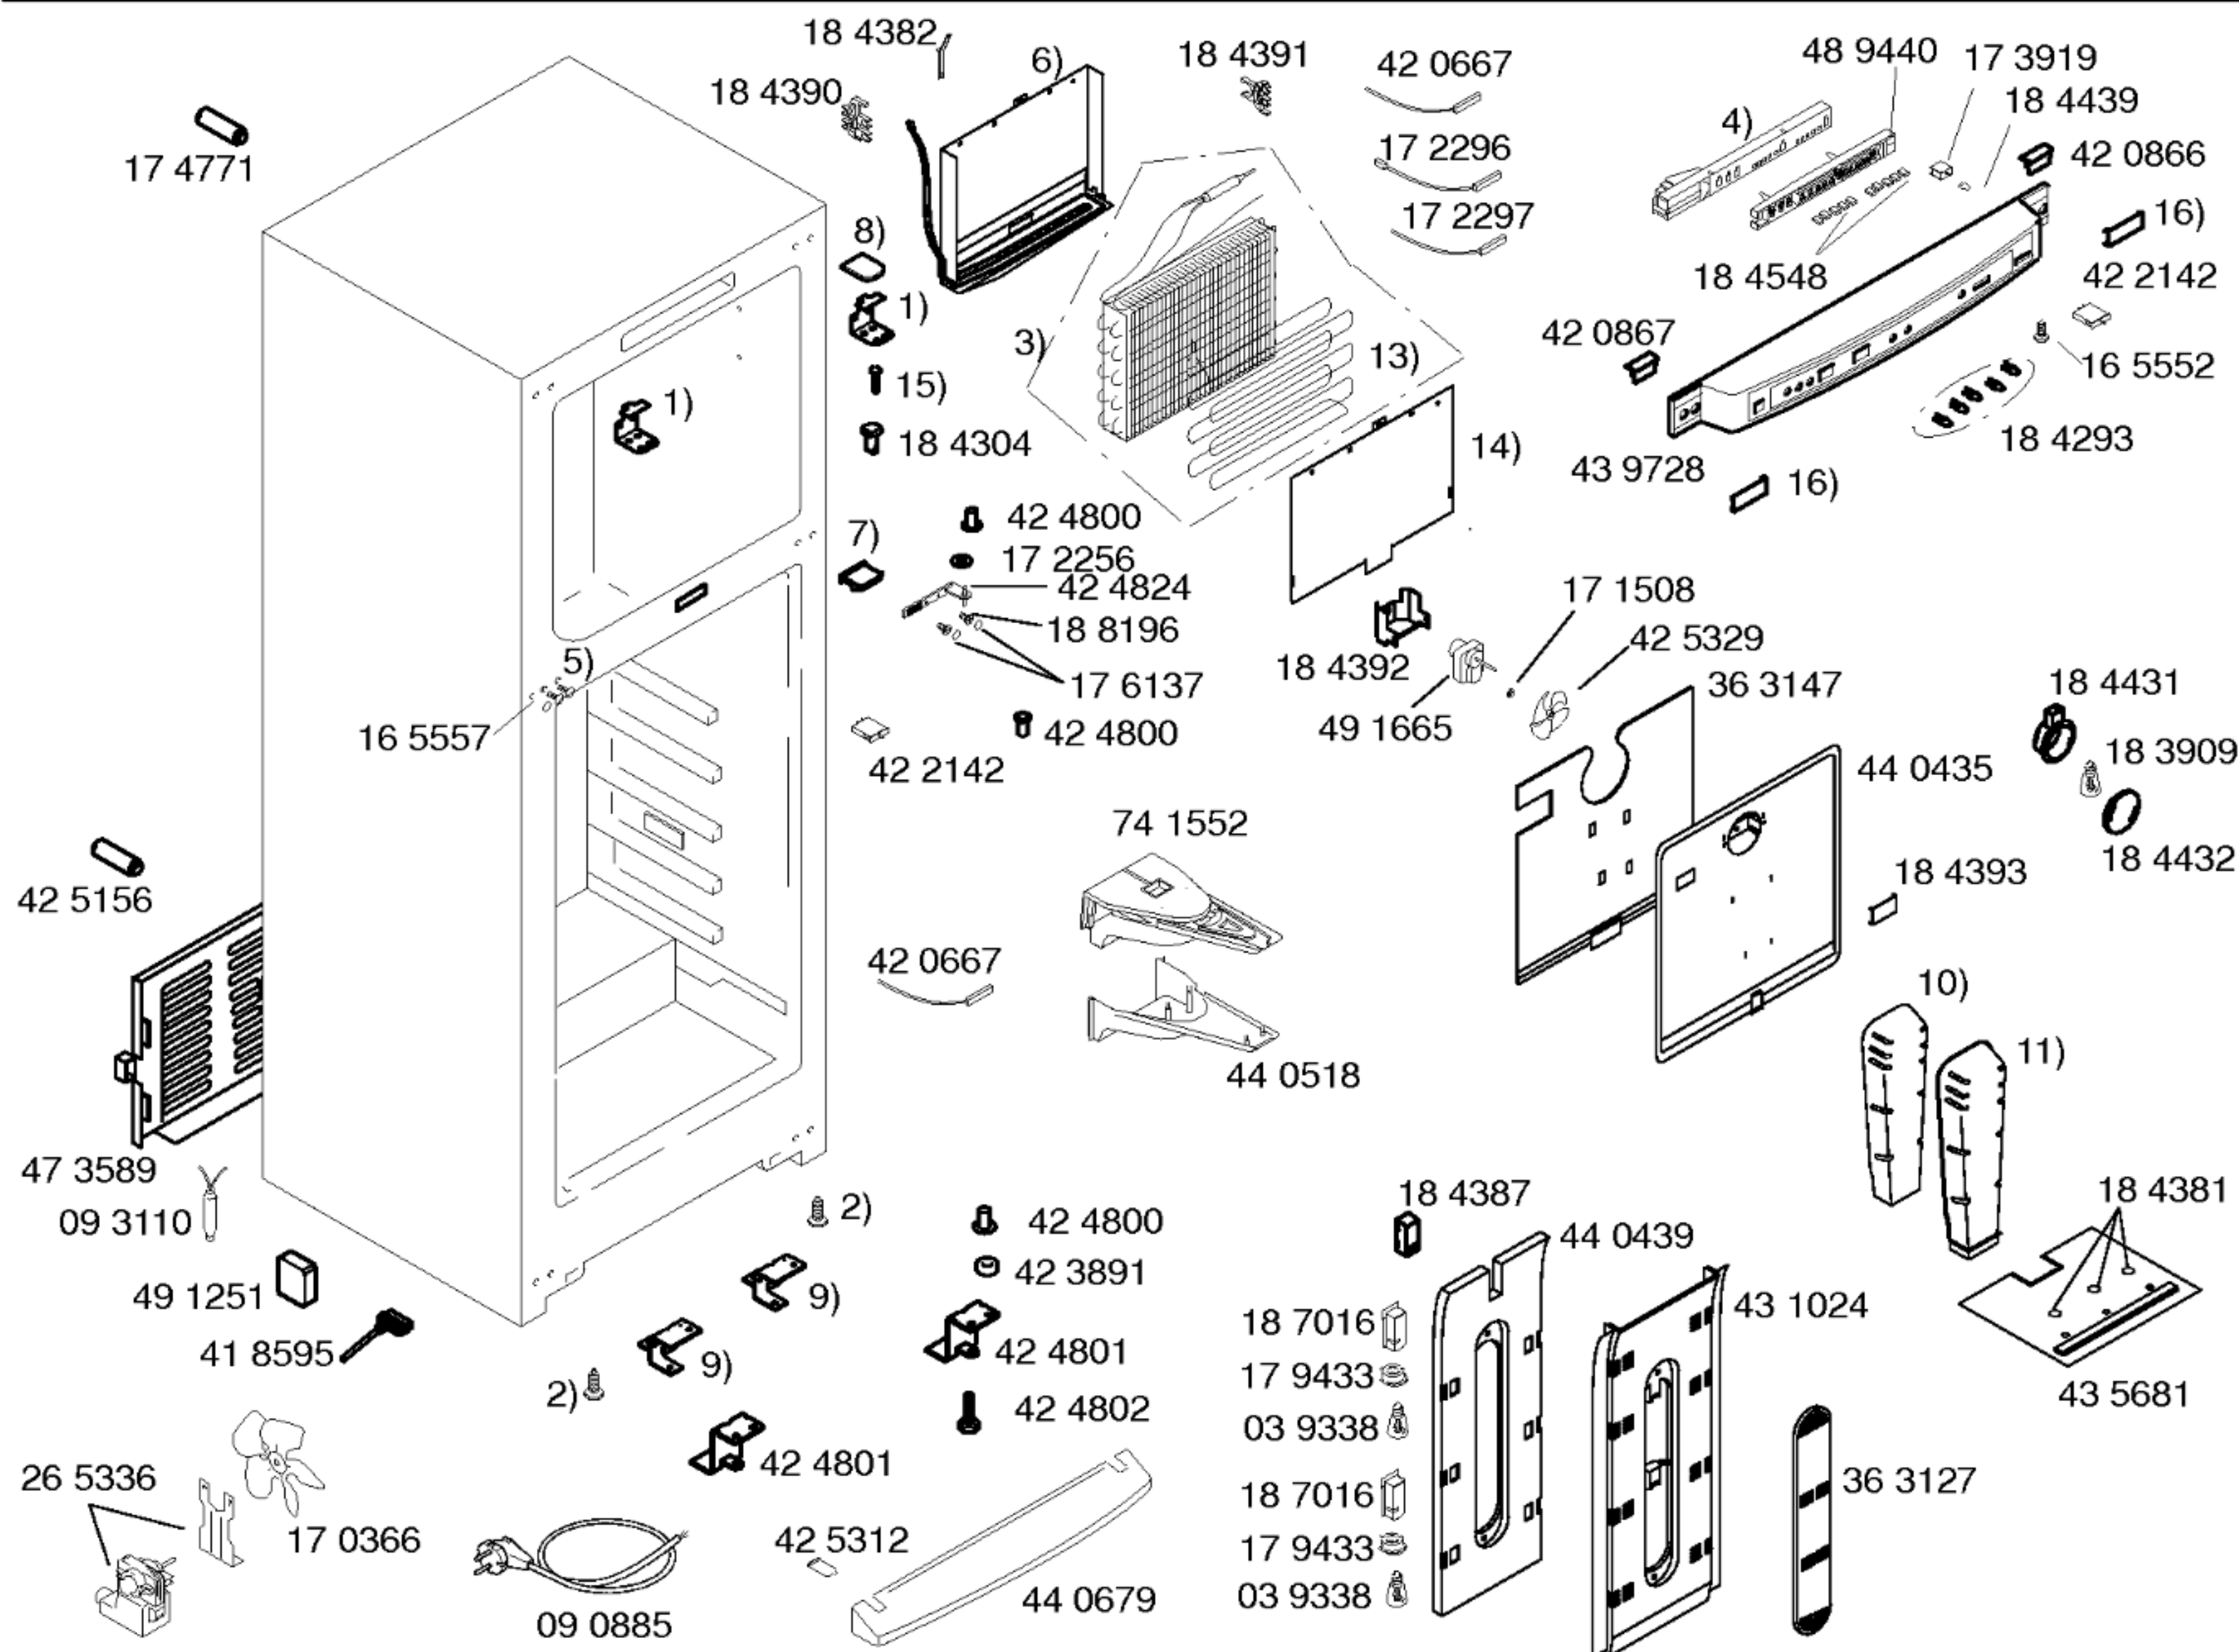


Gebrauchsanweisung
59 1356
(DE,TR)

- 1) 42 4798
- 2) 42 4340
- 3) 43 8728
- 4) 42 4814
- 5) 16 5552
- 6) 43 5739
- 7) 41 8128
- 8) 42 4799
- 9) 49 1346
- 10) 43 7166
- 11) 43 7165
- 12) 42 4801
- 13) 43 5707
- 14) 43 5738
- 15) 42 4797
- 16) 42 0864

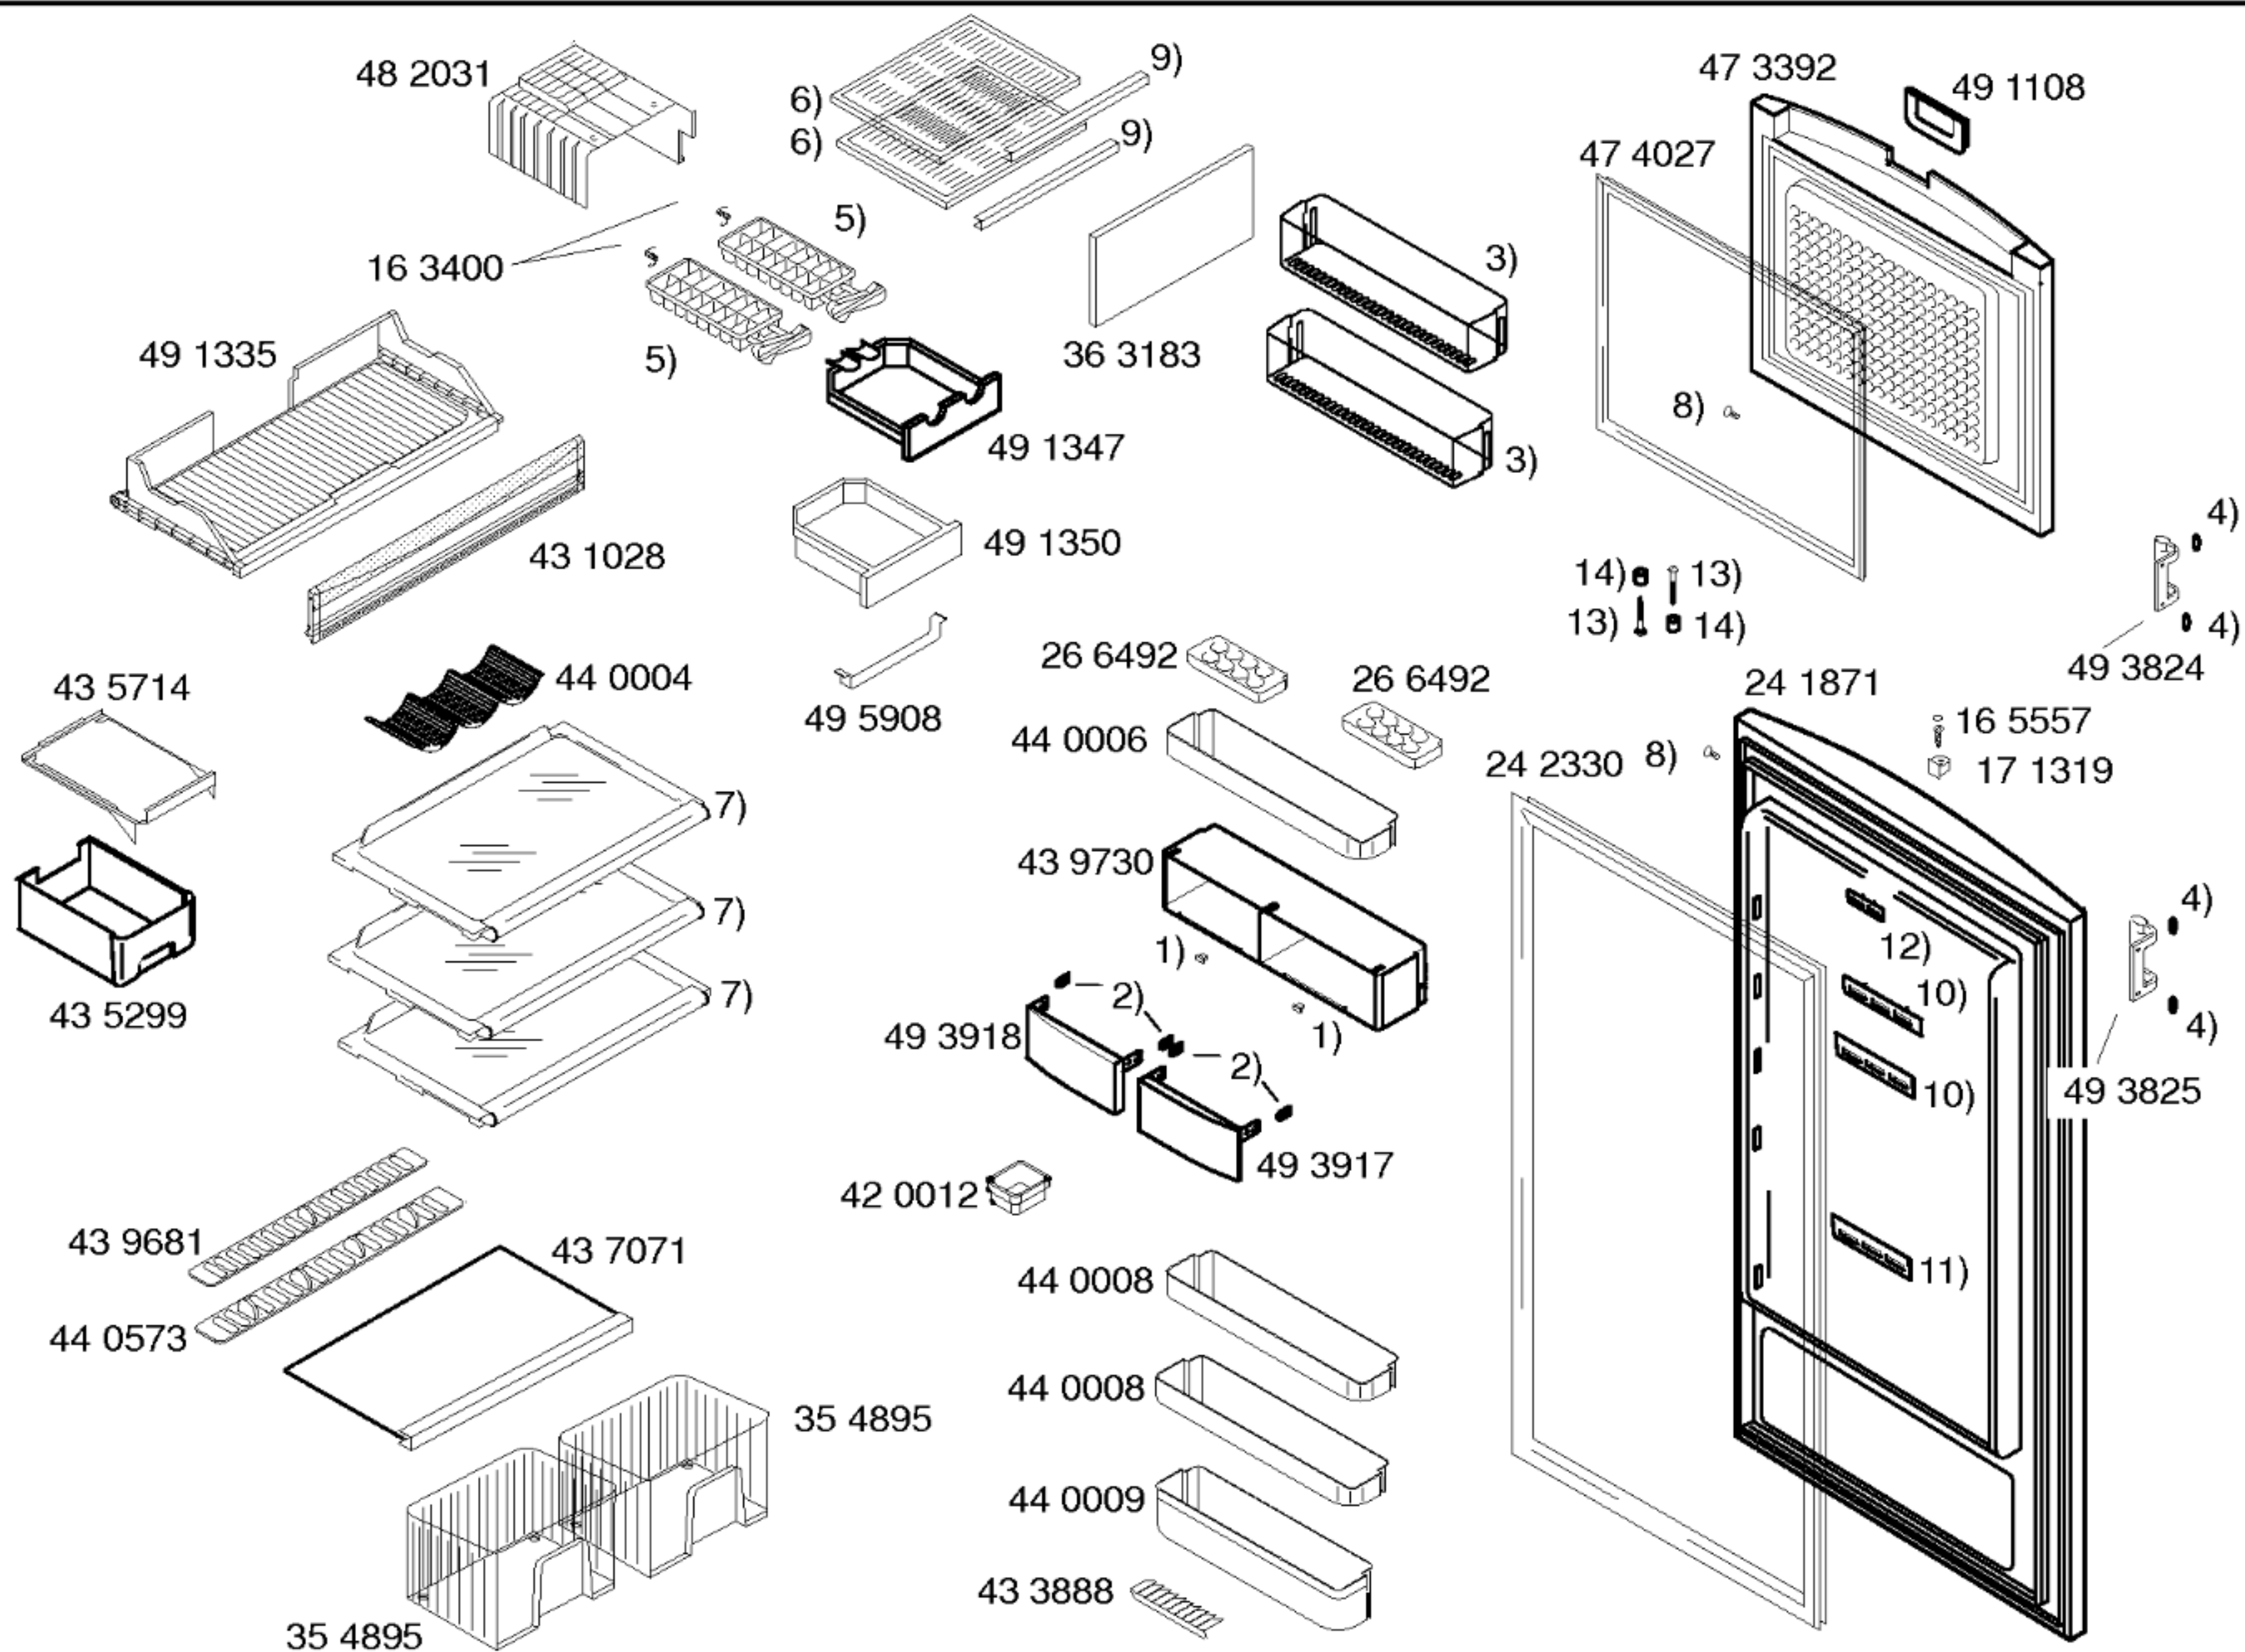

- 1) 42 0752
- 2) 42 0591
- 3) 43 4621
- 4) 16 5557
- 5) 49 1361
- 6) 49 1336
- 7) 43 6568
- 8) 060083
- 9) 43 5710
- 10) 49 3815
- 11) 49 3814
- 12) 49 4459
- 13) 18 8194
- 14) 18 8188

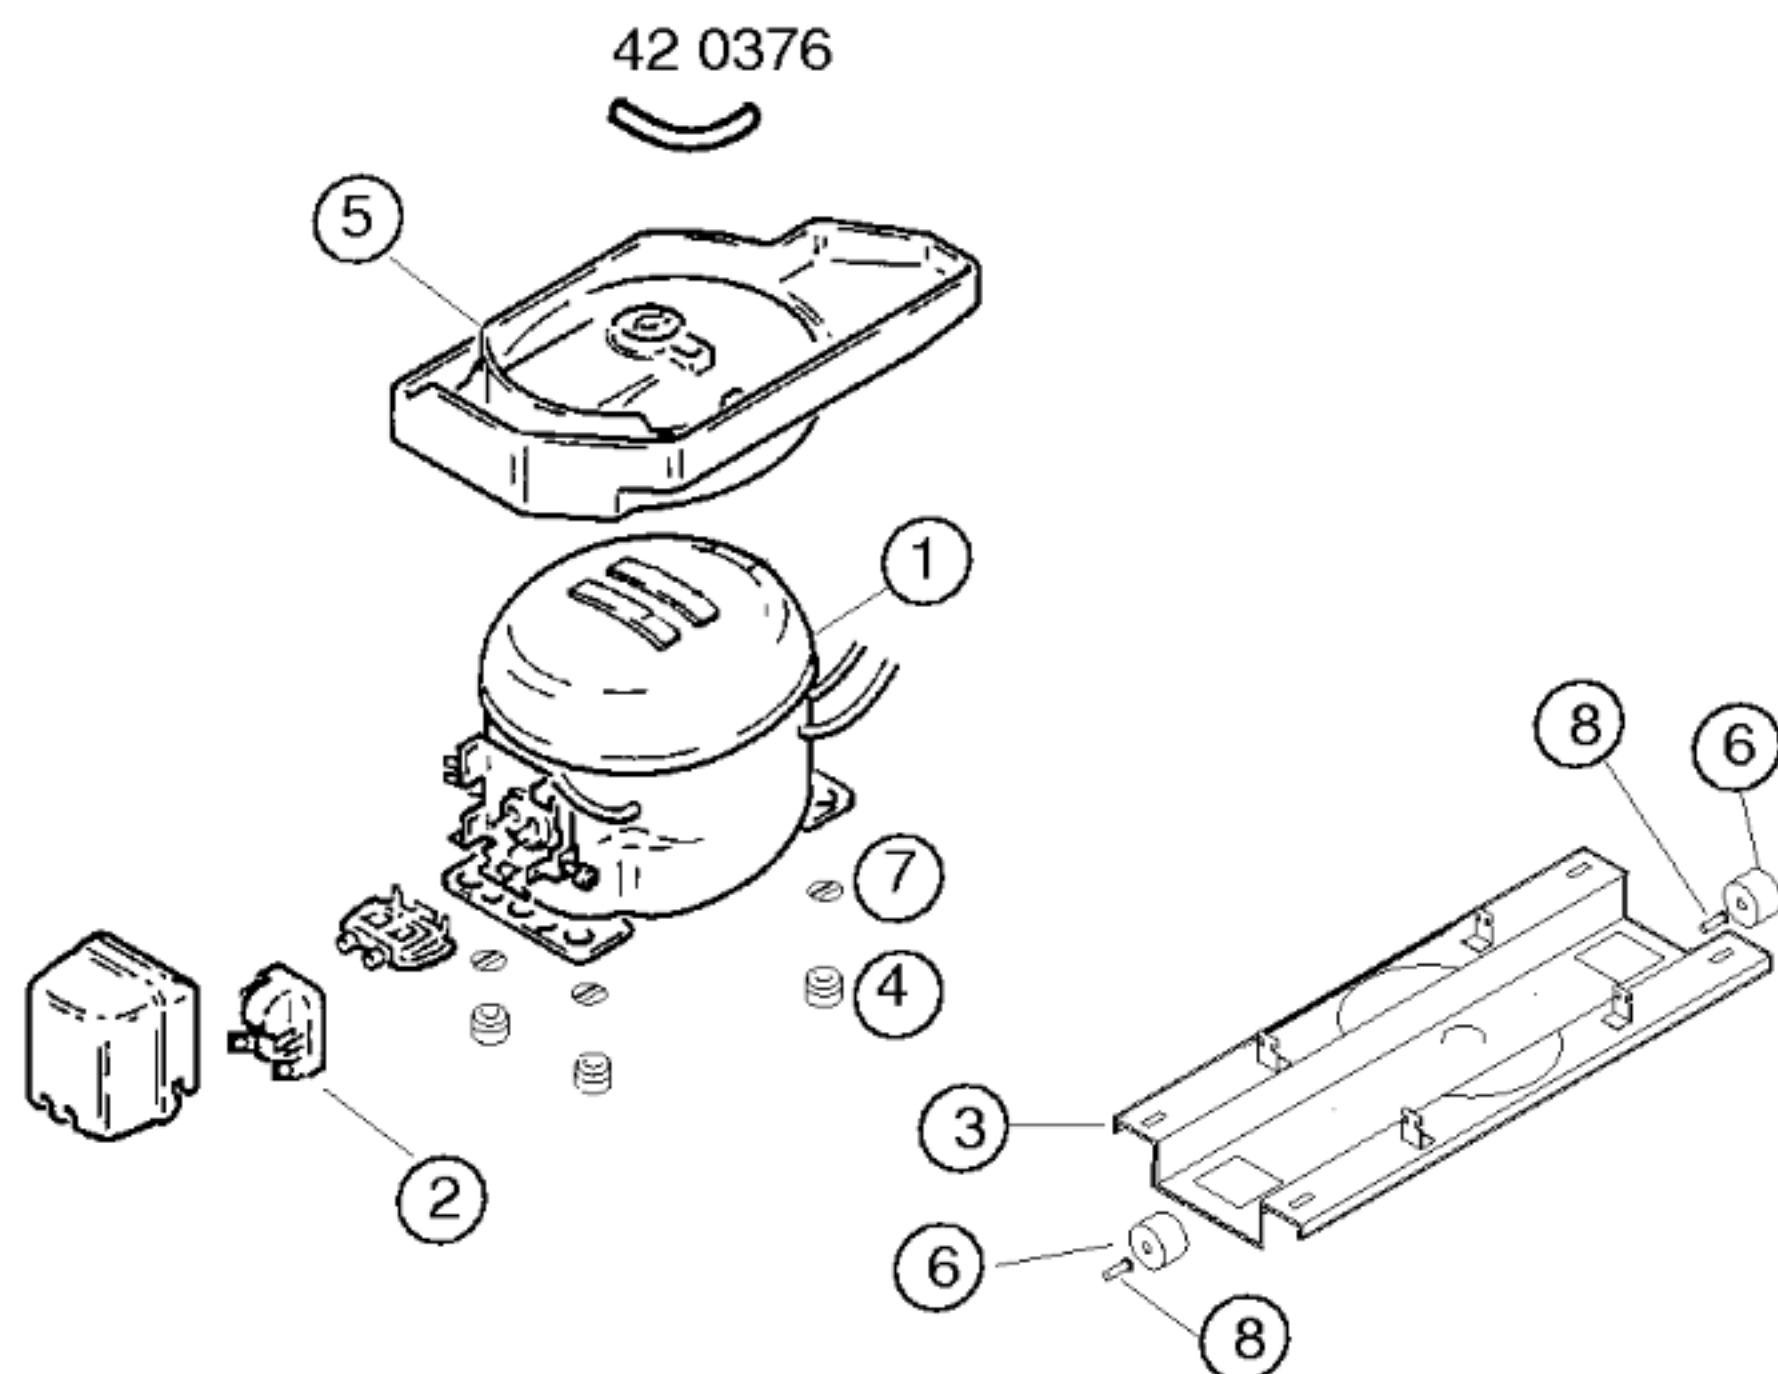

Pos.	Aspera		
	NBM1119Y		
1	14 3989		
2	42 5966		
3	35 4583		
4	16 3427		
5	49 1138		
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Aspera		
Typ/Type/Tip	NBM1119Y		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A		
Widerstand/Resistance/Rezistans Ha/	Ω		
Hi/aux.			
Temp.Reyler/Thermostat/Termostat			
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari	R600a	g	65
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans	Ω		
Widerstand/Resistance/Direnc	W		
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör	Ω		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf	Ω		
Widerstand/Resistance/Rezistans	V		
Spannung/Voltage/Gerilim			
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz