



Gebrauchsanweisung
59 1927
(AR,EN)

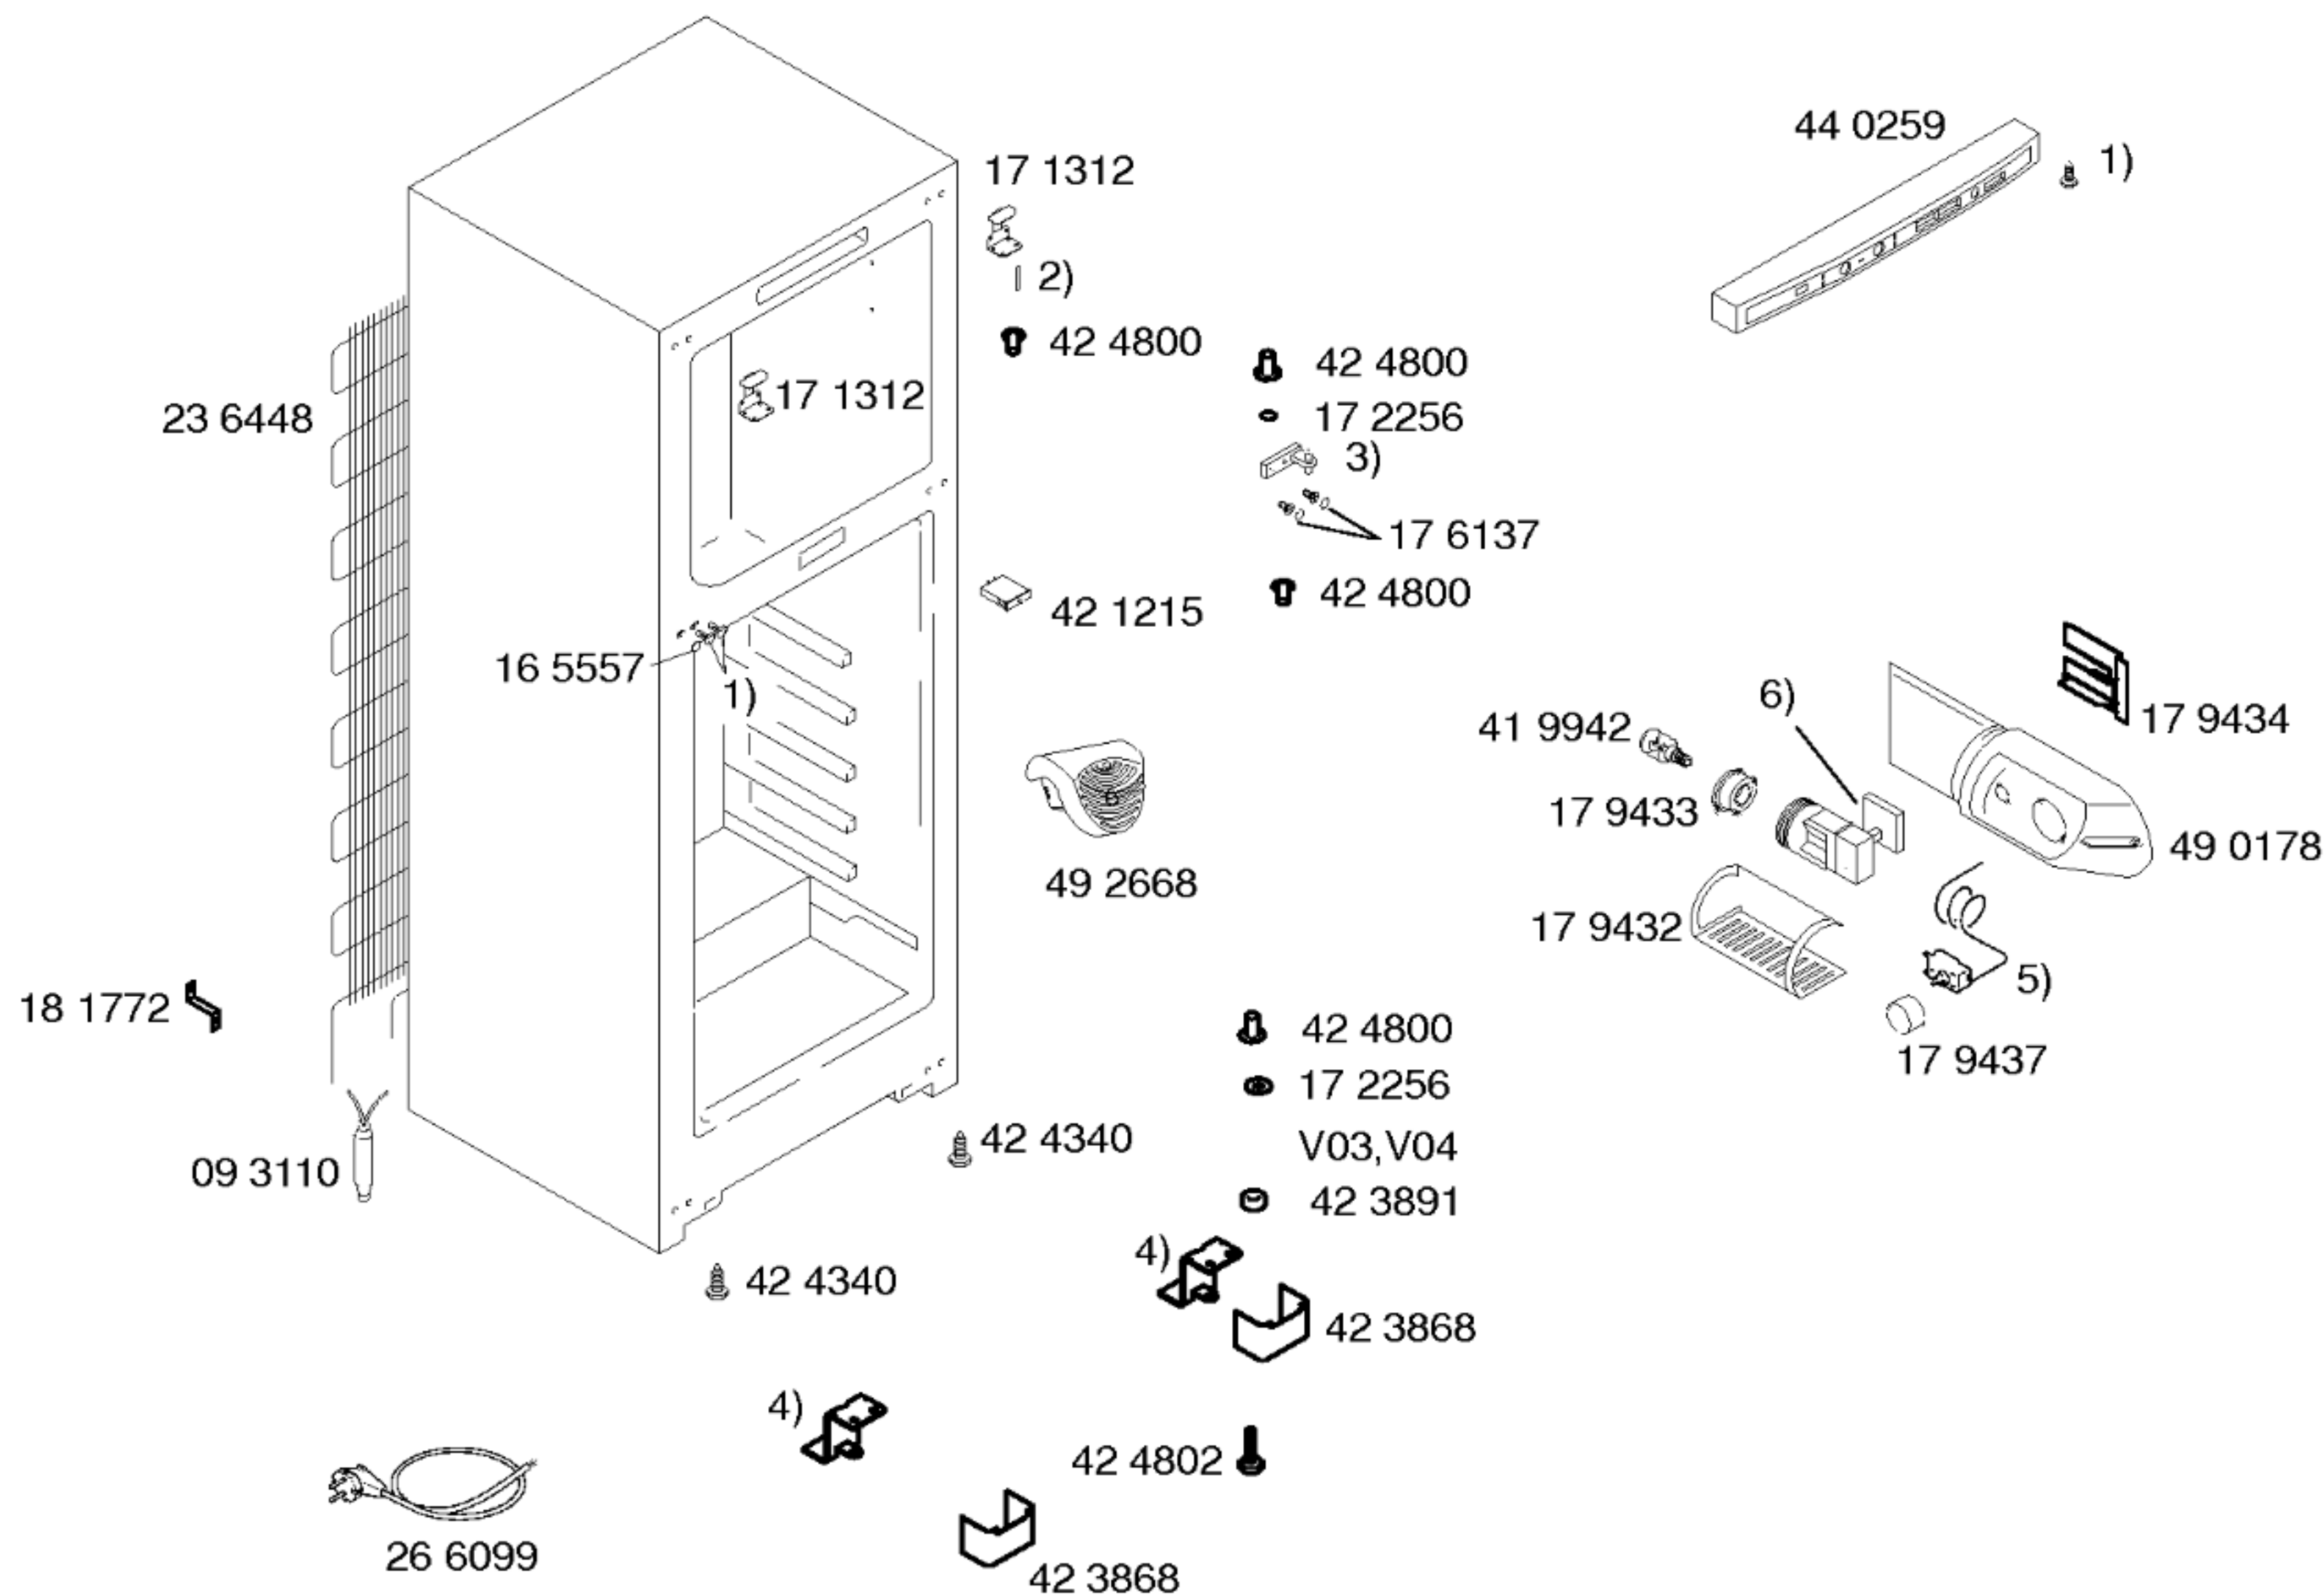


- 1) 16 5552
- 2) 17 1311
V01
42 4398
V02,V03,V04
- 3) 42 0643
V01
42 4825
V02,V03,V04
- 4) 42 48 01
V01,V02
42 8184
V03,V04
- 5) 18 7574
V01,V02
42 9409
V03,V04
- 6) 17 9431
V01,V02
42 9410
V03,V04






35 4598

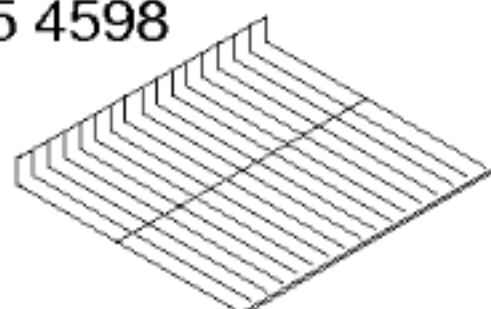


48 0527

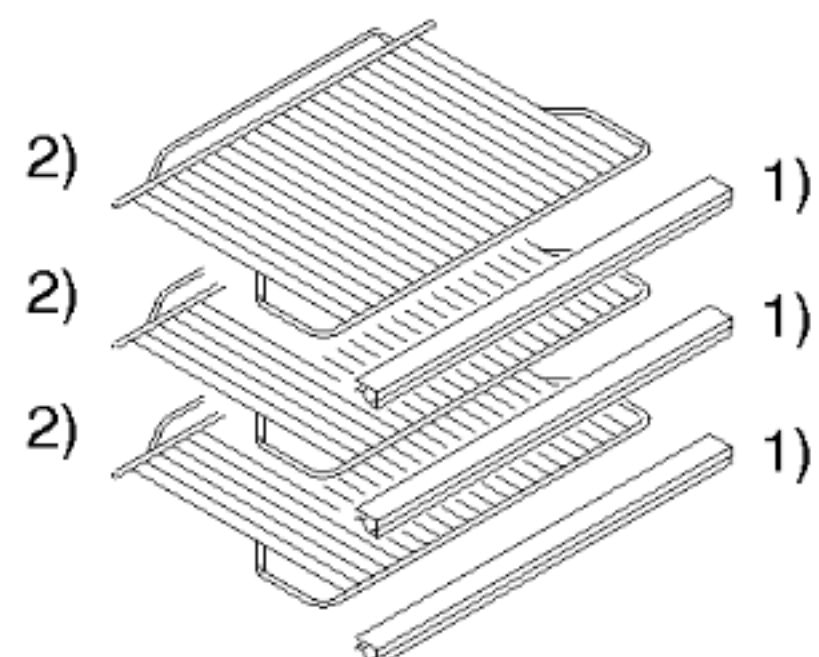

43 8589

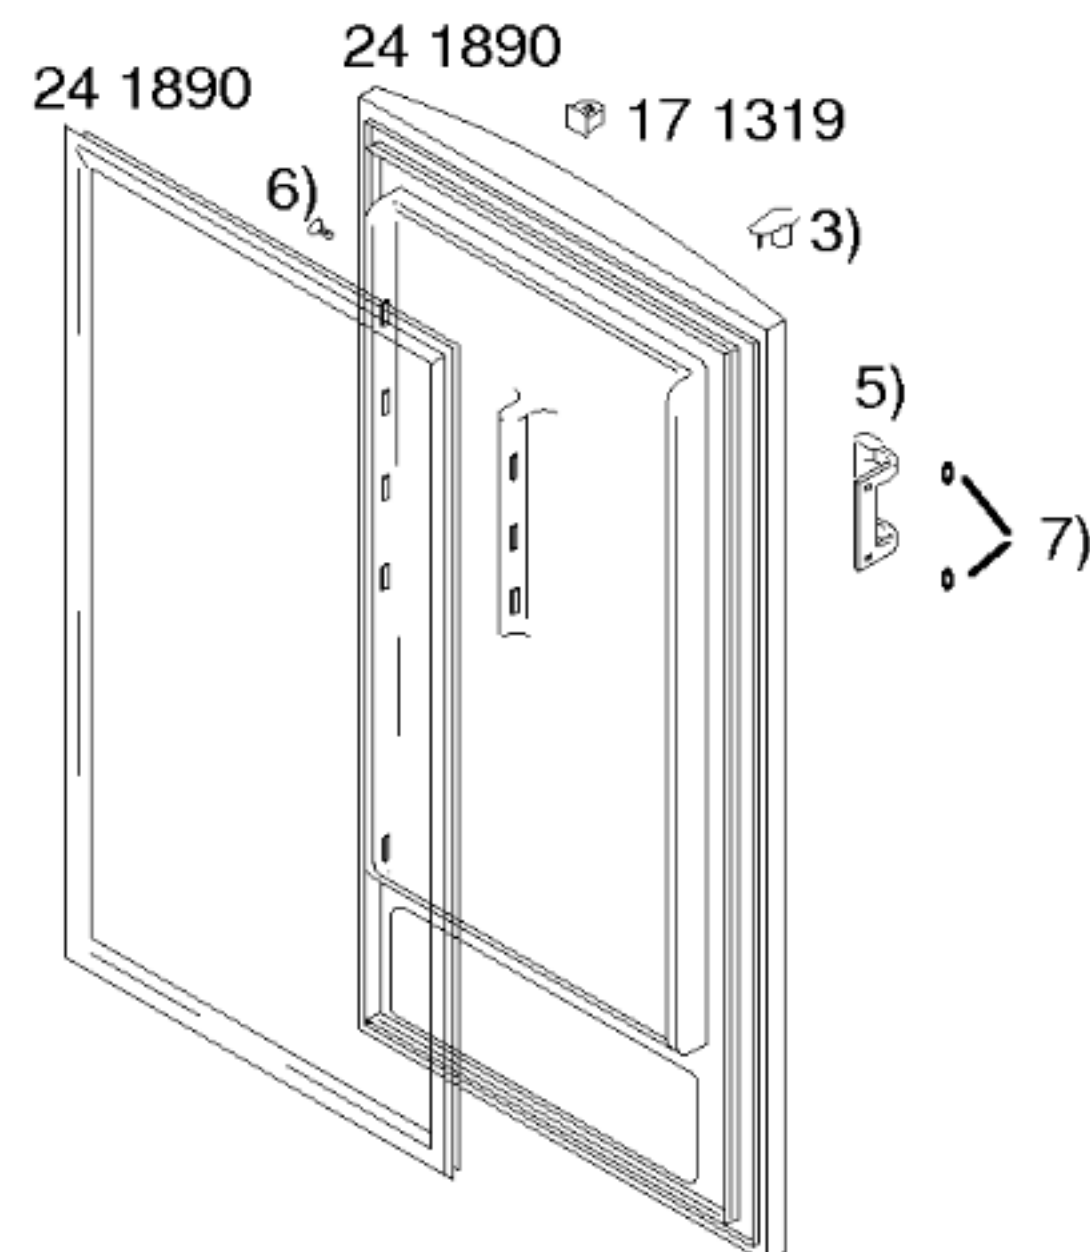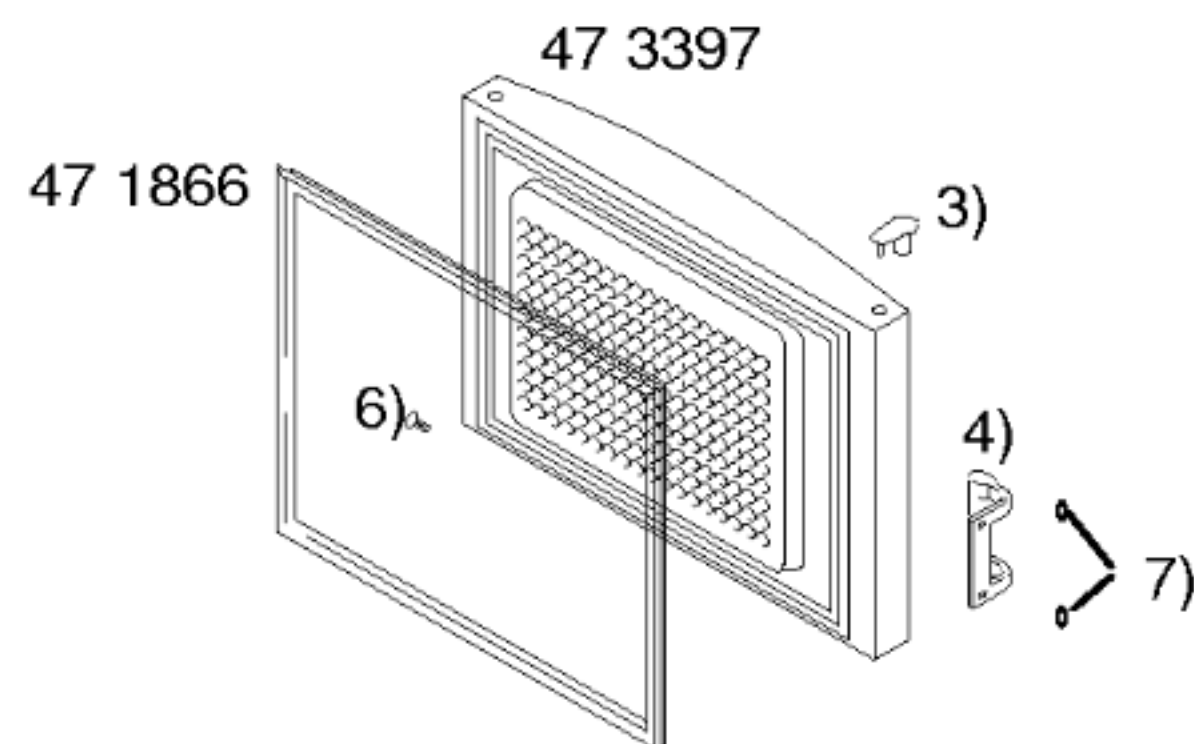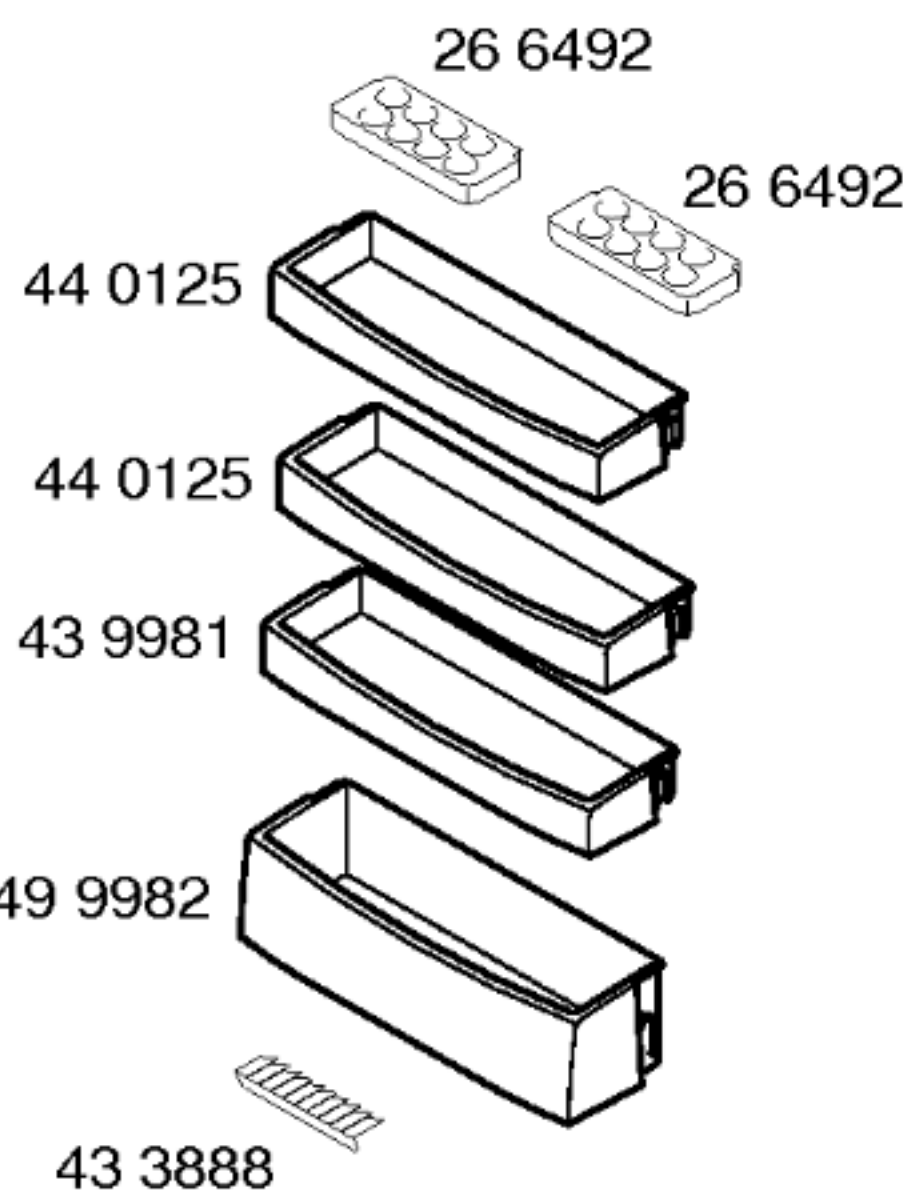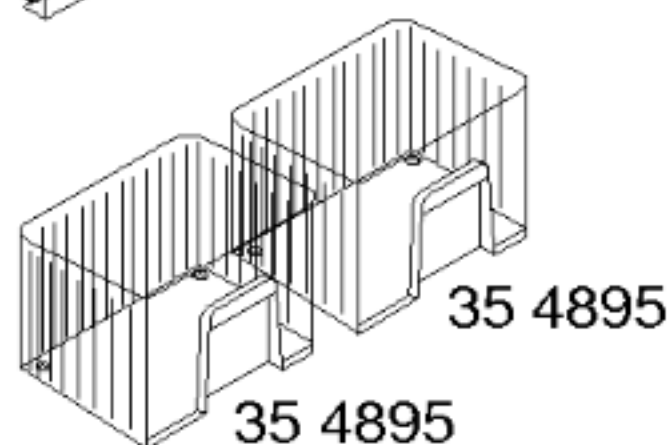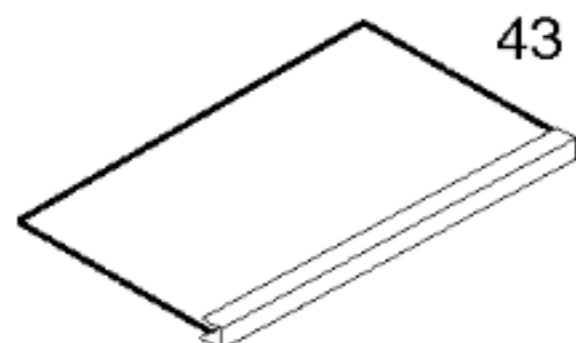

- 1) 36 0391
- 2) 35 4780
- 3) 17 1321
- 4) 48 0648
- V01,V02,V03
- 64 0504
- V04
- 5) 48 0646
- V01,V02,V03
- 64 0503
- V04
- 6) 16 6484
- 7) 60 4835
- V04

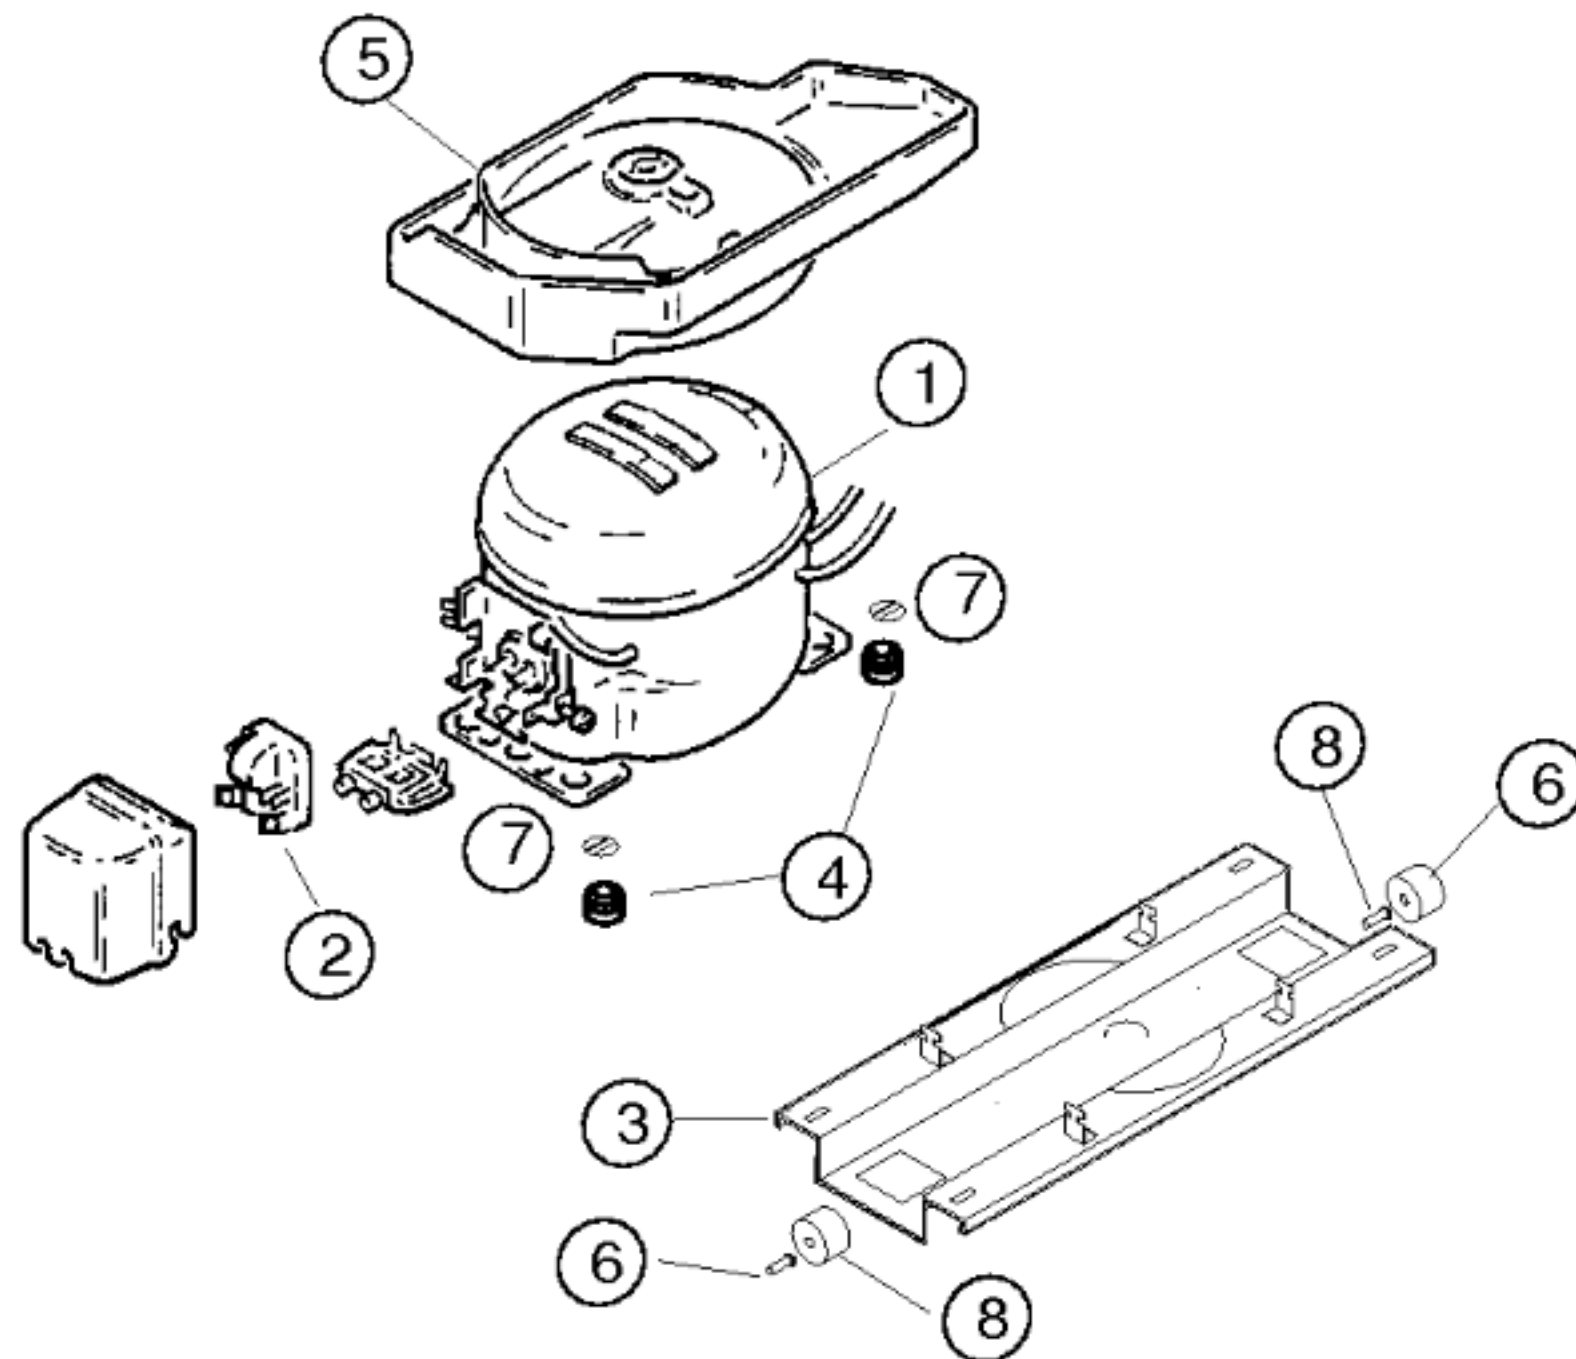

Pos.	Danfoss		
	NLE15		
1	14 2207		
2	16 5570		
3	35 4583		
4	16 3427		
5	49 1201		
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör		Danfoss	
Typ/Type/Tip		NLE15	
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi		A	
Widerstand/Resistance/Rezistans		Ohm	
Hi/aux.			
Temp.Reyler/Thermostat/Termostat		Danfoss	
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri		..ein/acma °C	+4.5 +4.5
Valeurs de commutation/Termostat degeri		..aus"/kapama	
(..abtaven' od)		..alarm'	-31 -18
Füllmenge/Fill. quantily/ Dolum miktari		g	*
		g	
Anschlusswert/Comm. load/Giris gucu		W	*
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc		Ohm	
Leistung/Power/Guc		W	
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans		Ohm	
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans		Ohm	
Spannung/Voltage/Gerilim		V	
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz