 


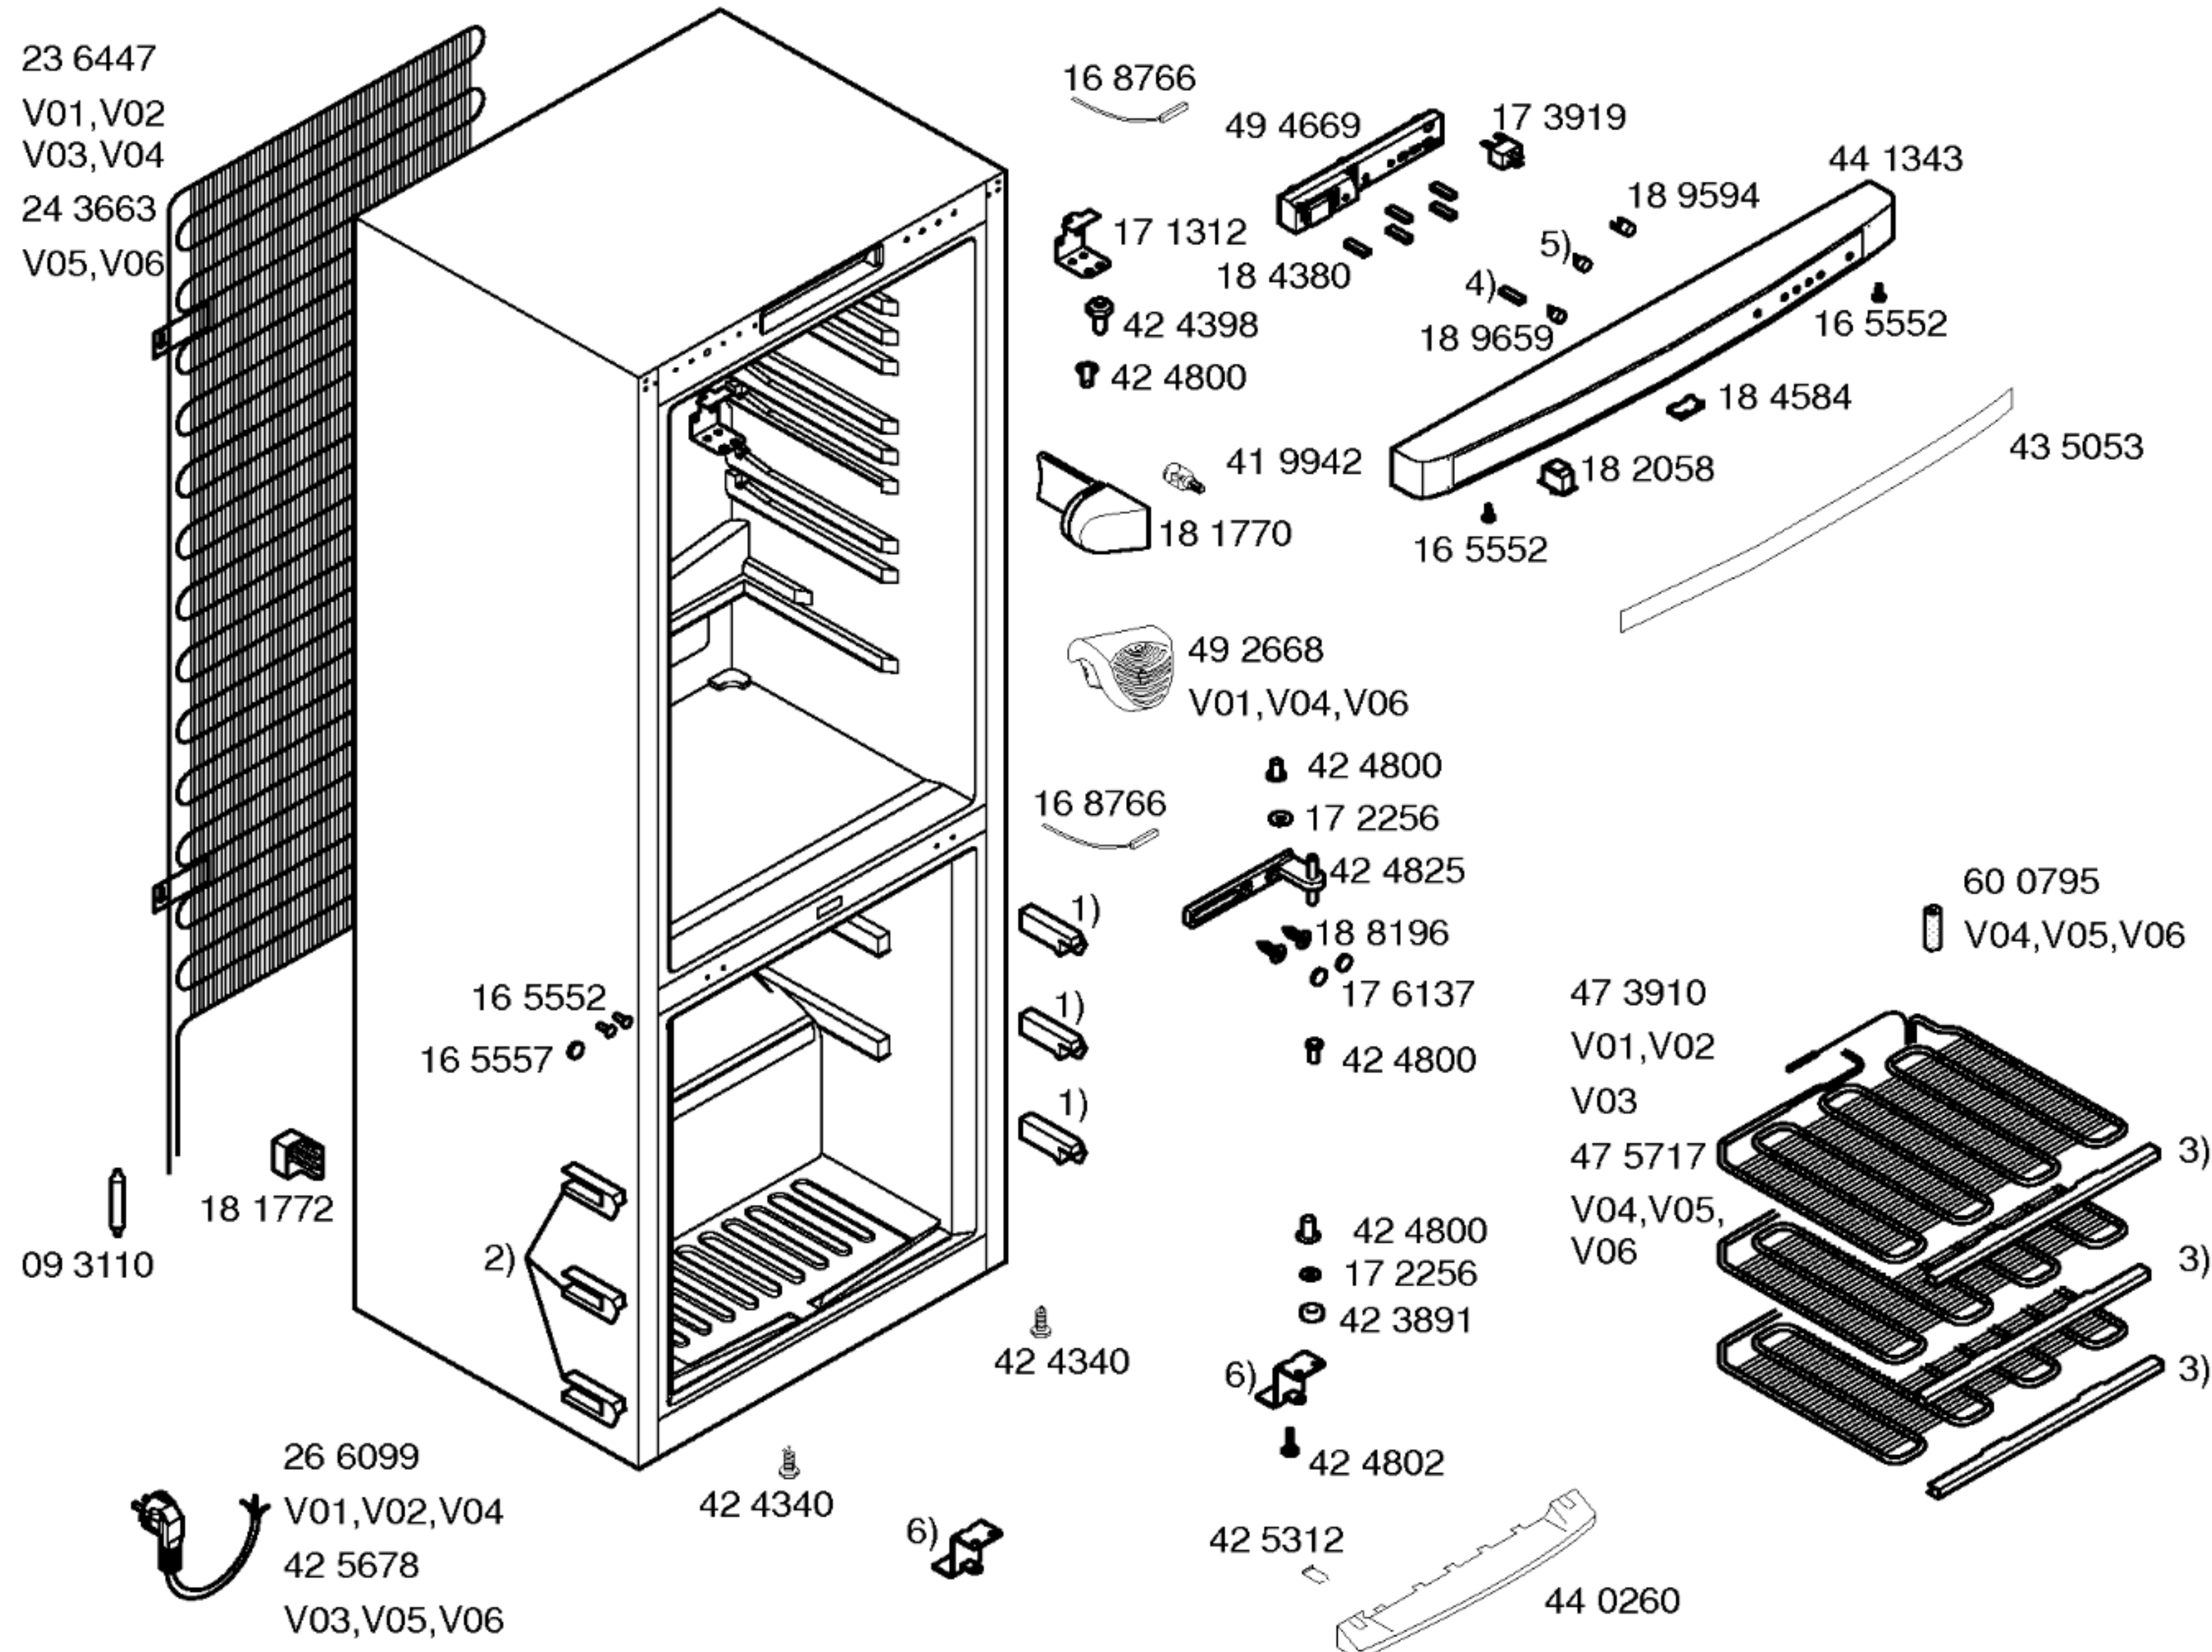

Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
59 8339

V01,V04

(FR)

59 8340

V02,V03,V05,V06

(DE,FR,IT,NL,SV)

1) 18 3821

2) 18 3822

3) 36 2472

4) 18 4433

 
5) 18 9658

Thermometer

41 7877


V01,V04,V06

6) 42 8184

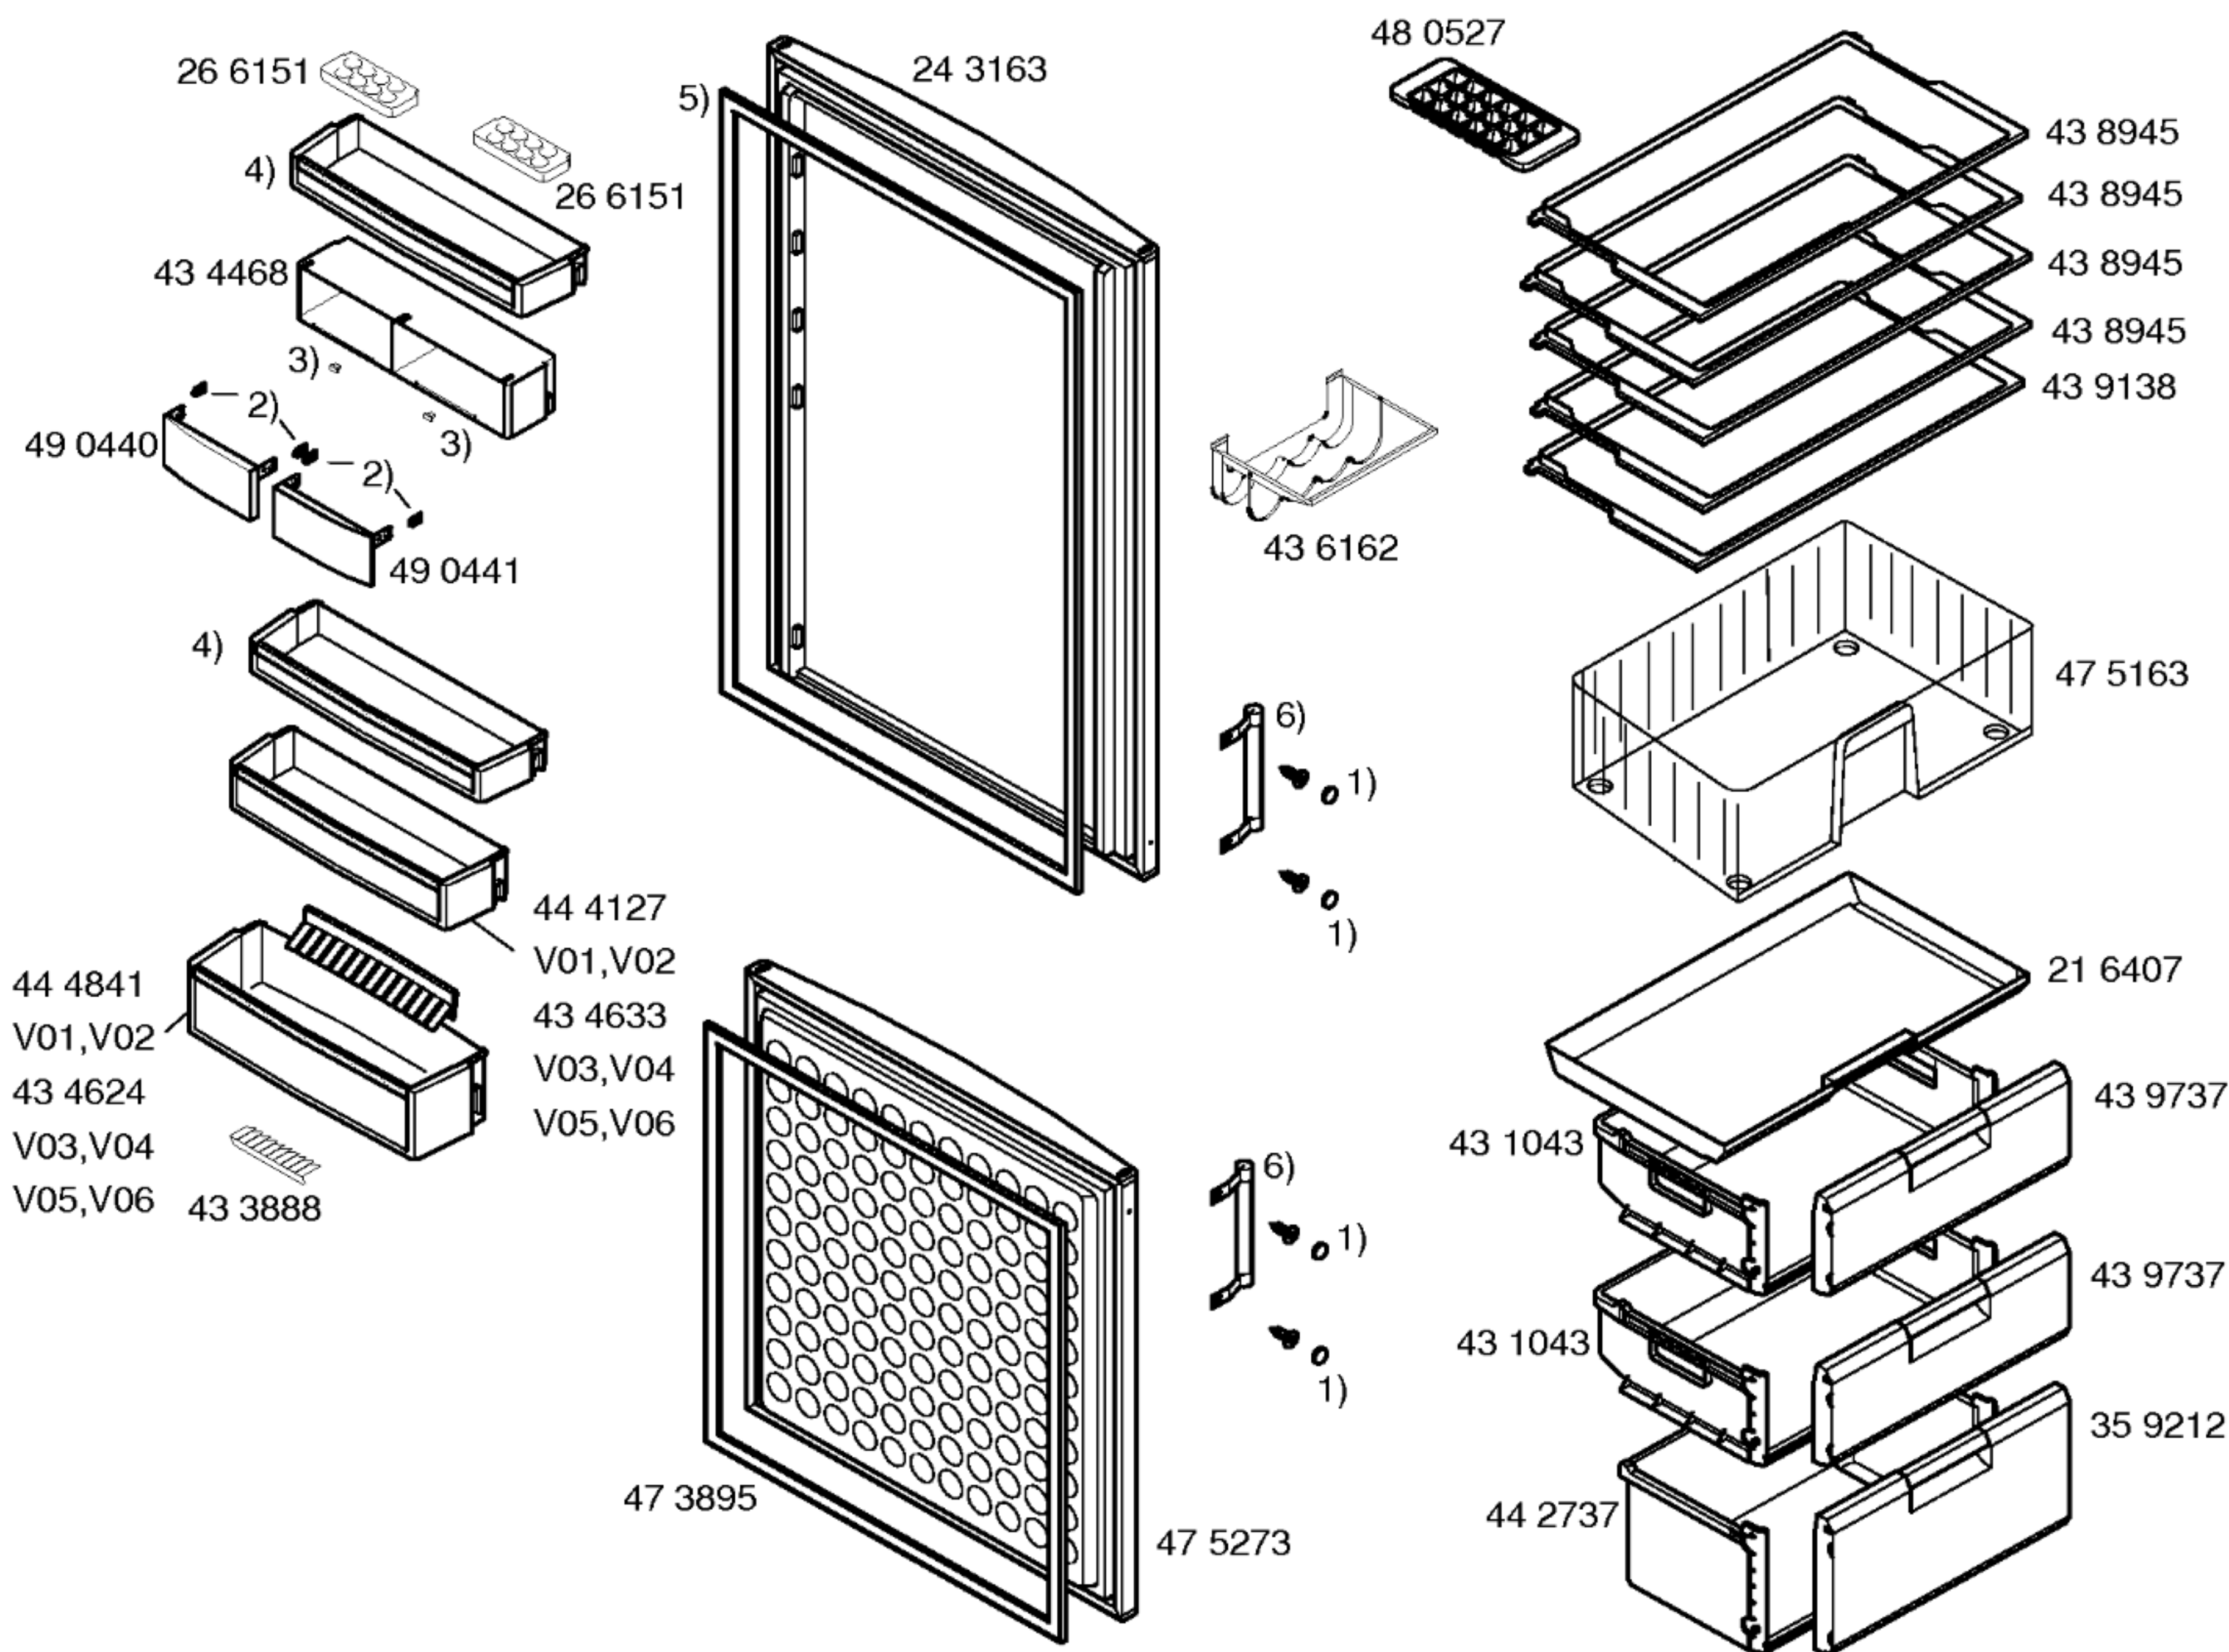

Mat. - Nr. - Konstante
3740

 - 1) 16 5557
V01,V02,V03
V04,V05
42 4814
V06
- 2) 42 0752
- 3) 42 4431
- 4) 43 9925
V01,V02
43 4625
V03,V04,V05
V06
- 5) 24 2232
V01,V02
24 2286
V03,V04,V05
V06
- 6) 48 0646
V01,V02,V03
V04,V05
64 0503
V06

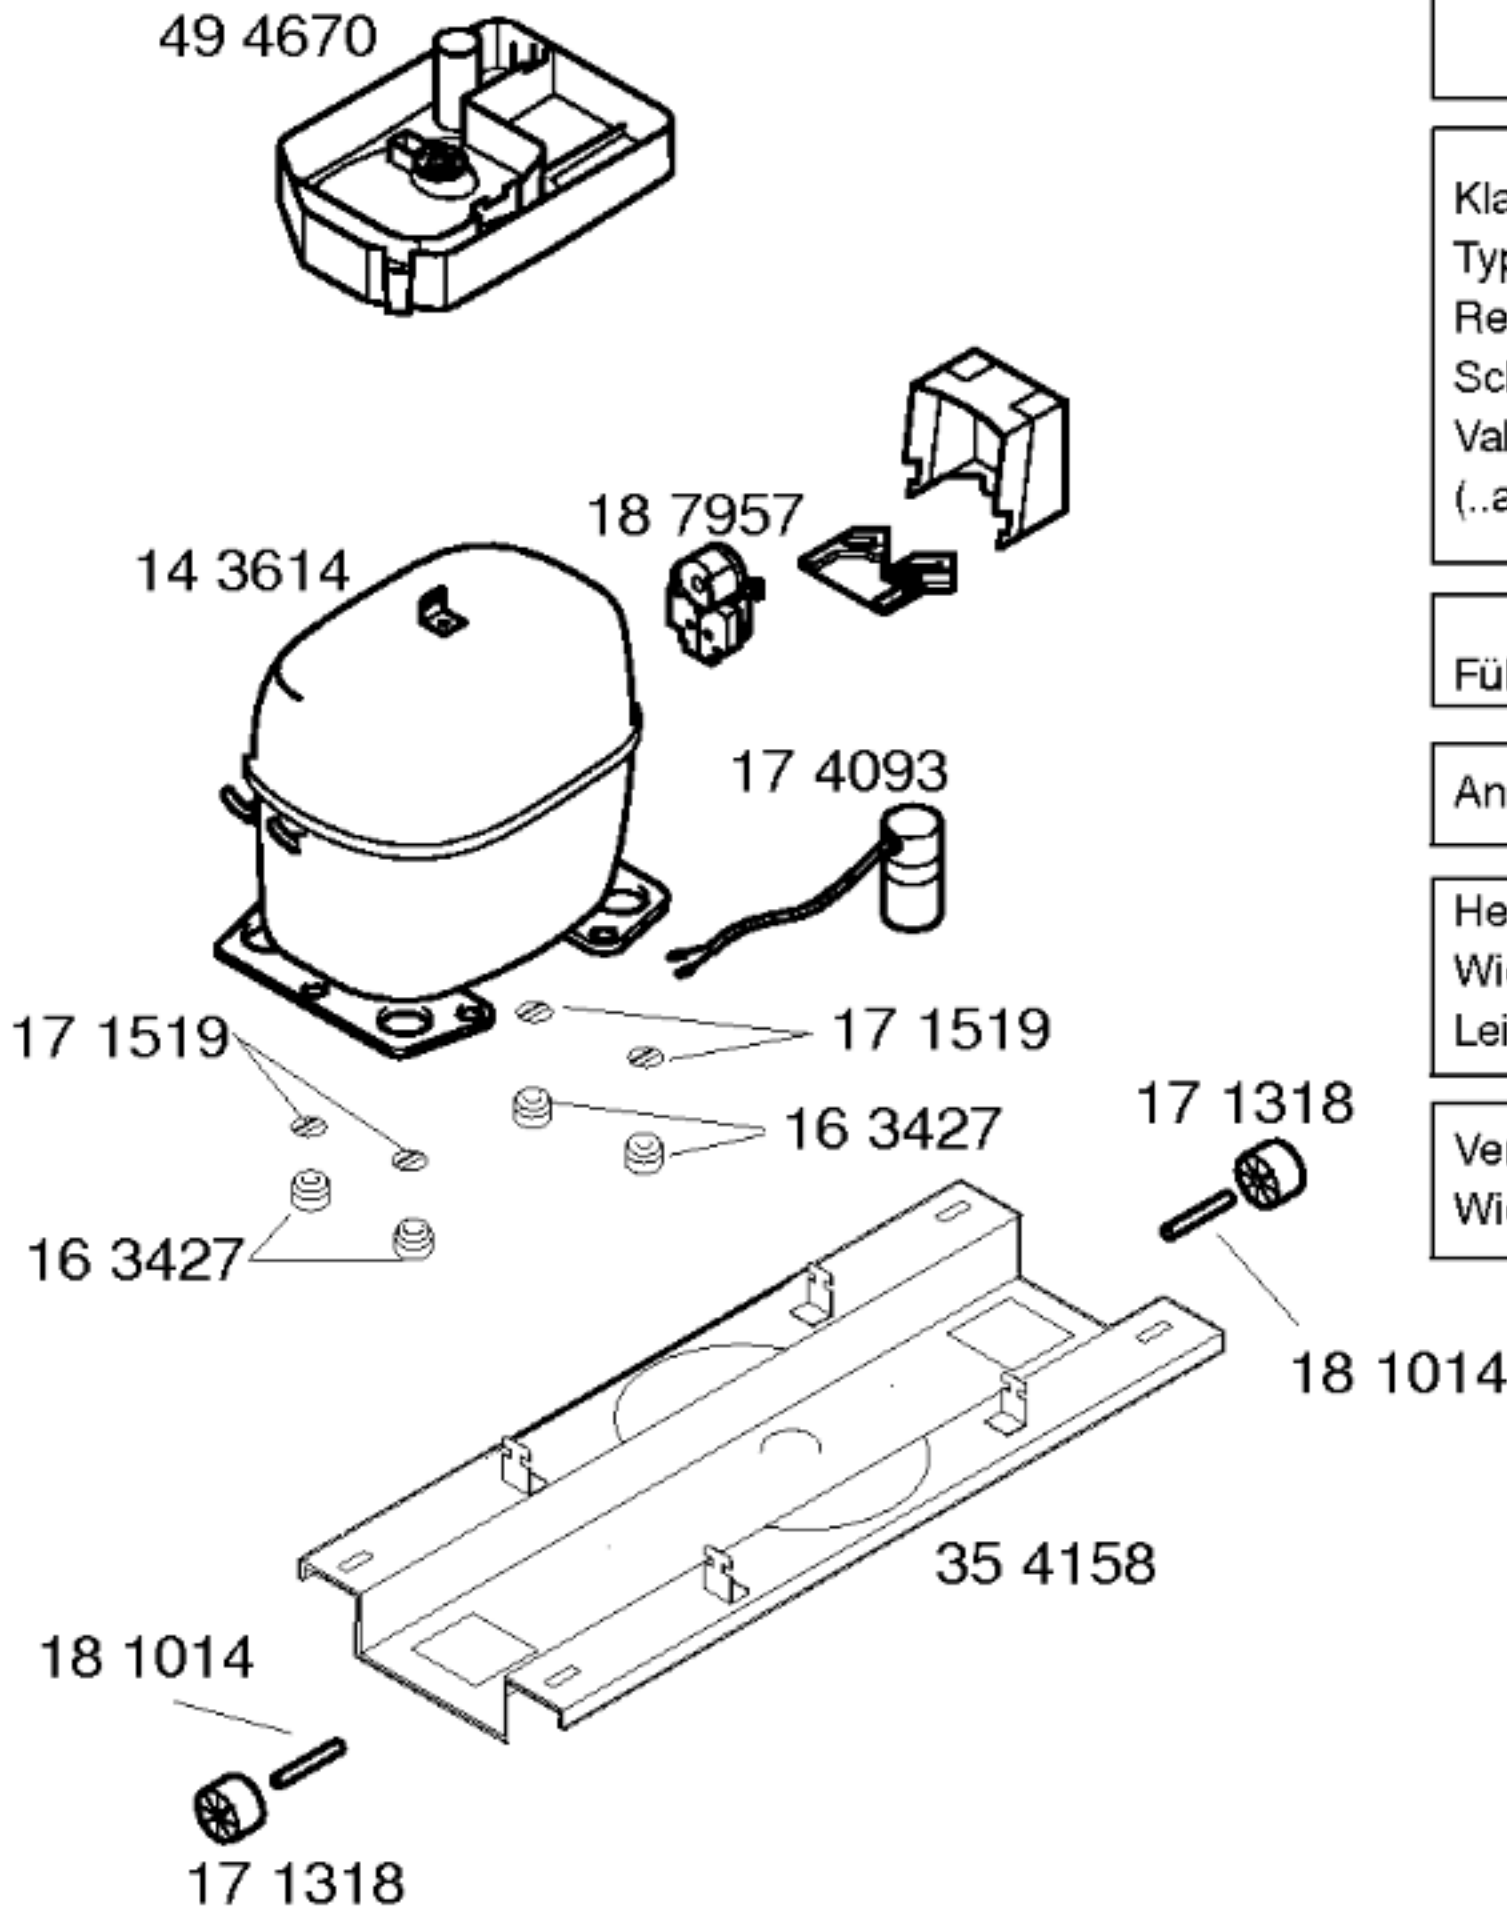

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita DG125E		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600 g	80		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KW Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KW			

Mat. – Nr. – Konstante
3740