 


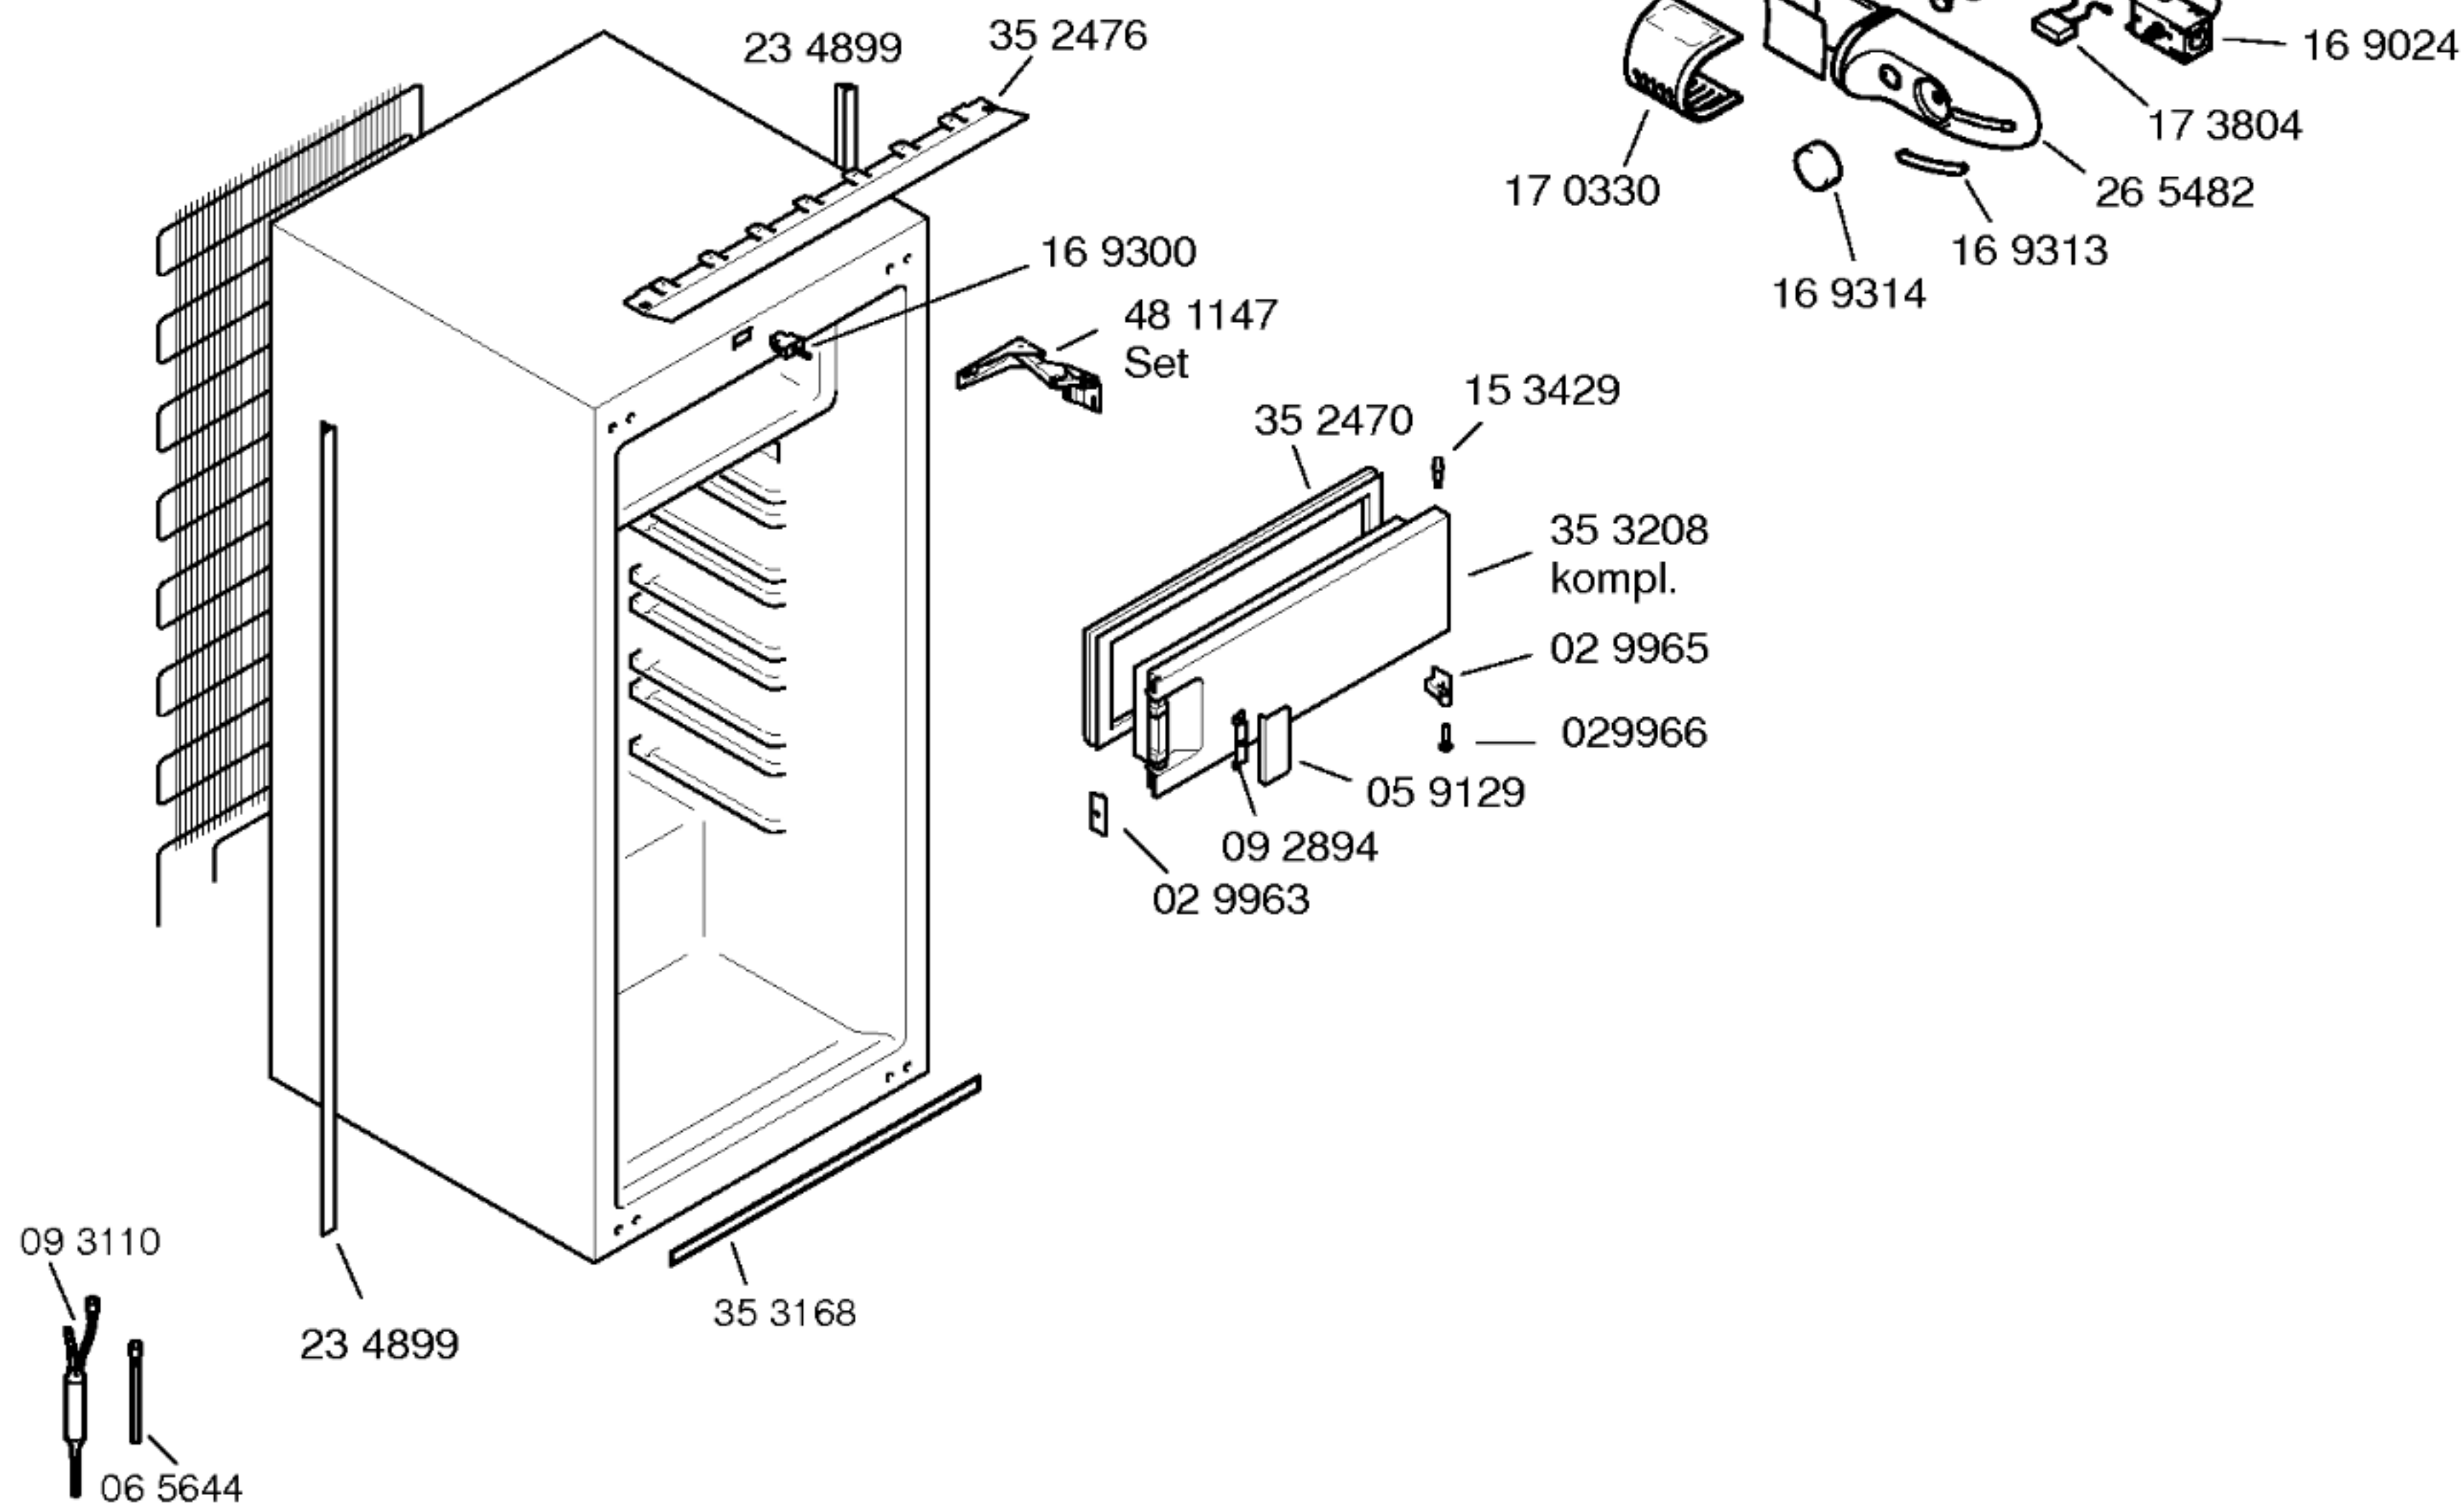


07 4445




Gebrauchsanweisung
58 1967
(DE,EN,FR,IT,NL,DA,
NO,FI,SE)
58 1968
(IT,ES,PT,GR)

Montageanleitung
52 2494
(DE,EN,FR,IT,NL,DA,
NO,FI,SE,TR)

 Beistellsatz
26 5162

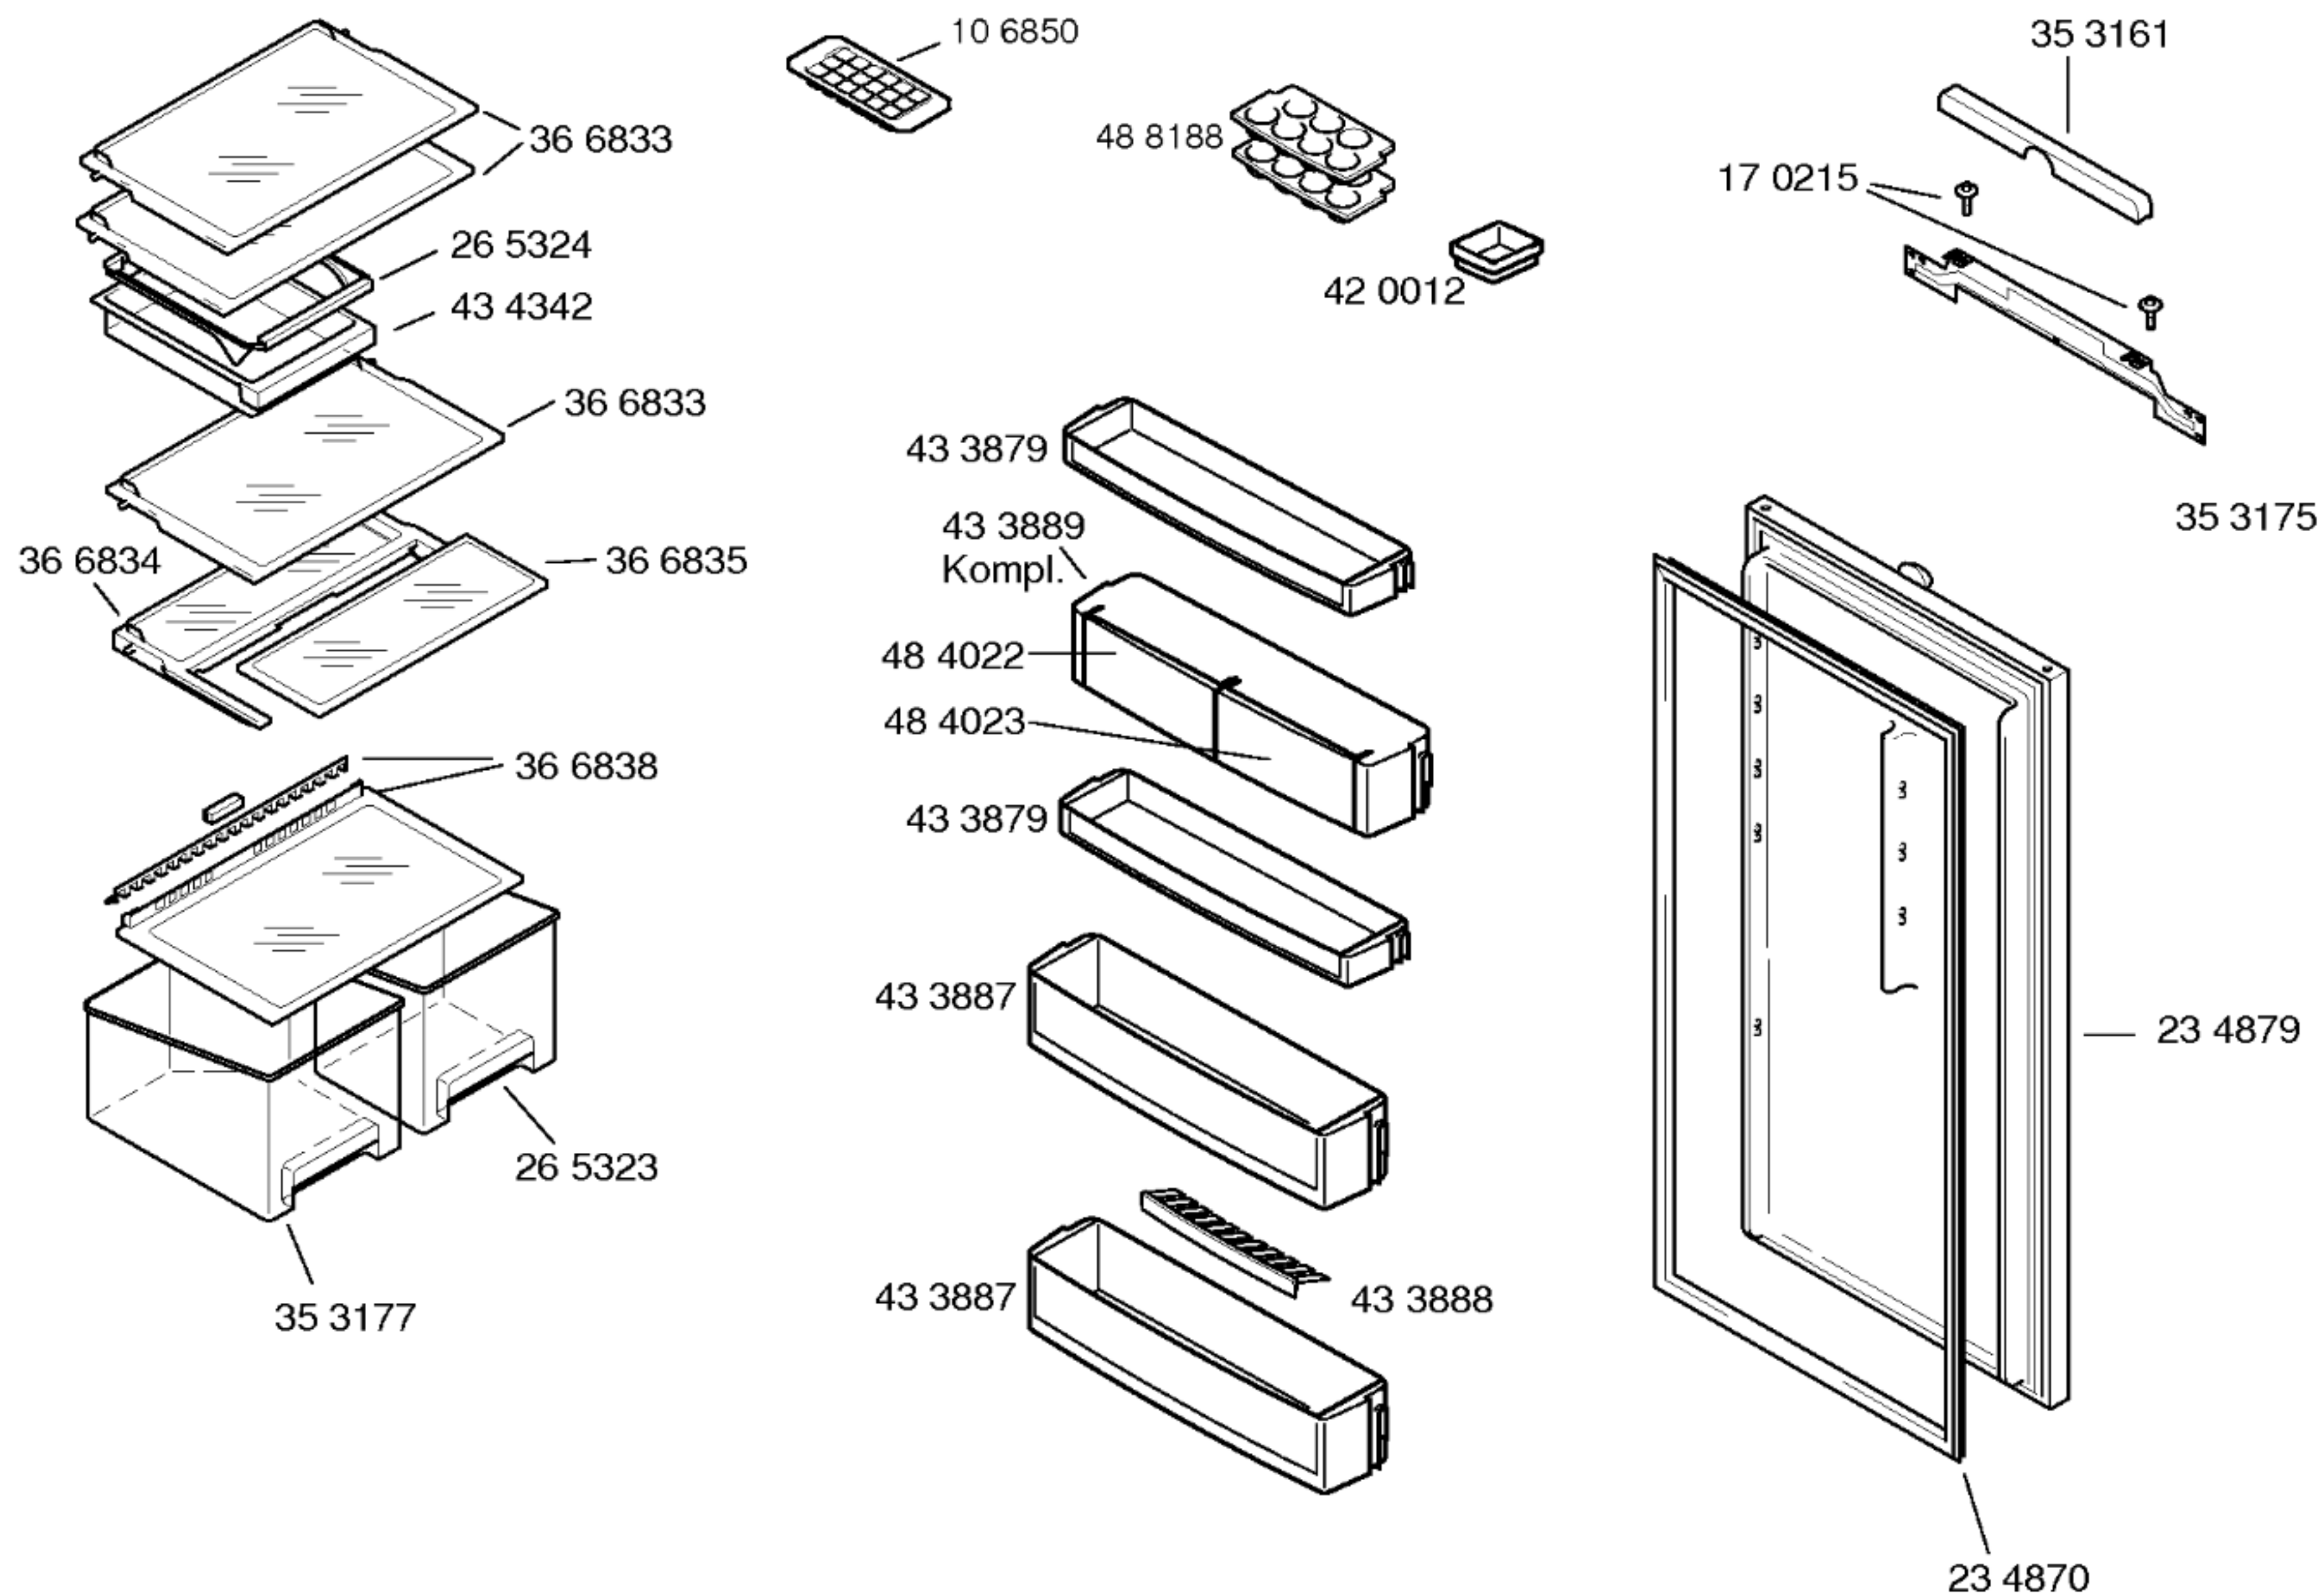

Mat. – Nr. – Konstante
3740

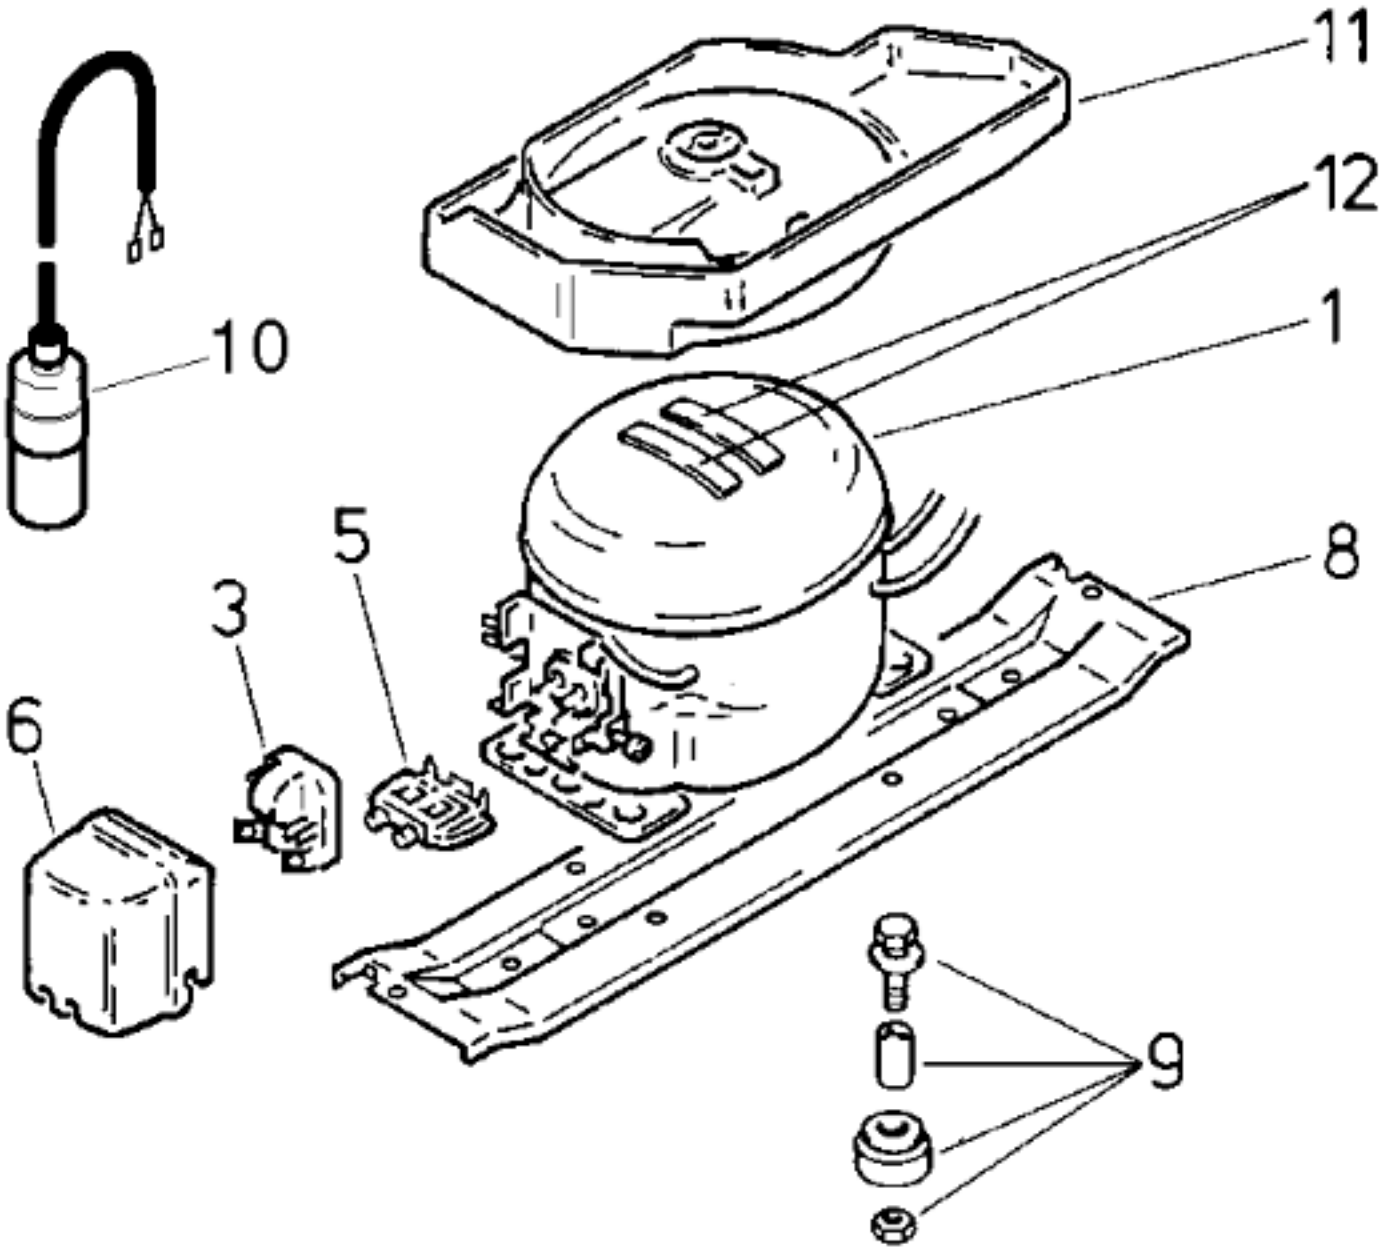 

Pos.	V01		
	Aspera		
	EMY40CLC		
1	14 4134		
2			
3	42 7392		
4			
5	16 9319		
6	17 0881		
7	16 9319		
8	26 4879		
9	0 50166		
10	16 5852		
11	36 5099		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance Hi/main/prin Hi/aux	Aspera EMY40CLC l/h A W W		
Temp.–Regler/Thermostat Typ/Type Regelstellung/Position Schaltwerte/Switching values Valeurs de commutation	 "warm" "kalt" "alarm"		
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	 W W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	W		
Temp.–Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	 W V		

* siehe Typenschild