


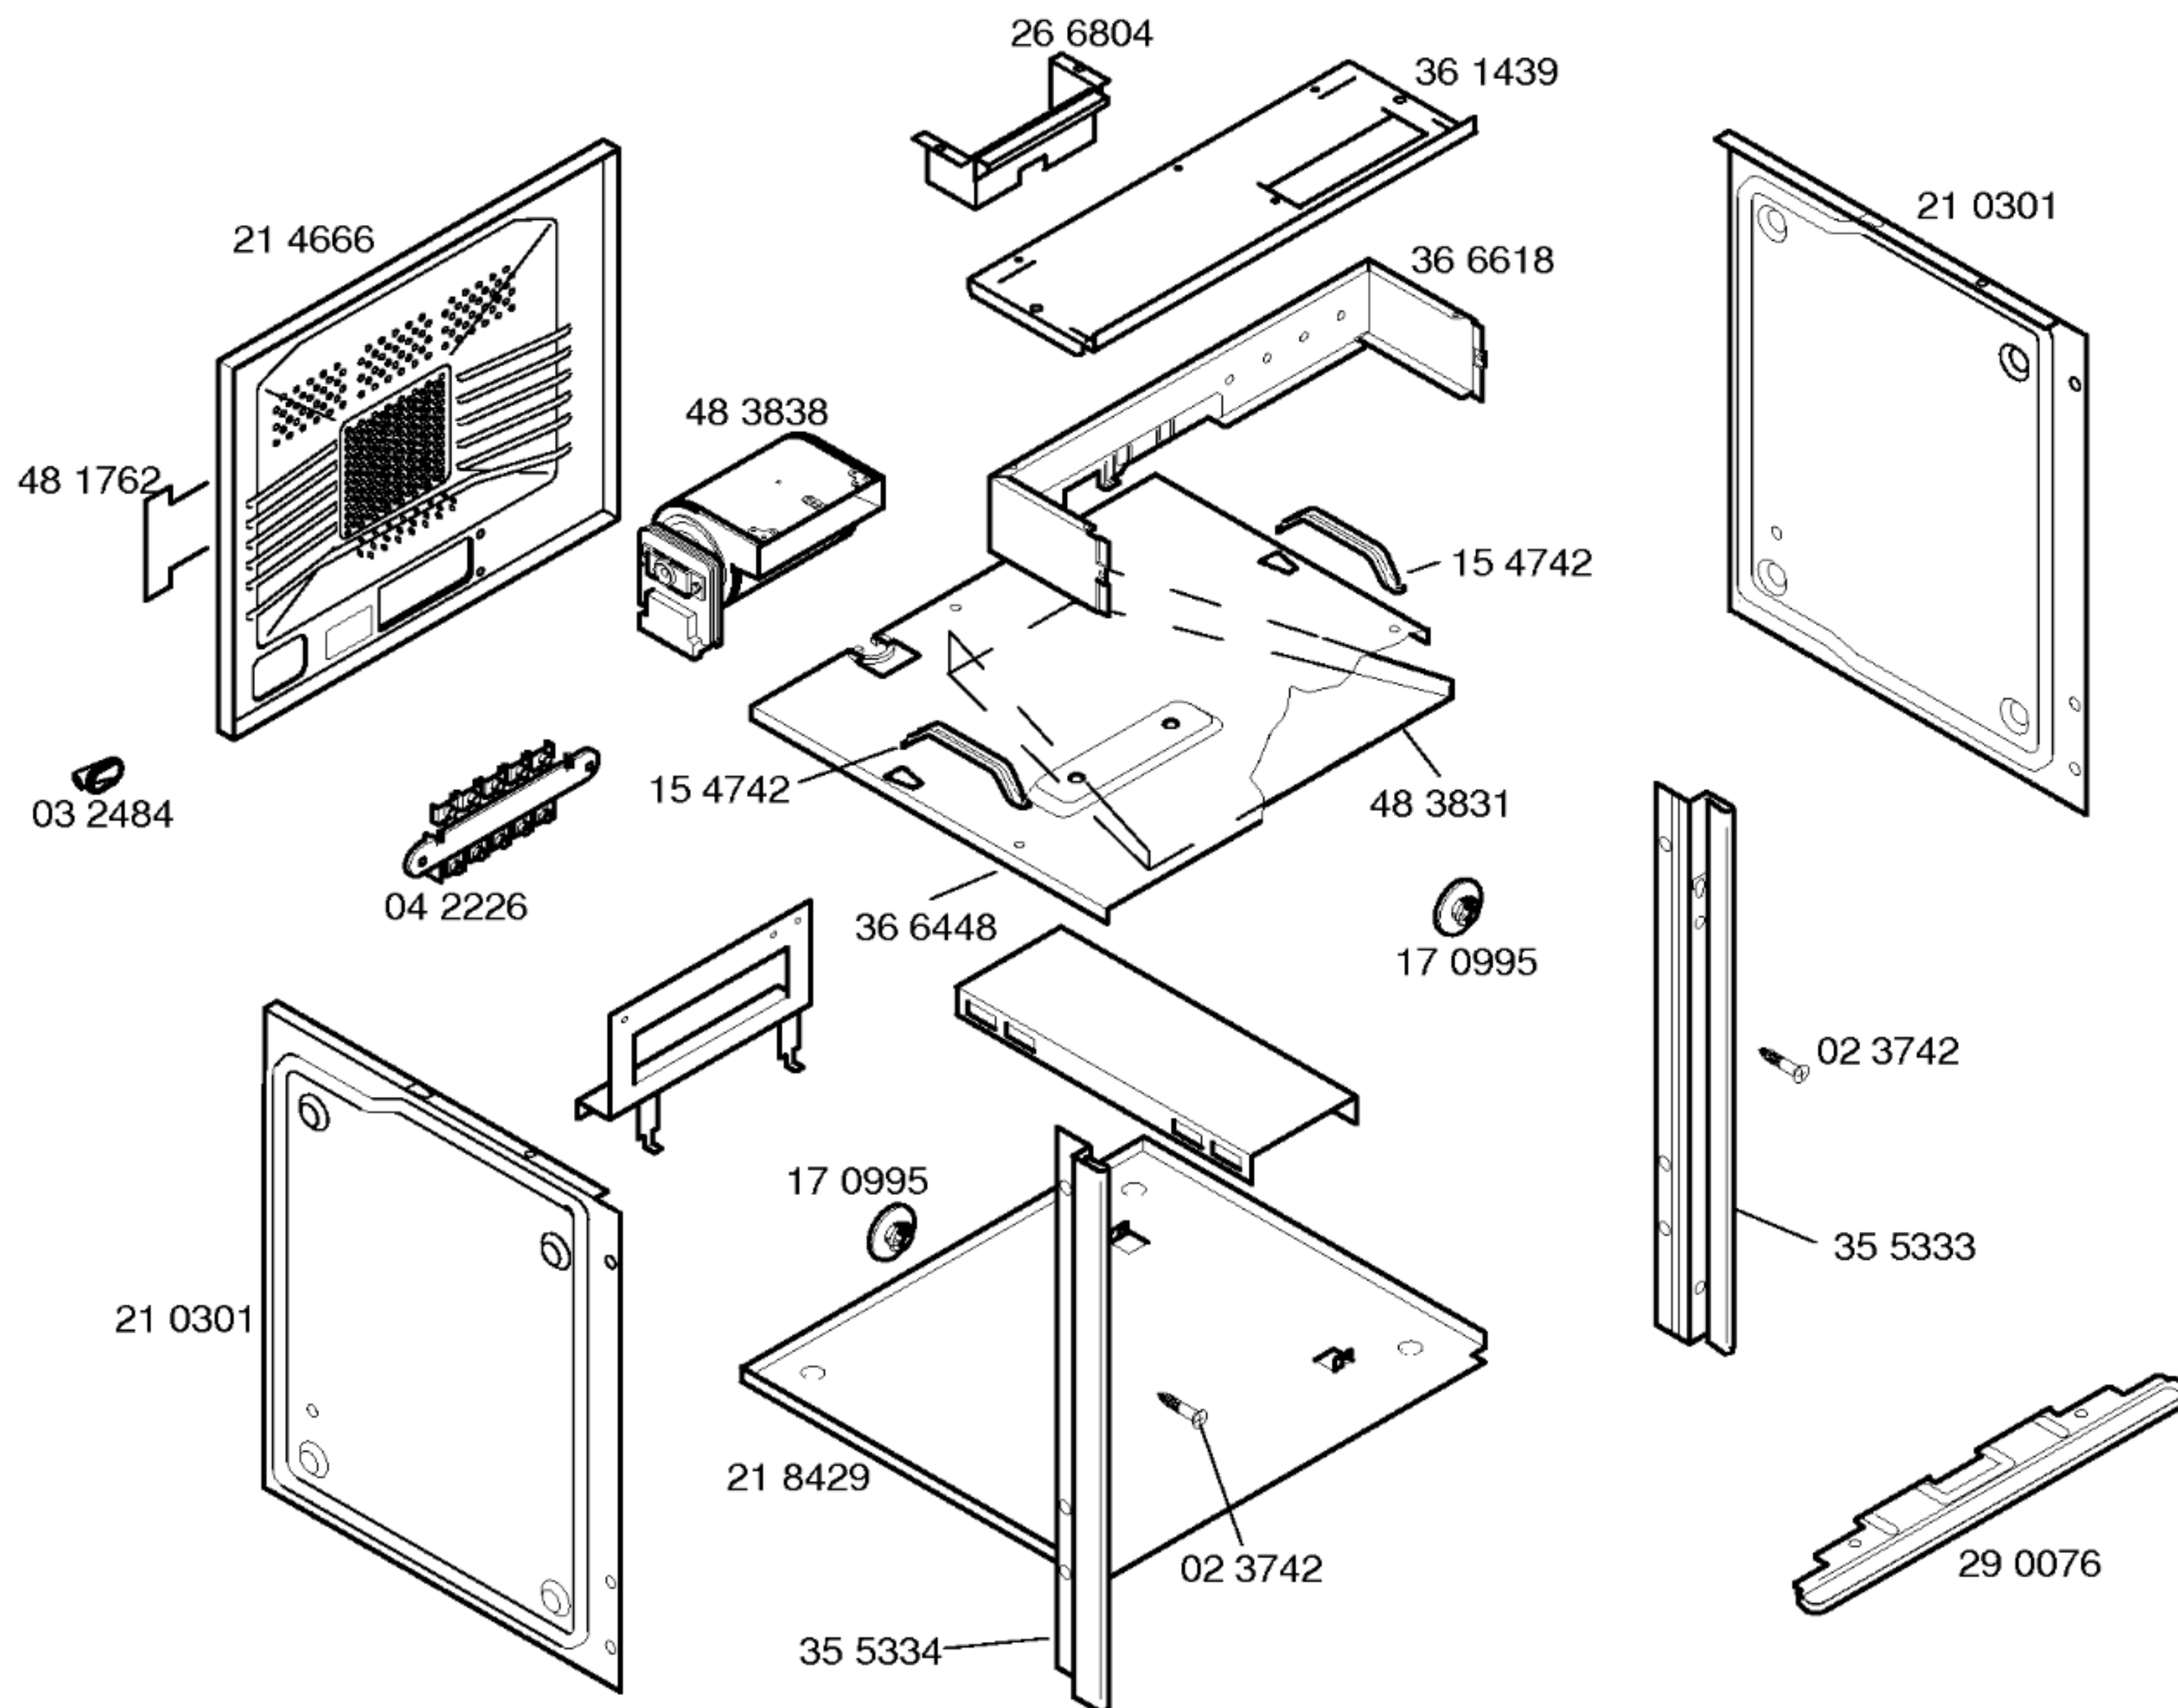

Gebrauchsanweisung

58 1068

(de,en,el)

Montageanleitung

51 7955

(de,en,fr,nl,it,es,el)

Kochbuch

52 1094

(de)

Kochbuch

52 2909

(de)

Zubehör:

Dampfgarer

N8640X0

Bratrost gekröpft

Z1470X0

Backblech, Alu

Z1330X0

Backblech Email

Z1340X0

Bratenblech

Z1510X1

Brotbackstein


Z1910X0

Grillpfanne u. Bratrost


Z1230X0


Auflaufform

Z1270X0

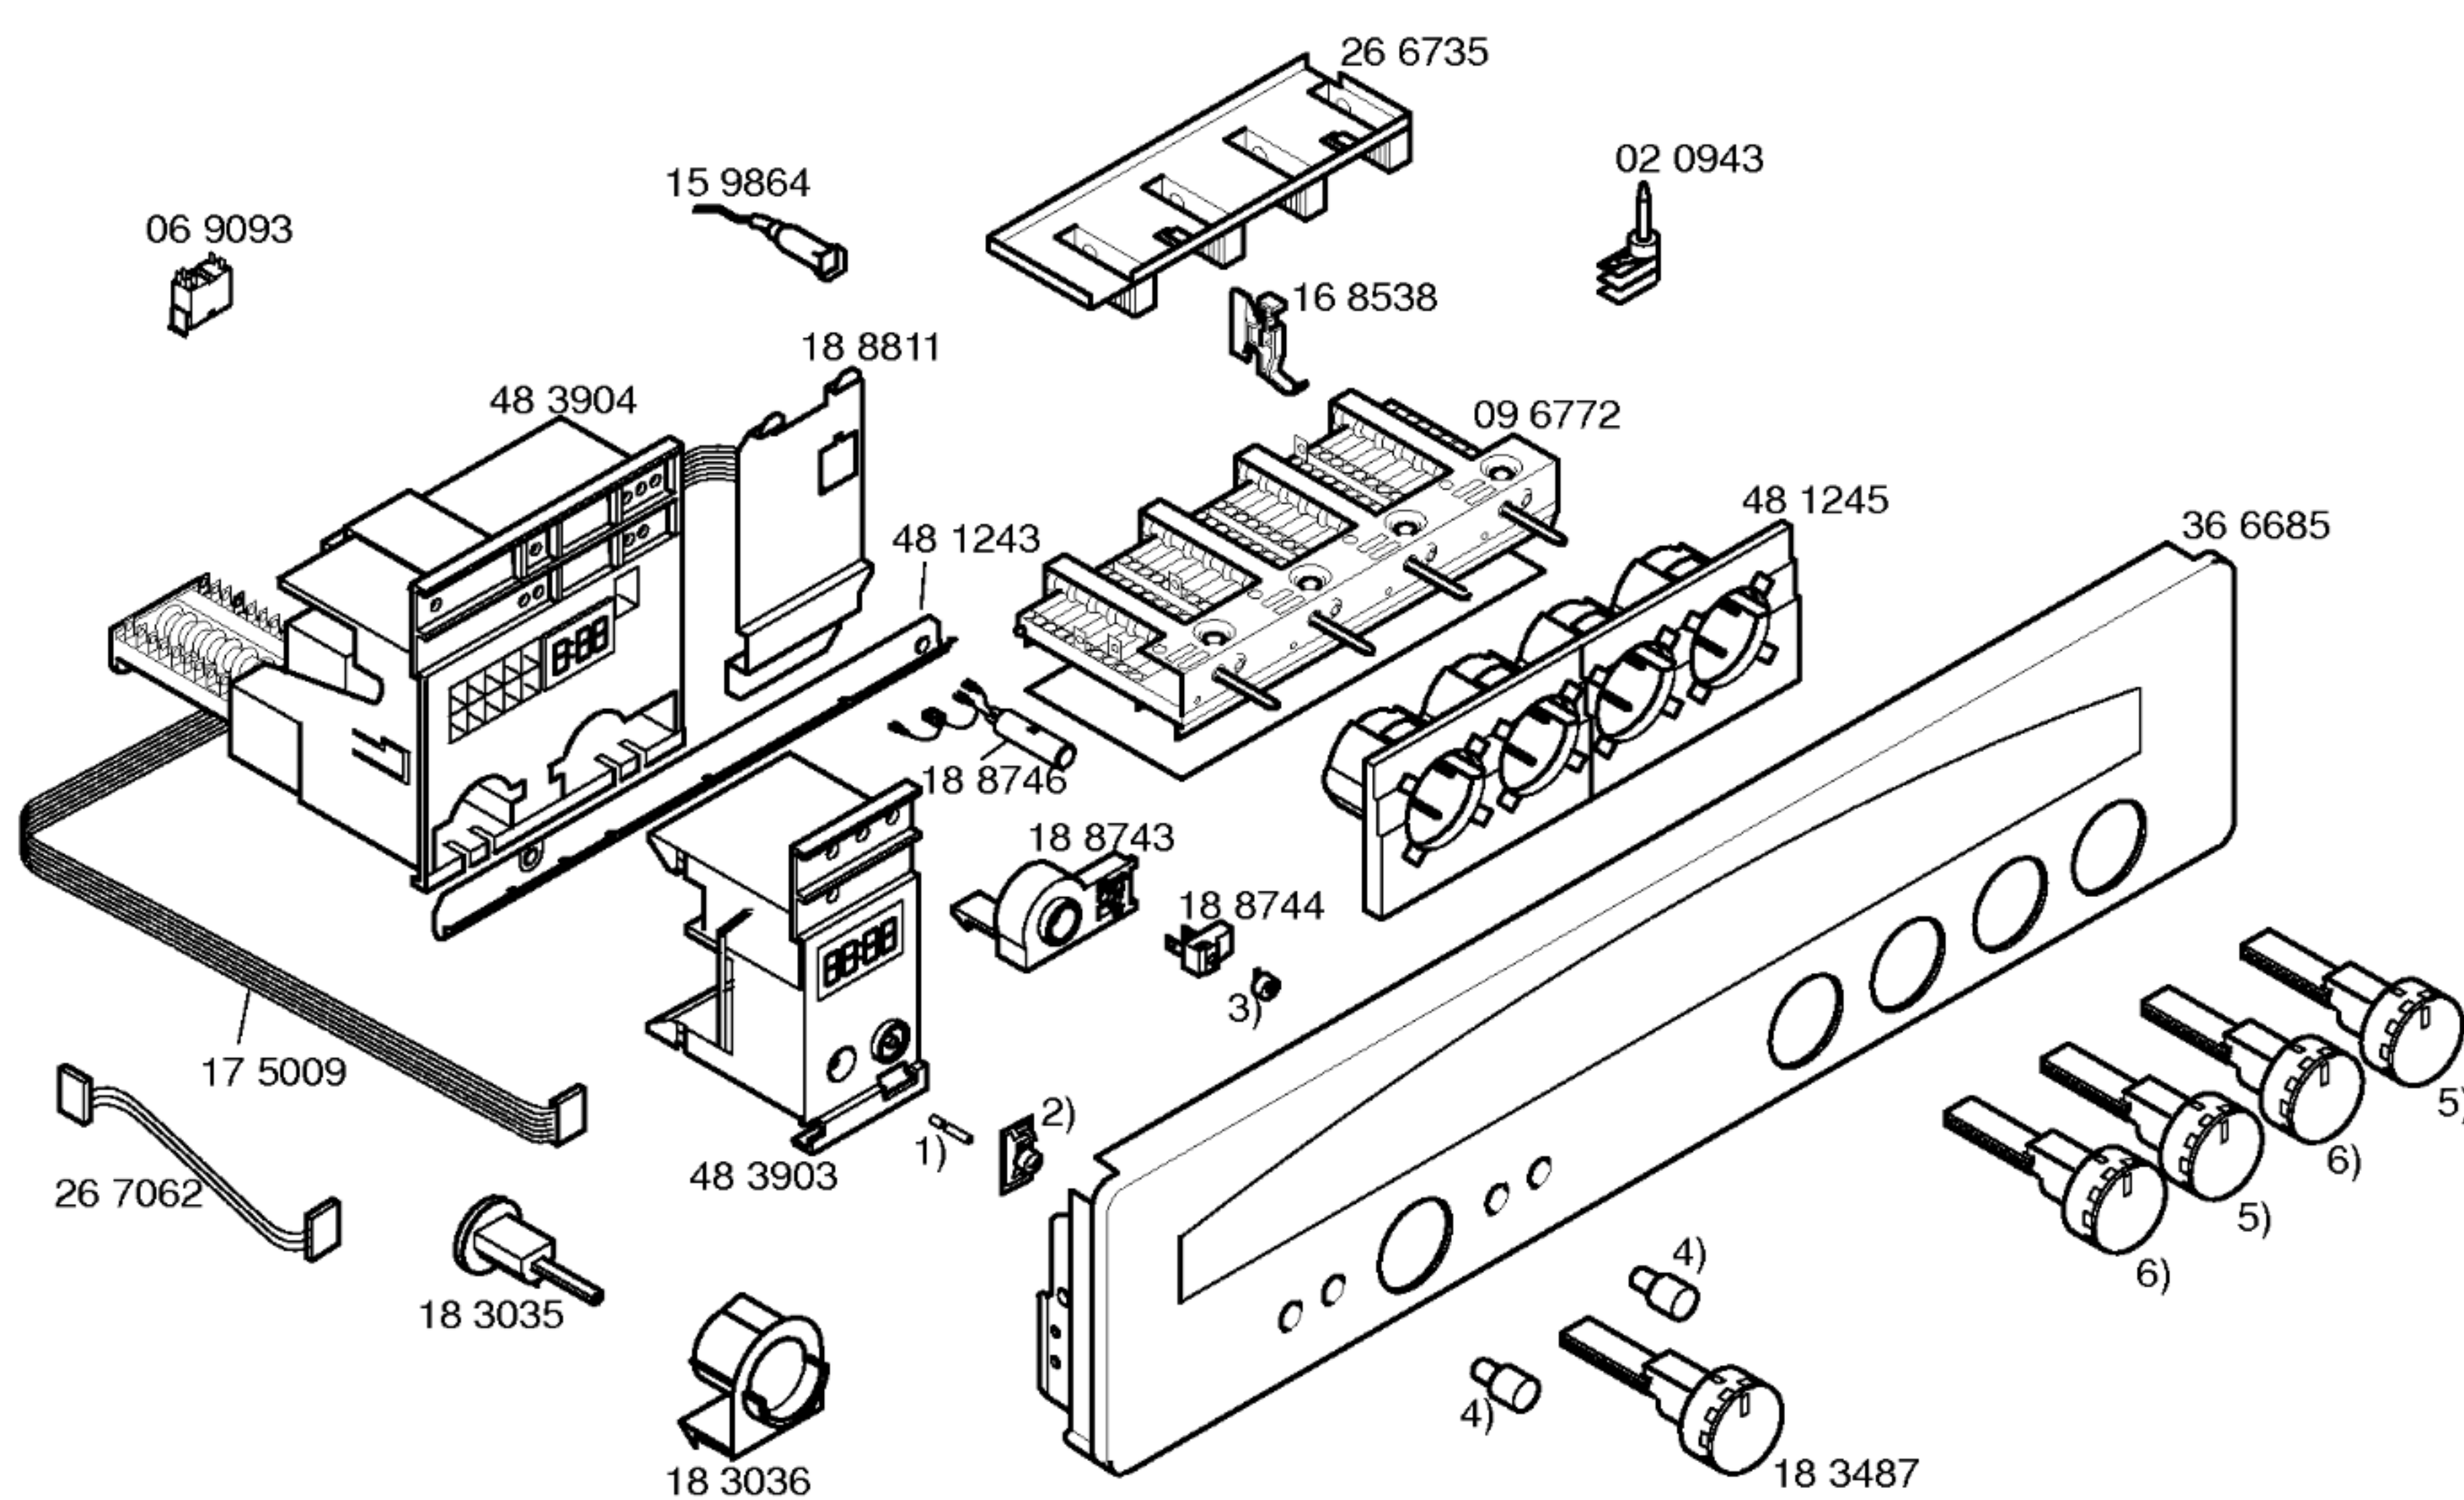

- 1) 16 8588
- 2) 18 8747
- 3) 18 8745
- 4) 17 3340
- 5) 18 3485
- 6) 18 3486

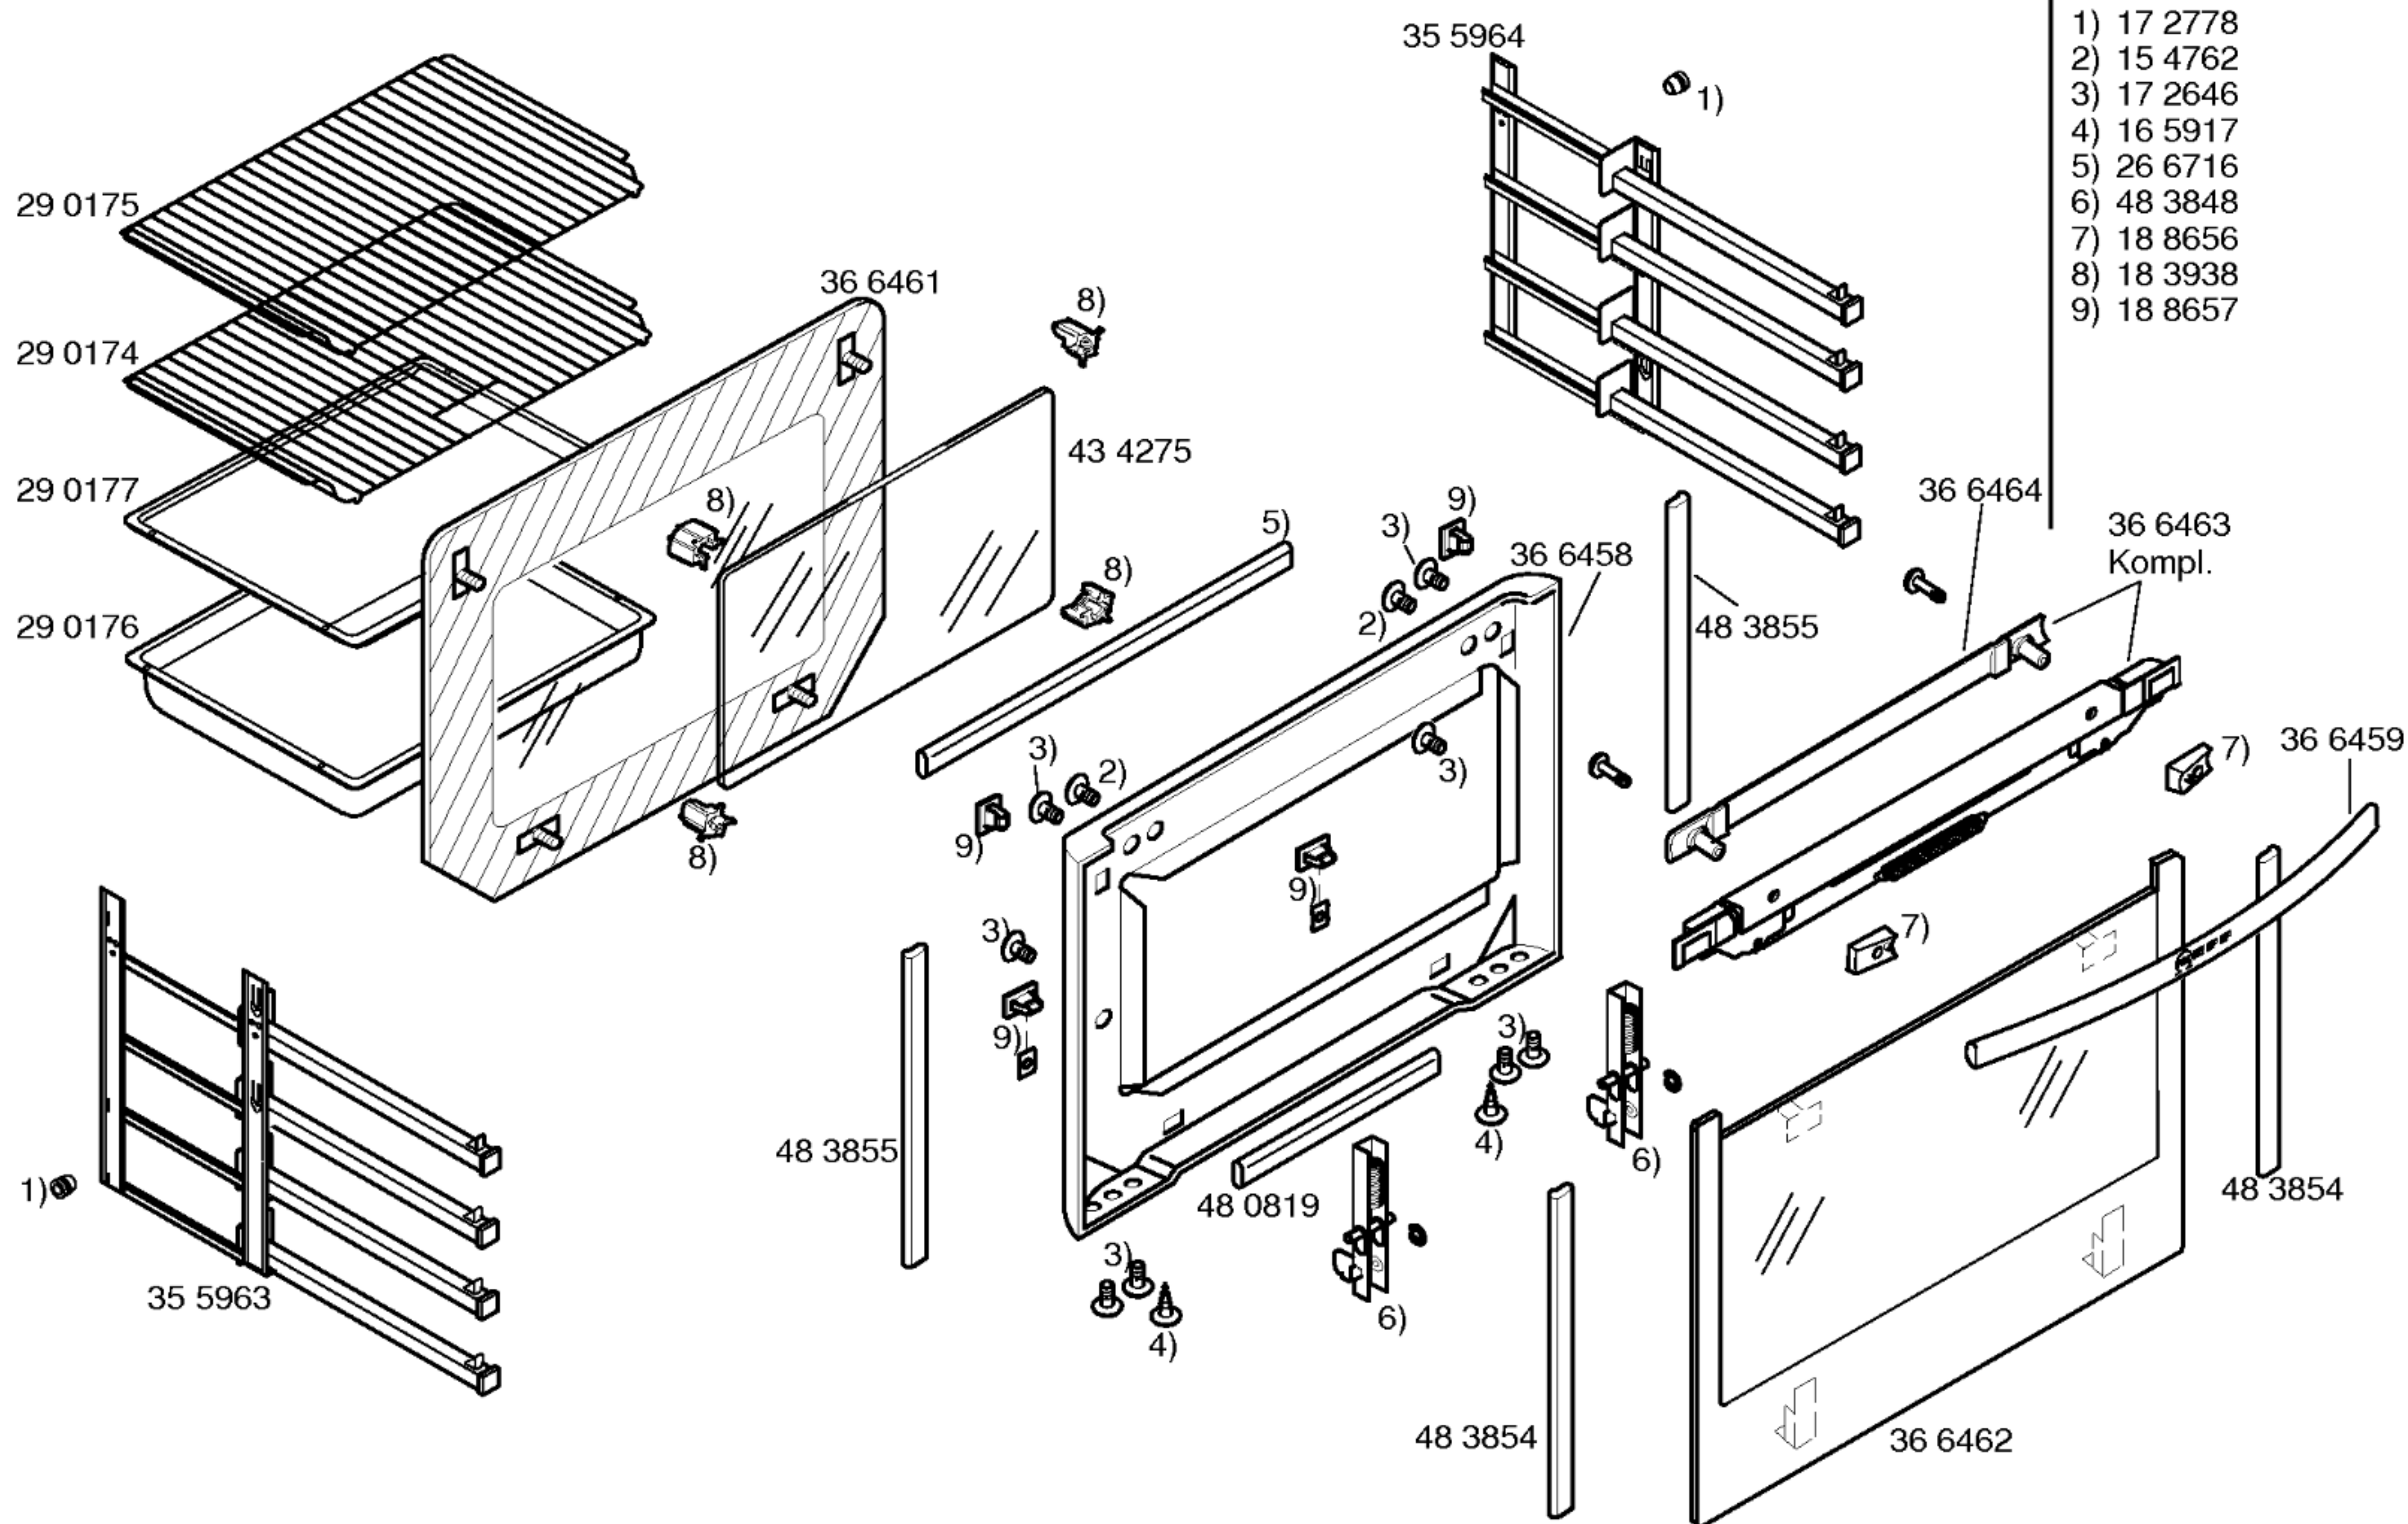

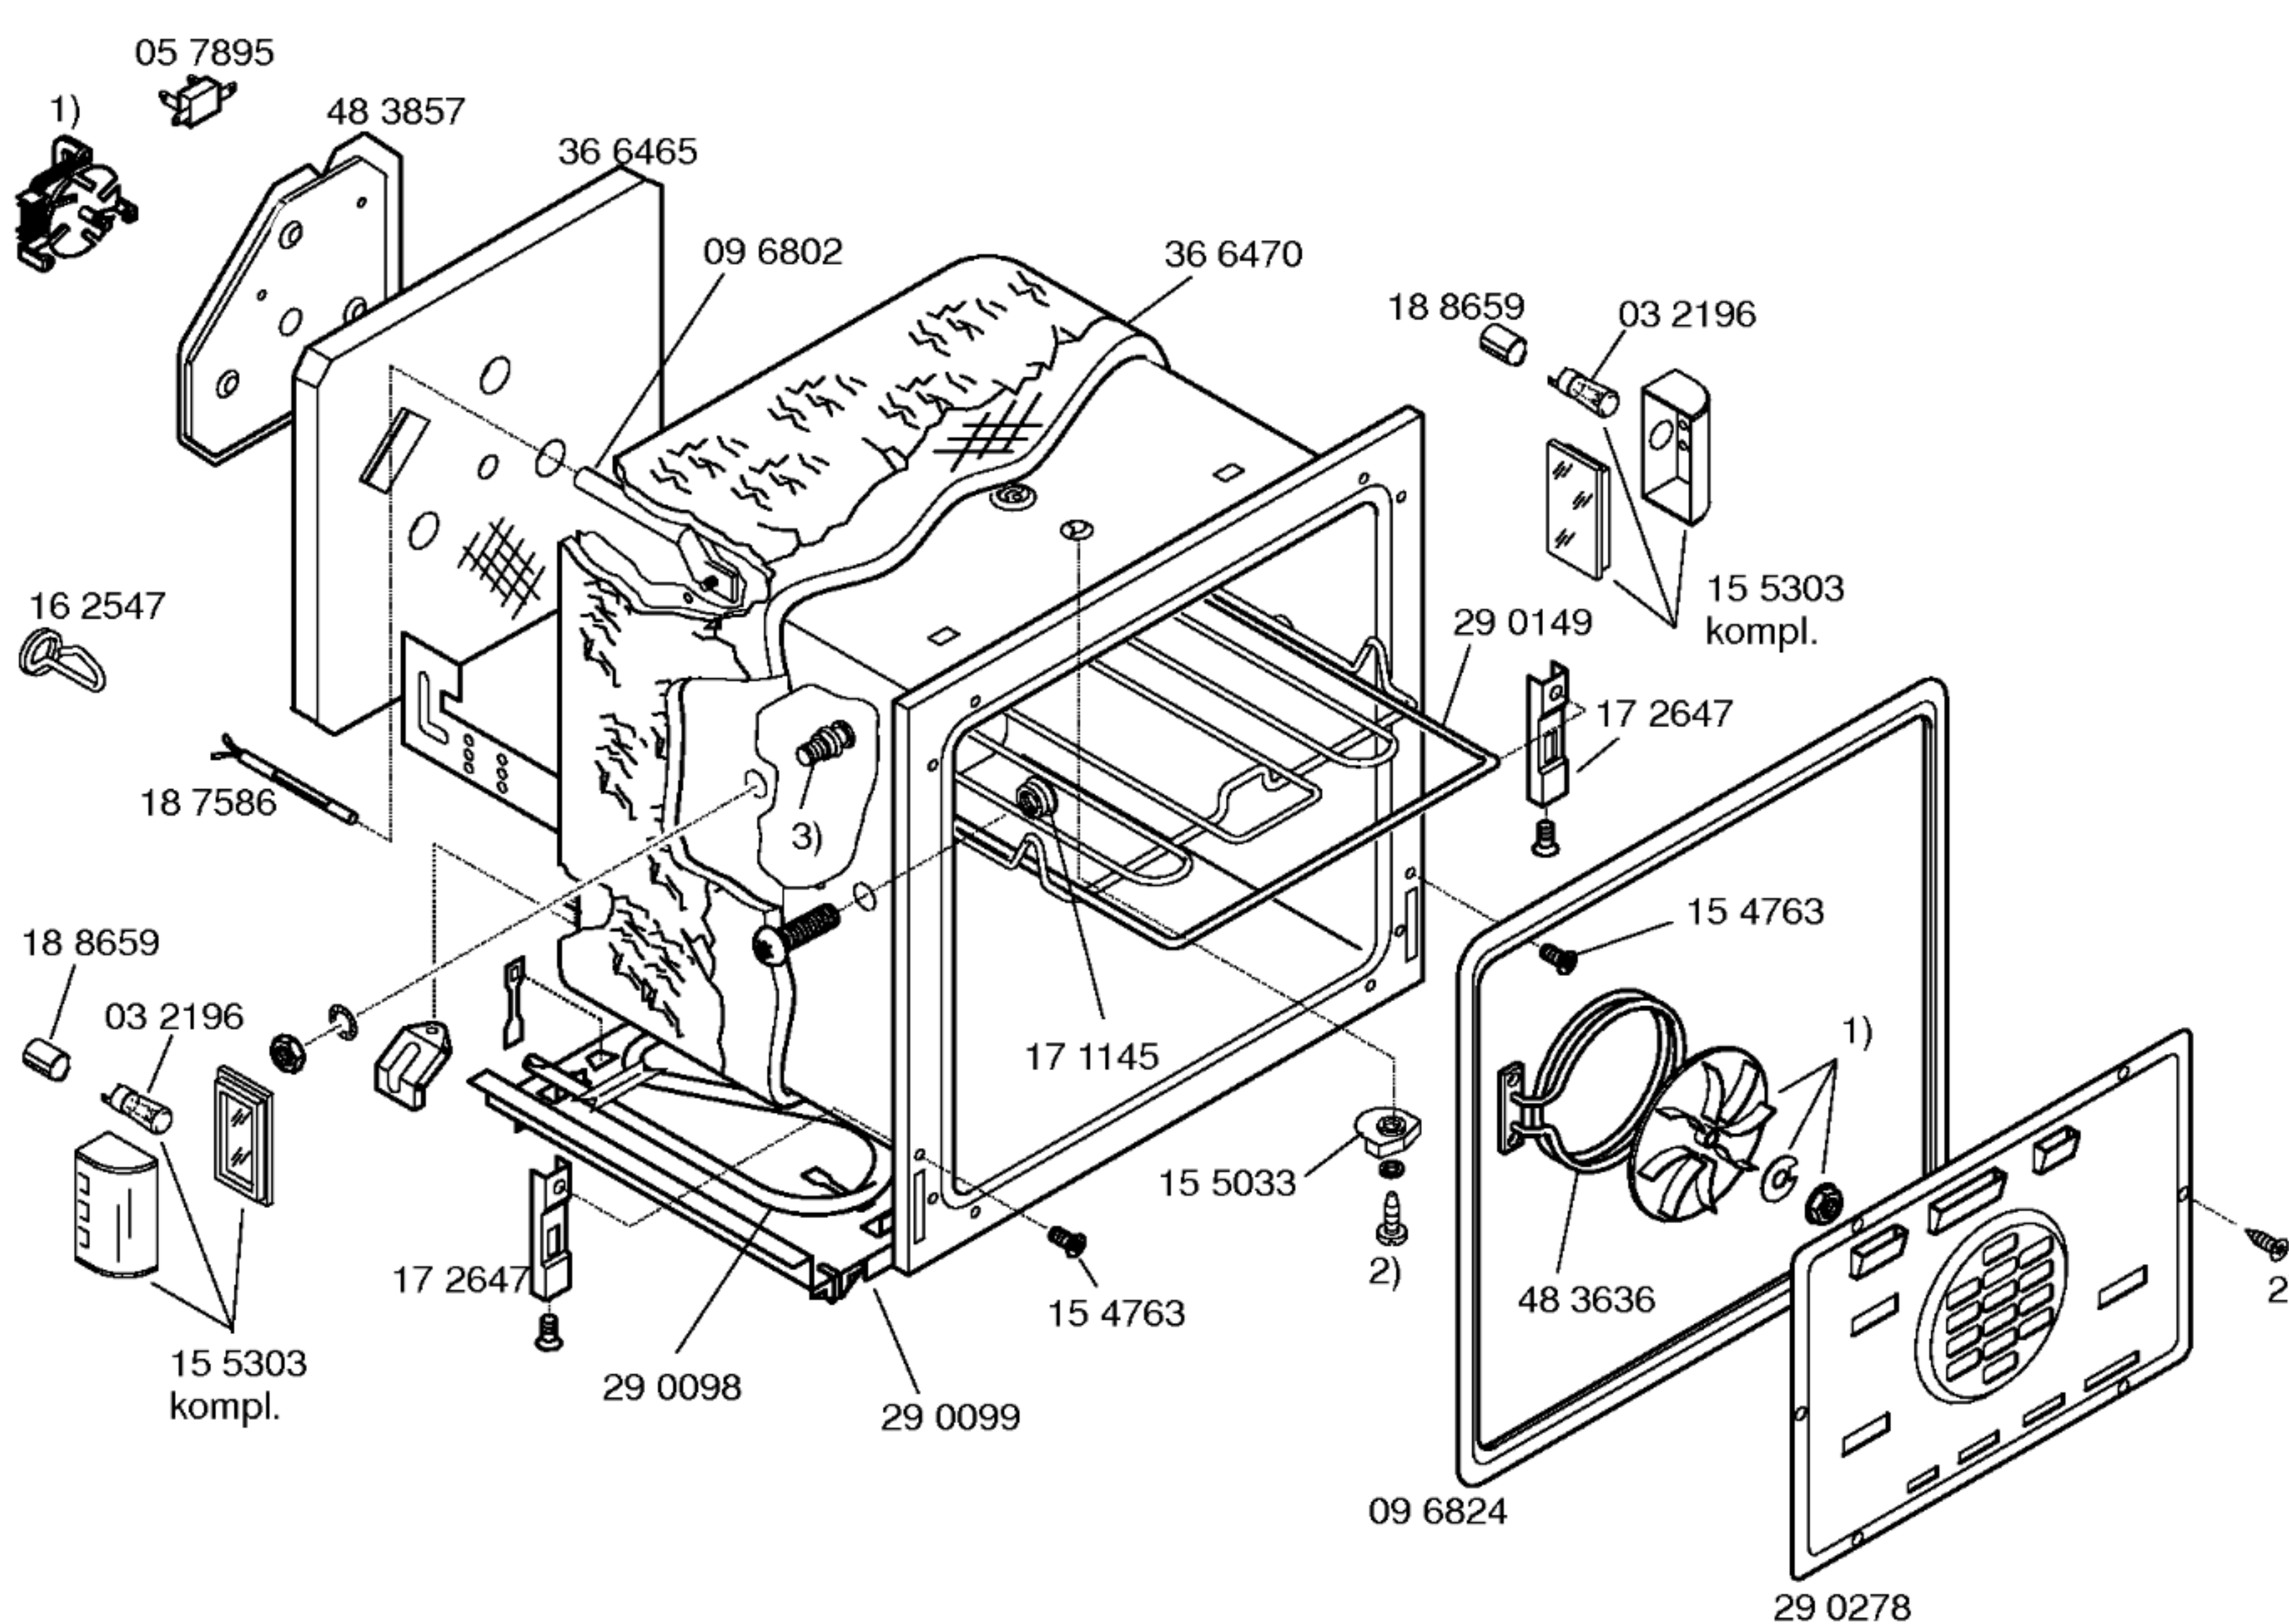

- 1) 48 3856
kompl.
- 2) 16 0916
- 3) 17 1146