



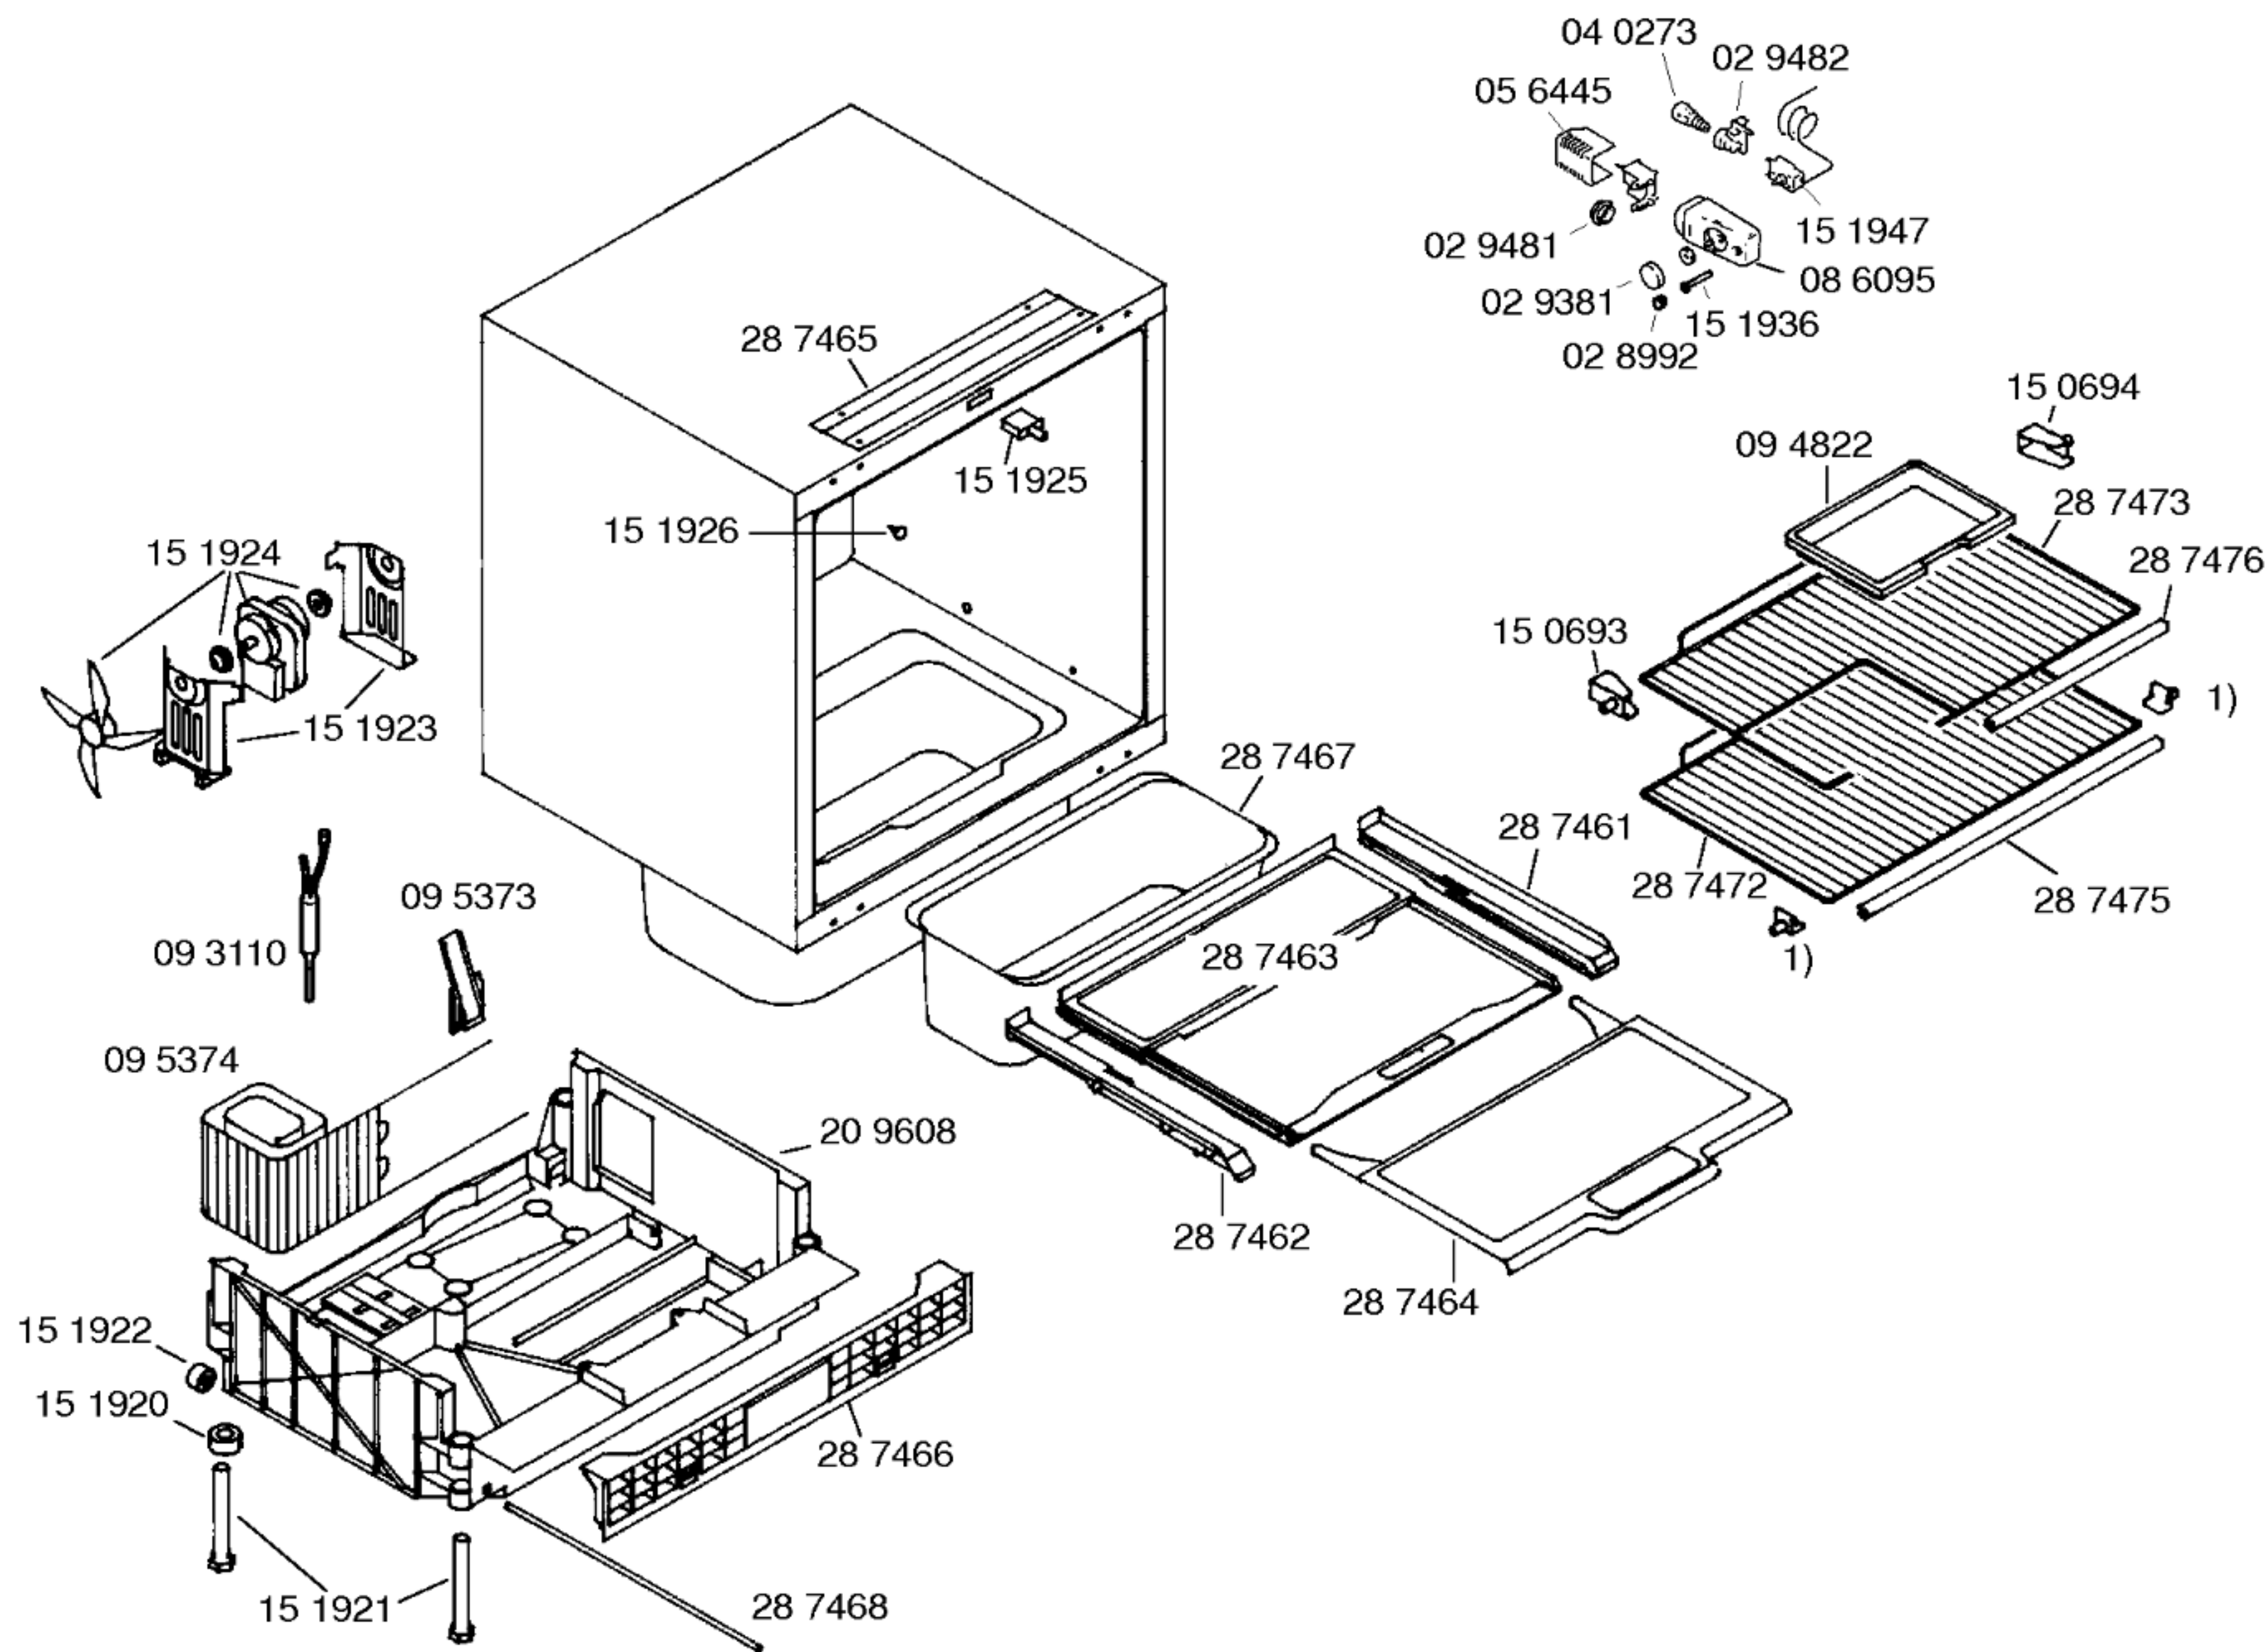


Gebrauchsanweisung
51 7442
Montageanleitung
51 7414

1) 15 0692

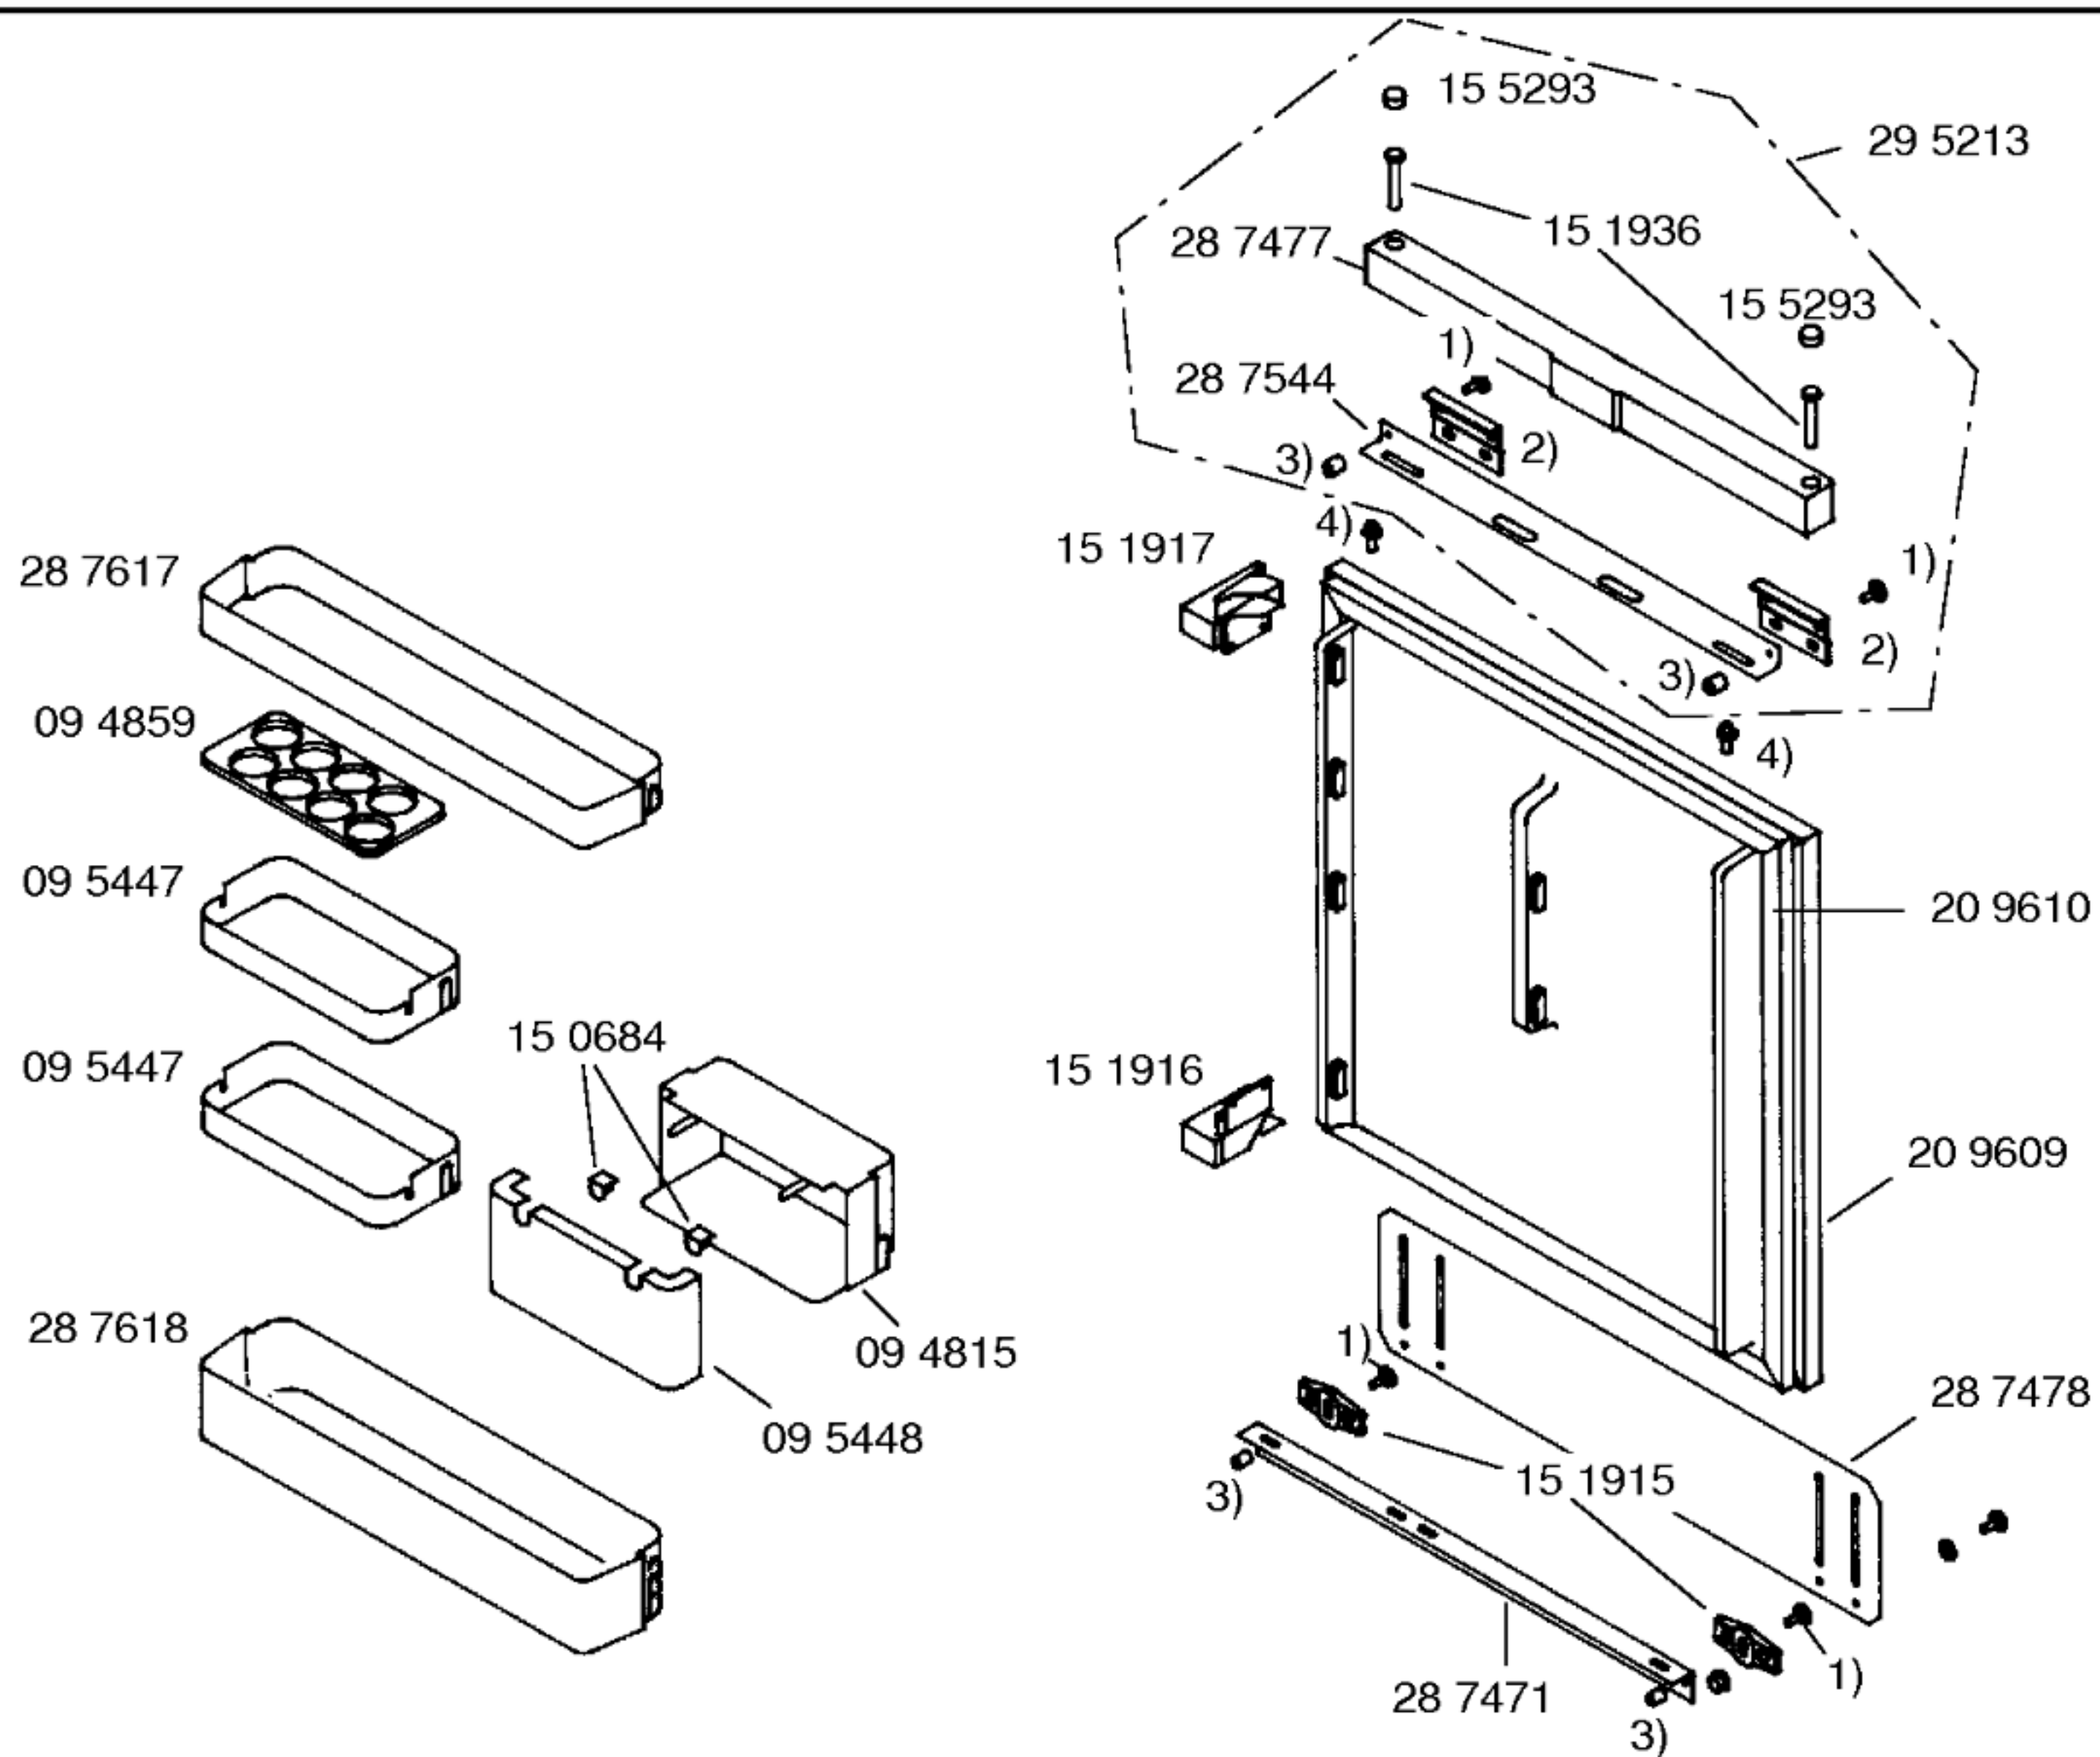

- 1) 15 1934
- 2) 15 1914
- 3) 15 1931
- 4) 15 1823

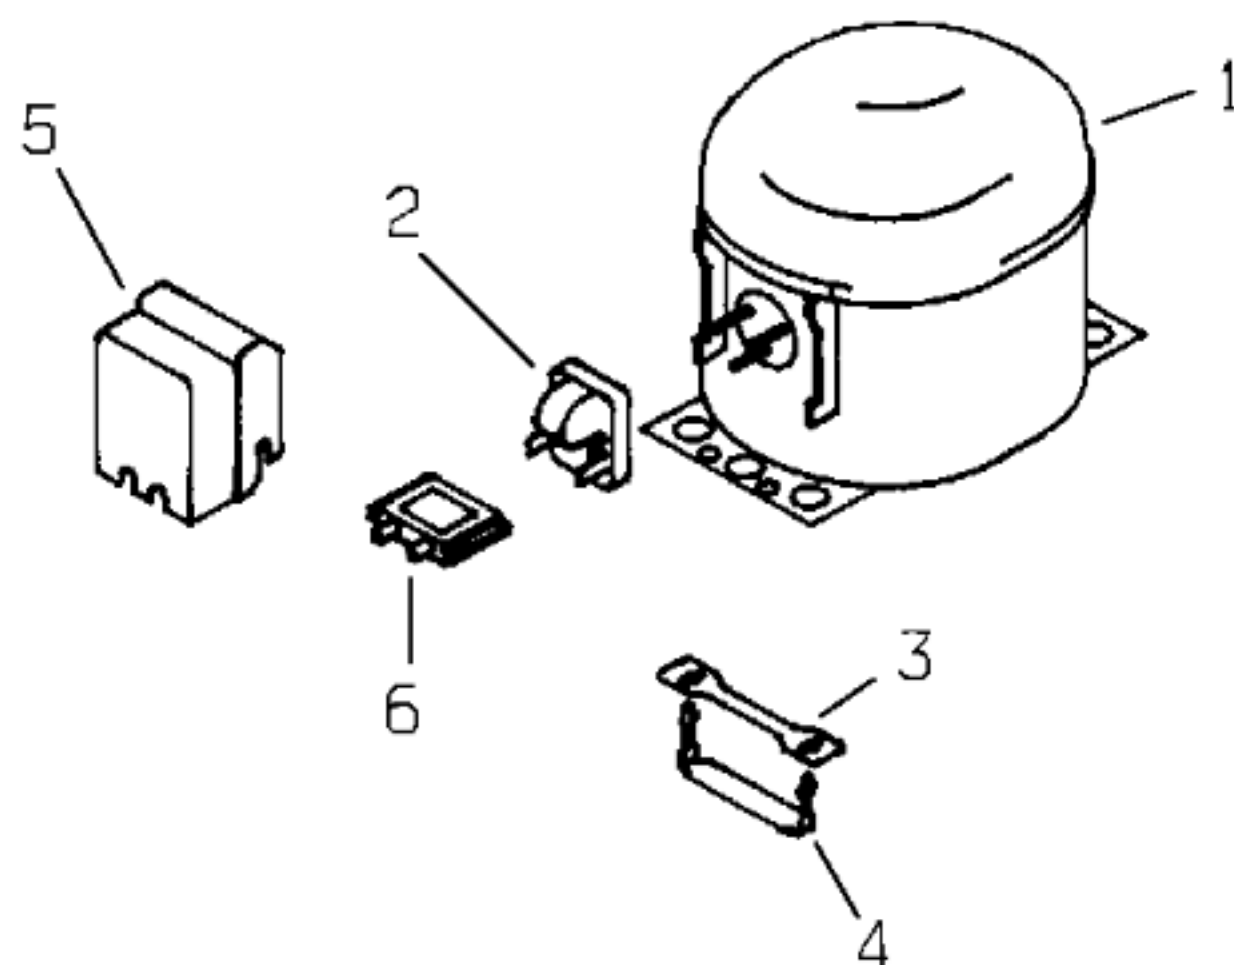

Pos.	Danfoss	Danfoss	
	TL 4 F	TLES 6 K	
1	14 1198	14 1306	
2	15 0818	15 1055	
3	15 1919	15 1919	
4	15 1918	15 1918	
5	15 1072	15 1072	
6	15 1053	15 1053	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss		Danfoss	Danfoss
Typ/Type		TL 4 F		TLS 6 K	TLES 6 K
Förderleistung/Delivery/Débit		l/h	695	1027	1027
Anlaufstrom/Starting current/Cour de démarrage		A	7,5	7,5	7,6
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	25,5	24,3	18,9
		Hi/aux Ω	16,4	15,5	15,3
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K57-1			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/		„ein“	+4	+8	
Valeurs de commutation		„aus“	-26	-17	
{ „abtauen“ od. }		„alarm“			
Füllmenge/Fill.quantity/Charge		g	65 / R134a	24 / R600a	24 / R600a
Anschlußwert/Conn.load/Puiss. connectée		W	80	90	90
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur			MES F61-10		
Widerstand/Resistance/Résistance		Ω	680		
Schaltuhr/Timer/Minuterie de contact					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			