


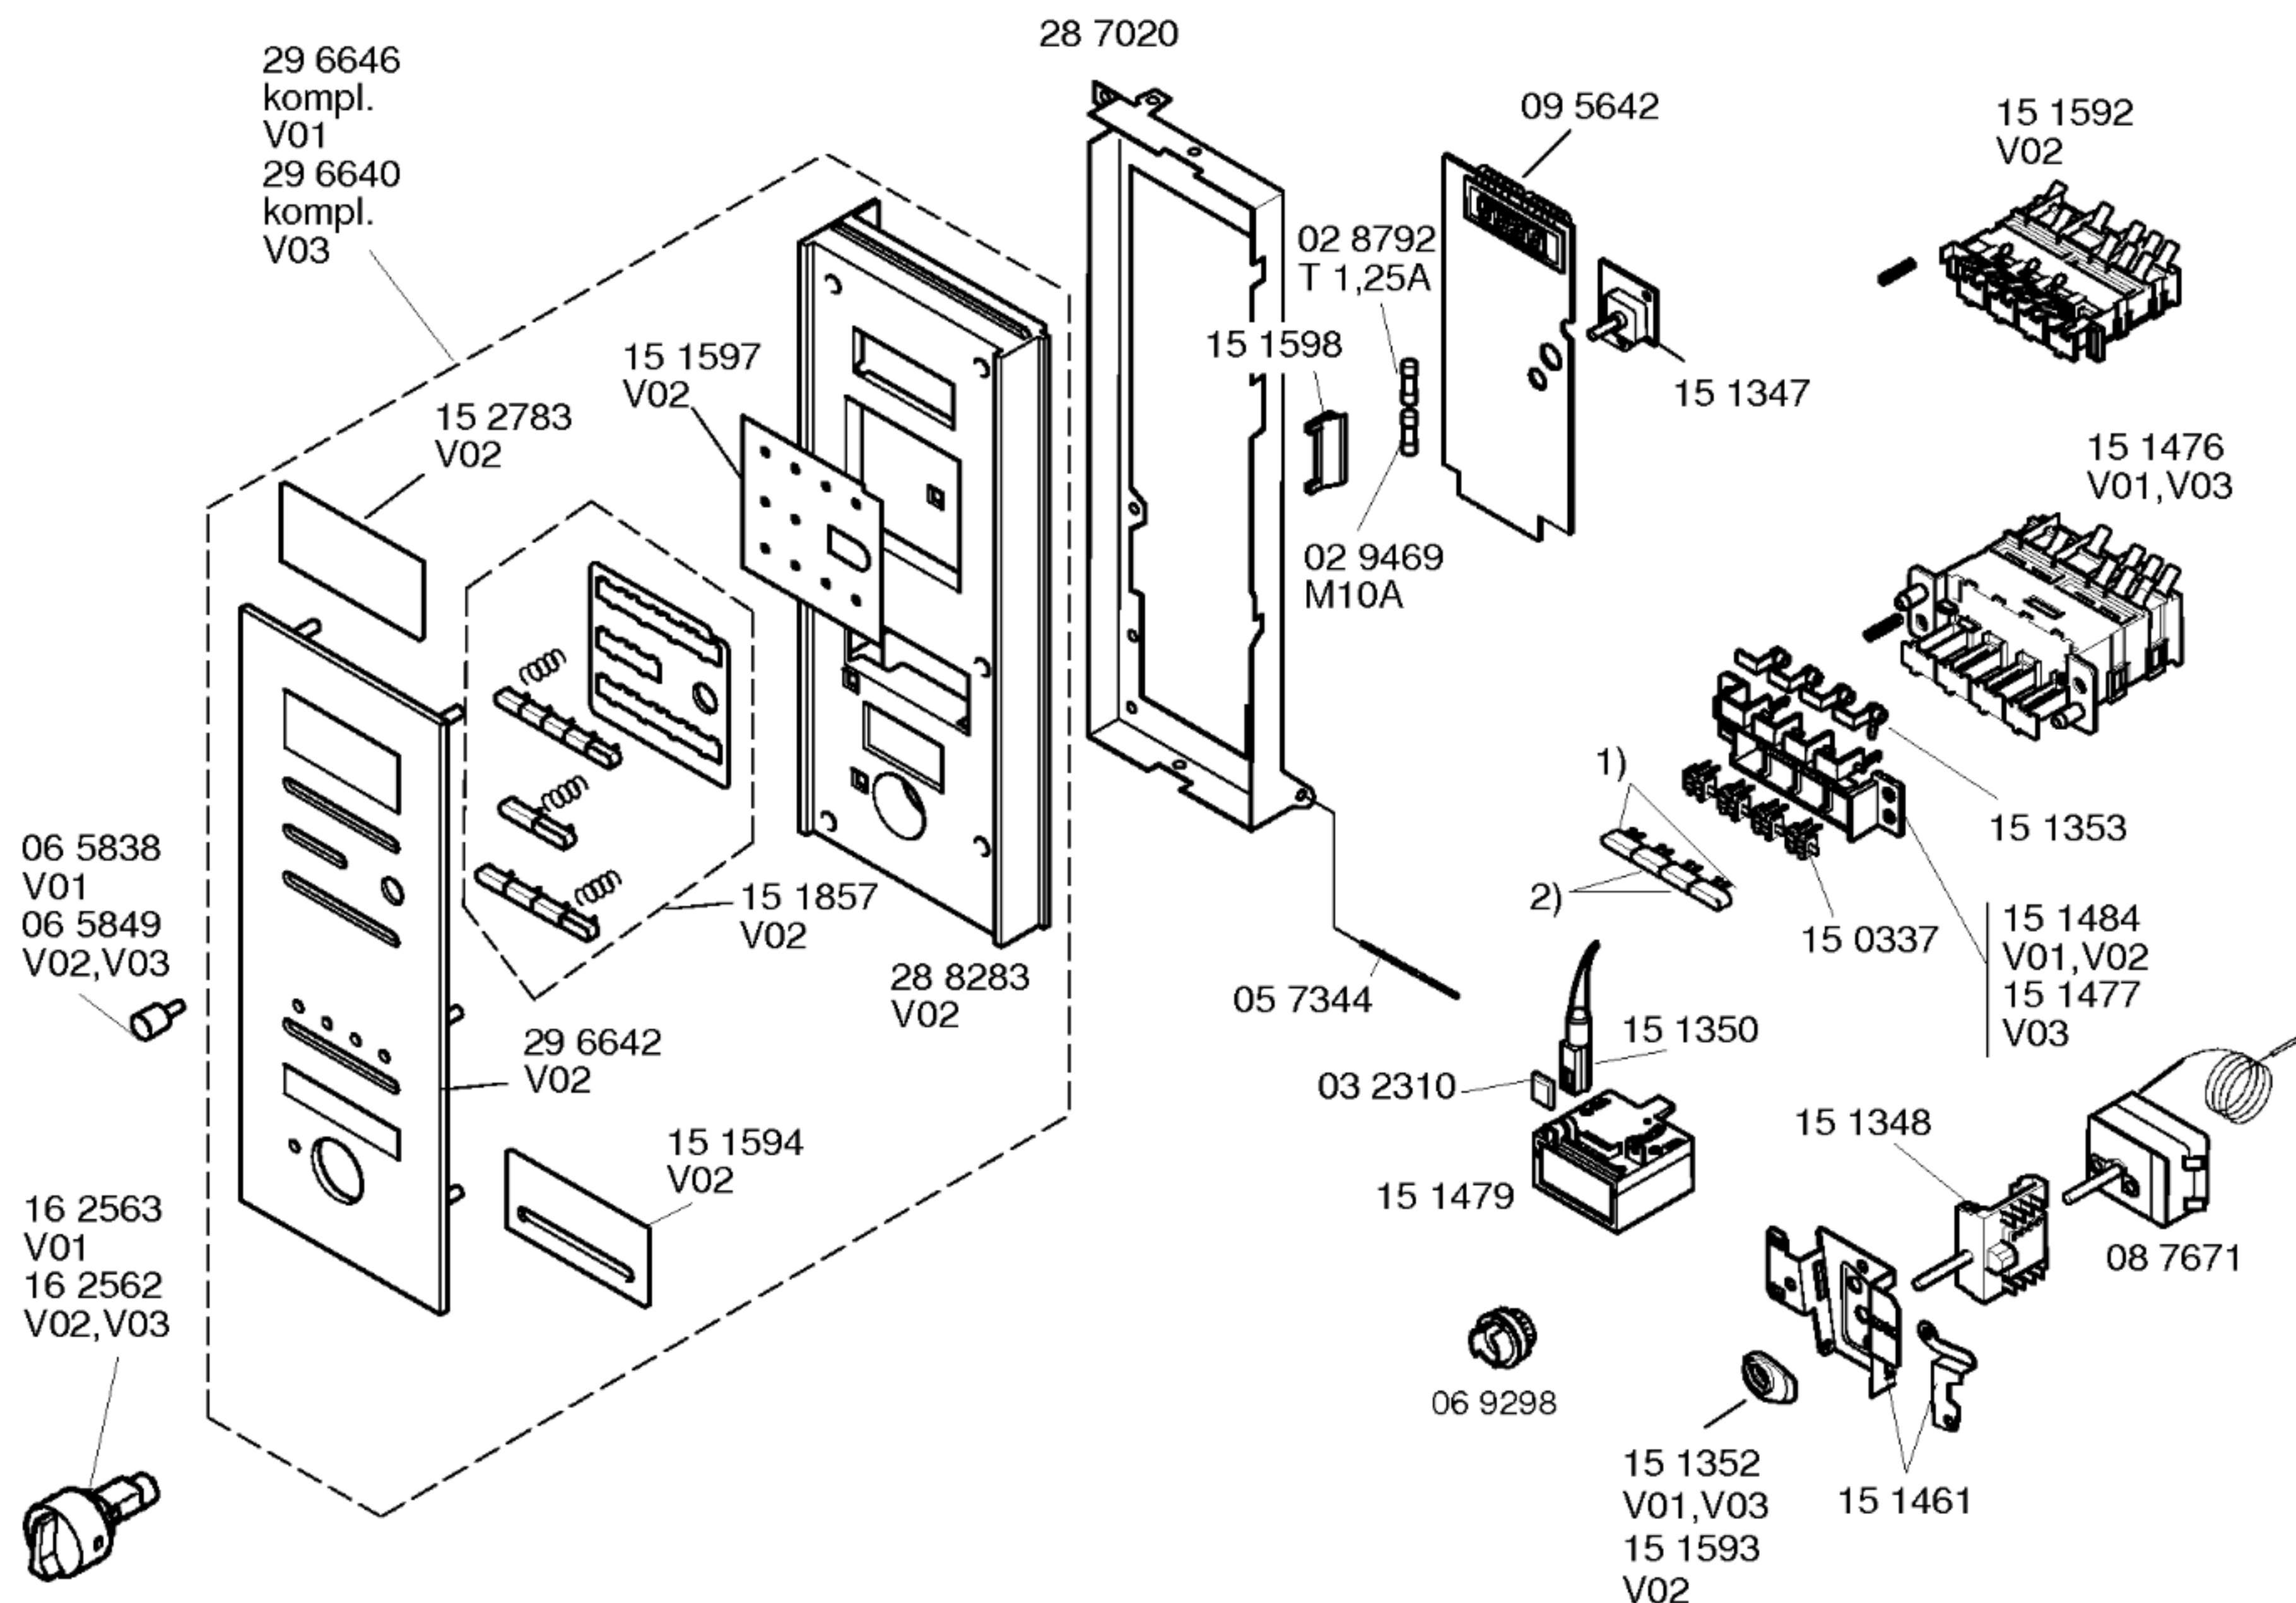

Gebrauchsanweisung
 51 9507
 (D,F,GB,I,NL,E)

Montageanleitung
 51 6089
 (D,GB,F,I,NL)

Programmtabelle
 51 7579
 (D,GB,F,I,NL,E)


Kochbuch
 51 6059
 (D)

- 1) 15 0339
 V01
 15 1482
 V02, V03
- 2) 15 0338
 V01
 15 1478
 V02, V03


Zubehör:

Alu-Backblech
 Z6380X0

Glaspfanne
 Z6290X0

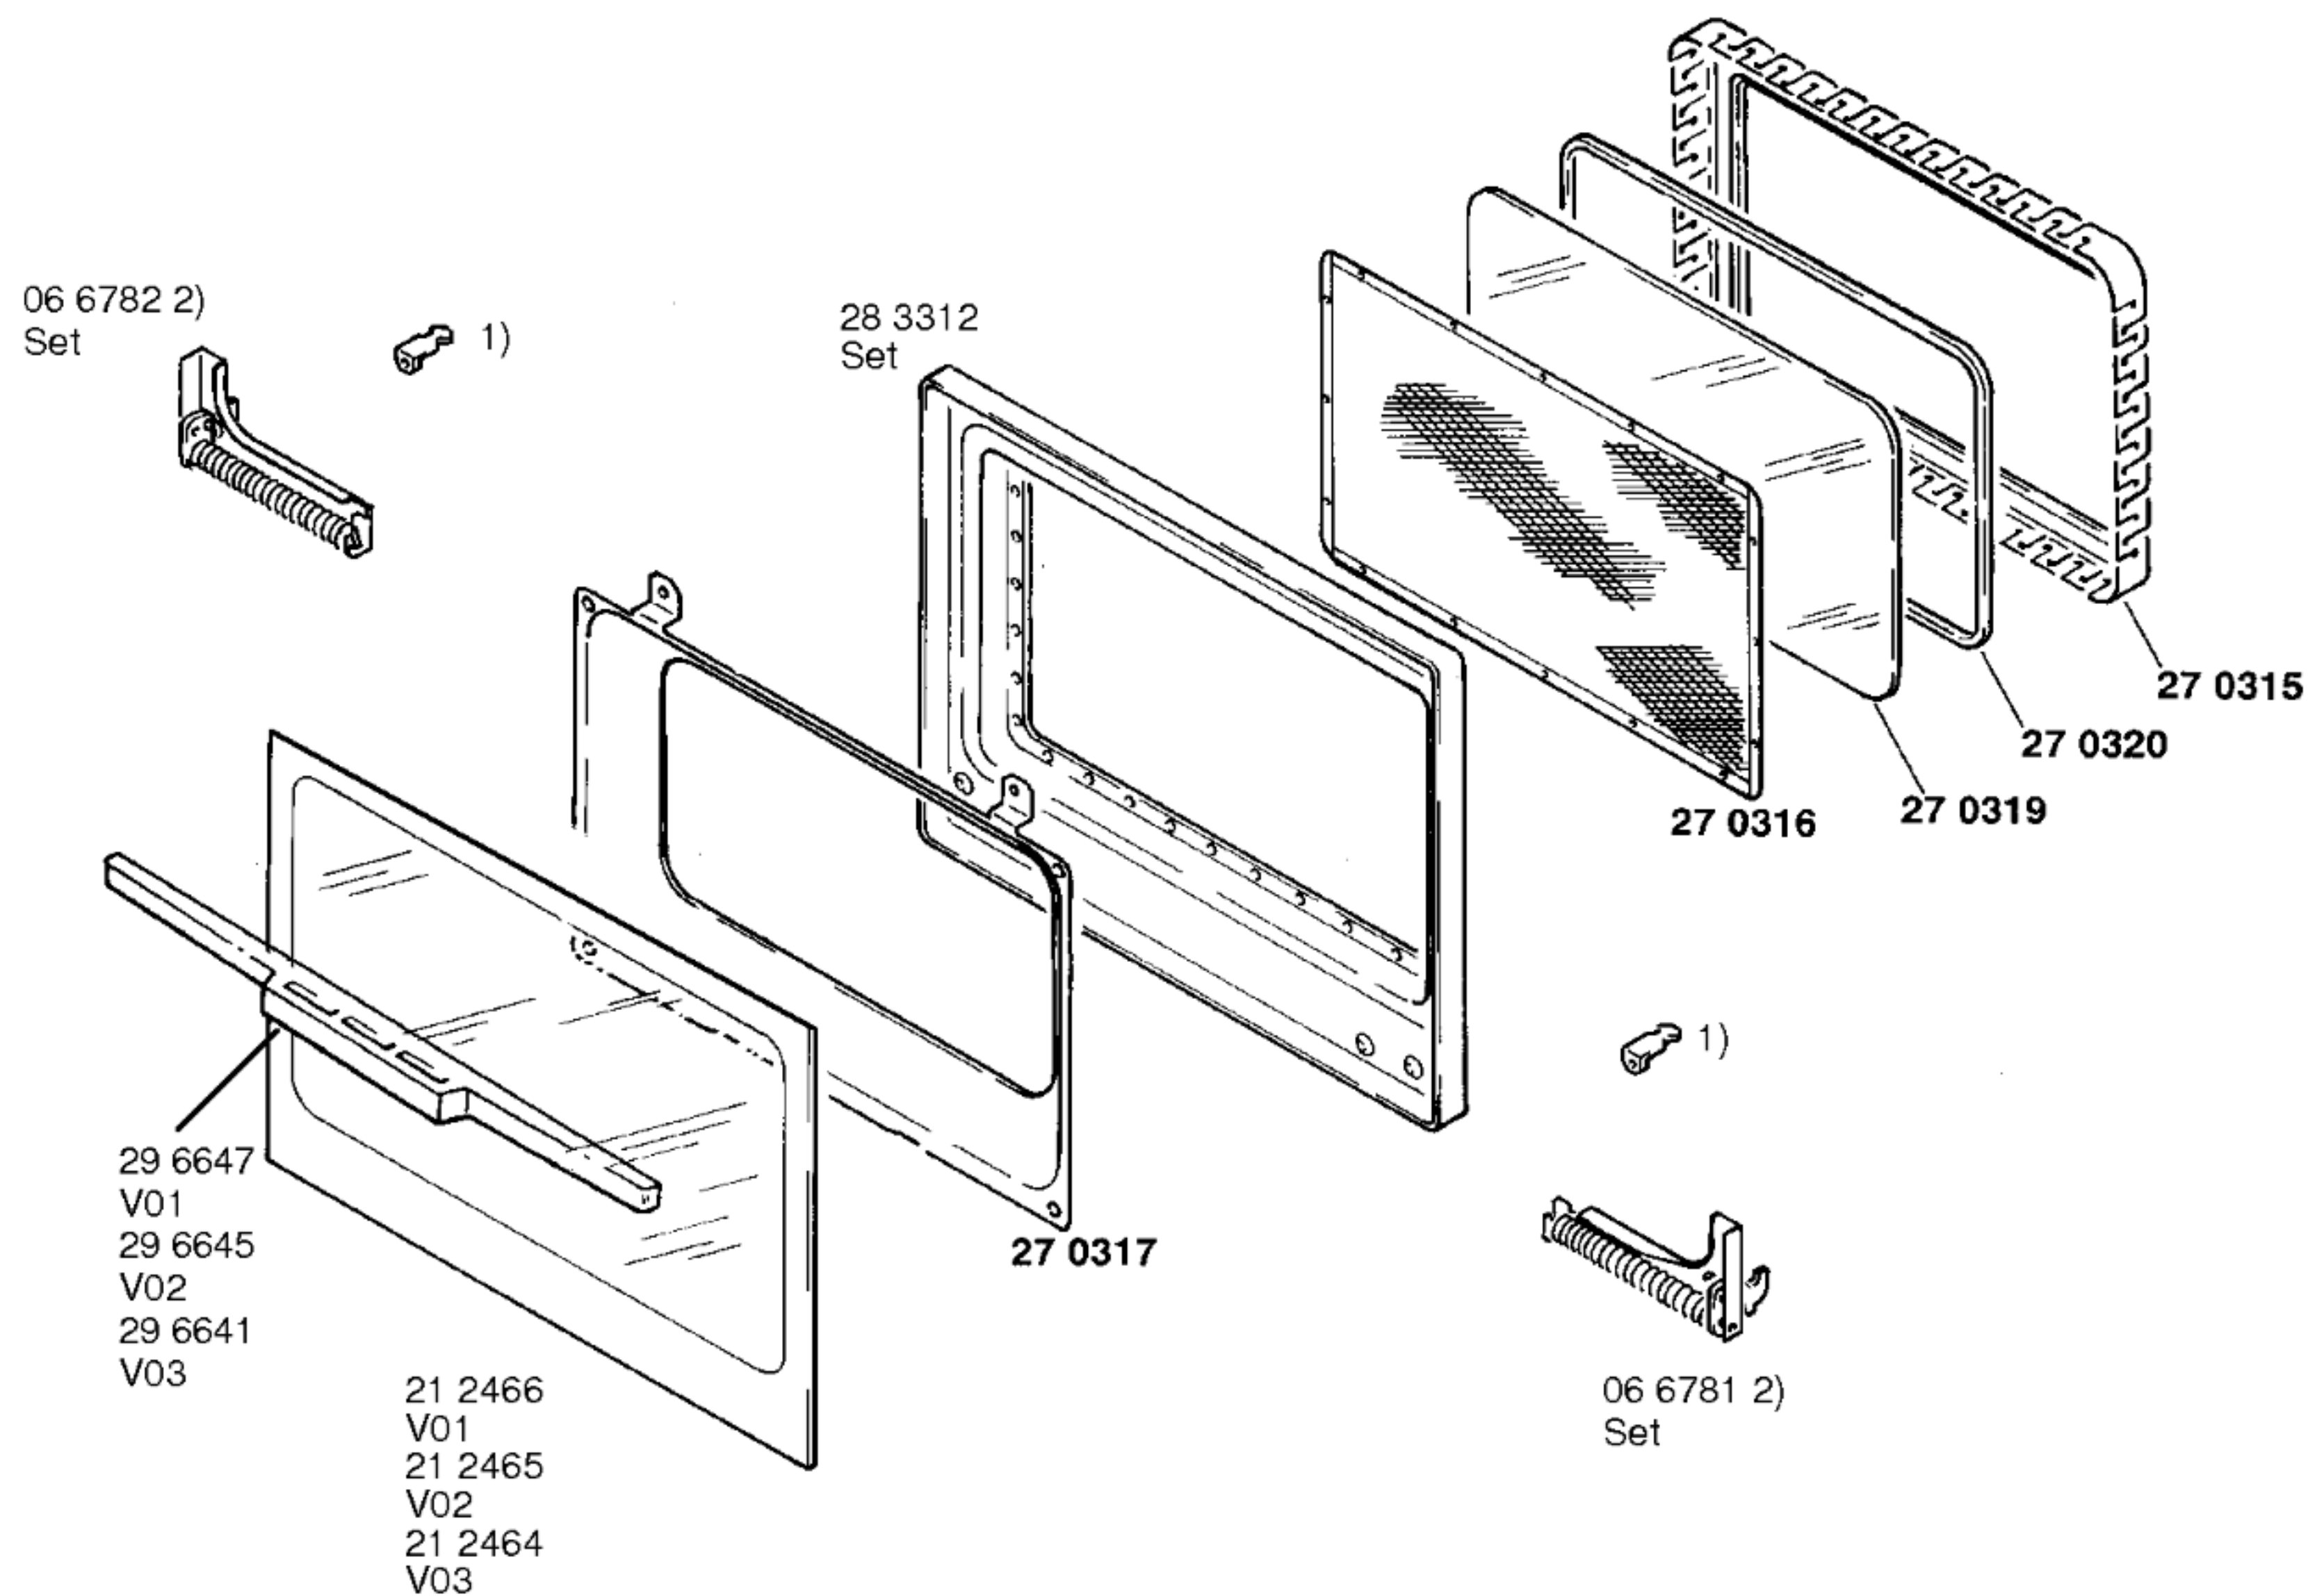


- 1) 03 0671
Stössel
 2) 03 0813
Arretierstift

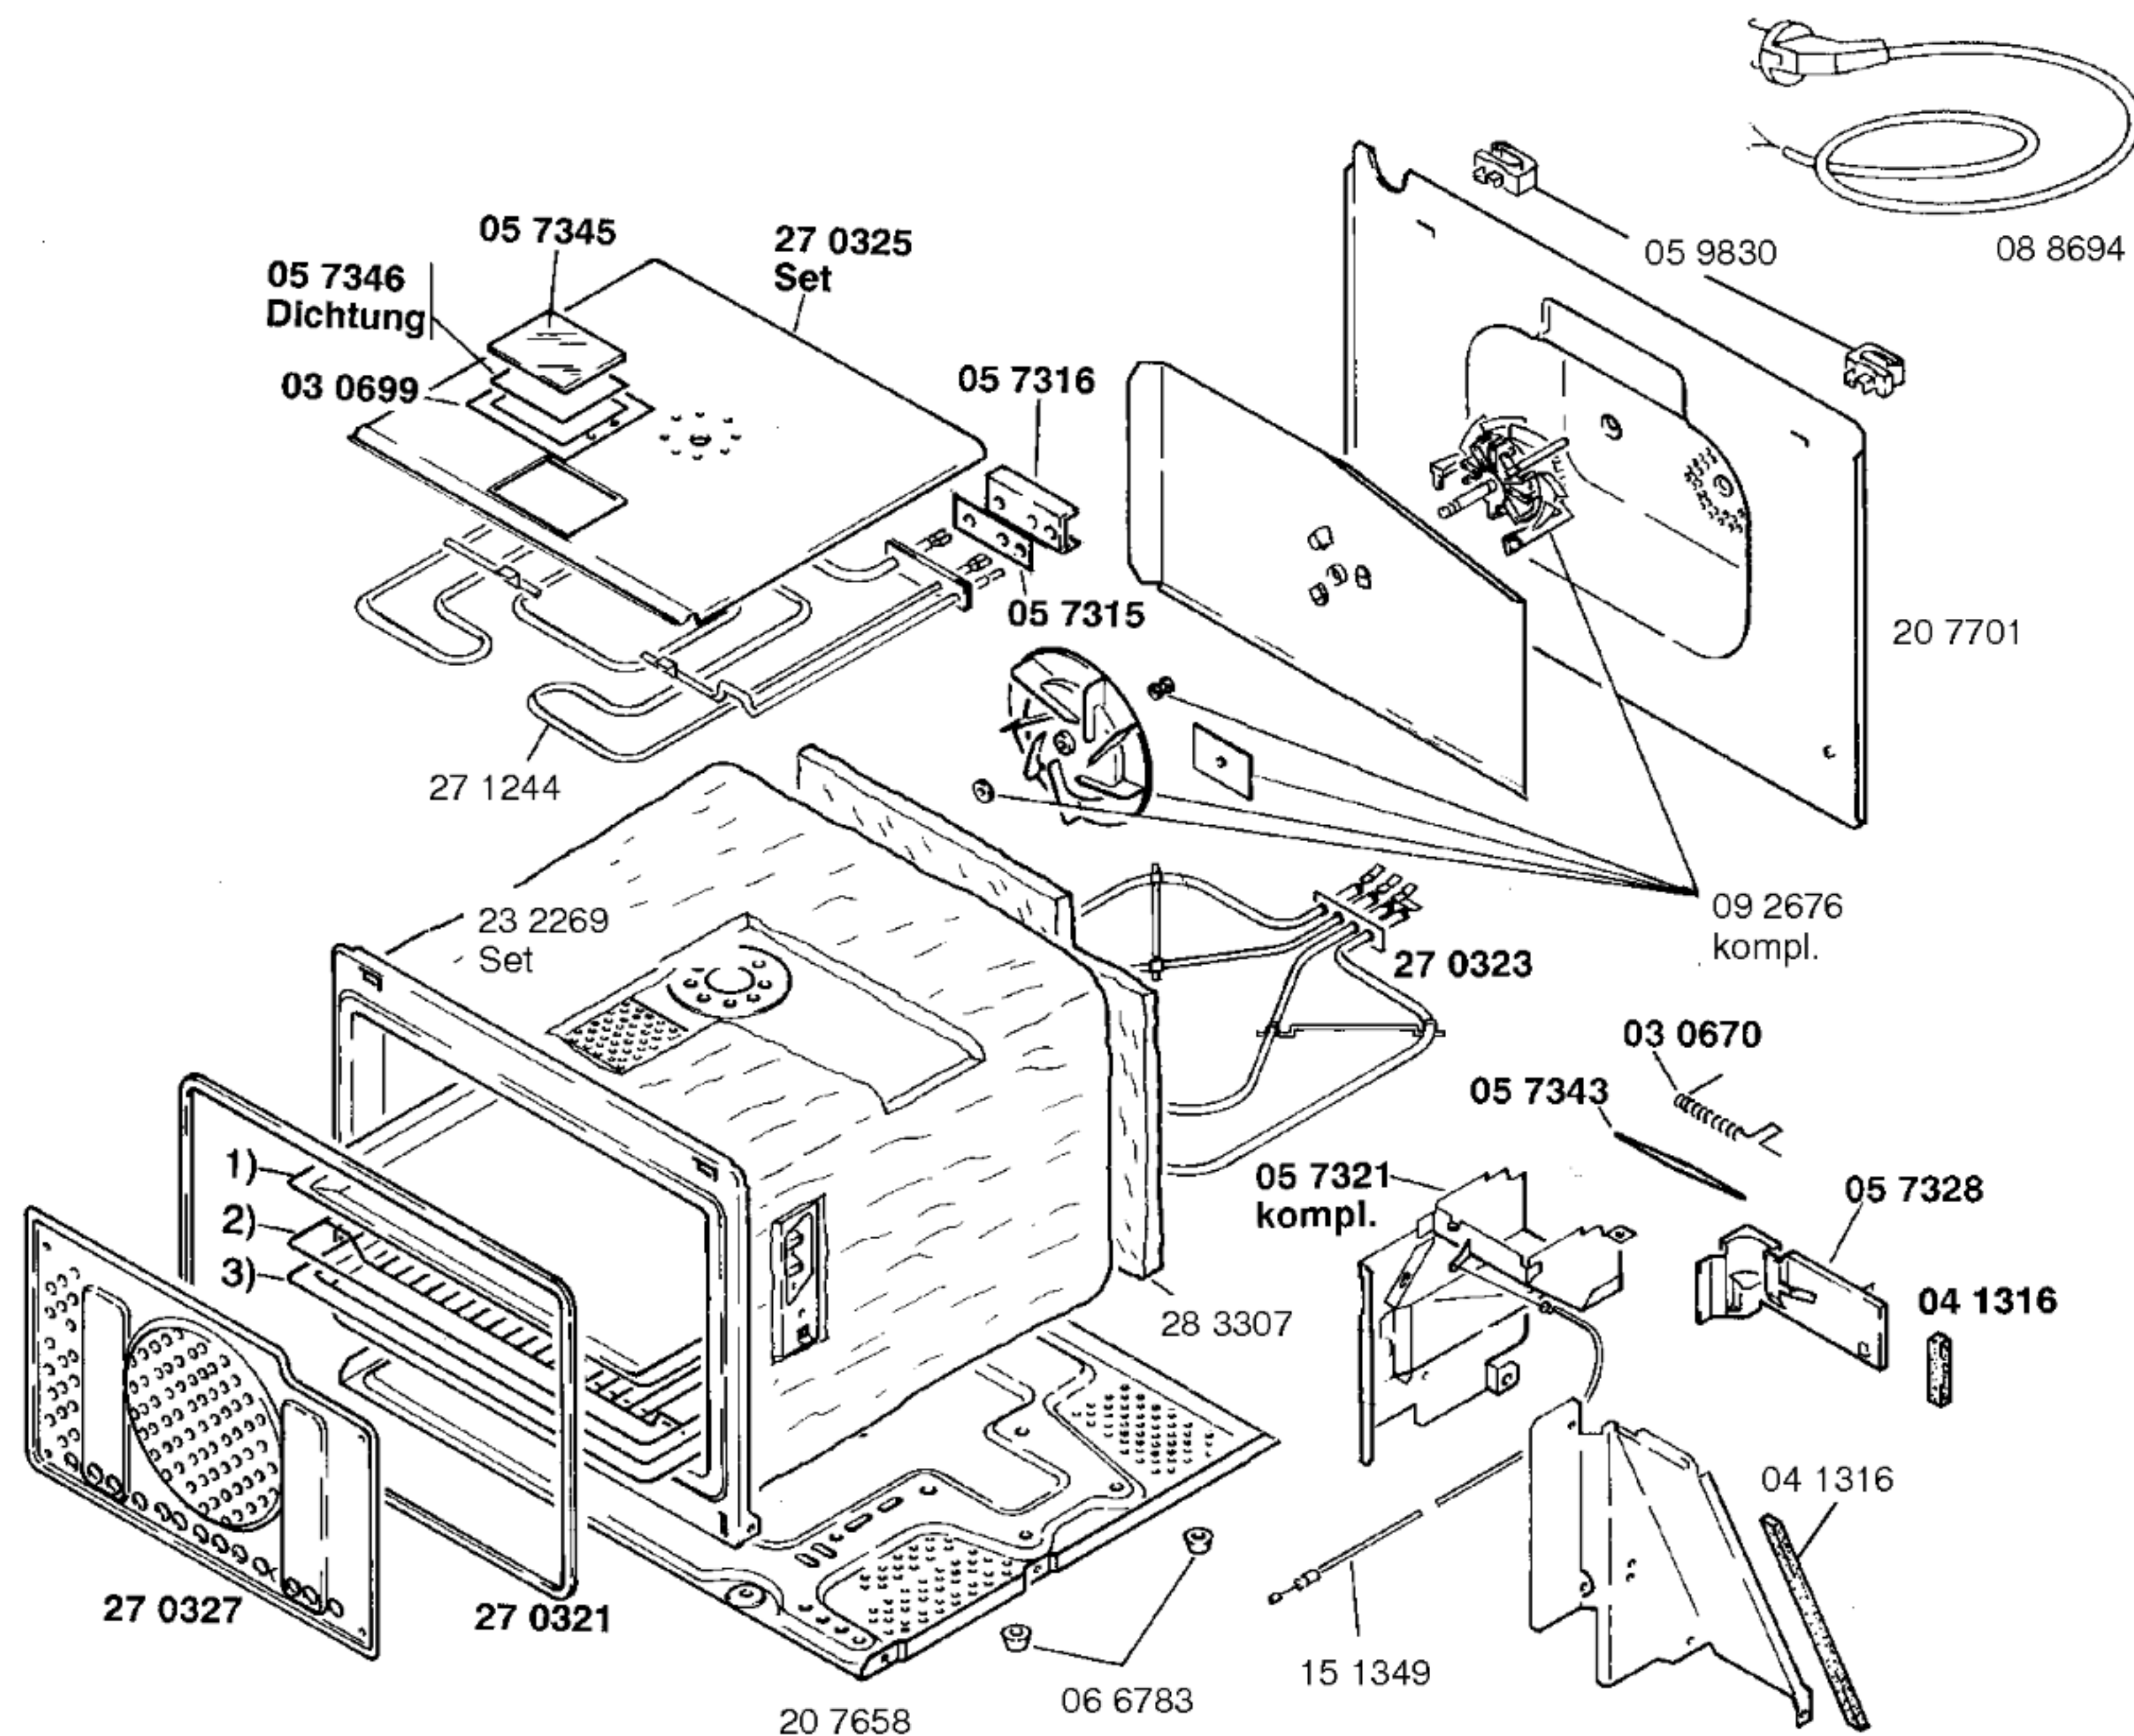


- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale

02 8732
Anschlag für Backblech

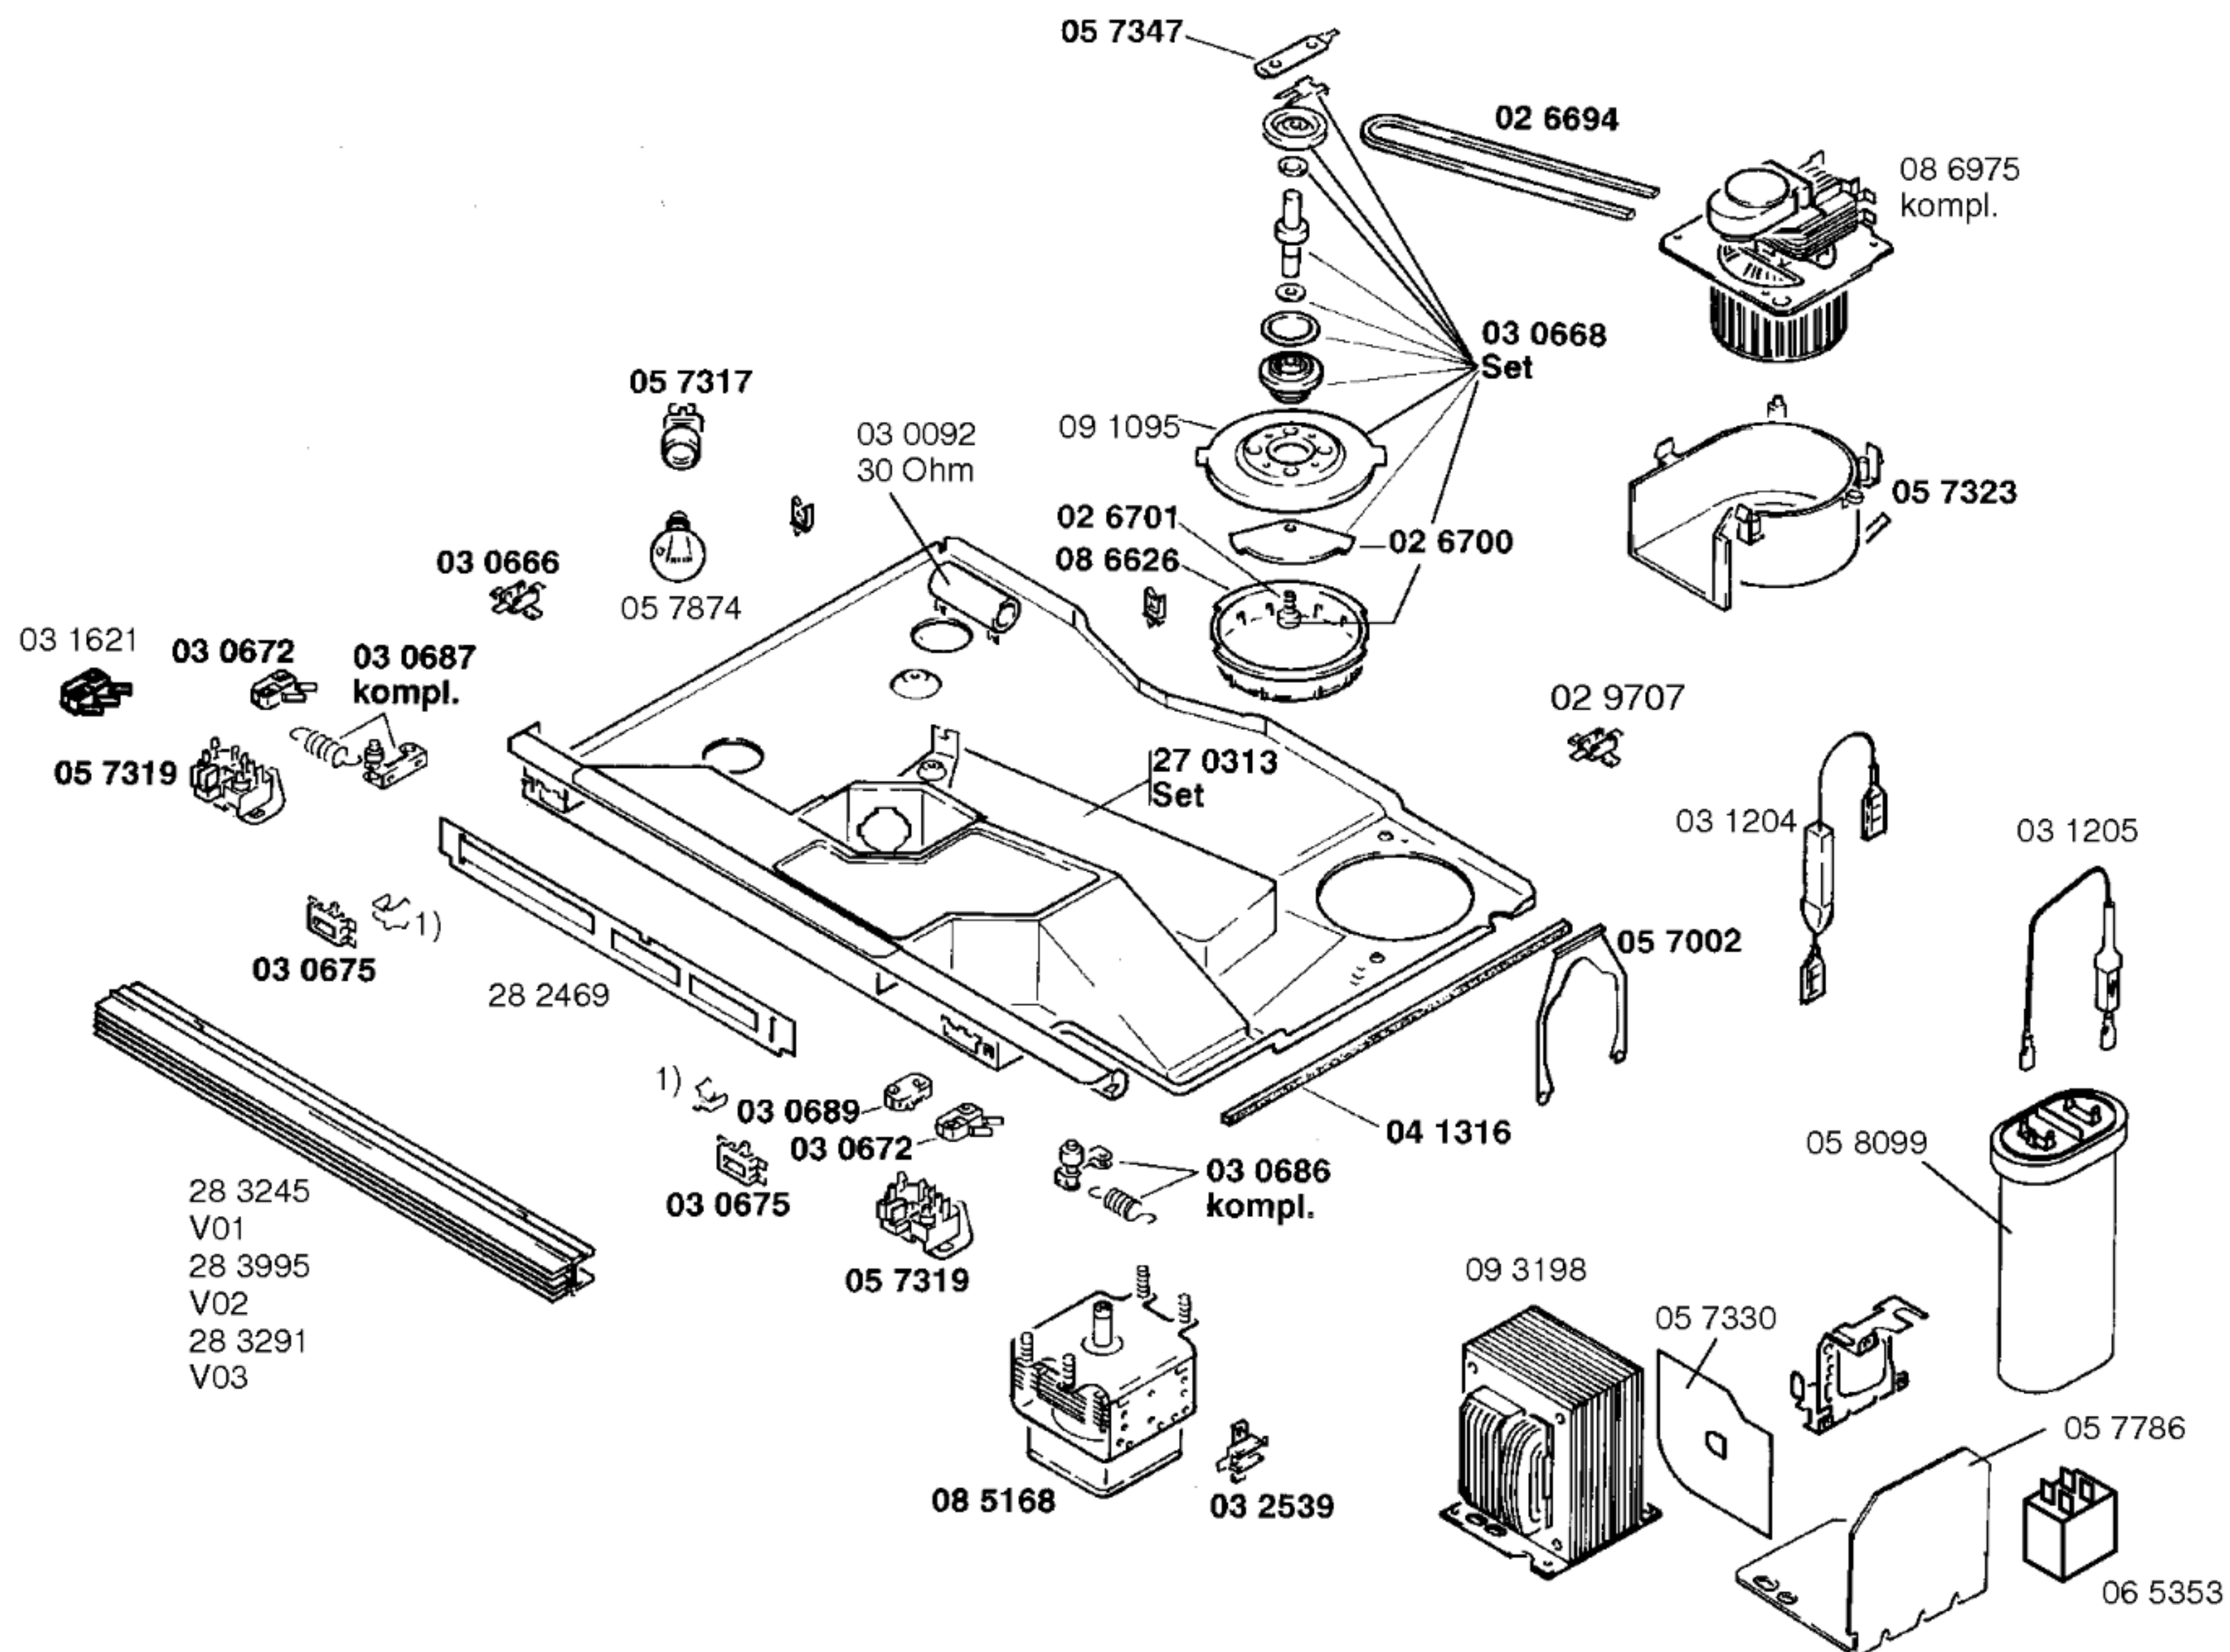

1) 06 6760

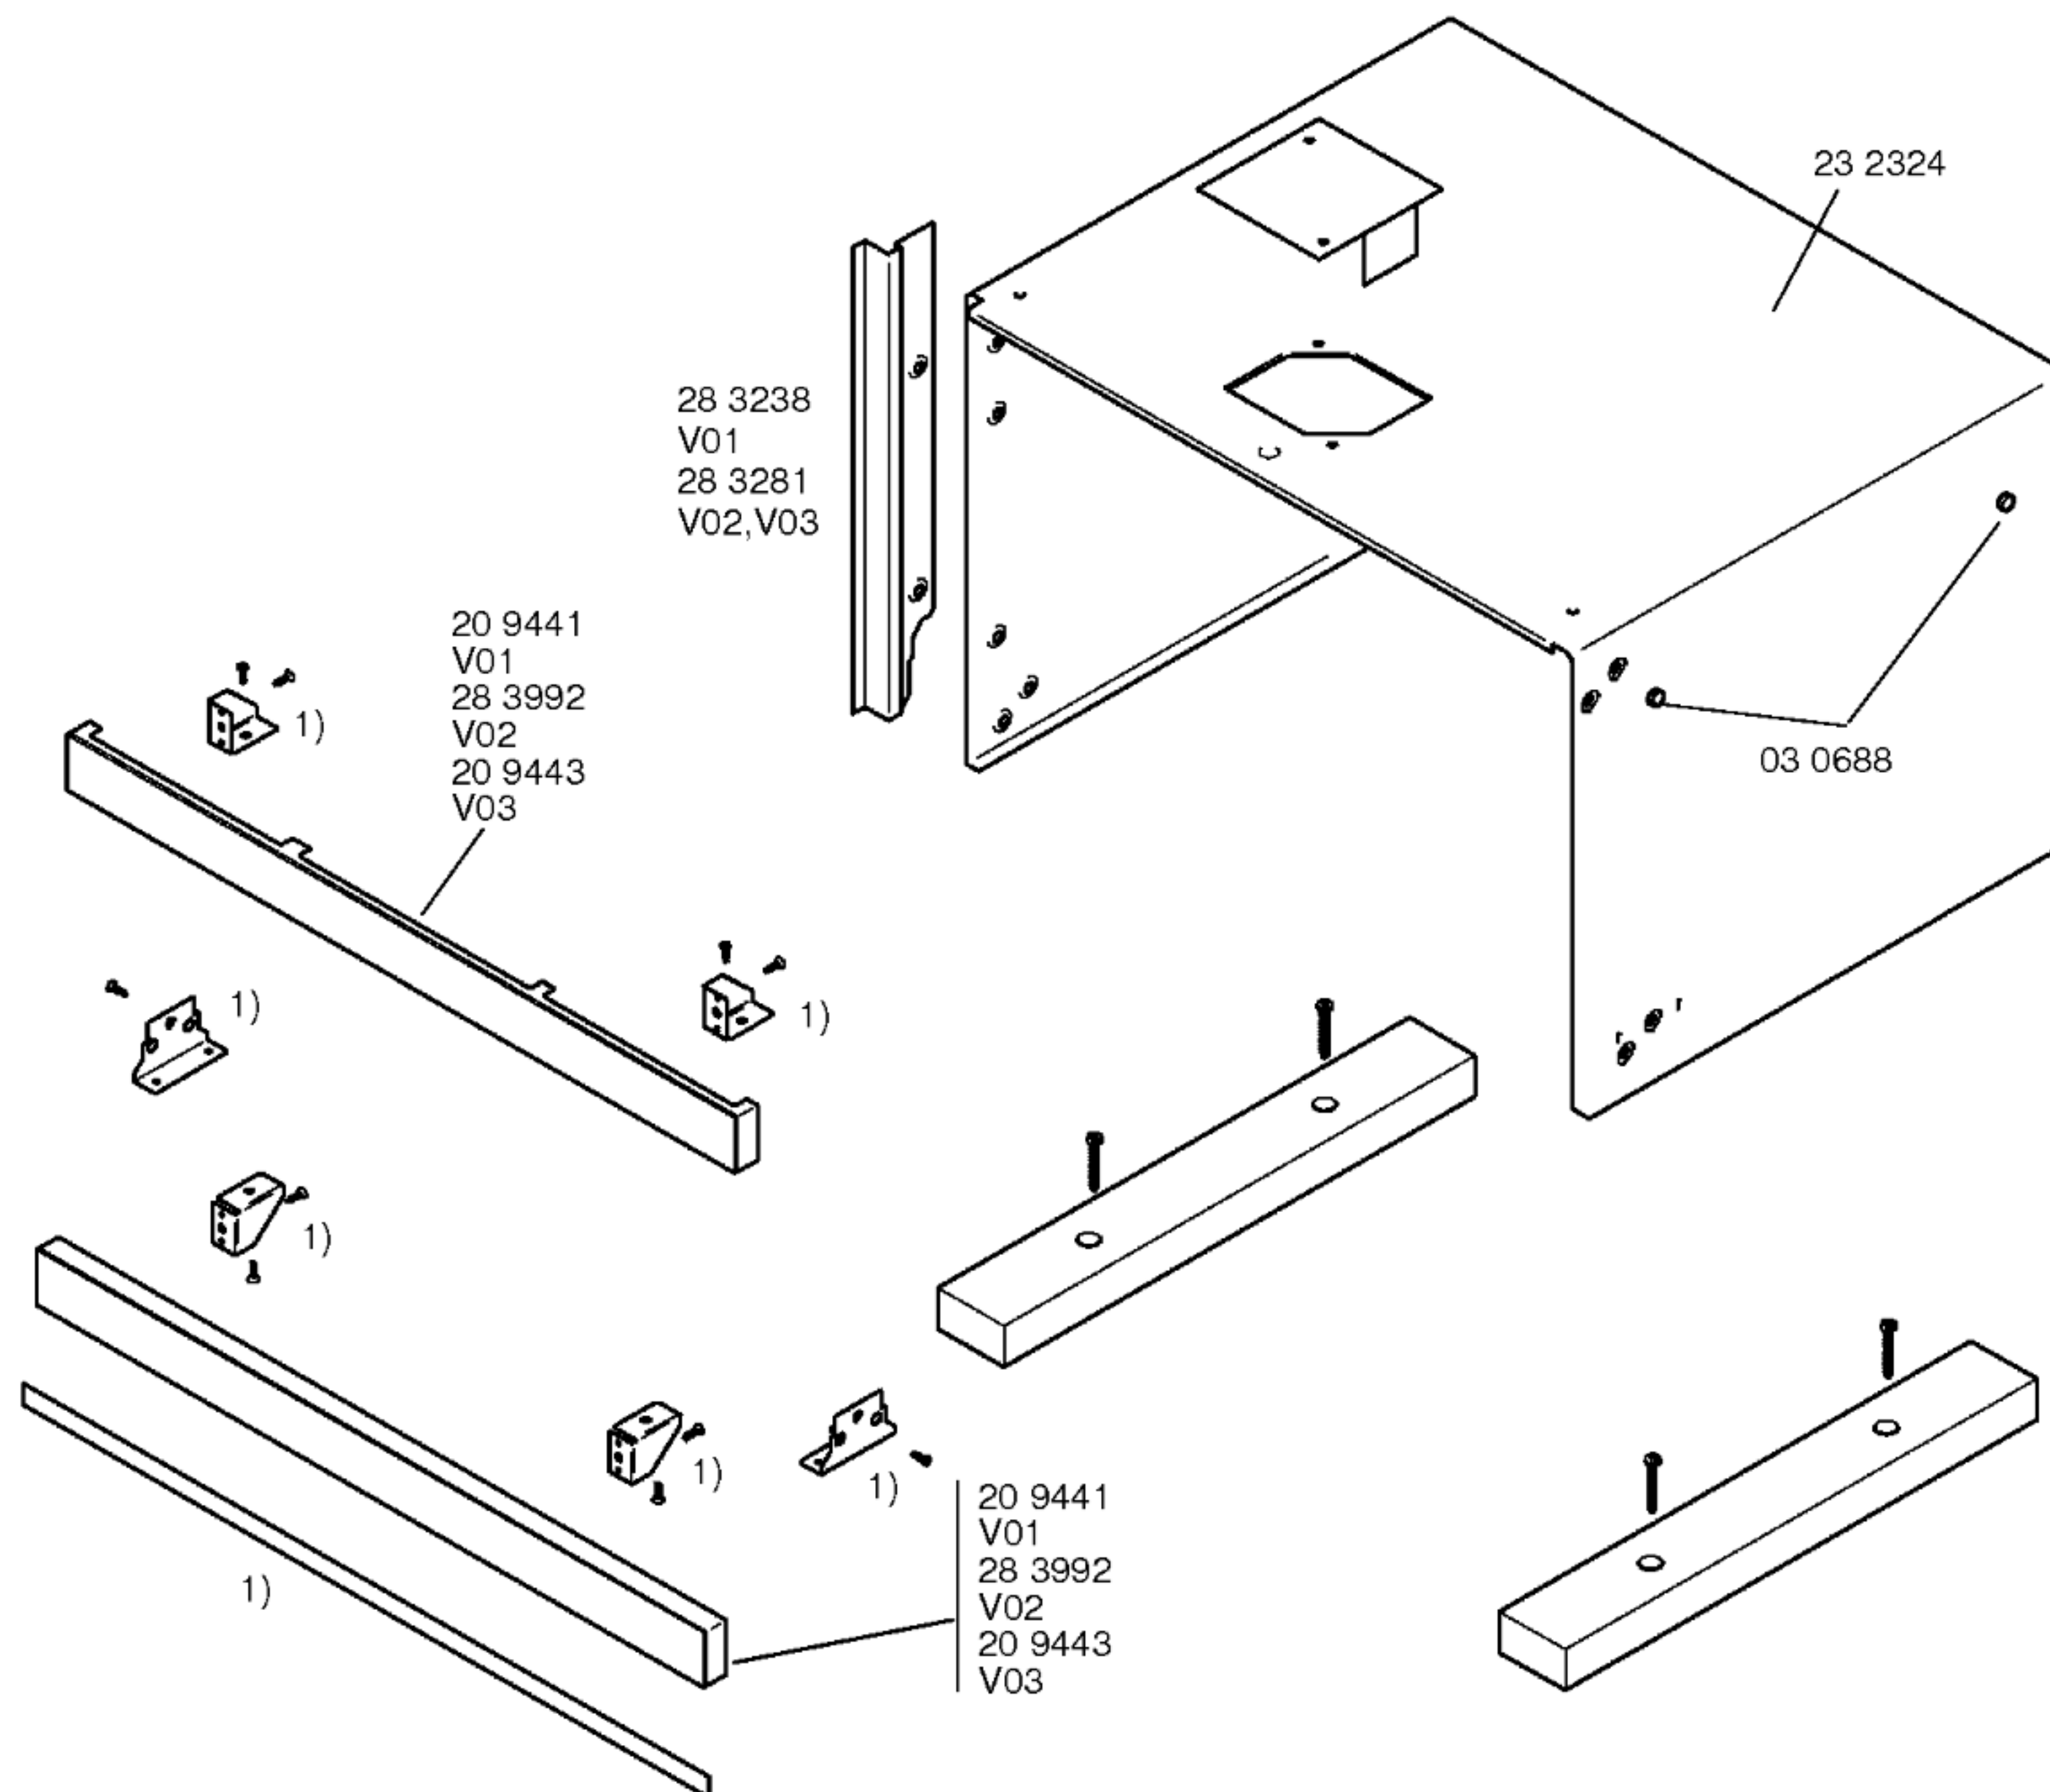

1) 06 6979