


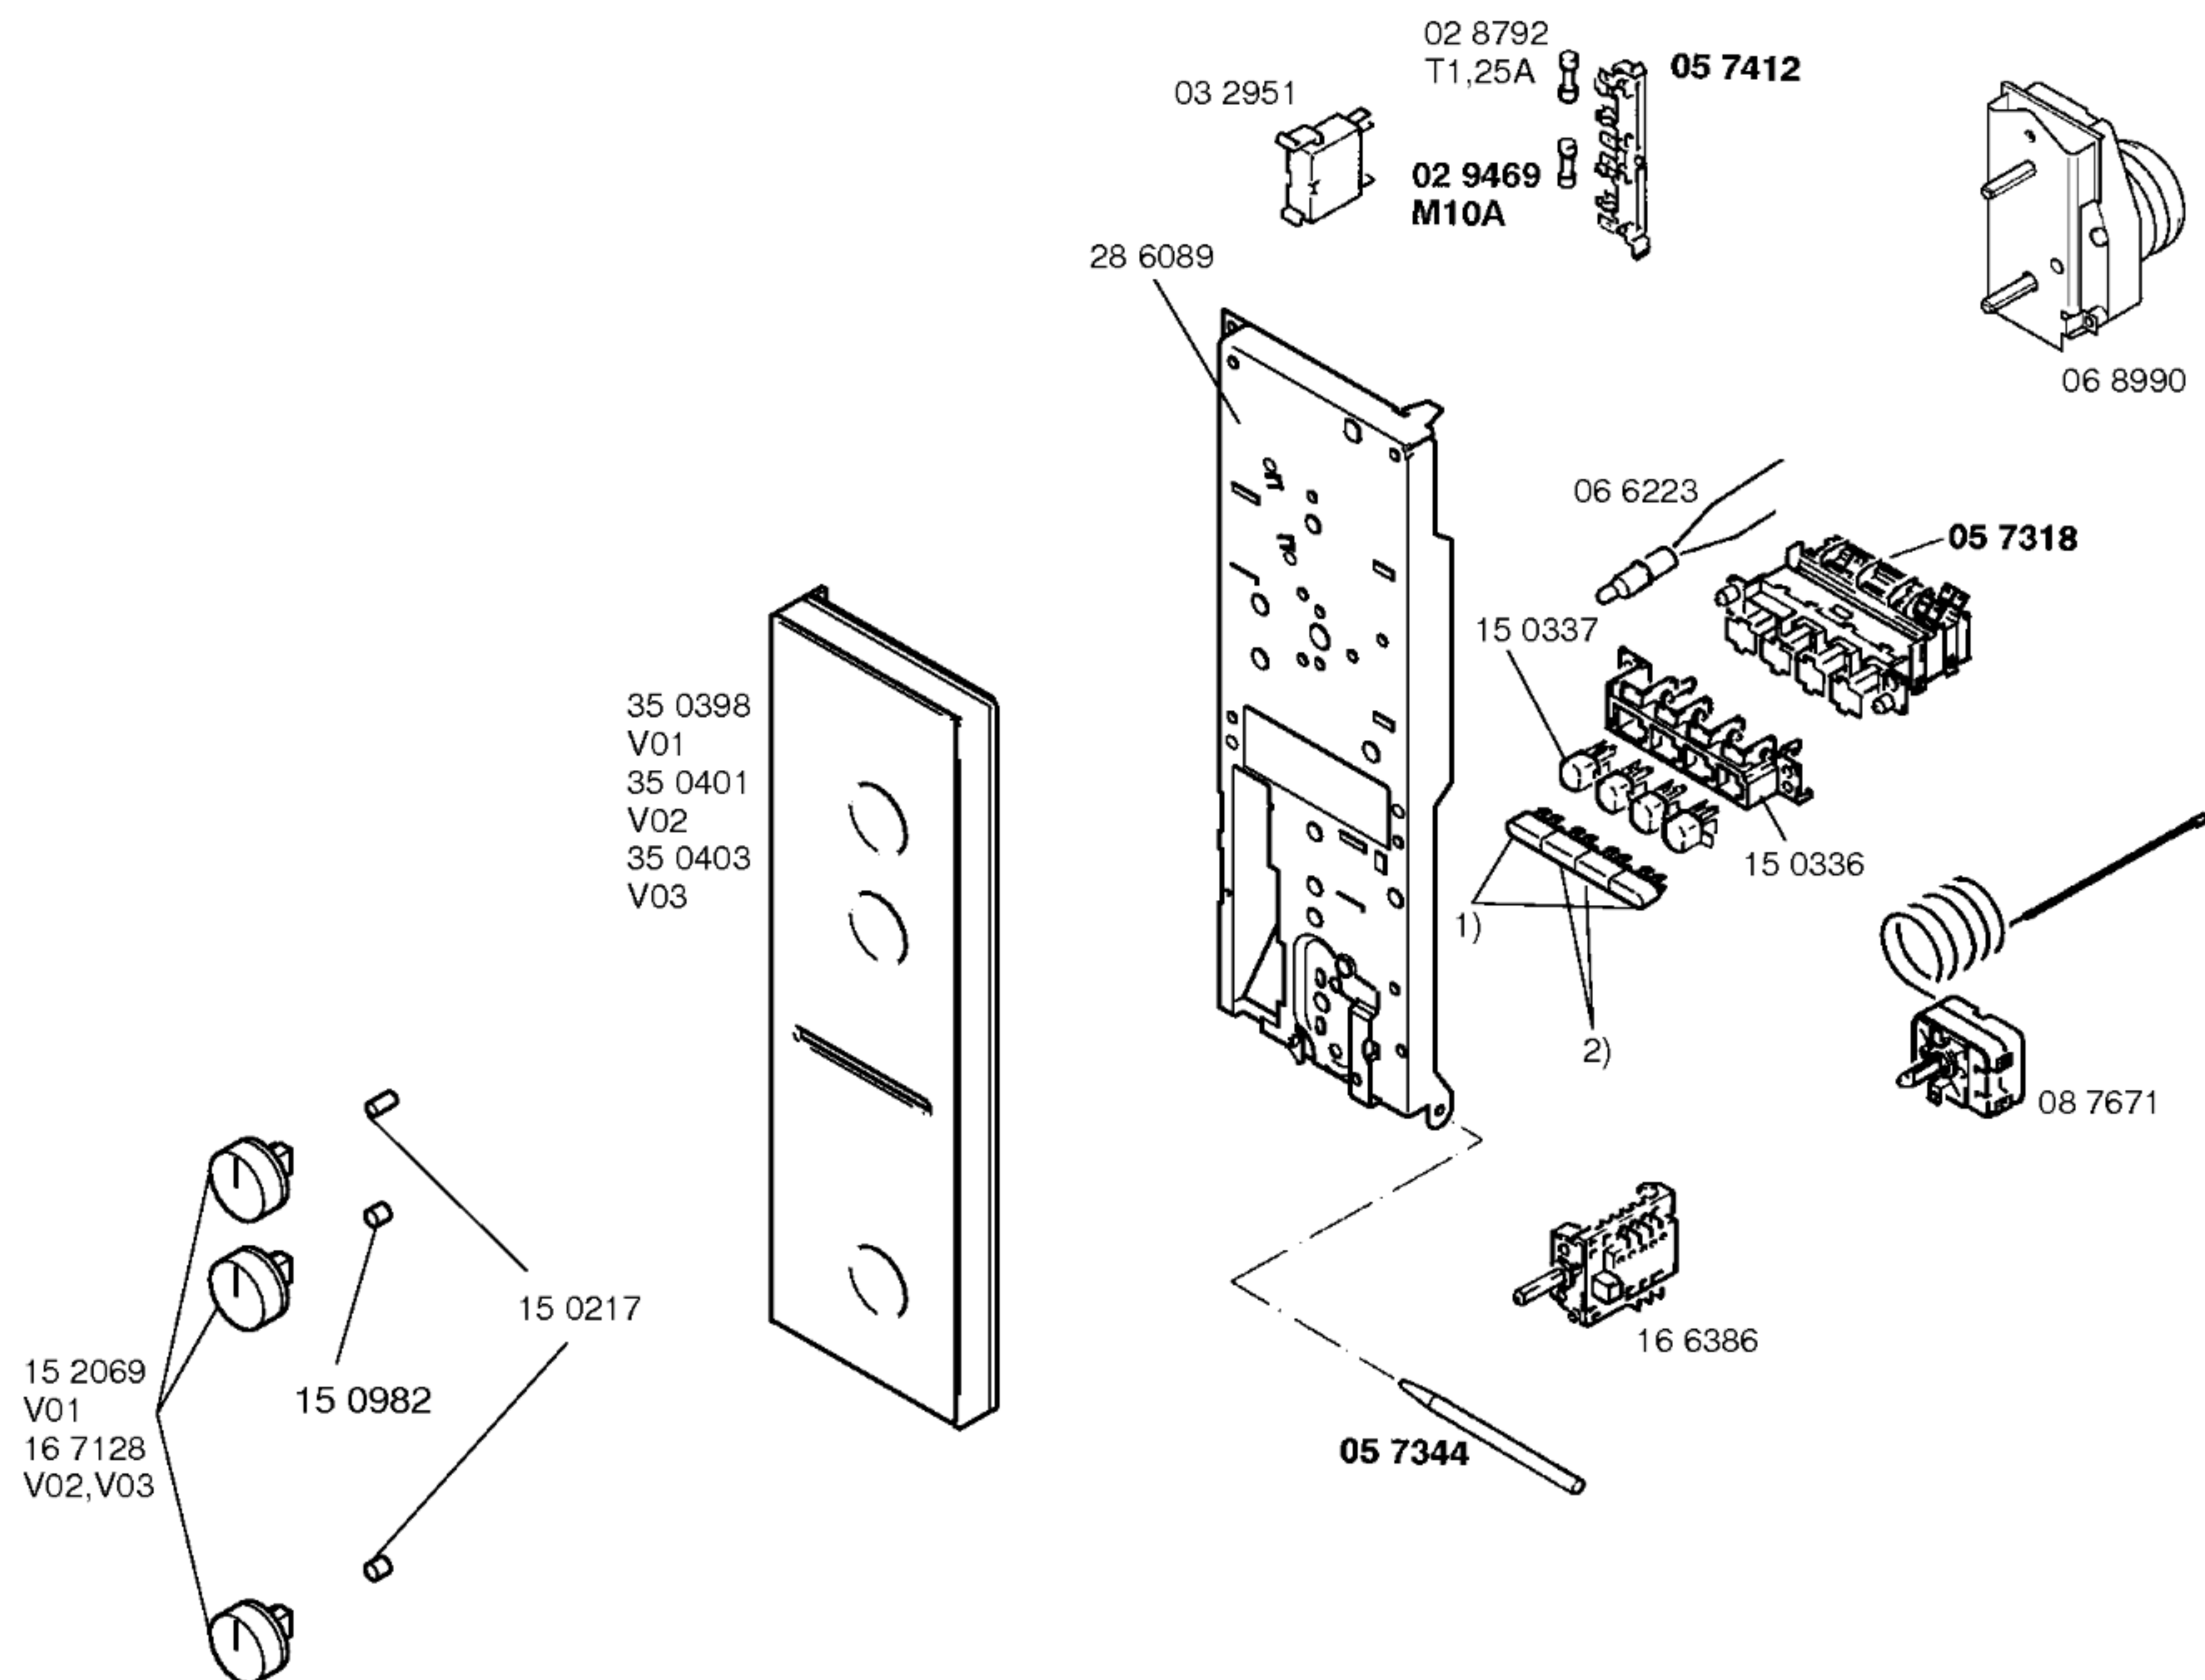

Gebrauchsanweisung
52 0697
(D,F,I,NL,GB,E)

Kochbuch
51 6059
(D)


Montageanweisung
51 6089
(D,F,GB,NL,I)


Zubehör:

Z62 90X0
Glaspfanne

Z63 80X0
Alu-Backblech


- 1) 15 0339
V01
15 1482
V02,V03
2) 15 0338
V01
15 1478
V02,V03

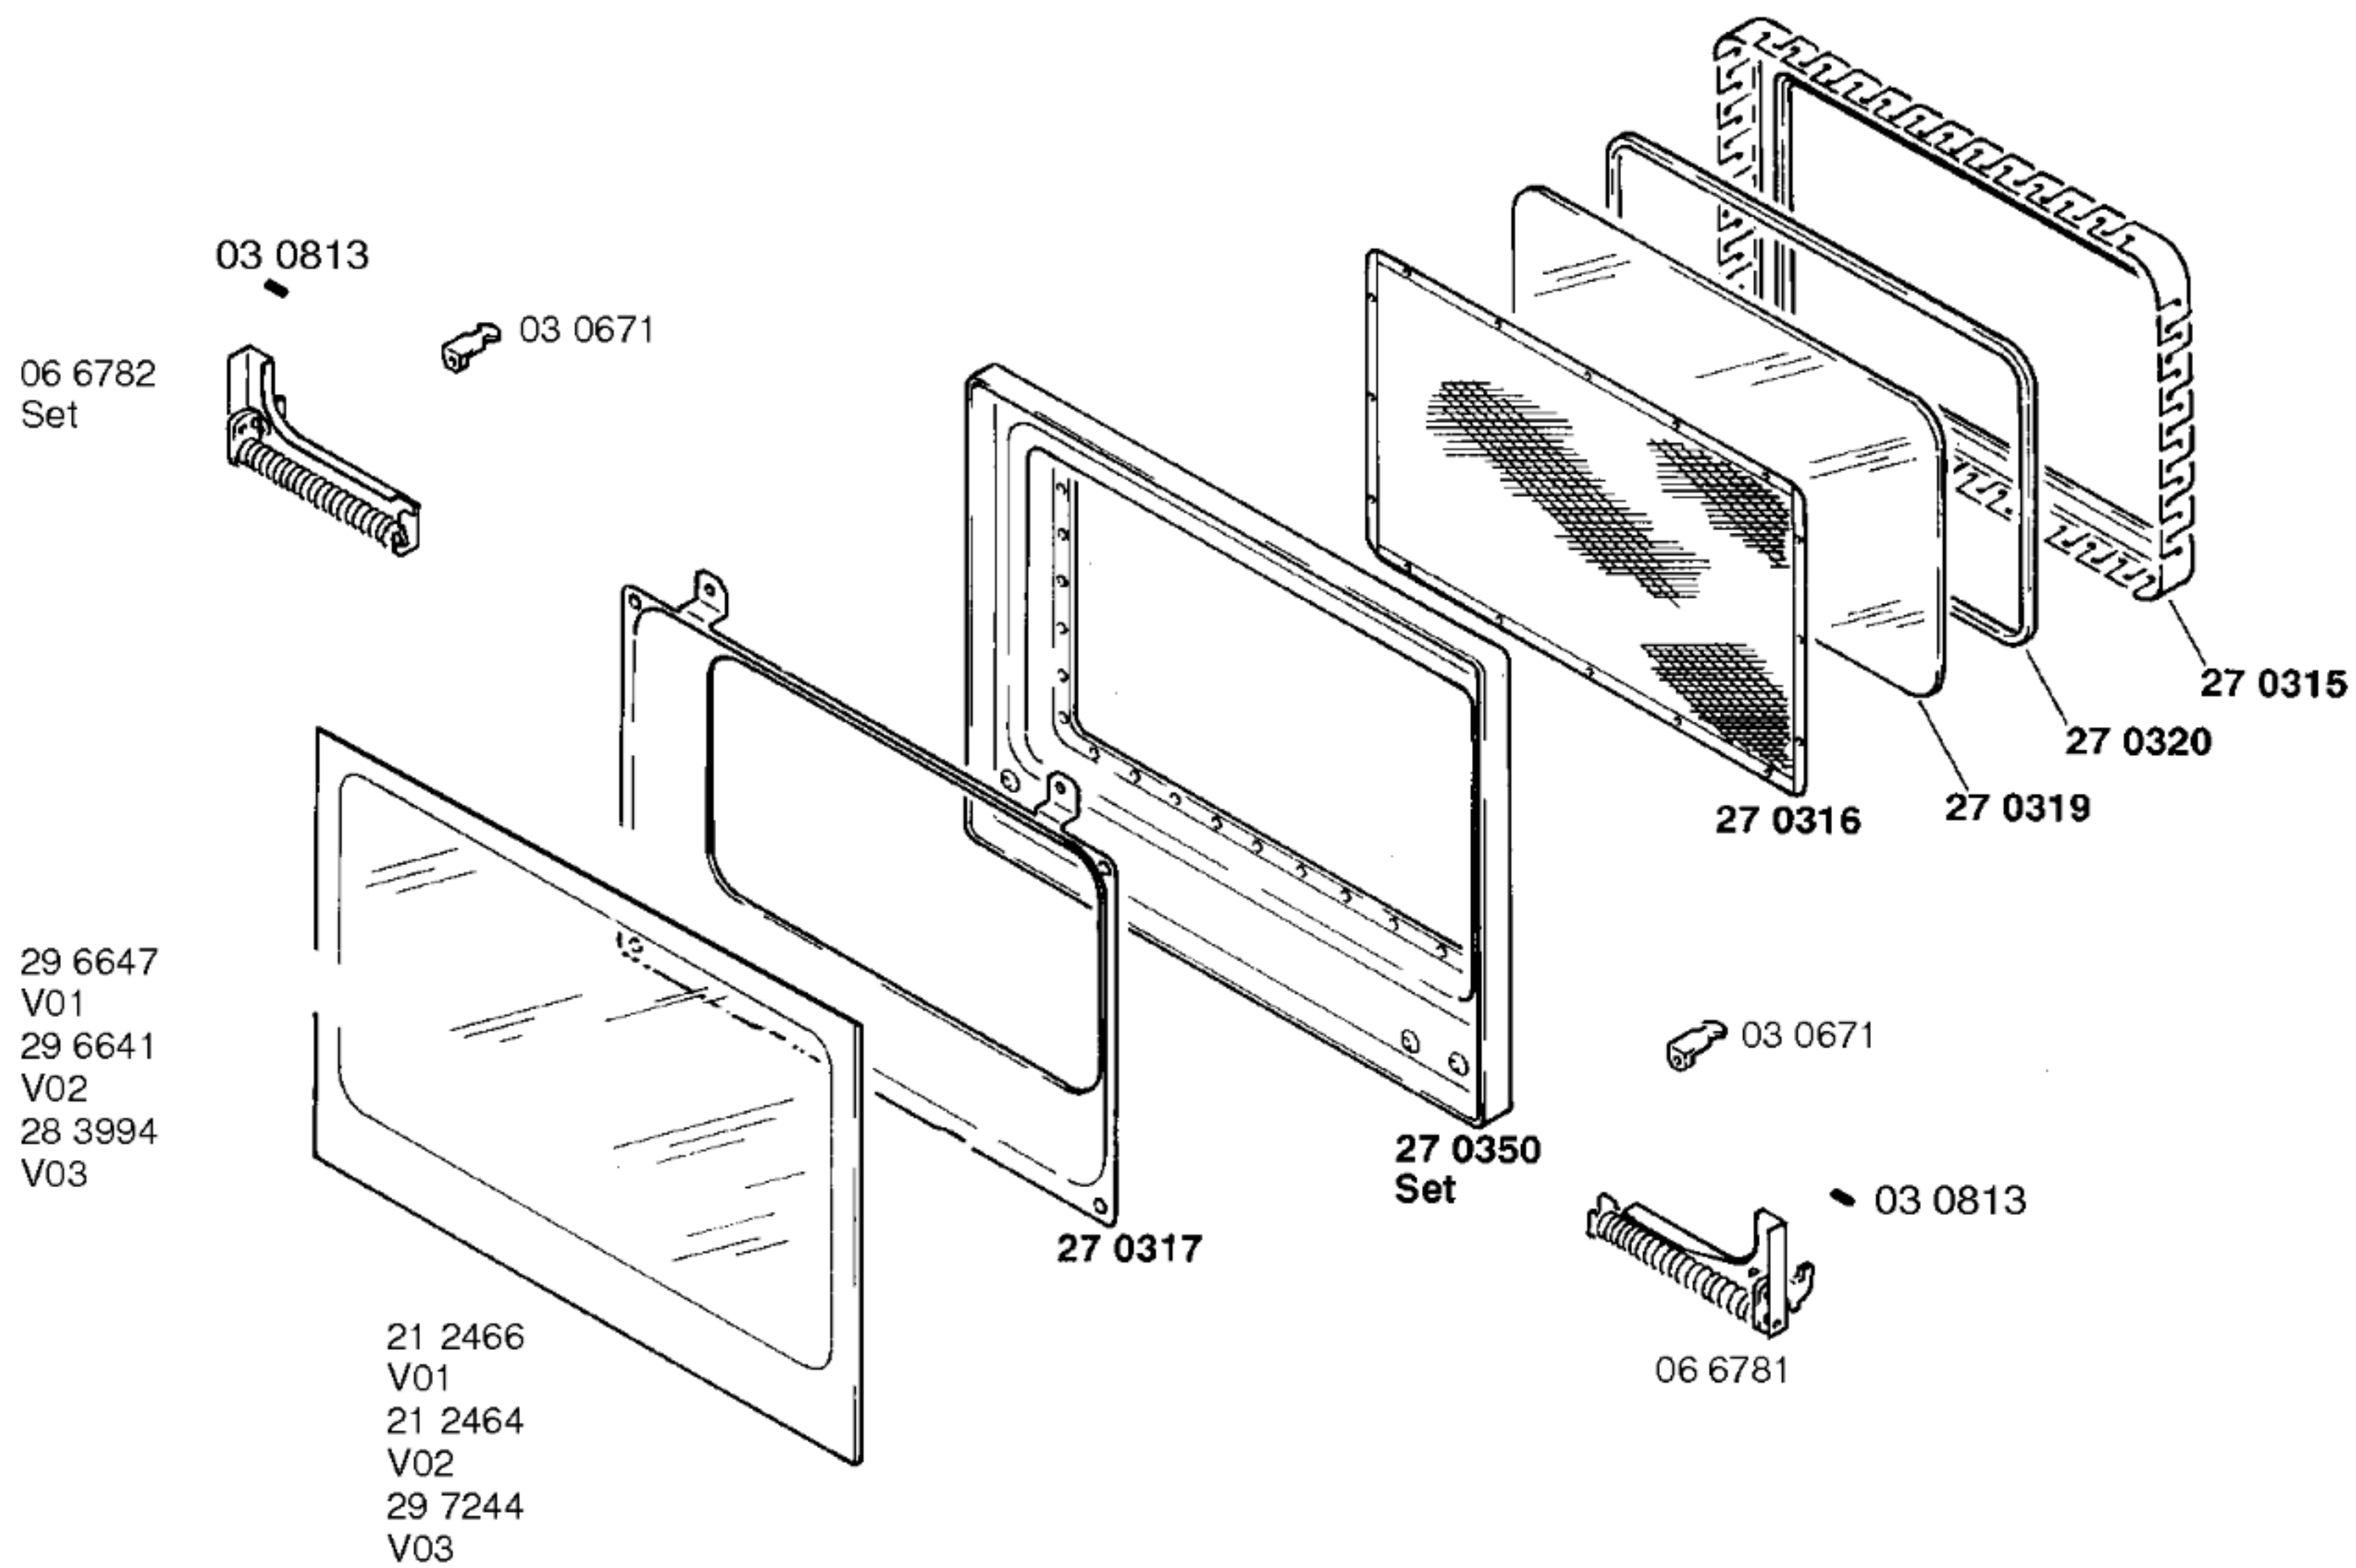

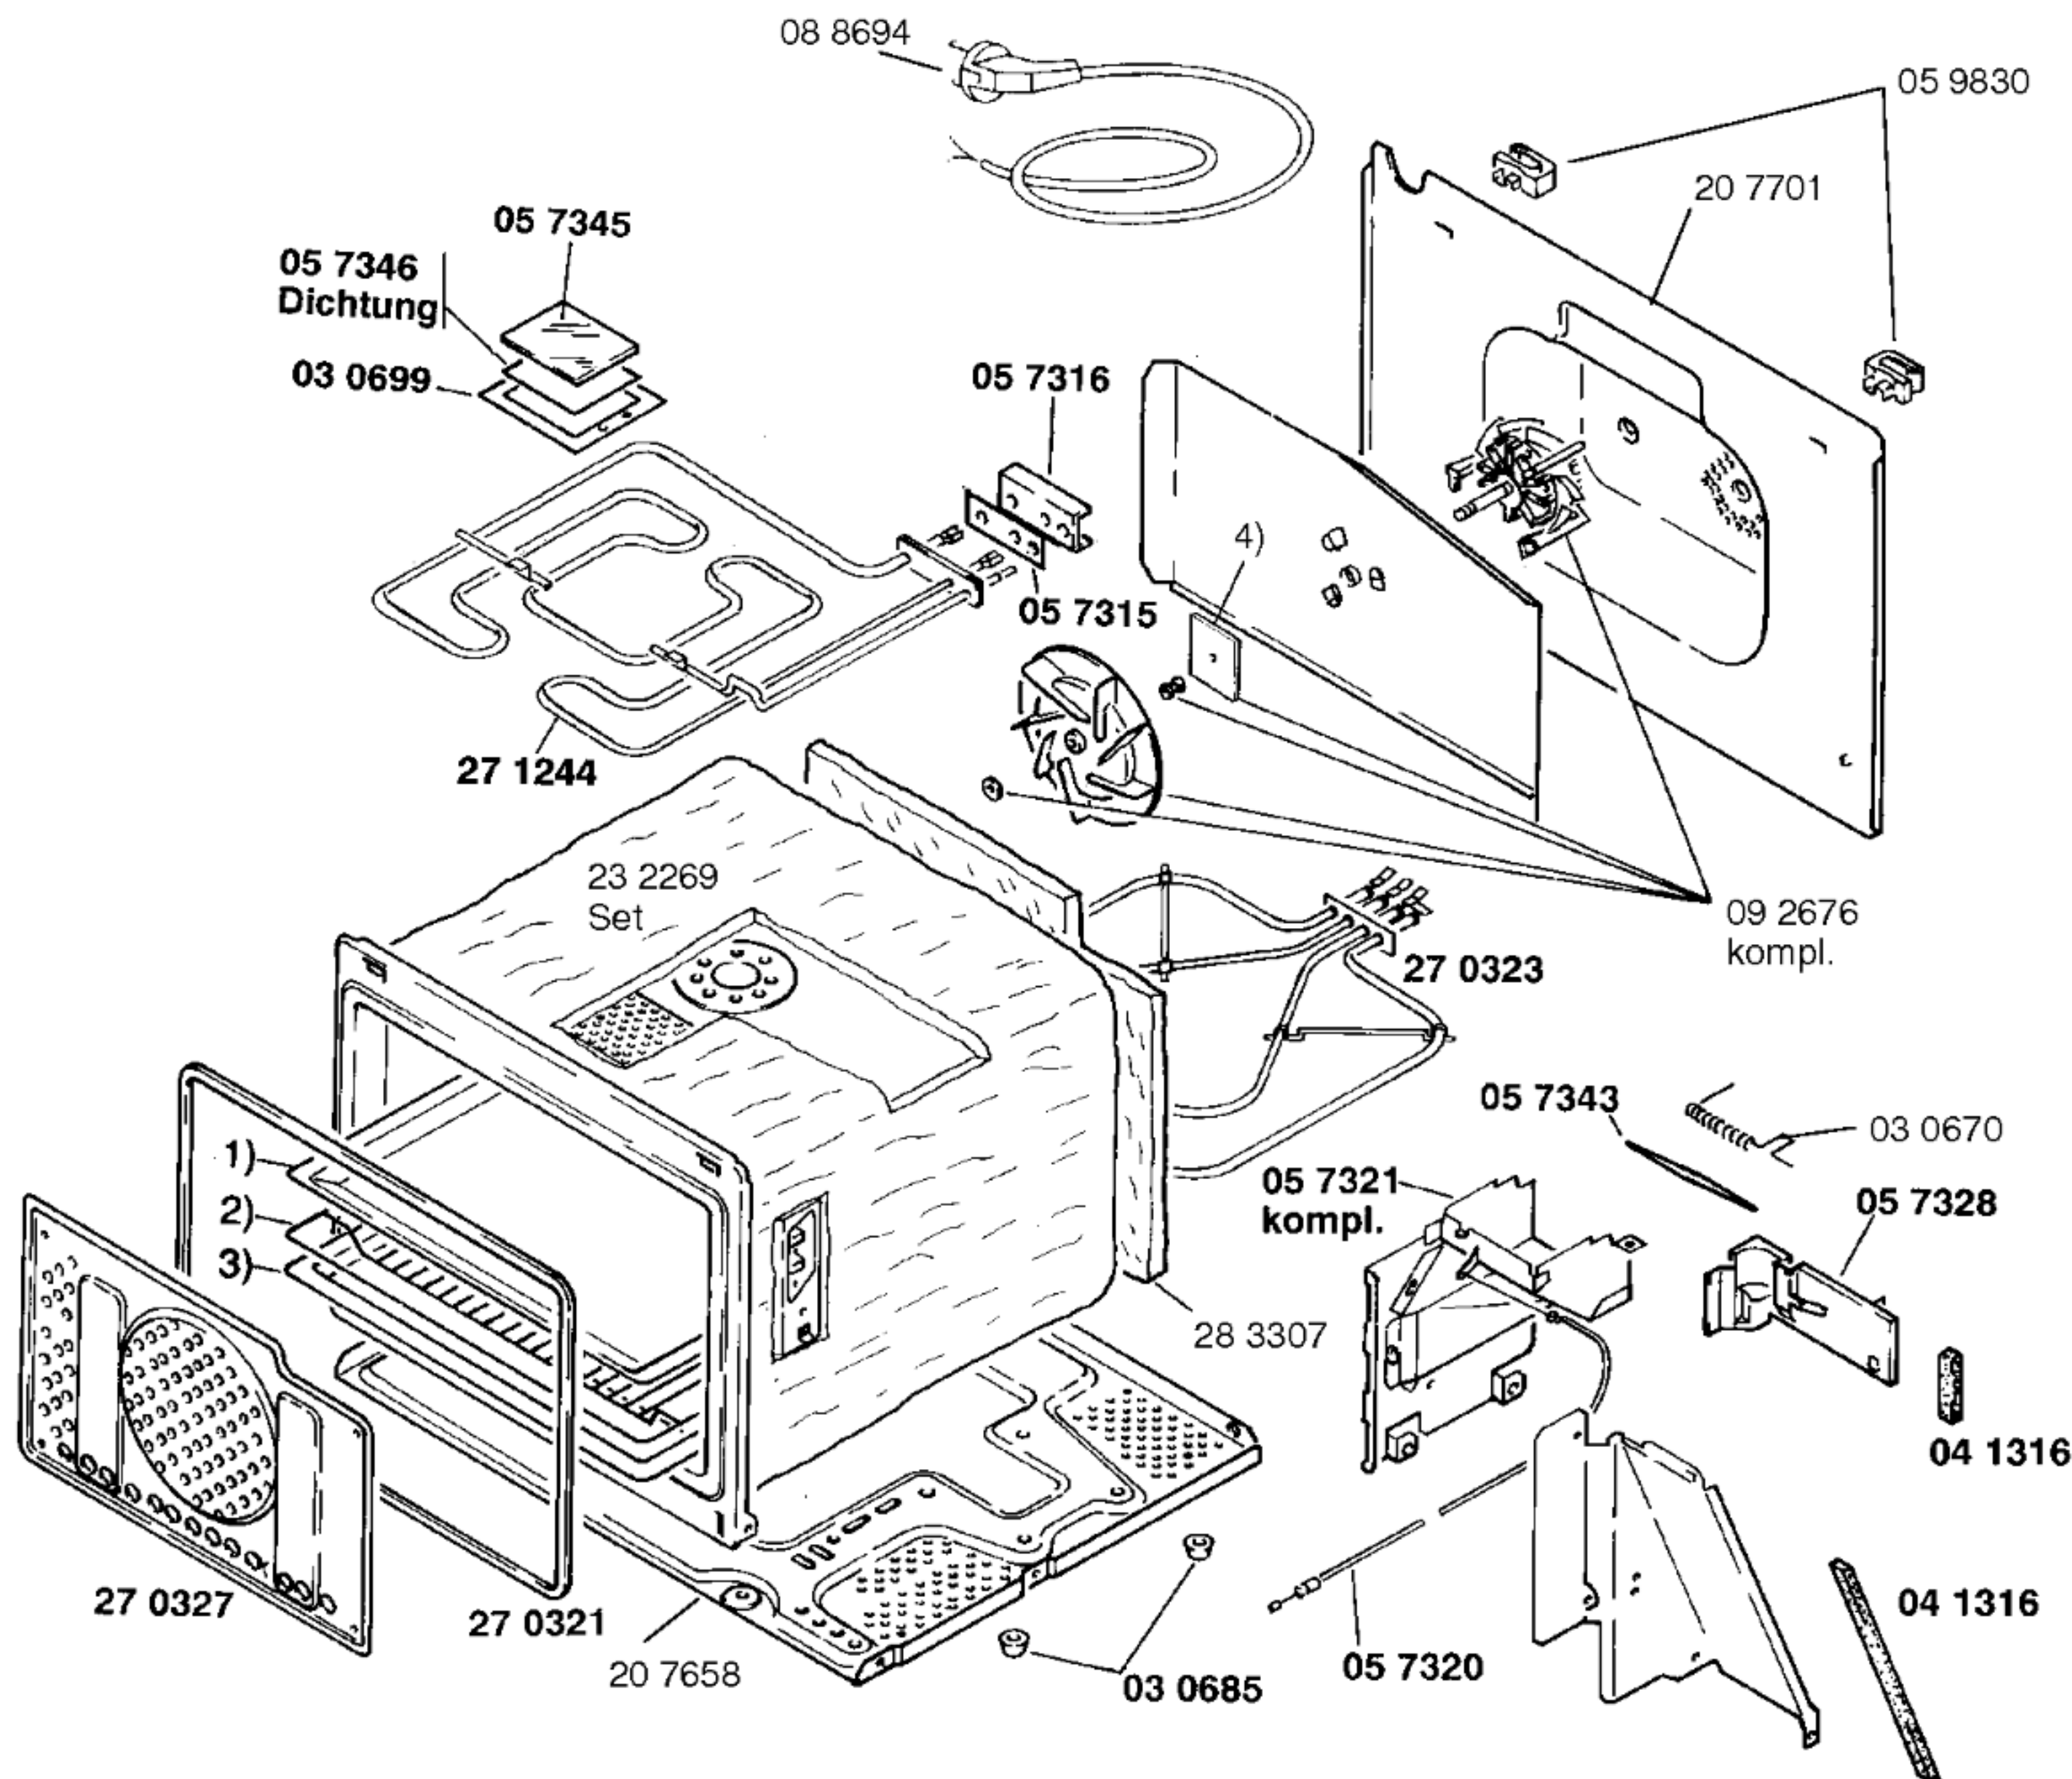

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 27 3844
Universalpfanne
- 4) 03 2778

02 8732
Anschlag-Backblech

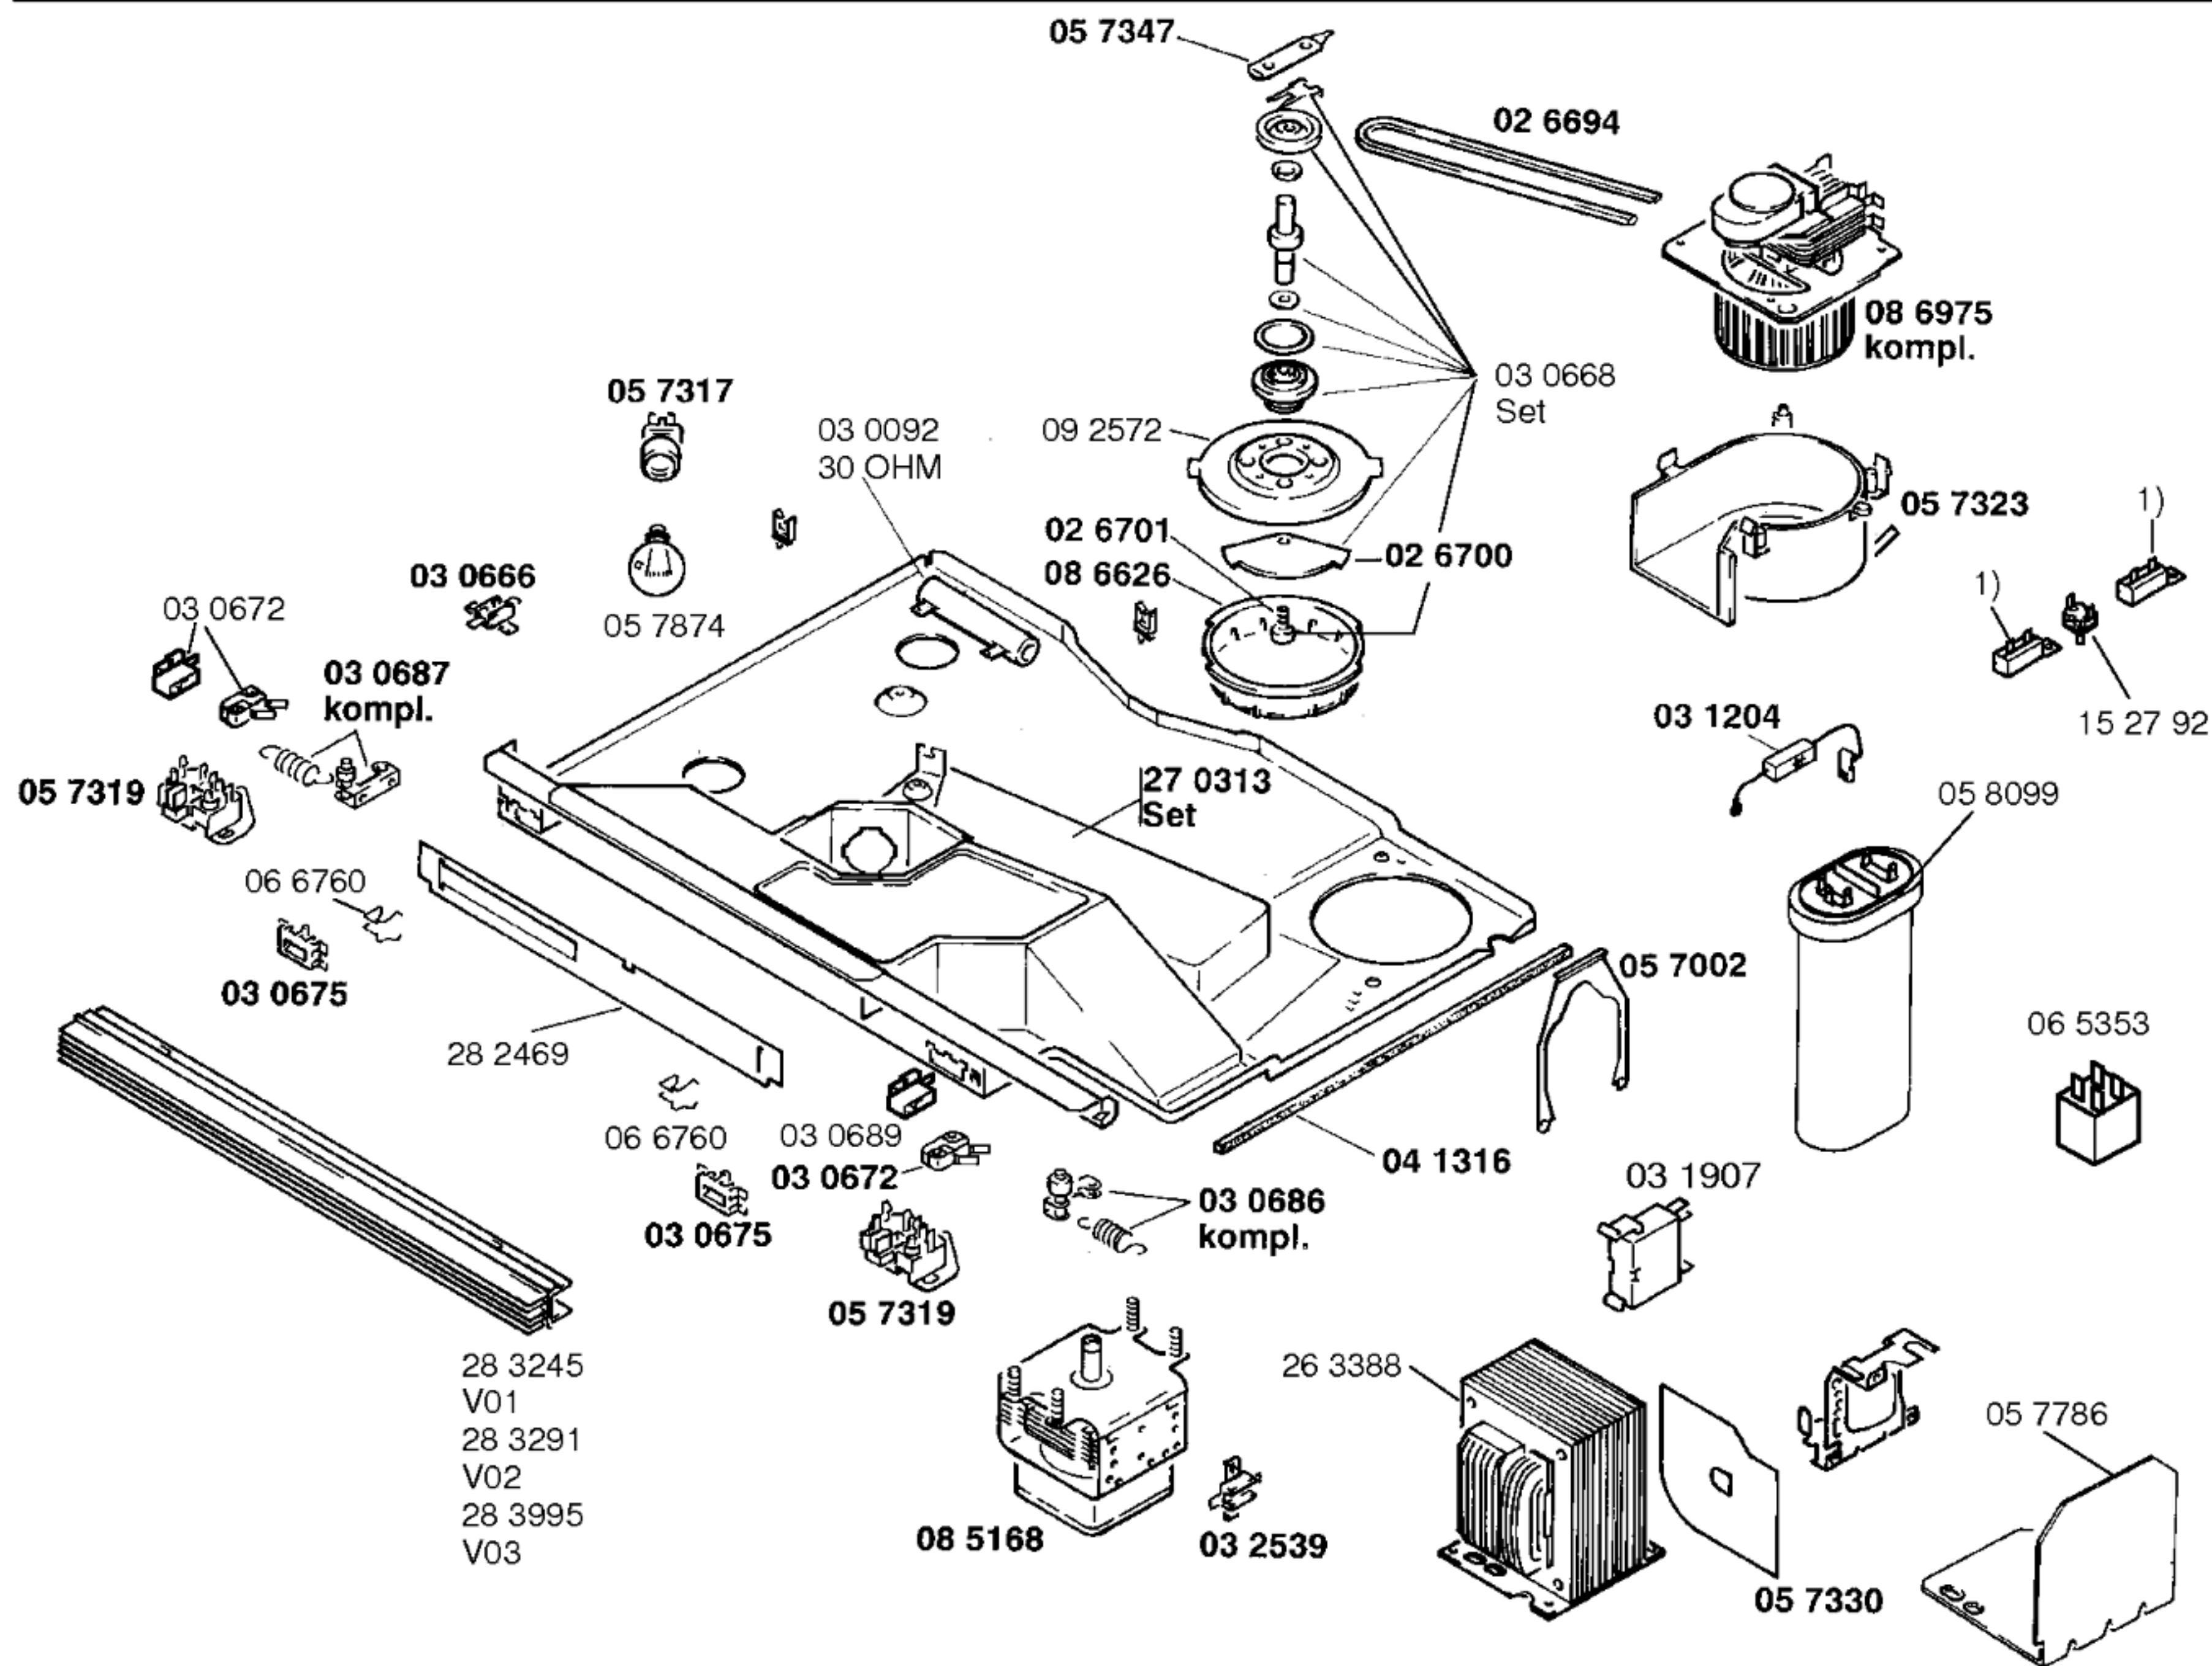

1) 06 6750

1) 06 6979

