


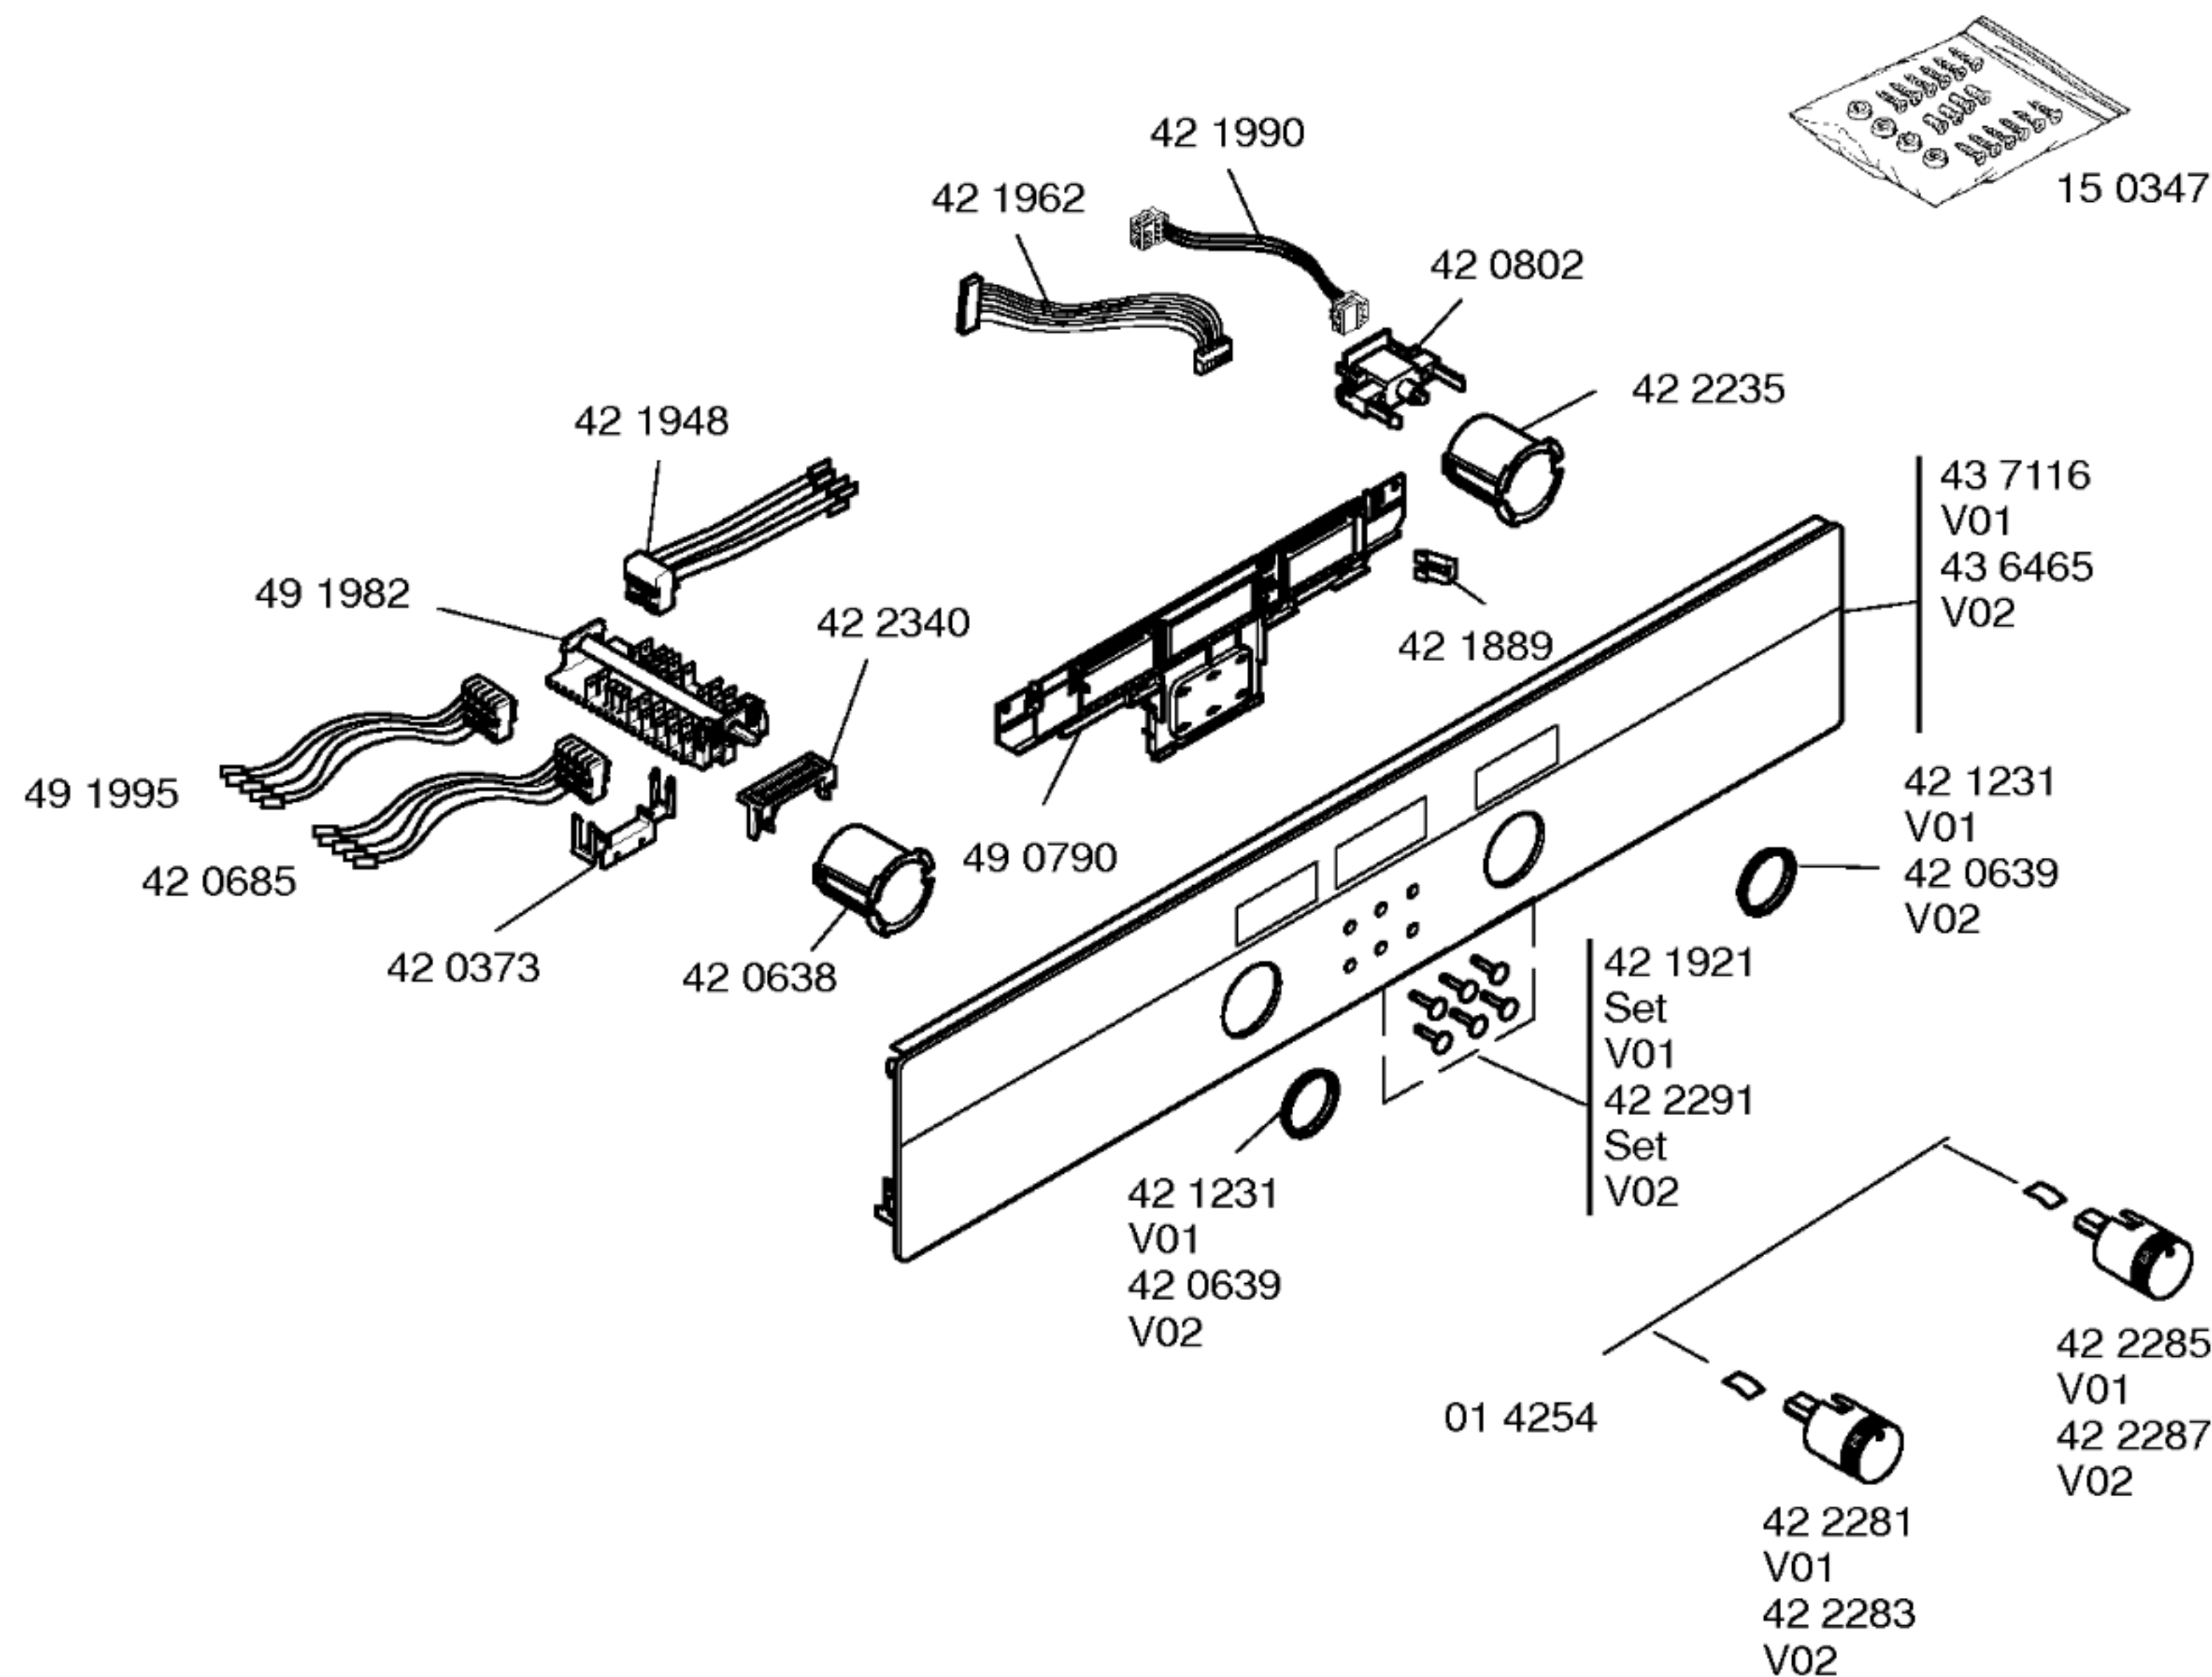



Gebrauchsanweisung
58 8402 (fr)

Montageanweisung
58 6500
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

Zubehoer:
HZ341070
Backblech emailliert
HZ341010
Backblech Antihalt
HZ342070
Universalpfanne
HZ342010
Universalpfanne
Antihalt
HZ343070
Profipfanne
HZ333001
Deckel f. Profipfanne
HZ324000
Kombirost
HZ344000
Einlegerost
HZ325070
Grillblech 2-teilig



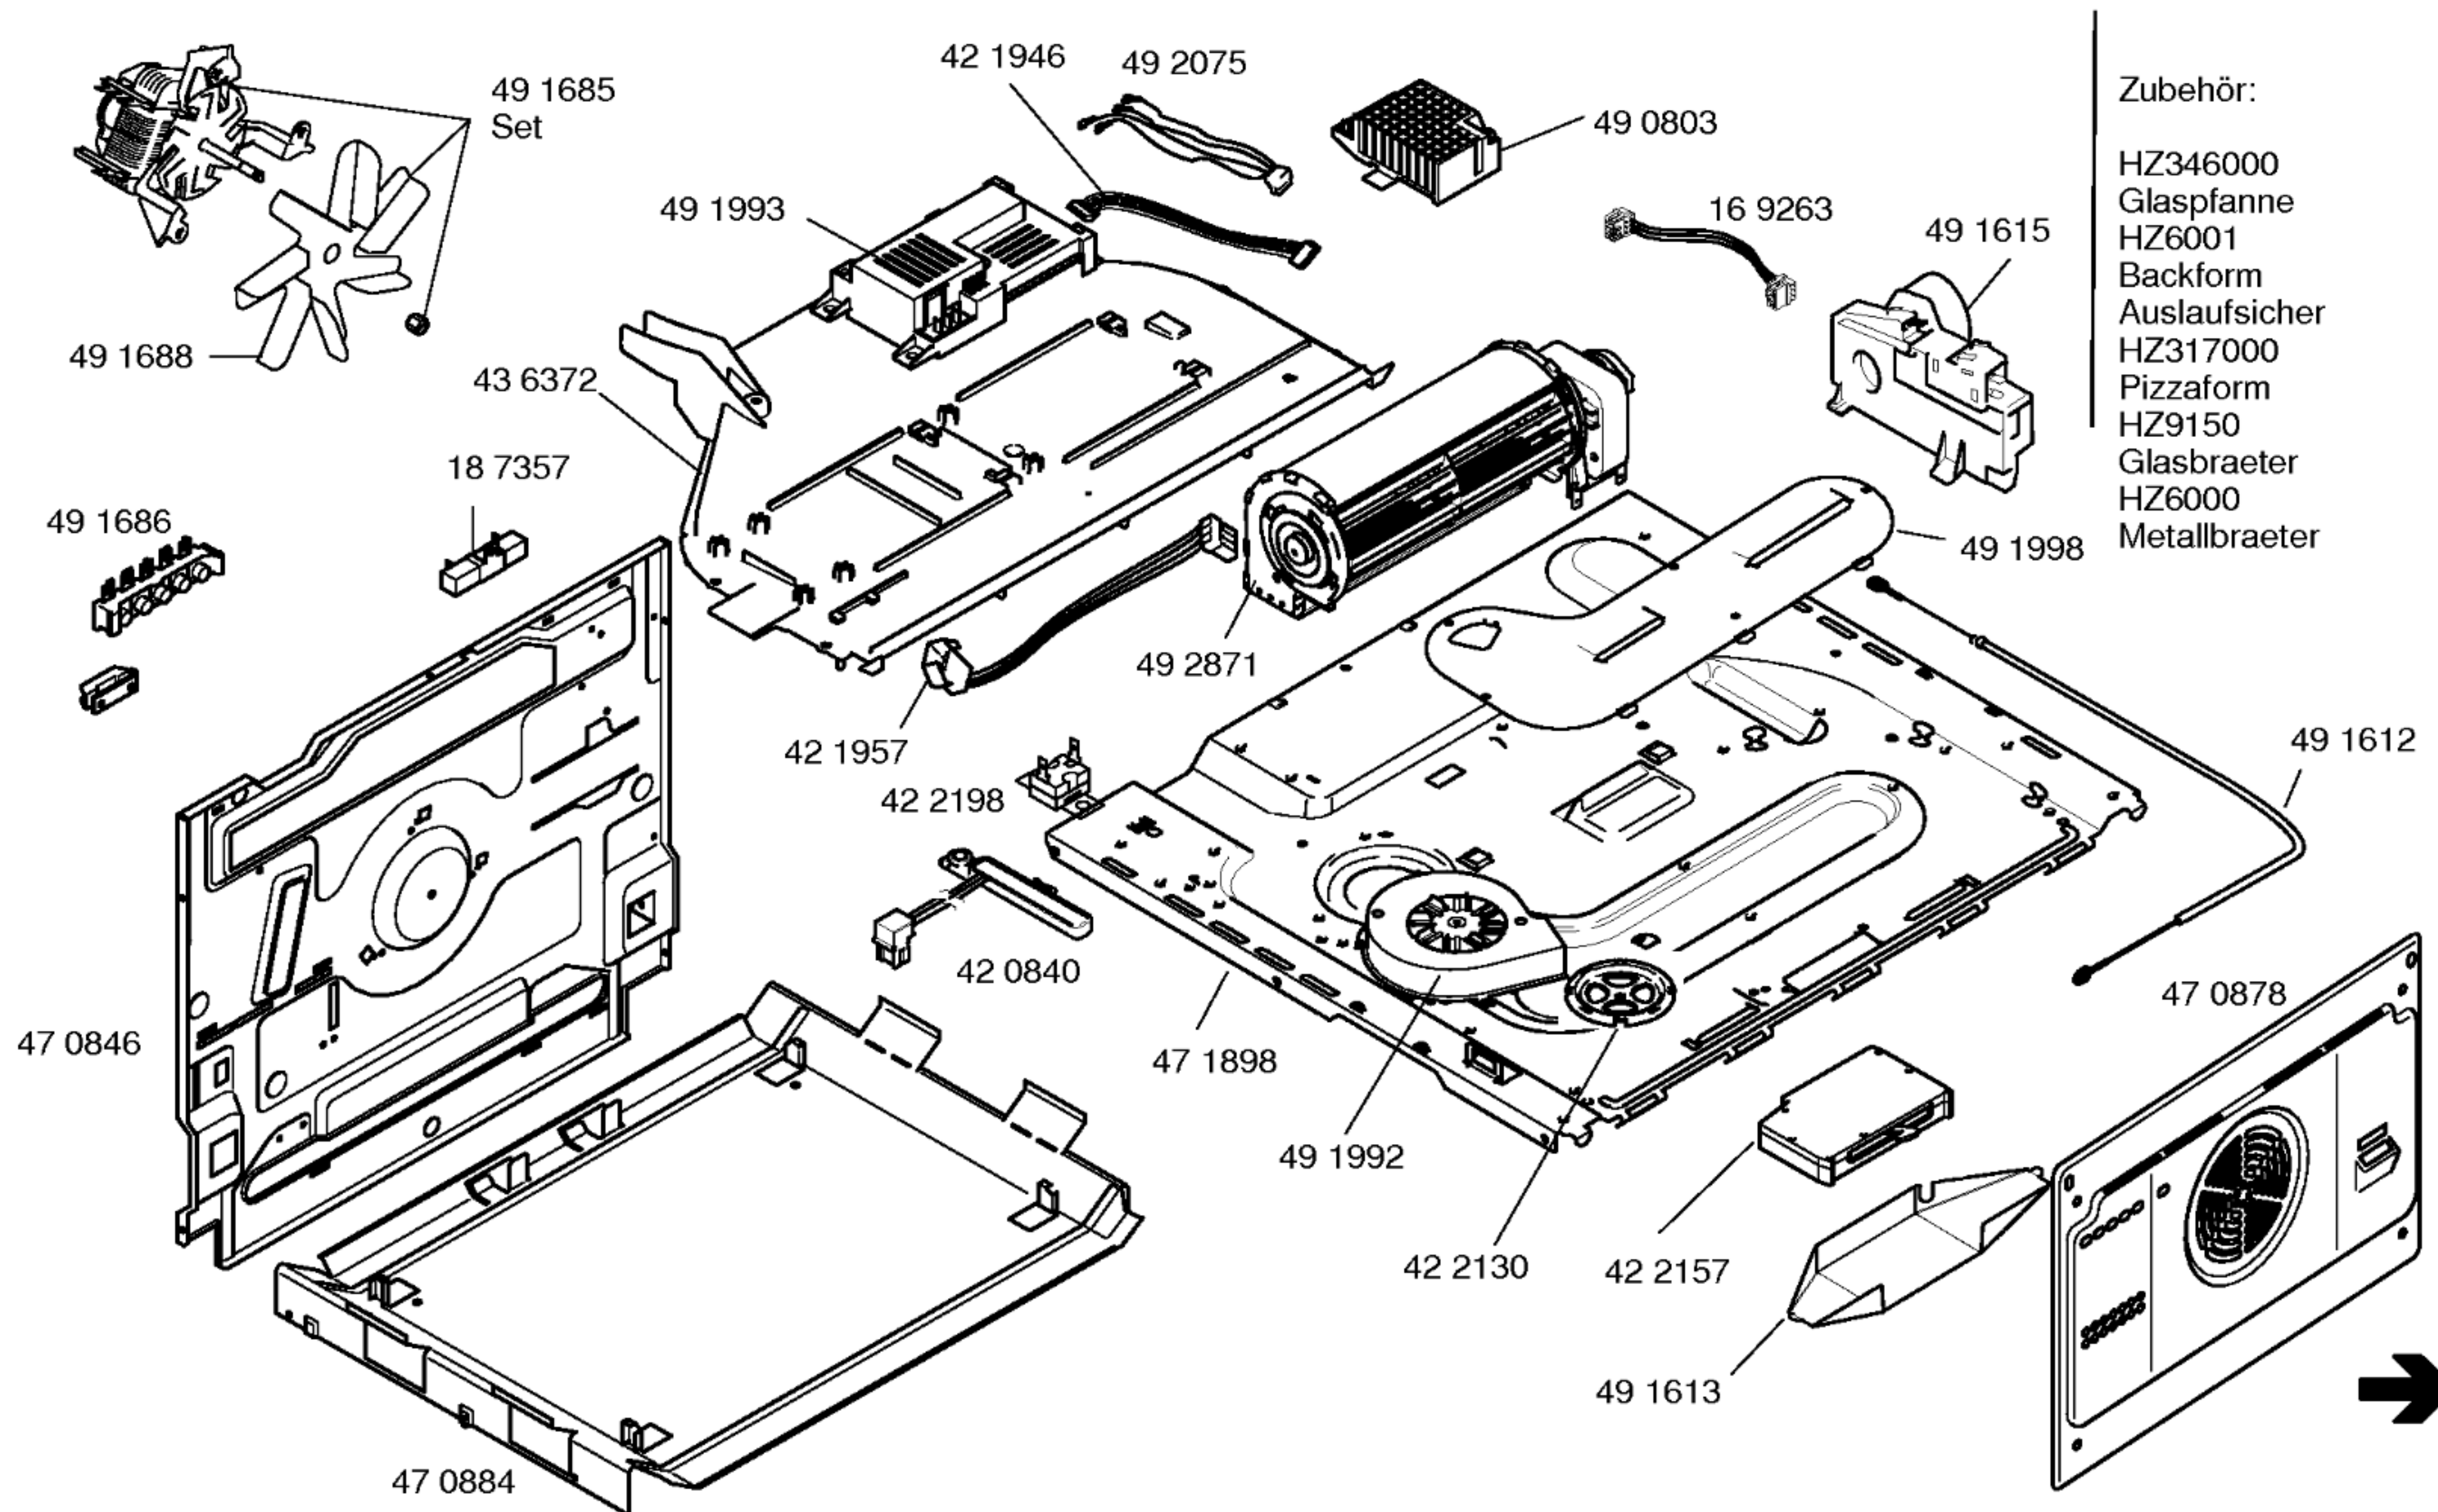

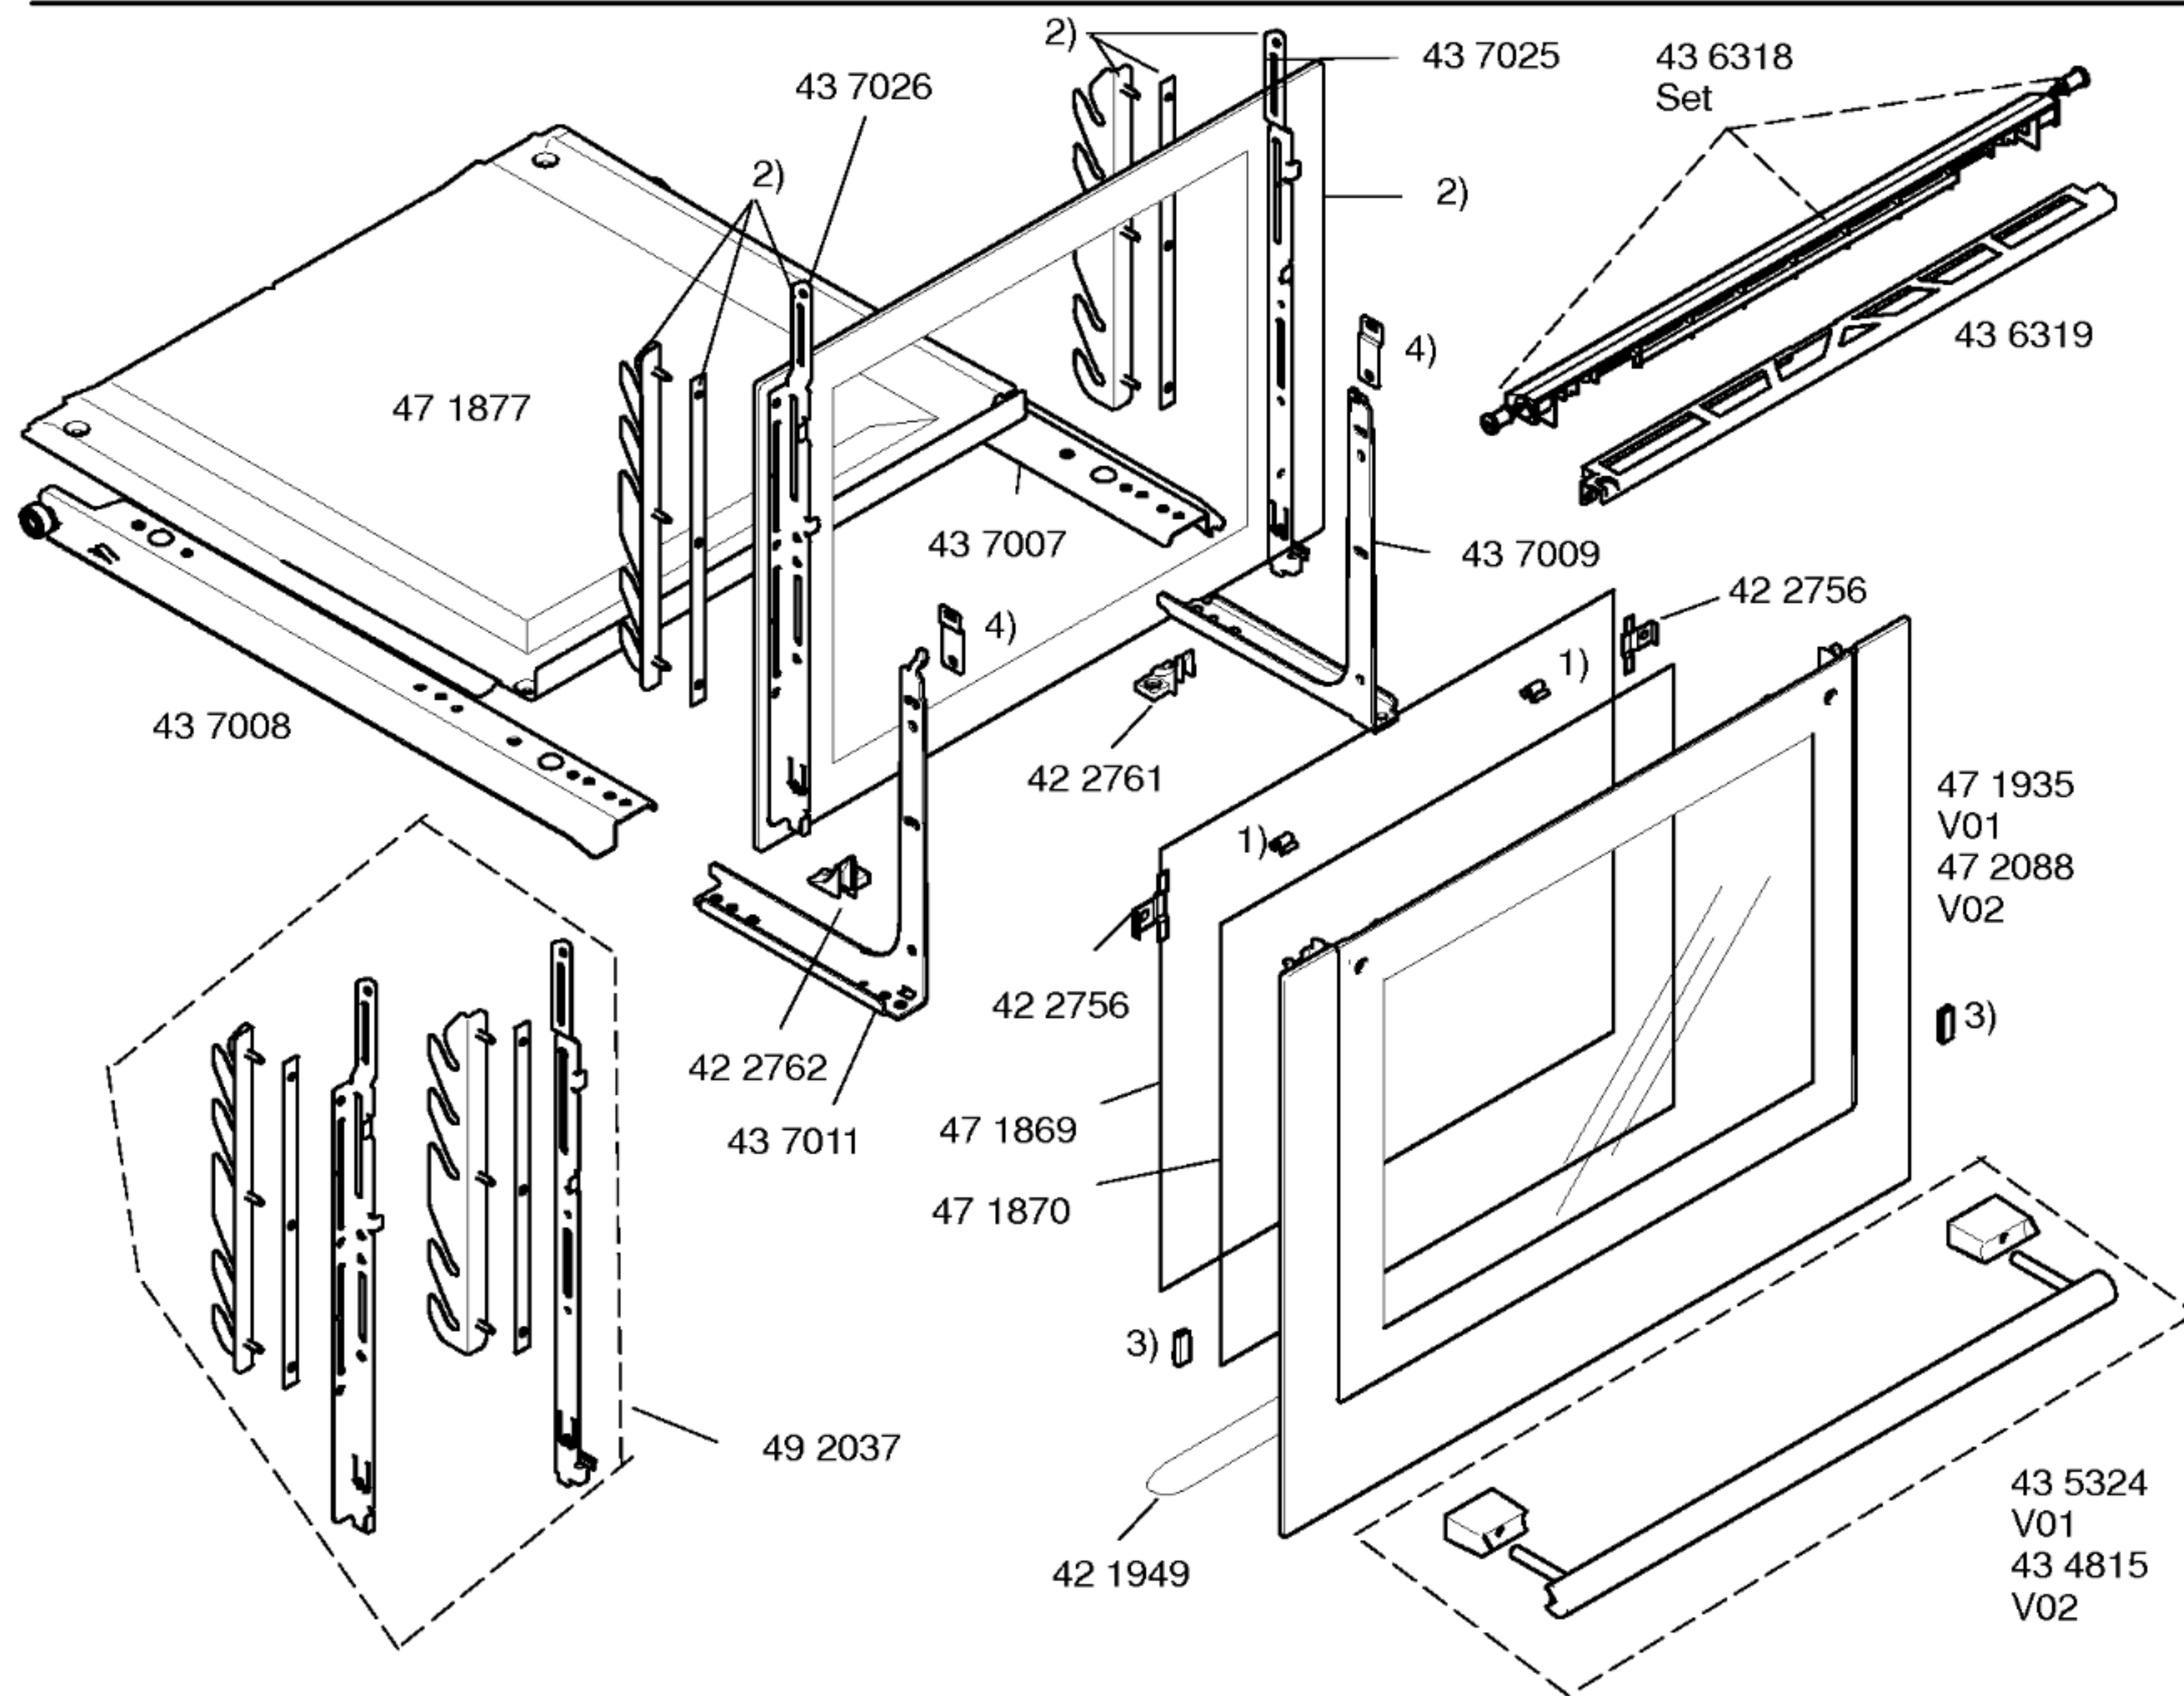

- 1) 42 2707
- 2) 47 1936
- 3) 42 2755
- 4) 42 2747

47 1935
V01
47 2088
V02

3)

