


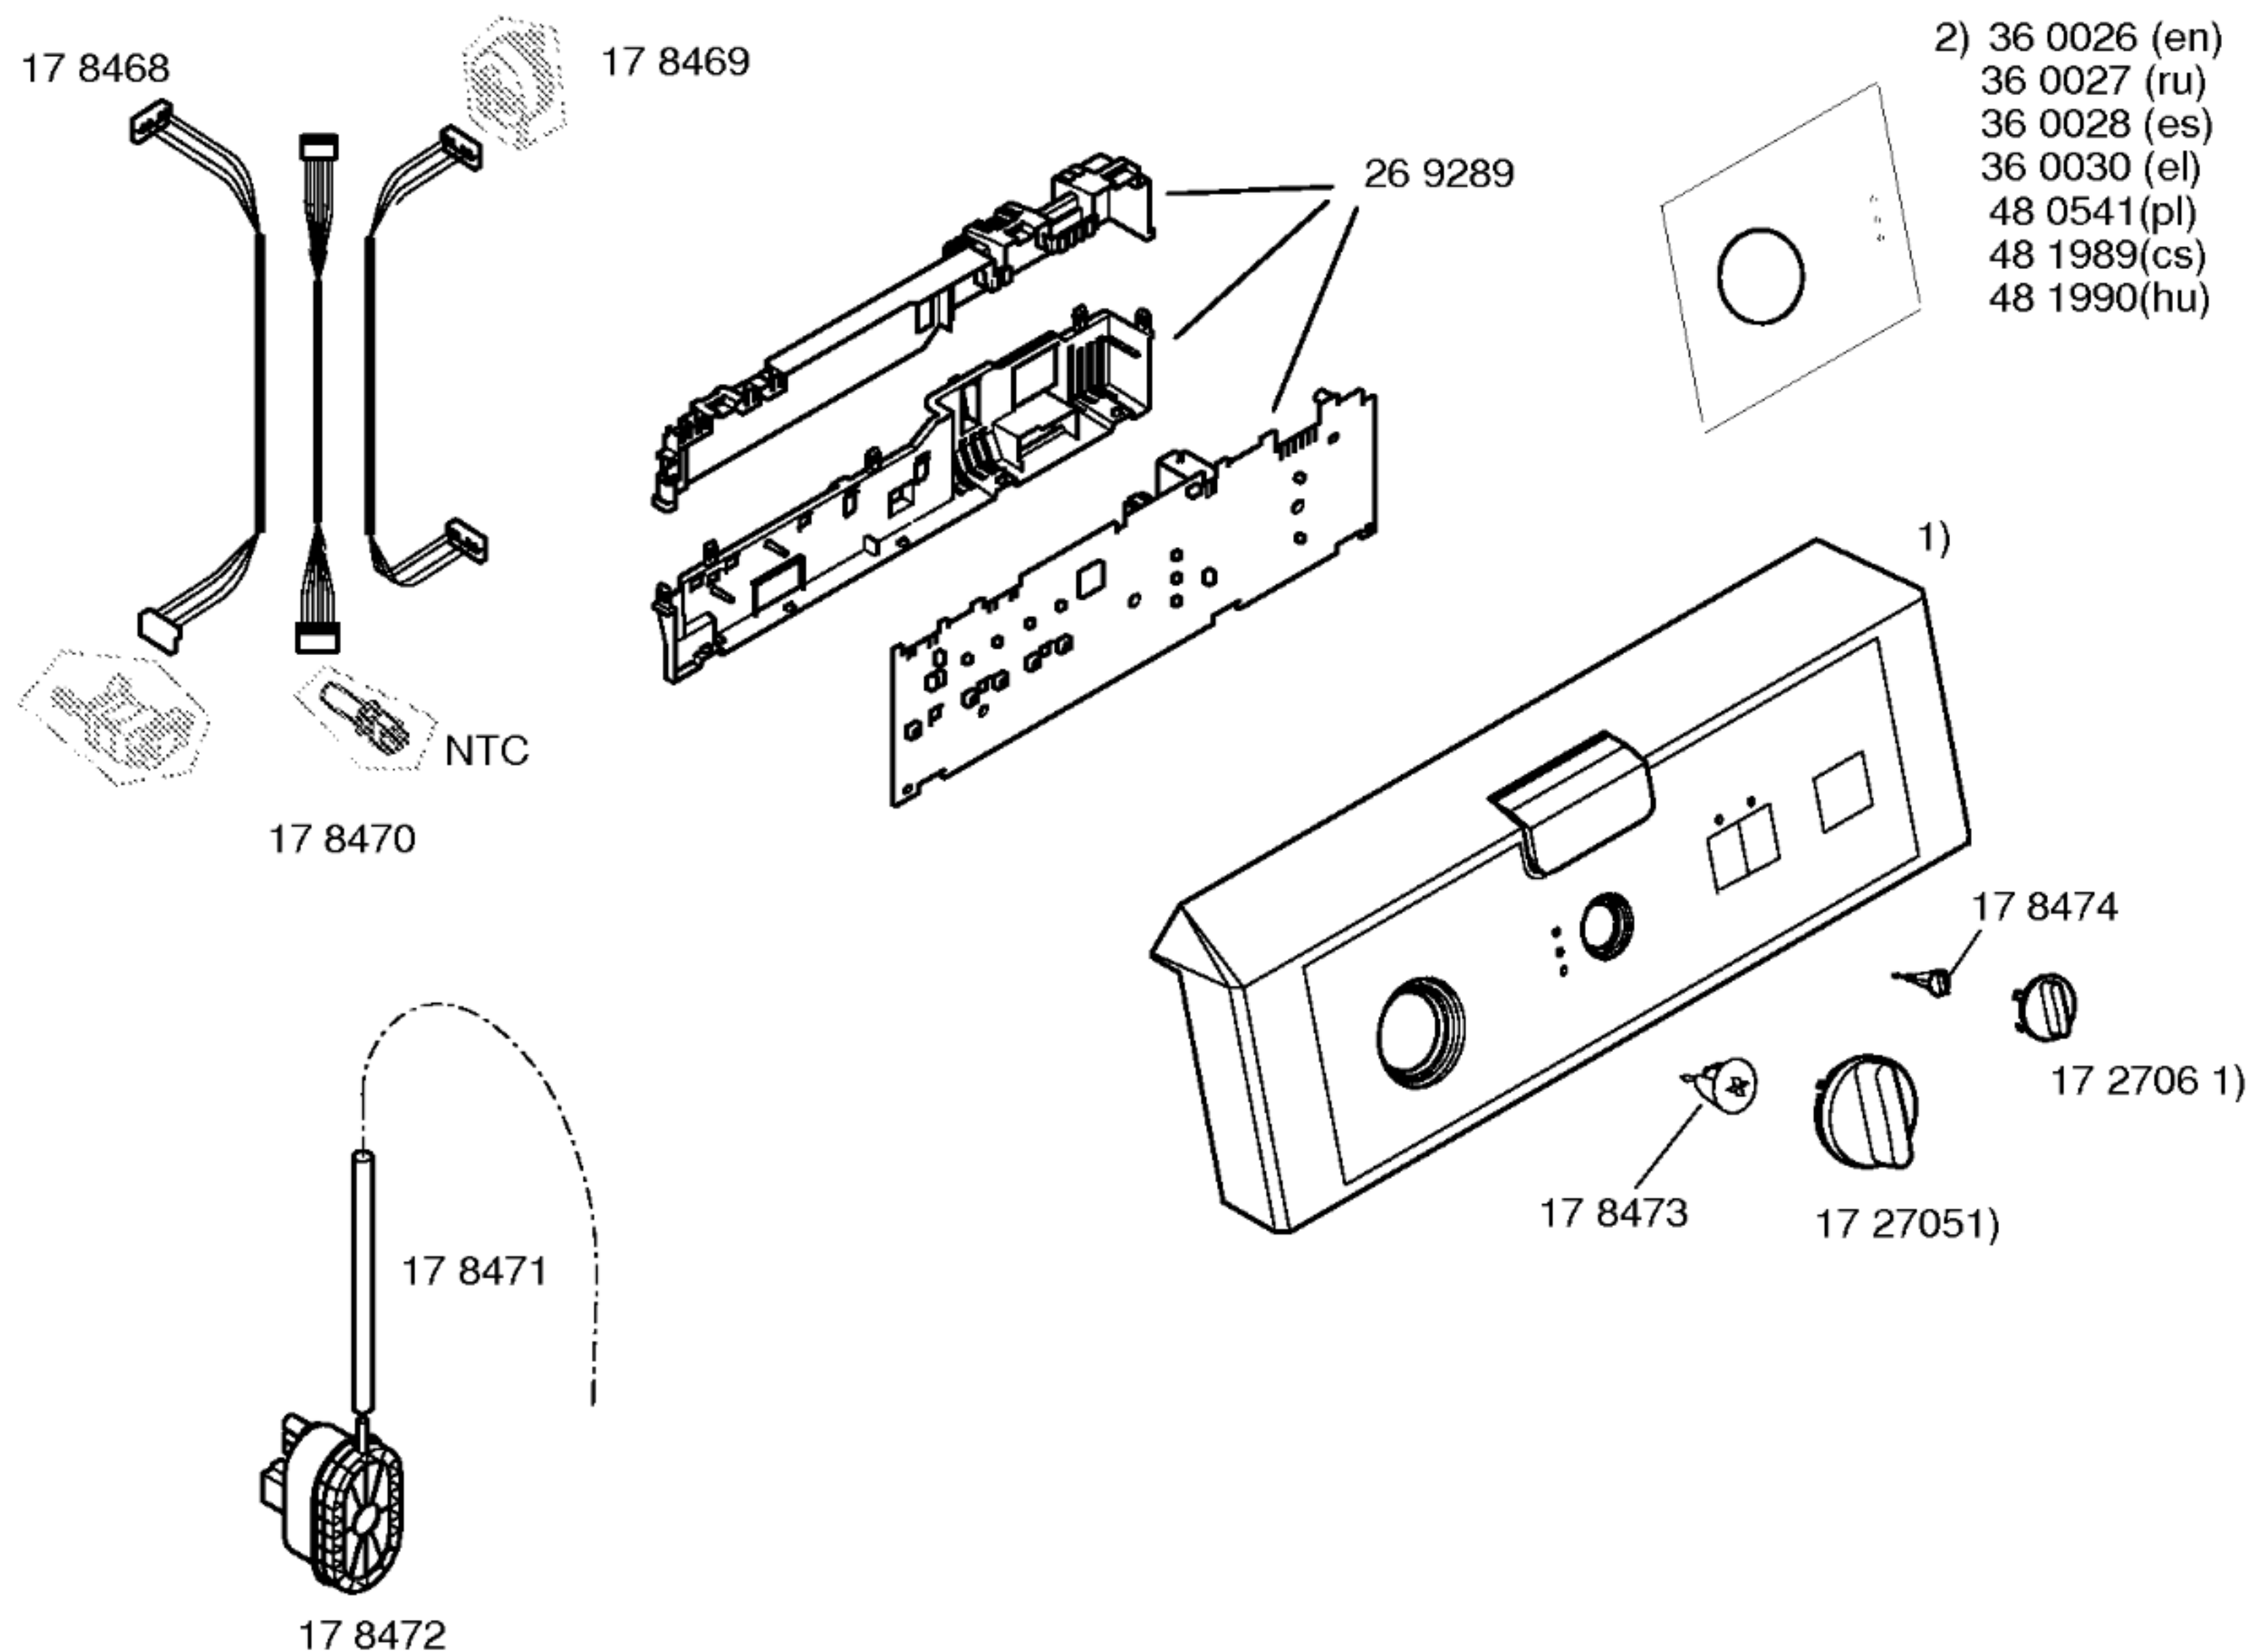

Gebrauchsanweisung

52 7247 (de)
52 7248 (es)
52 7249 (en)
52 7250 (ru)
52 7251 (el)
52 9369 (cs)
52 9370 (hu)
52 9371 (pl)

Aufstellanweisung

52 5541 (ru)
52 0623 (el)
52 0249 (de)
52 2639 (en)
52 0625 (es)
52 9107 (cs)
52 9108 (hu)
52 7683 (pl)

Programmtabelle

52 7252 (de)
52 7253 (es)
52 7254 (en)
52 7255 (ru)
52 7256 (el)
52 7371 (cs)
52 9373 (hu)
52 9374 (pl)


1) Blende kompl.
36 0035 (de)
36 3036 (symbole)


Zubehör:

Bodenbefestigung
WX9756

Entkalker
46 0038

1) 2 x pro Gerät

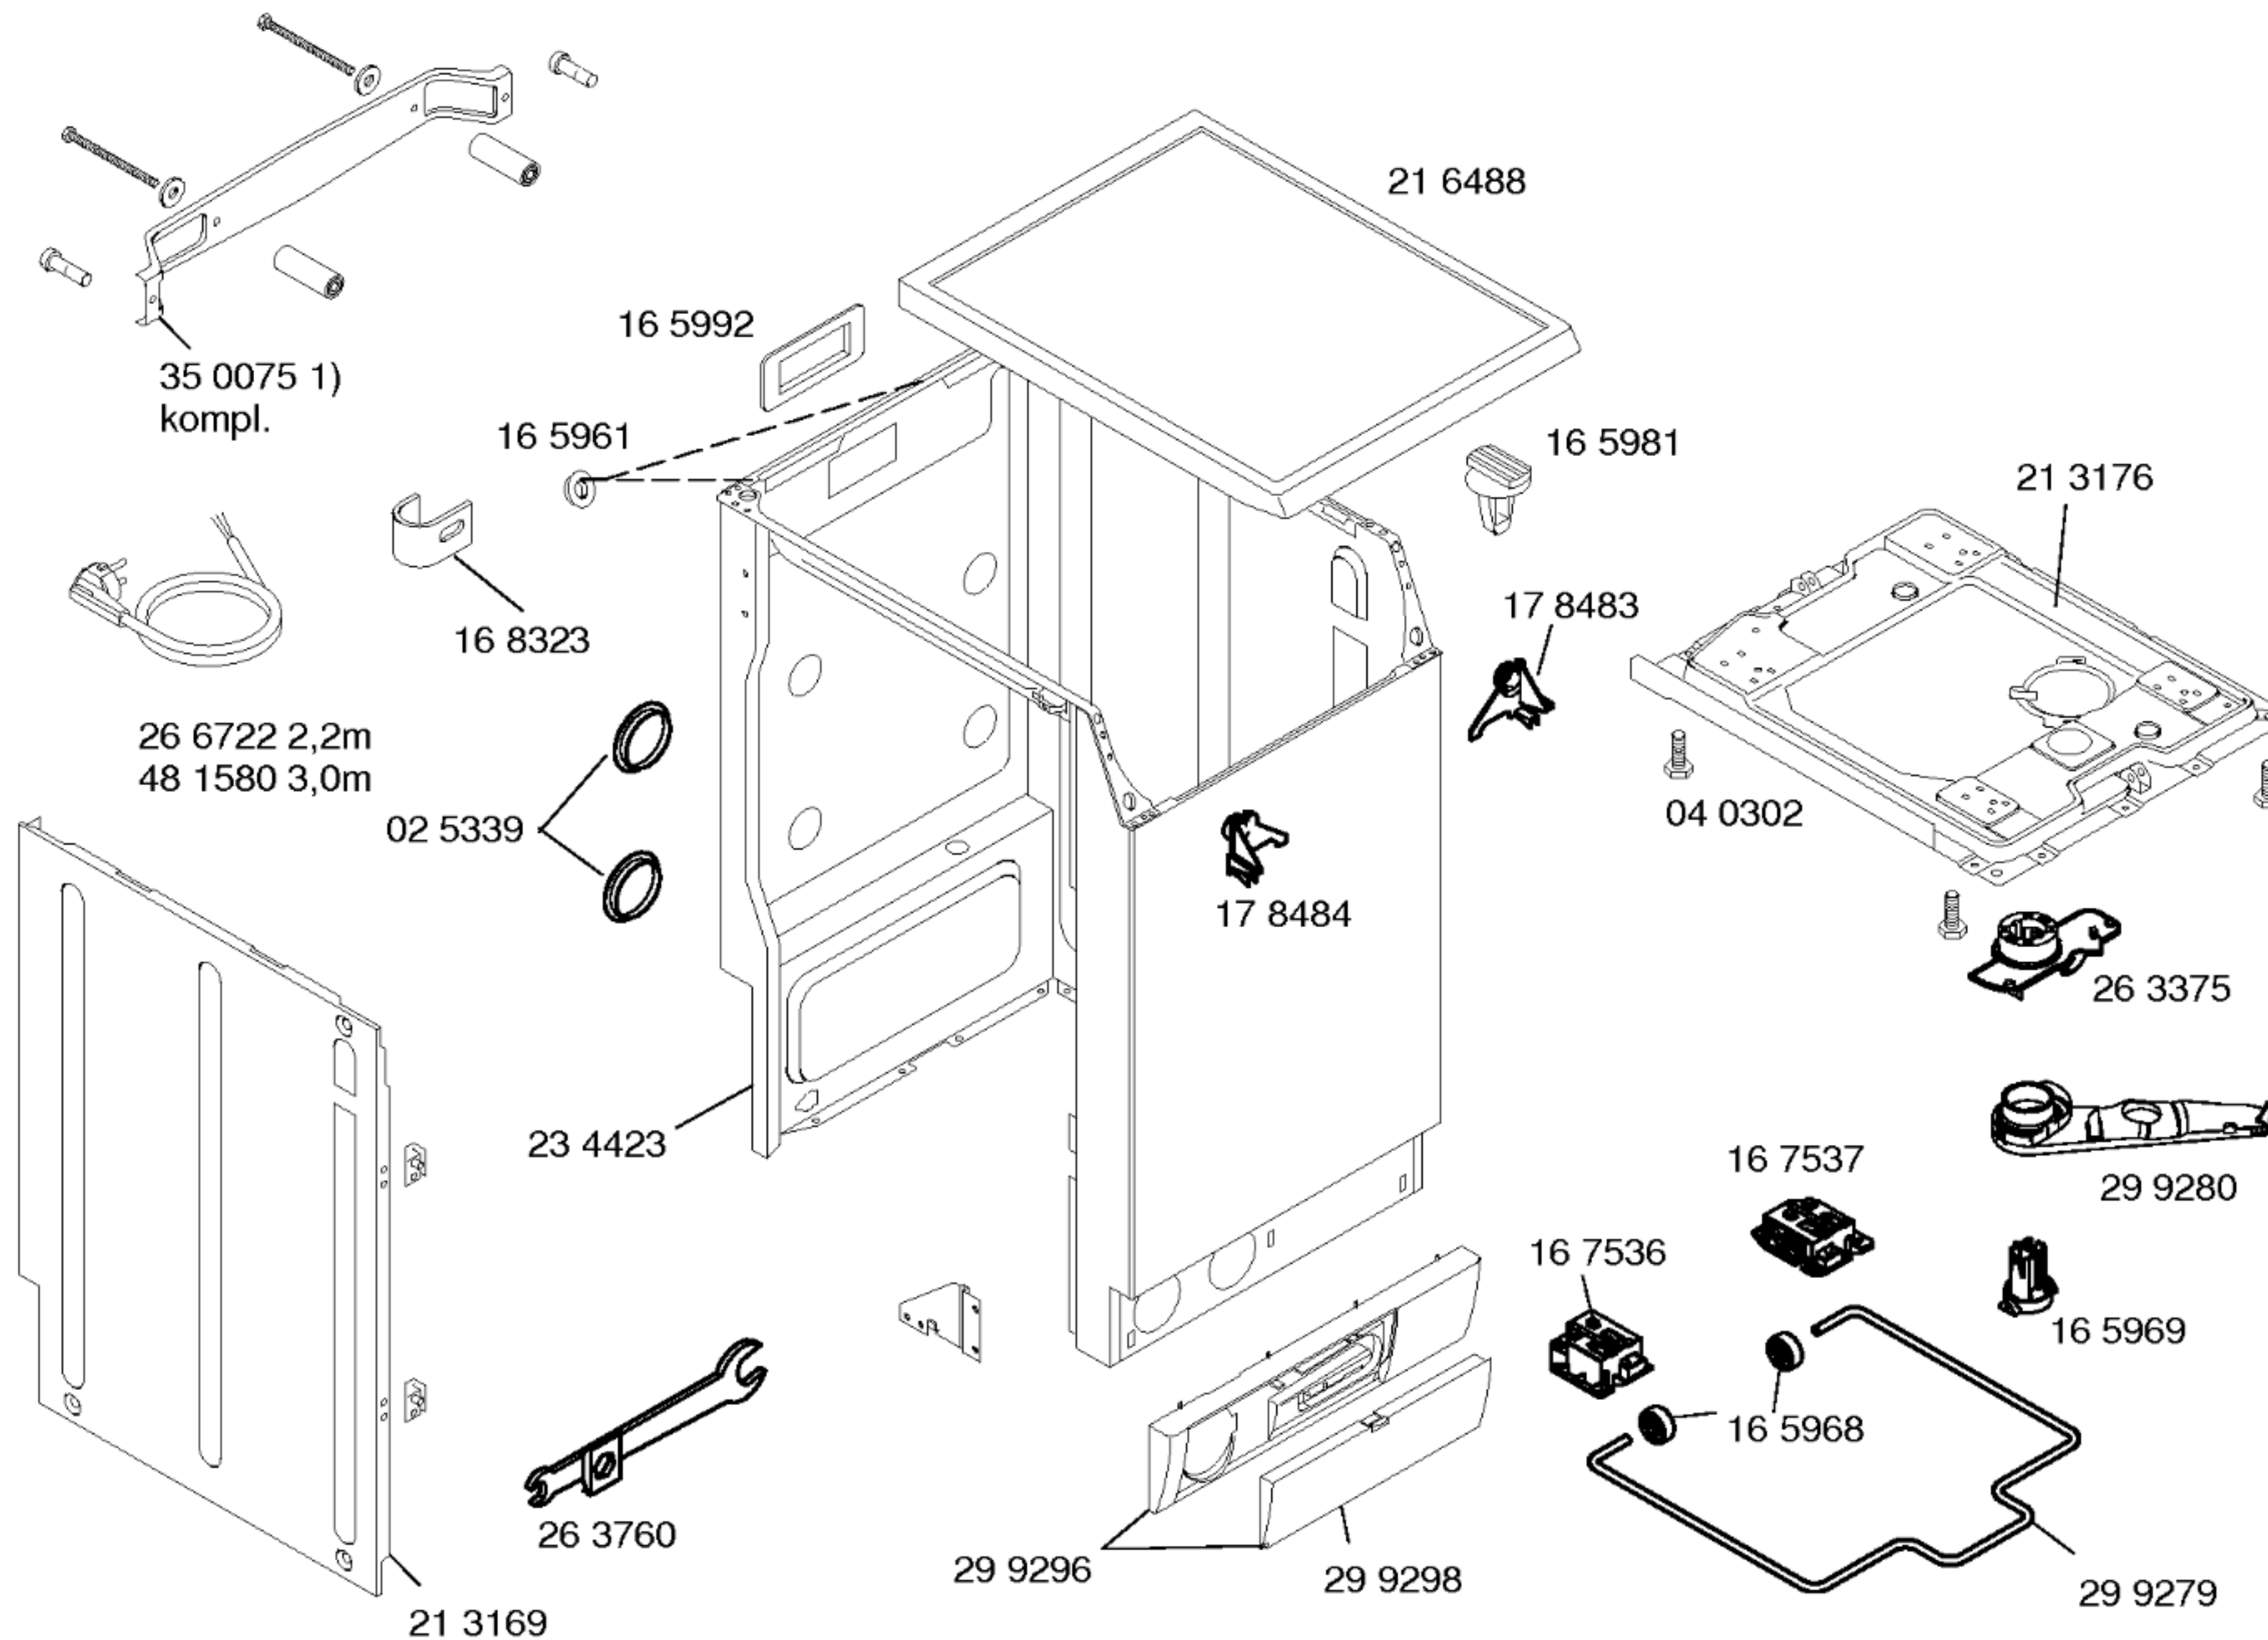

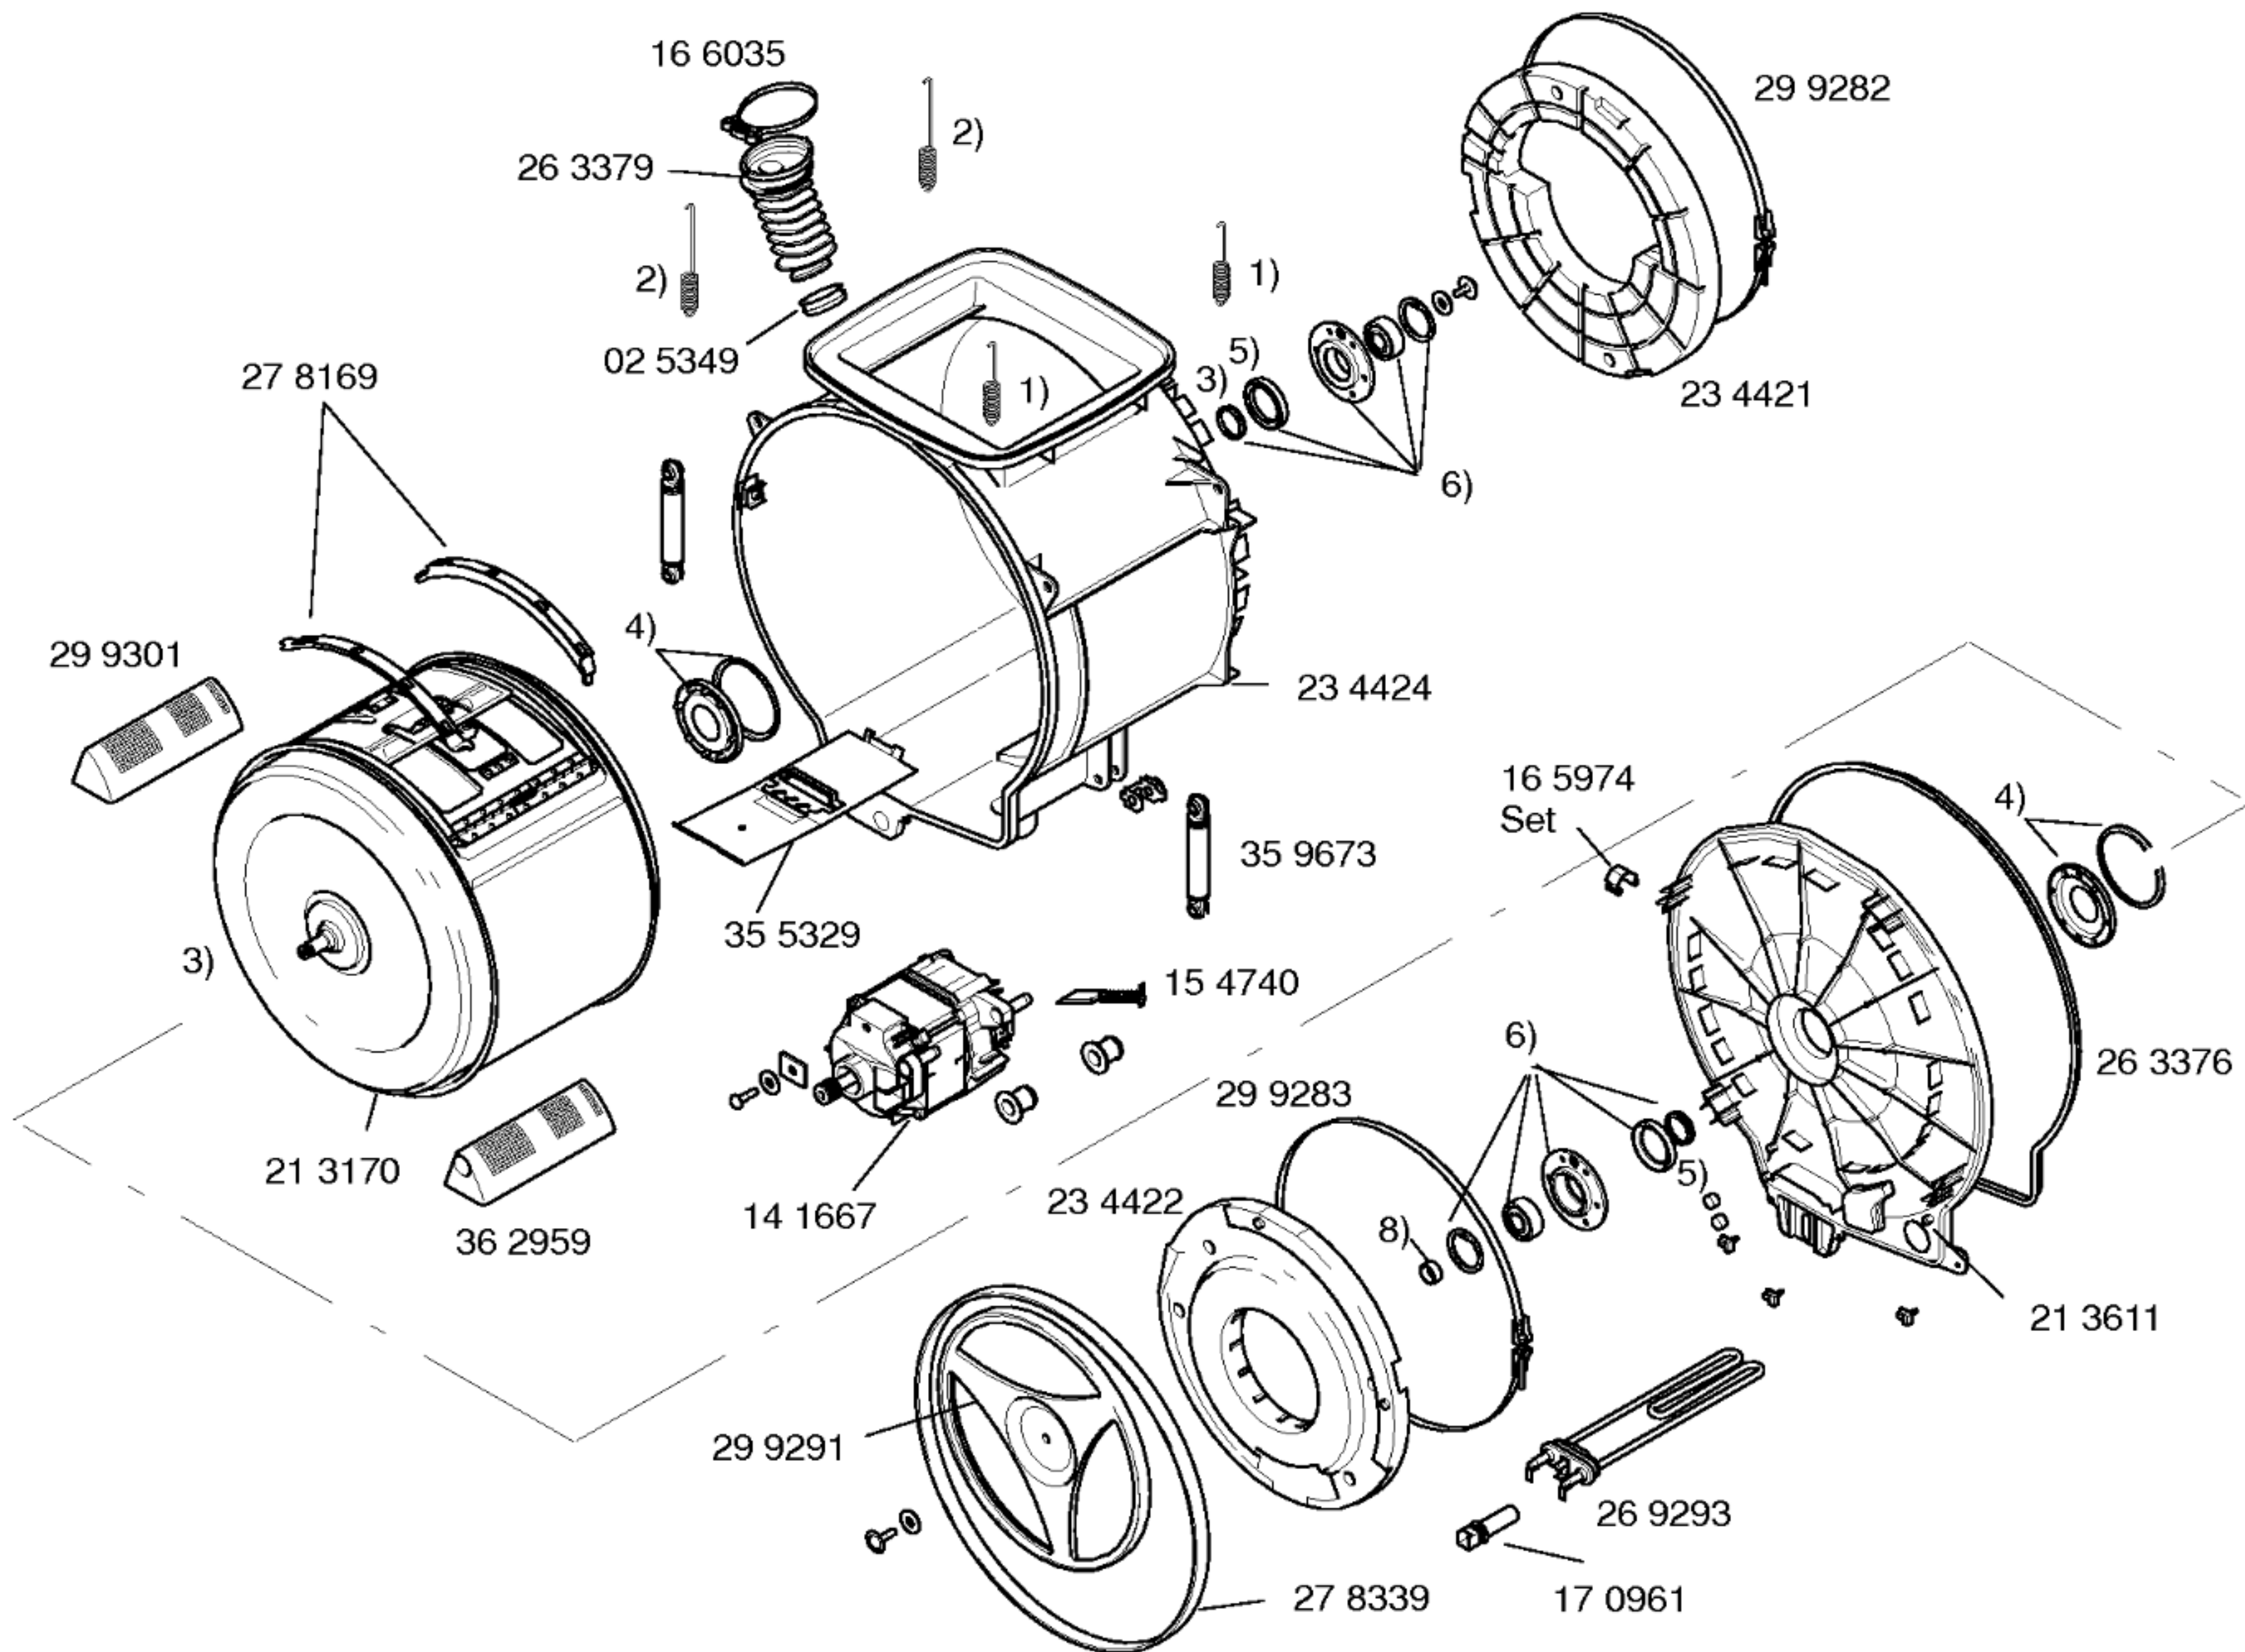

- 1) 26 3372
- 2) 26 3373
- 3) 16 5983
- 4) 26 3395
- 5) 16 5984
- 6) 48 0138
- kompl.
- 8) 16 5978

