


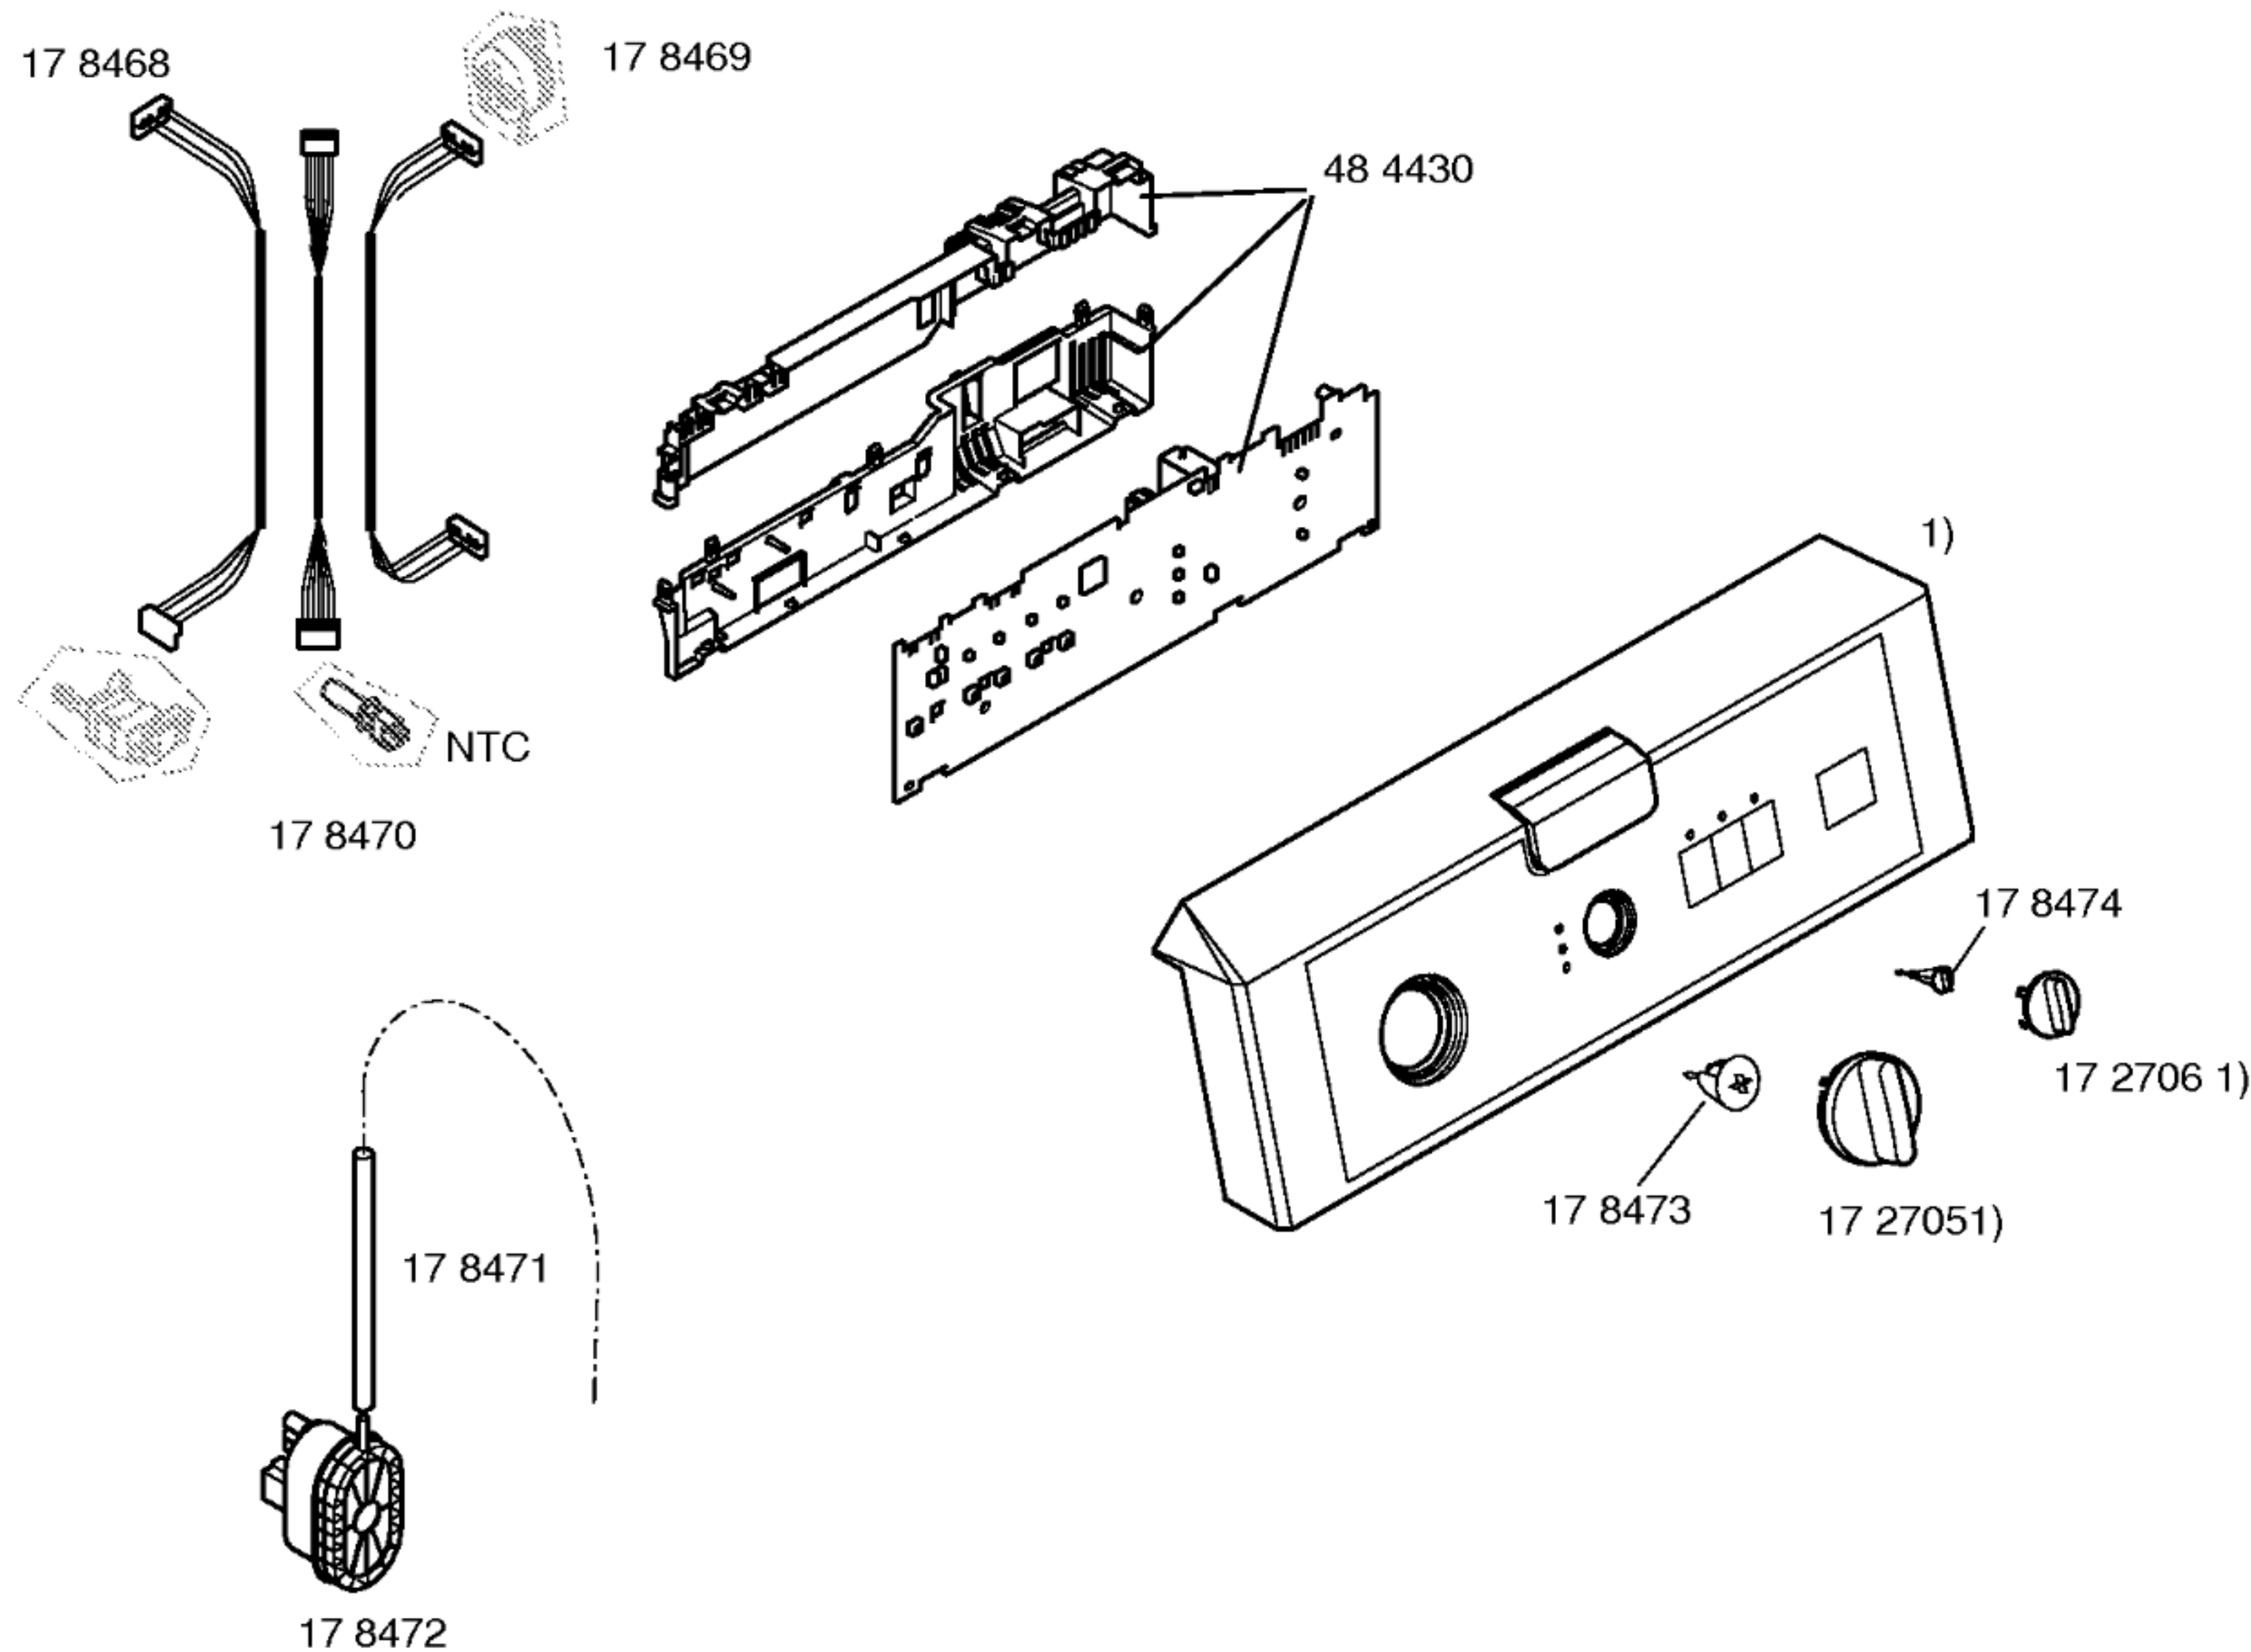

Gebrauchsanweisung
 58 4414 (de)
 58 4415 (it)
 594601 (de) V03

Aufstellanweisung
 58 4417 (it)
 58 4416 (de)

Programmtabelle
 52 7229 (it)
 52 6933 (de)


1) Blende kompl.
 36 0007 V01
 36 0449 V02
 44 2995 (de) V03


Zubehör:

Bodenbefestigung
 WX9756

Entkalker
 46 0038

1) 2 x pro Gerät

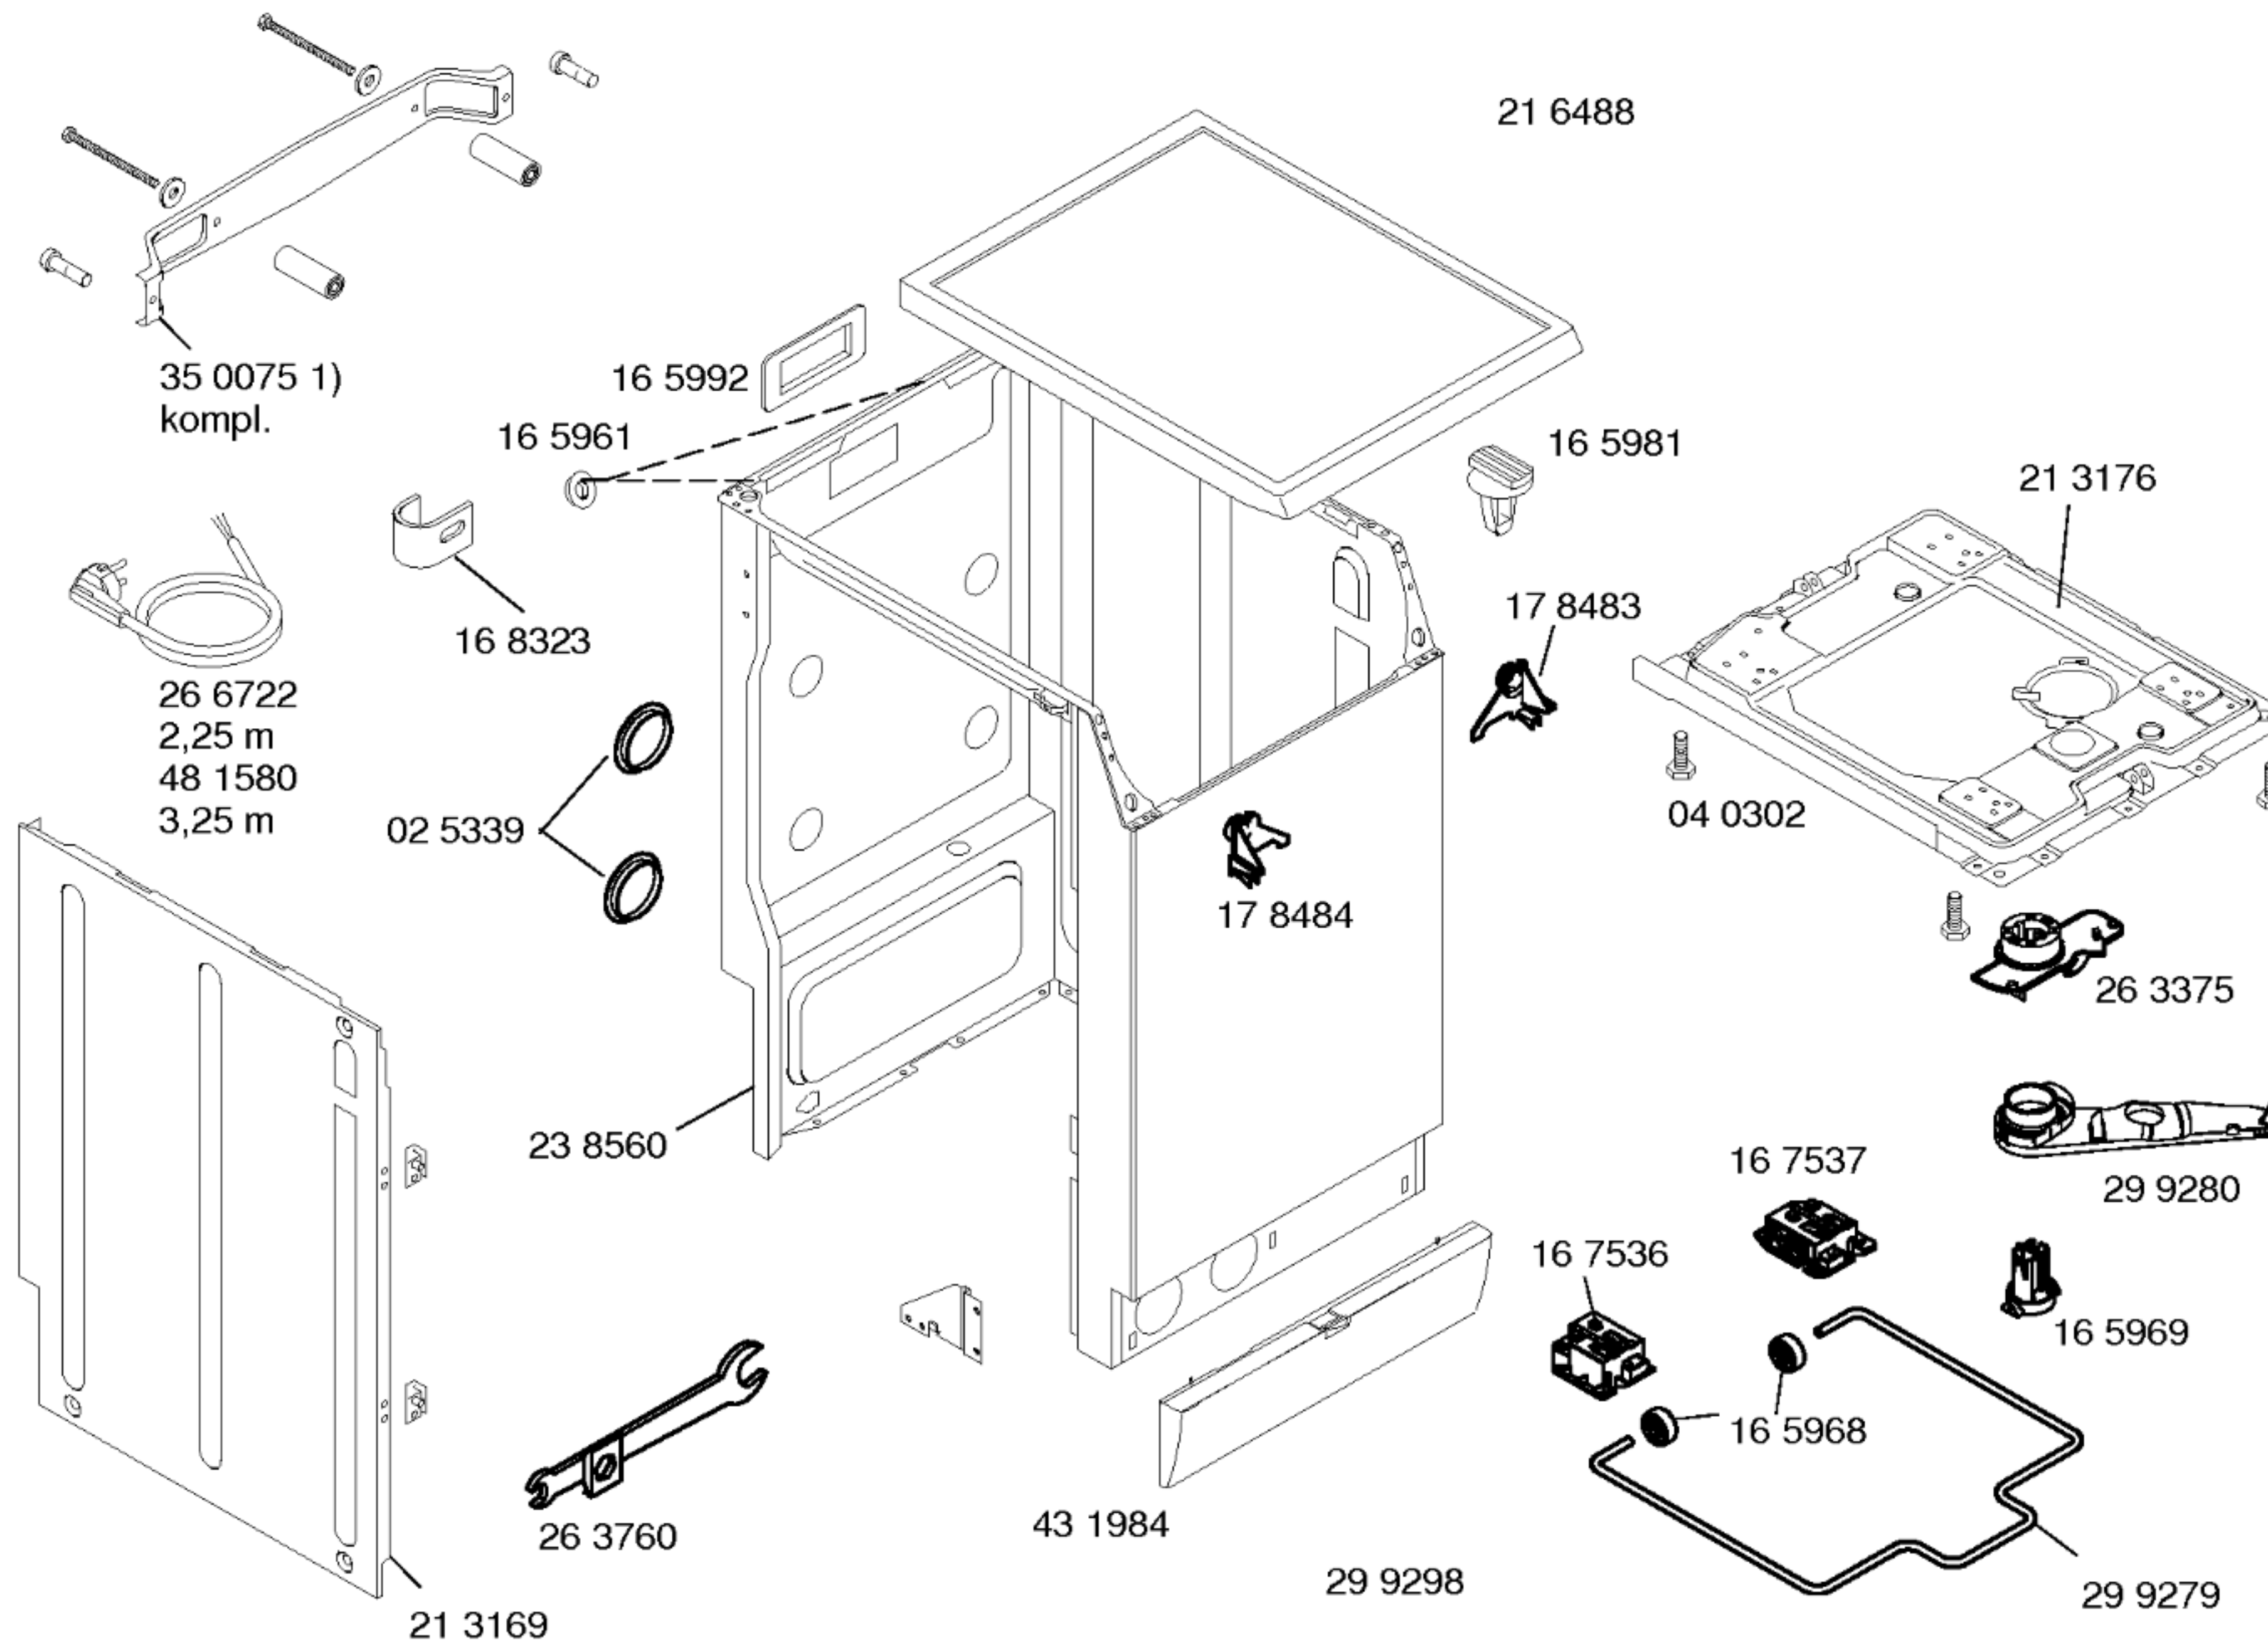

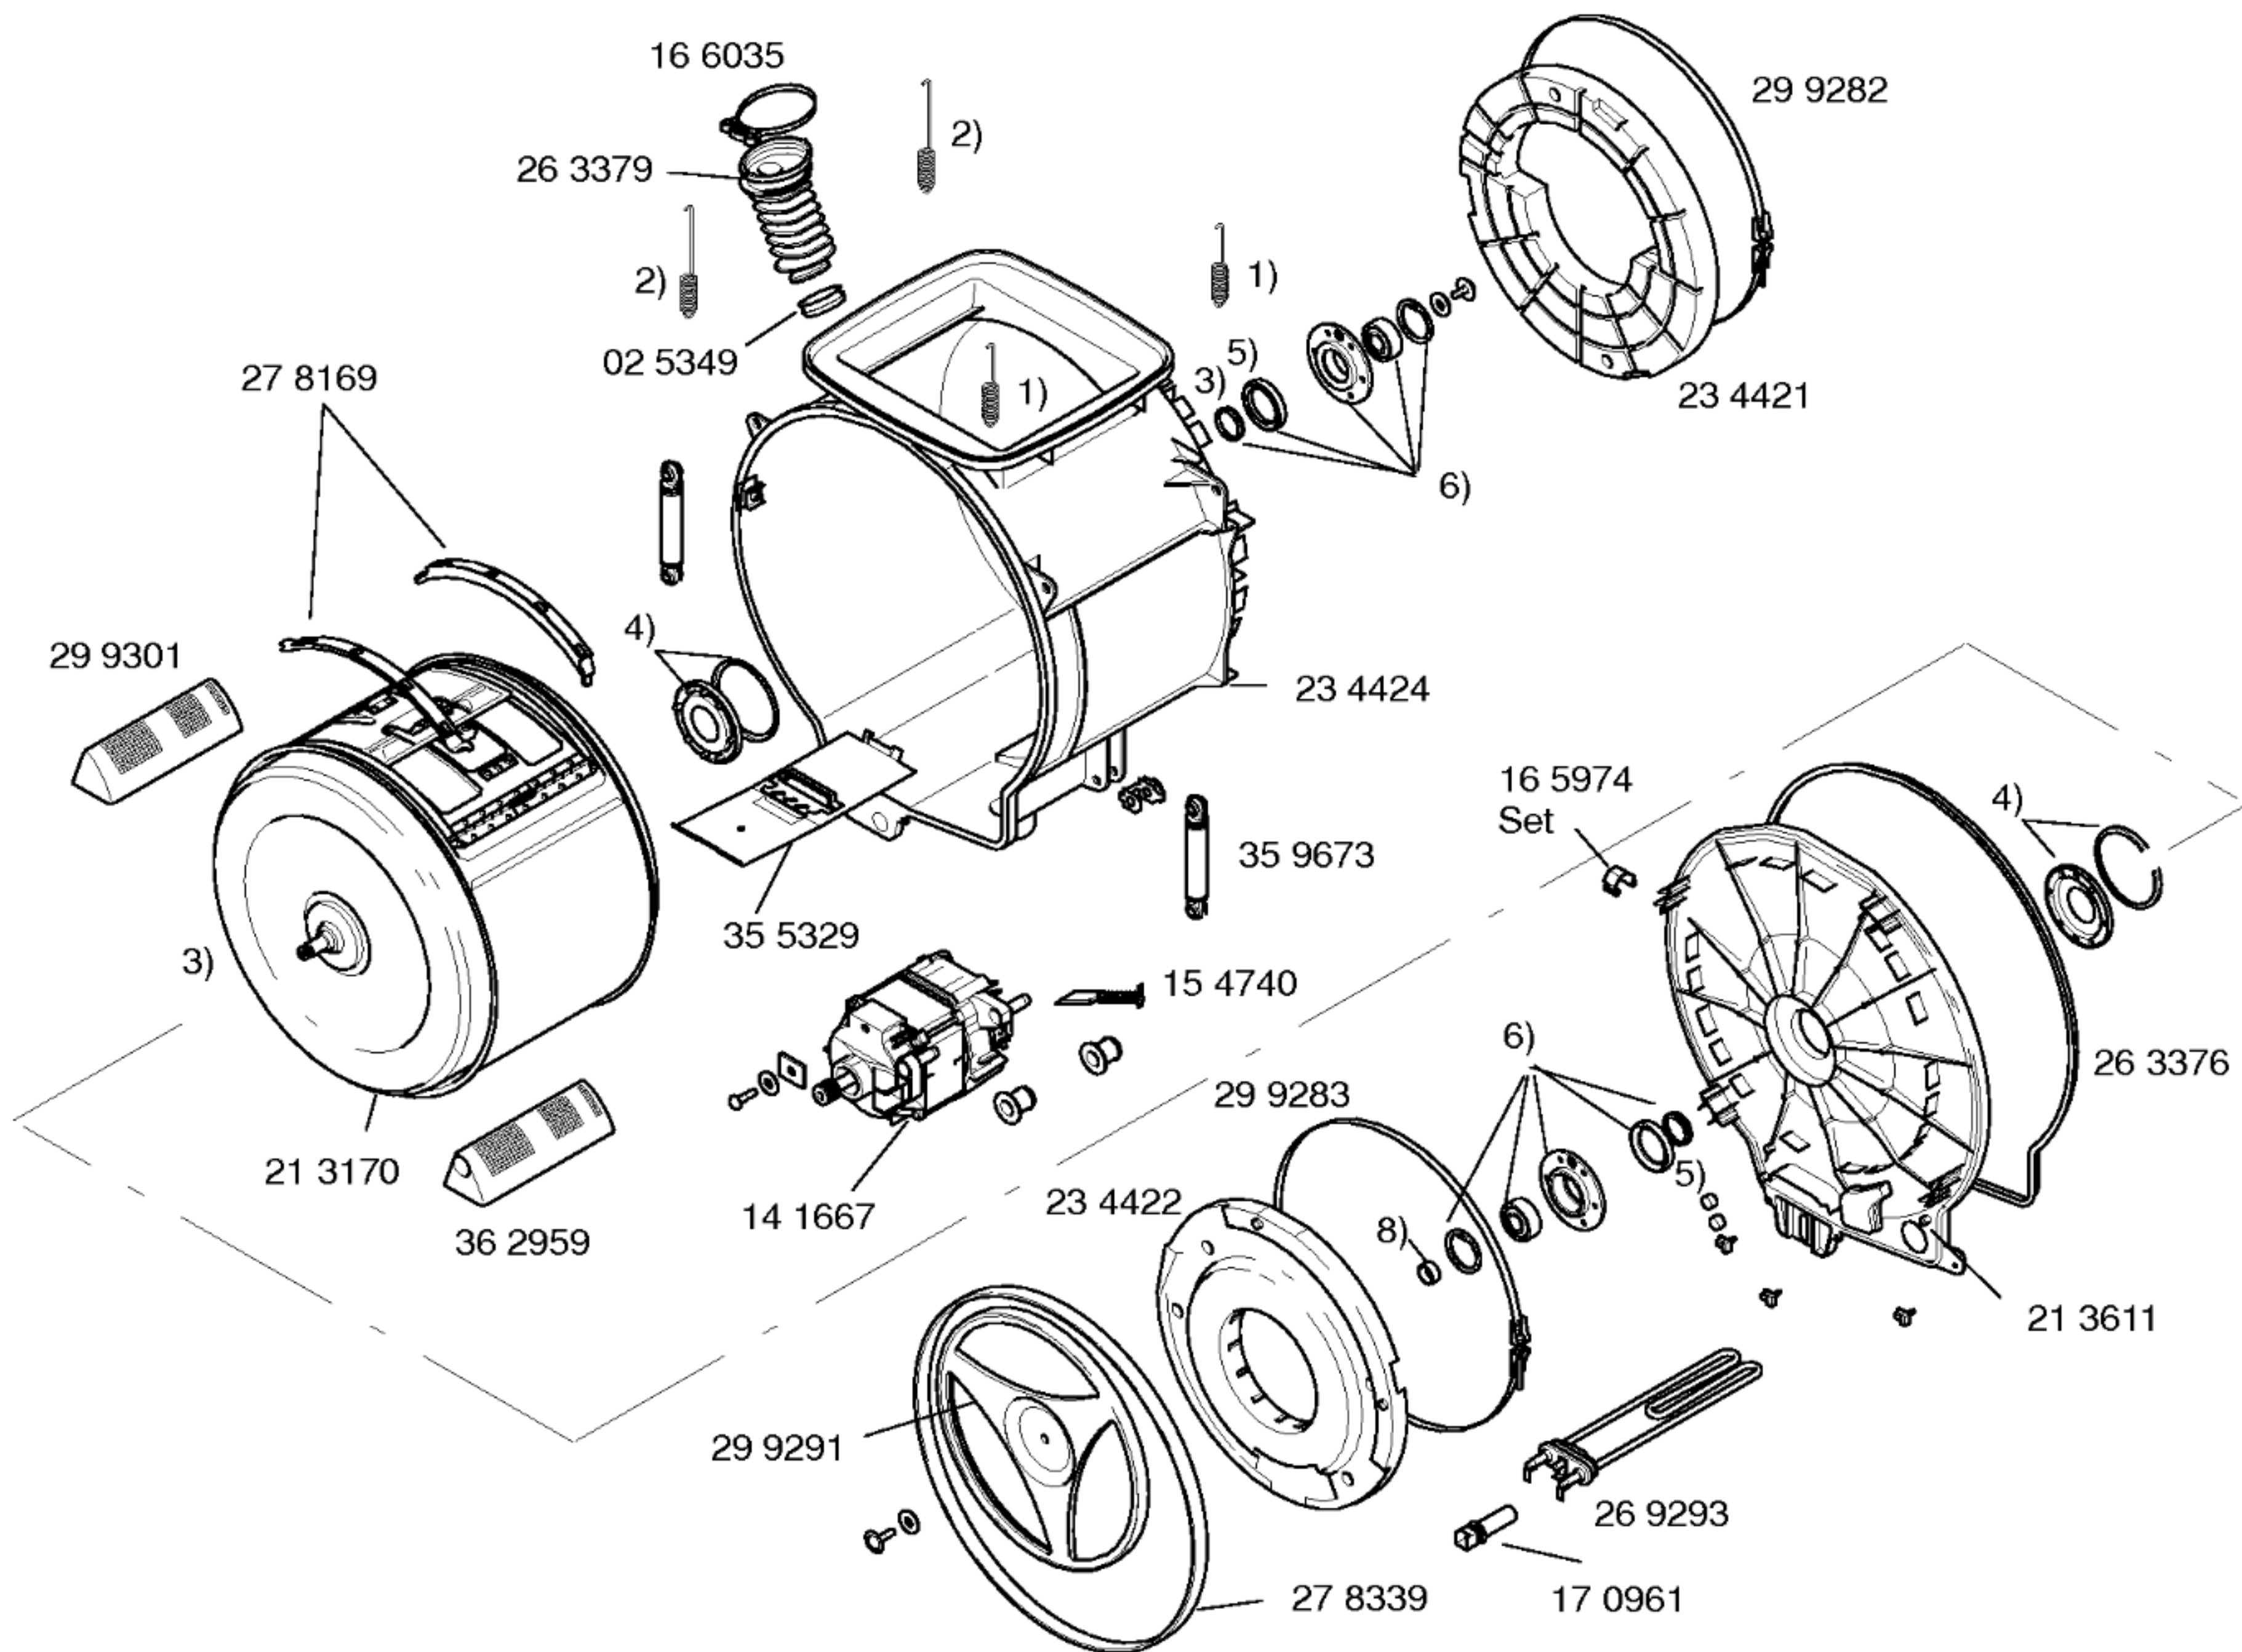

- 1) 26 3372
- 2) 26 3373
- 3) 16 5983
- 4) 26 3395
- 5) 16 5984
- 6) 48 0138
- 8) 16 5978

