


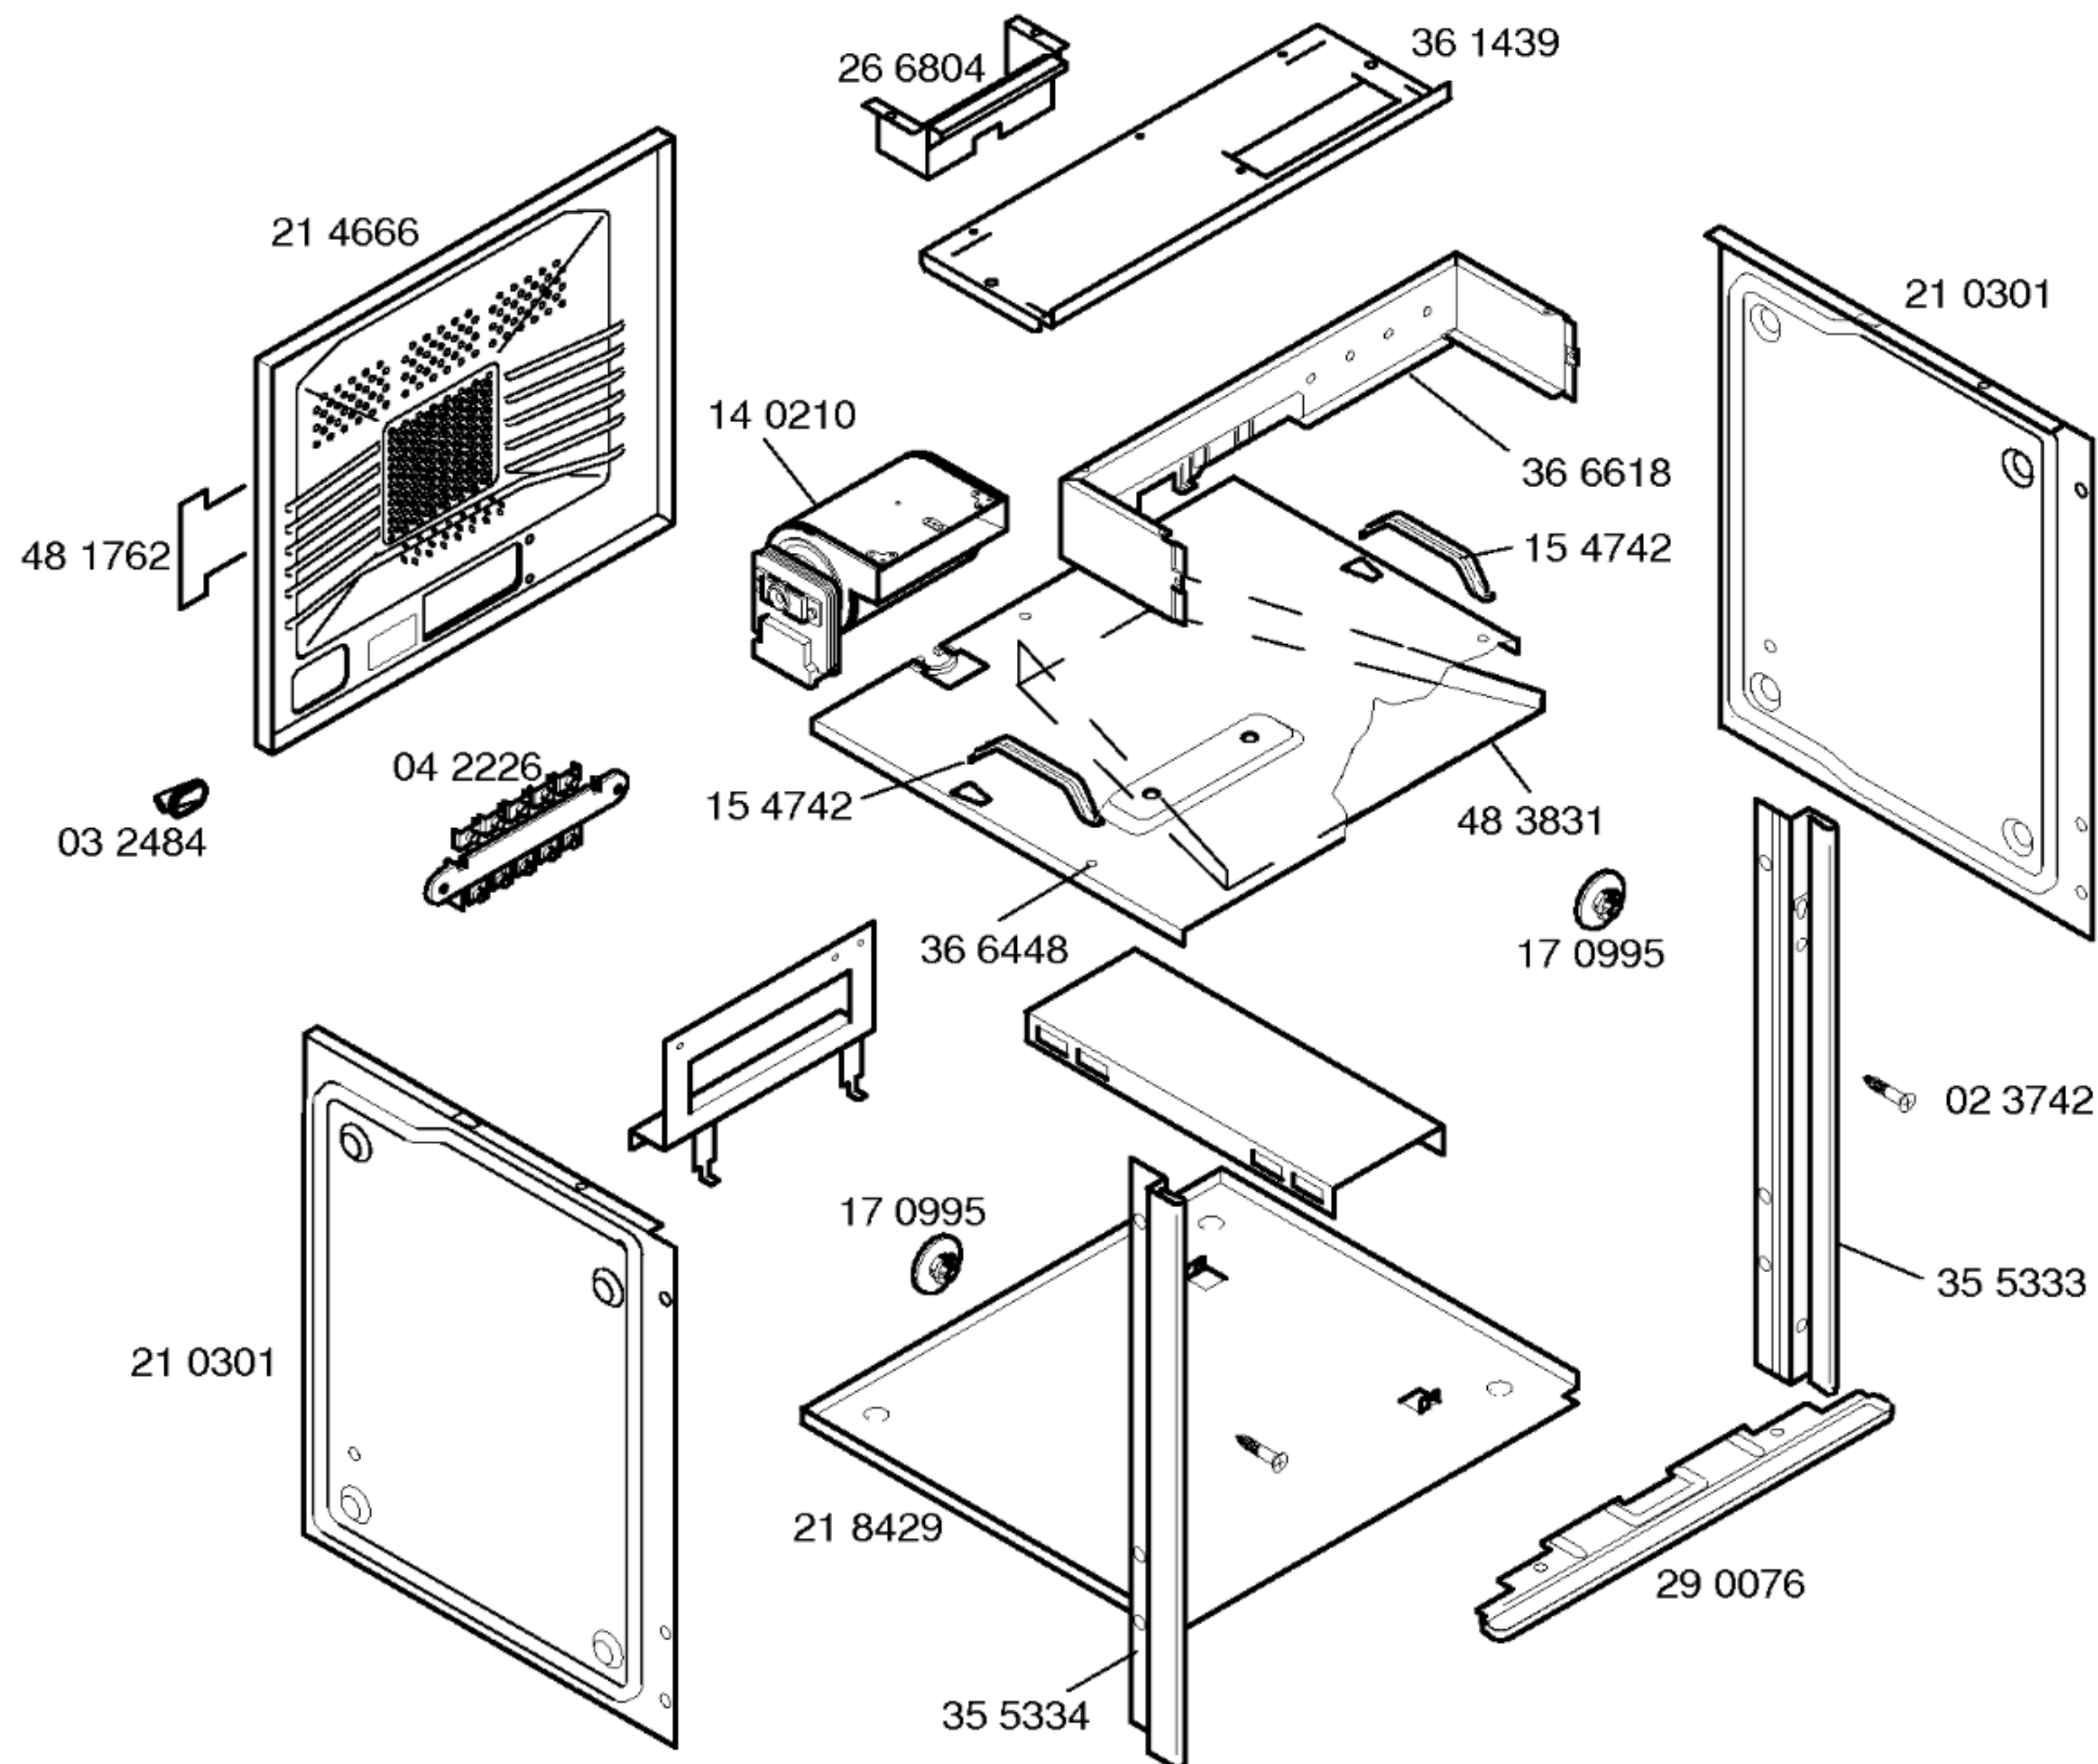


Gebrauchsanweisung
58 0728
(de)

Kochbuch
52 1094
(de)


Zubehör:


Dampfgarer
N8640X0

Bratrost engmaschig
Z1440X0
Bratrost gekröpft
Z1430X0
Bratenblech
Z1510X1
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X0
Nachrüstsatz Clou/Kat.
Z1740X0
Nachrüstsatz Clou4/Kat.
Z1750X0
Auflaufform
Z1270X0
Backblech Alu
Z1330X0
Backblech email.
Z1340X0

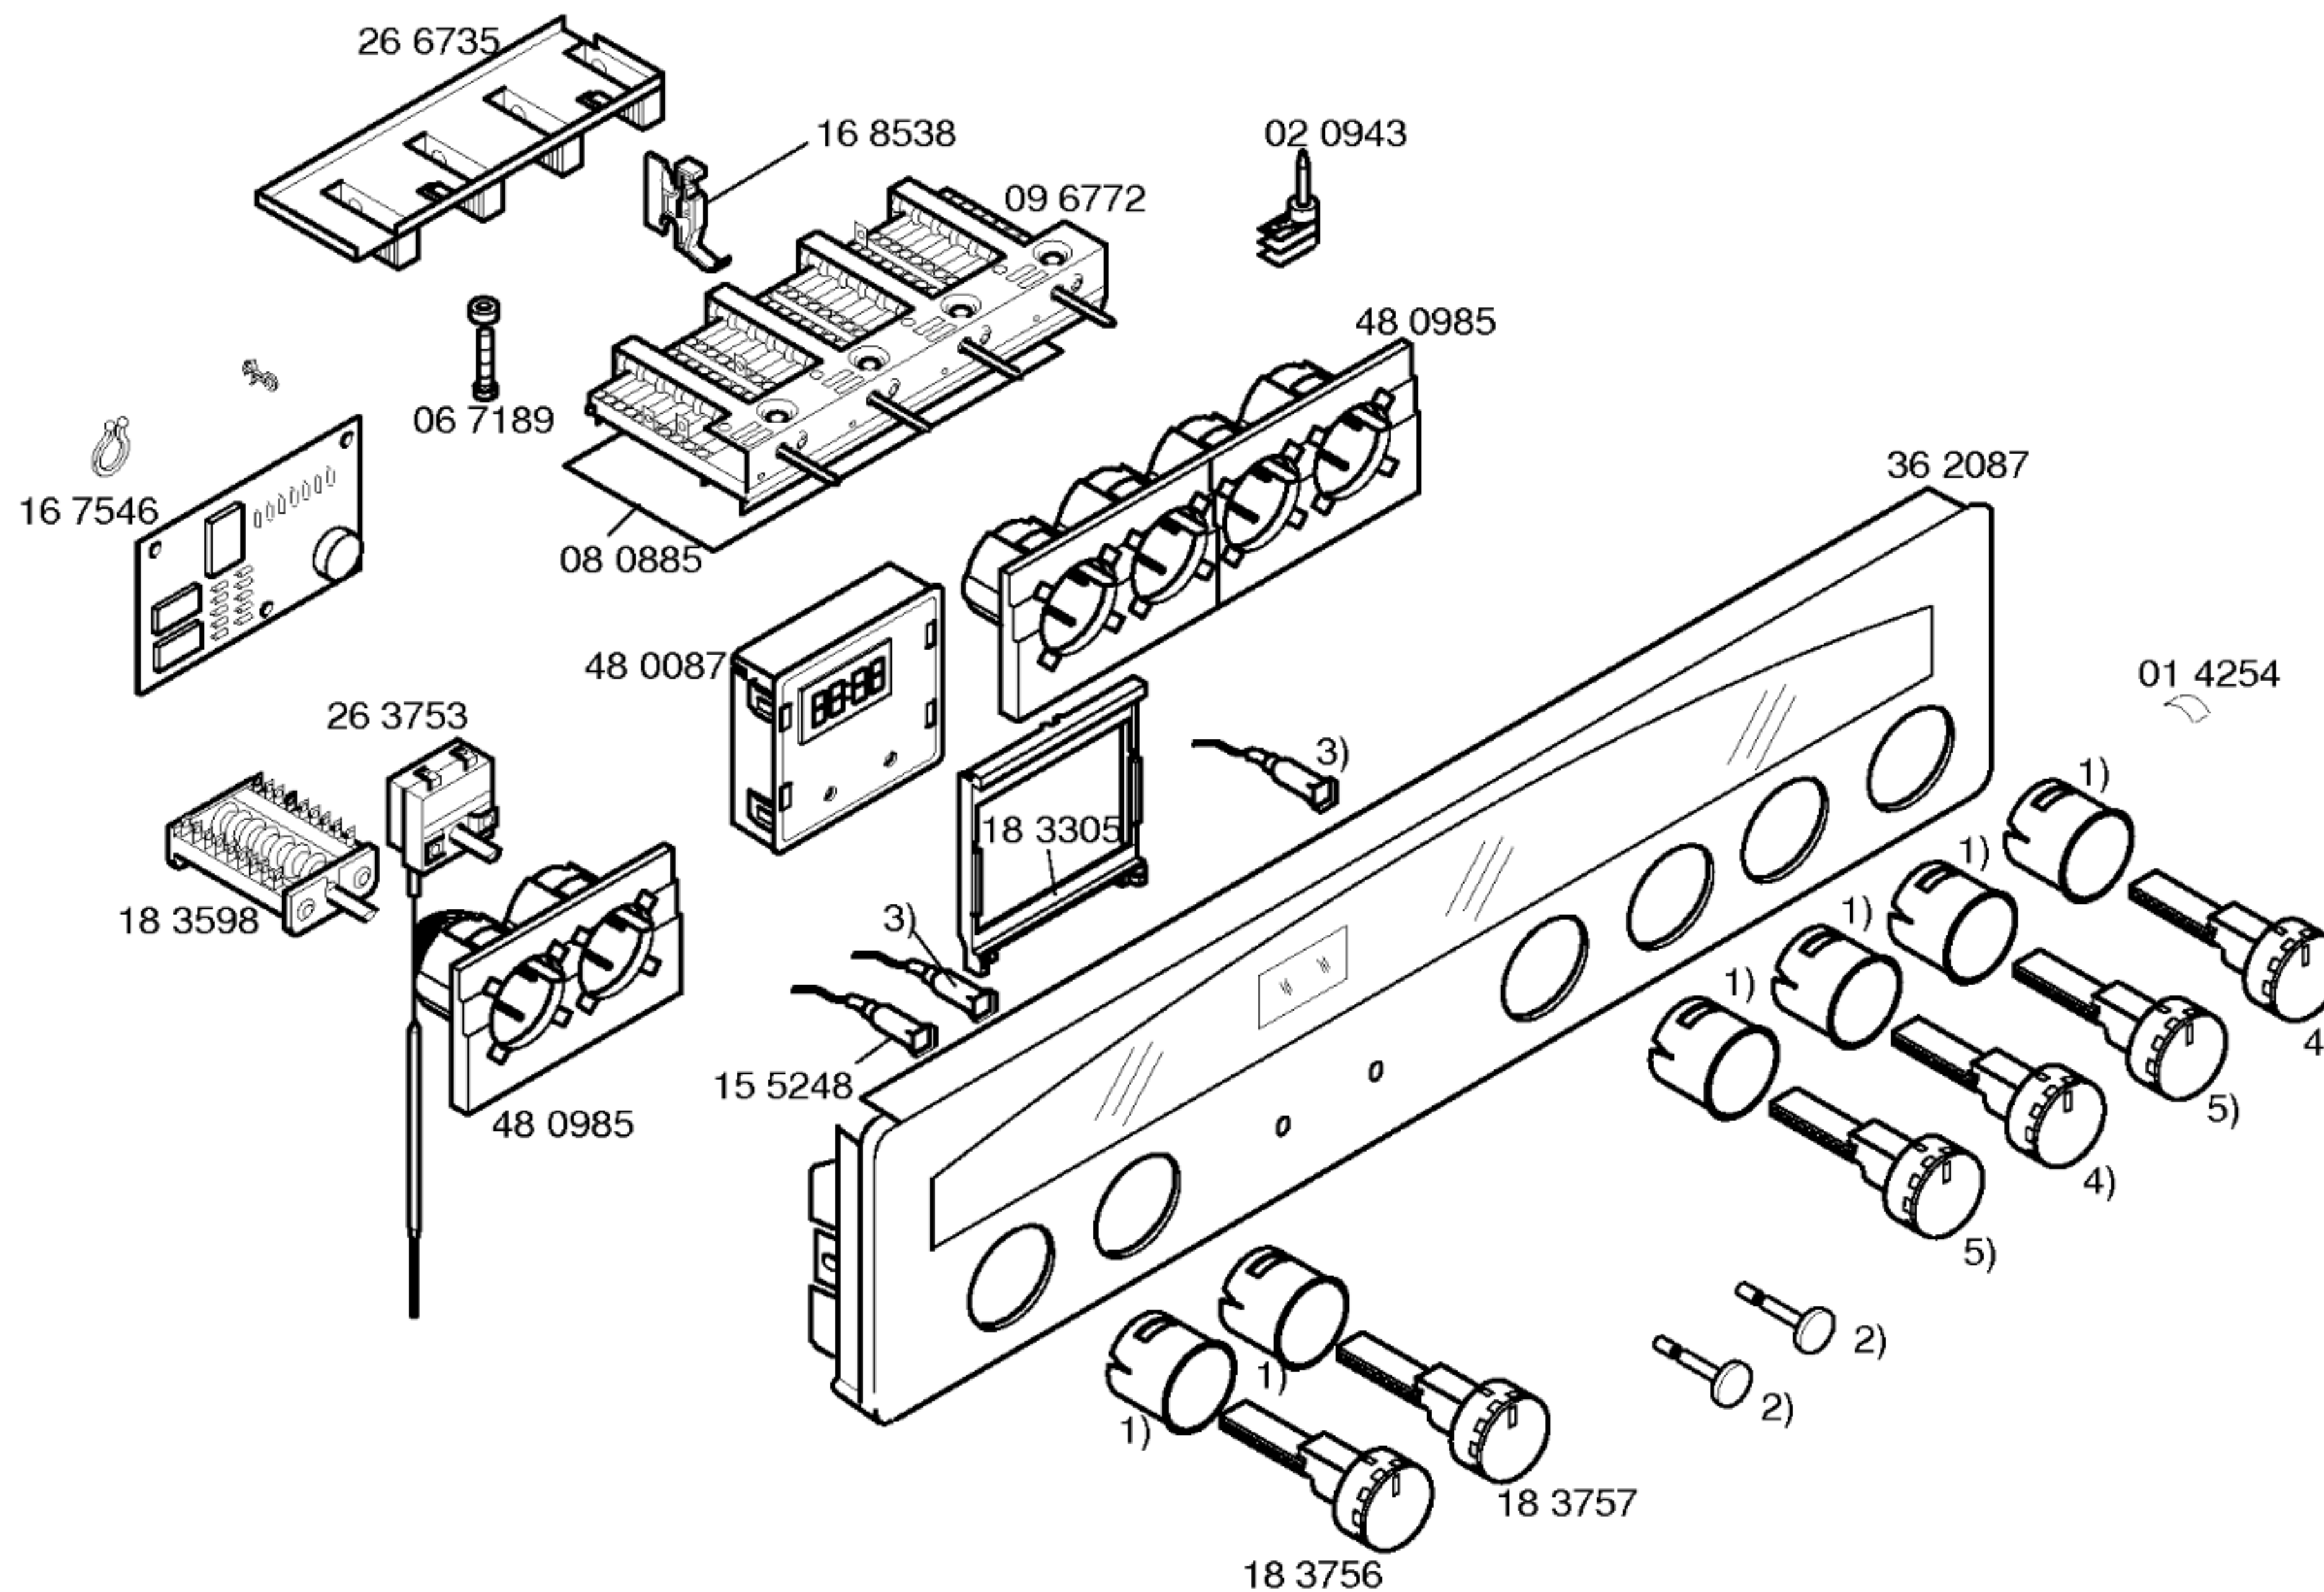

- 1) 18 3758
- 2) 18 4394
- 3) 15 9864
- 4) 18 3307
- 5) 18 3308

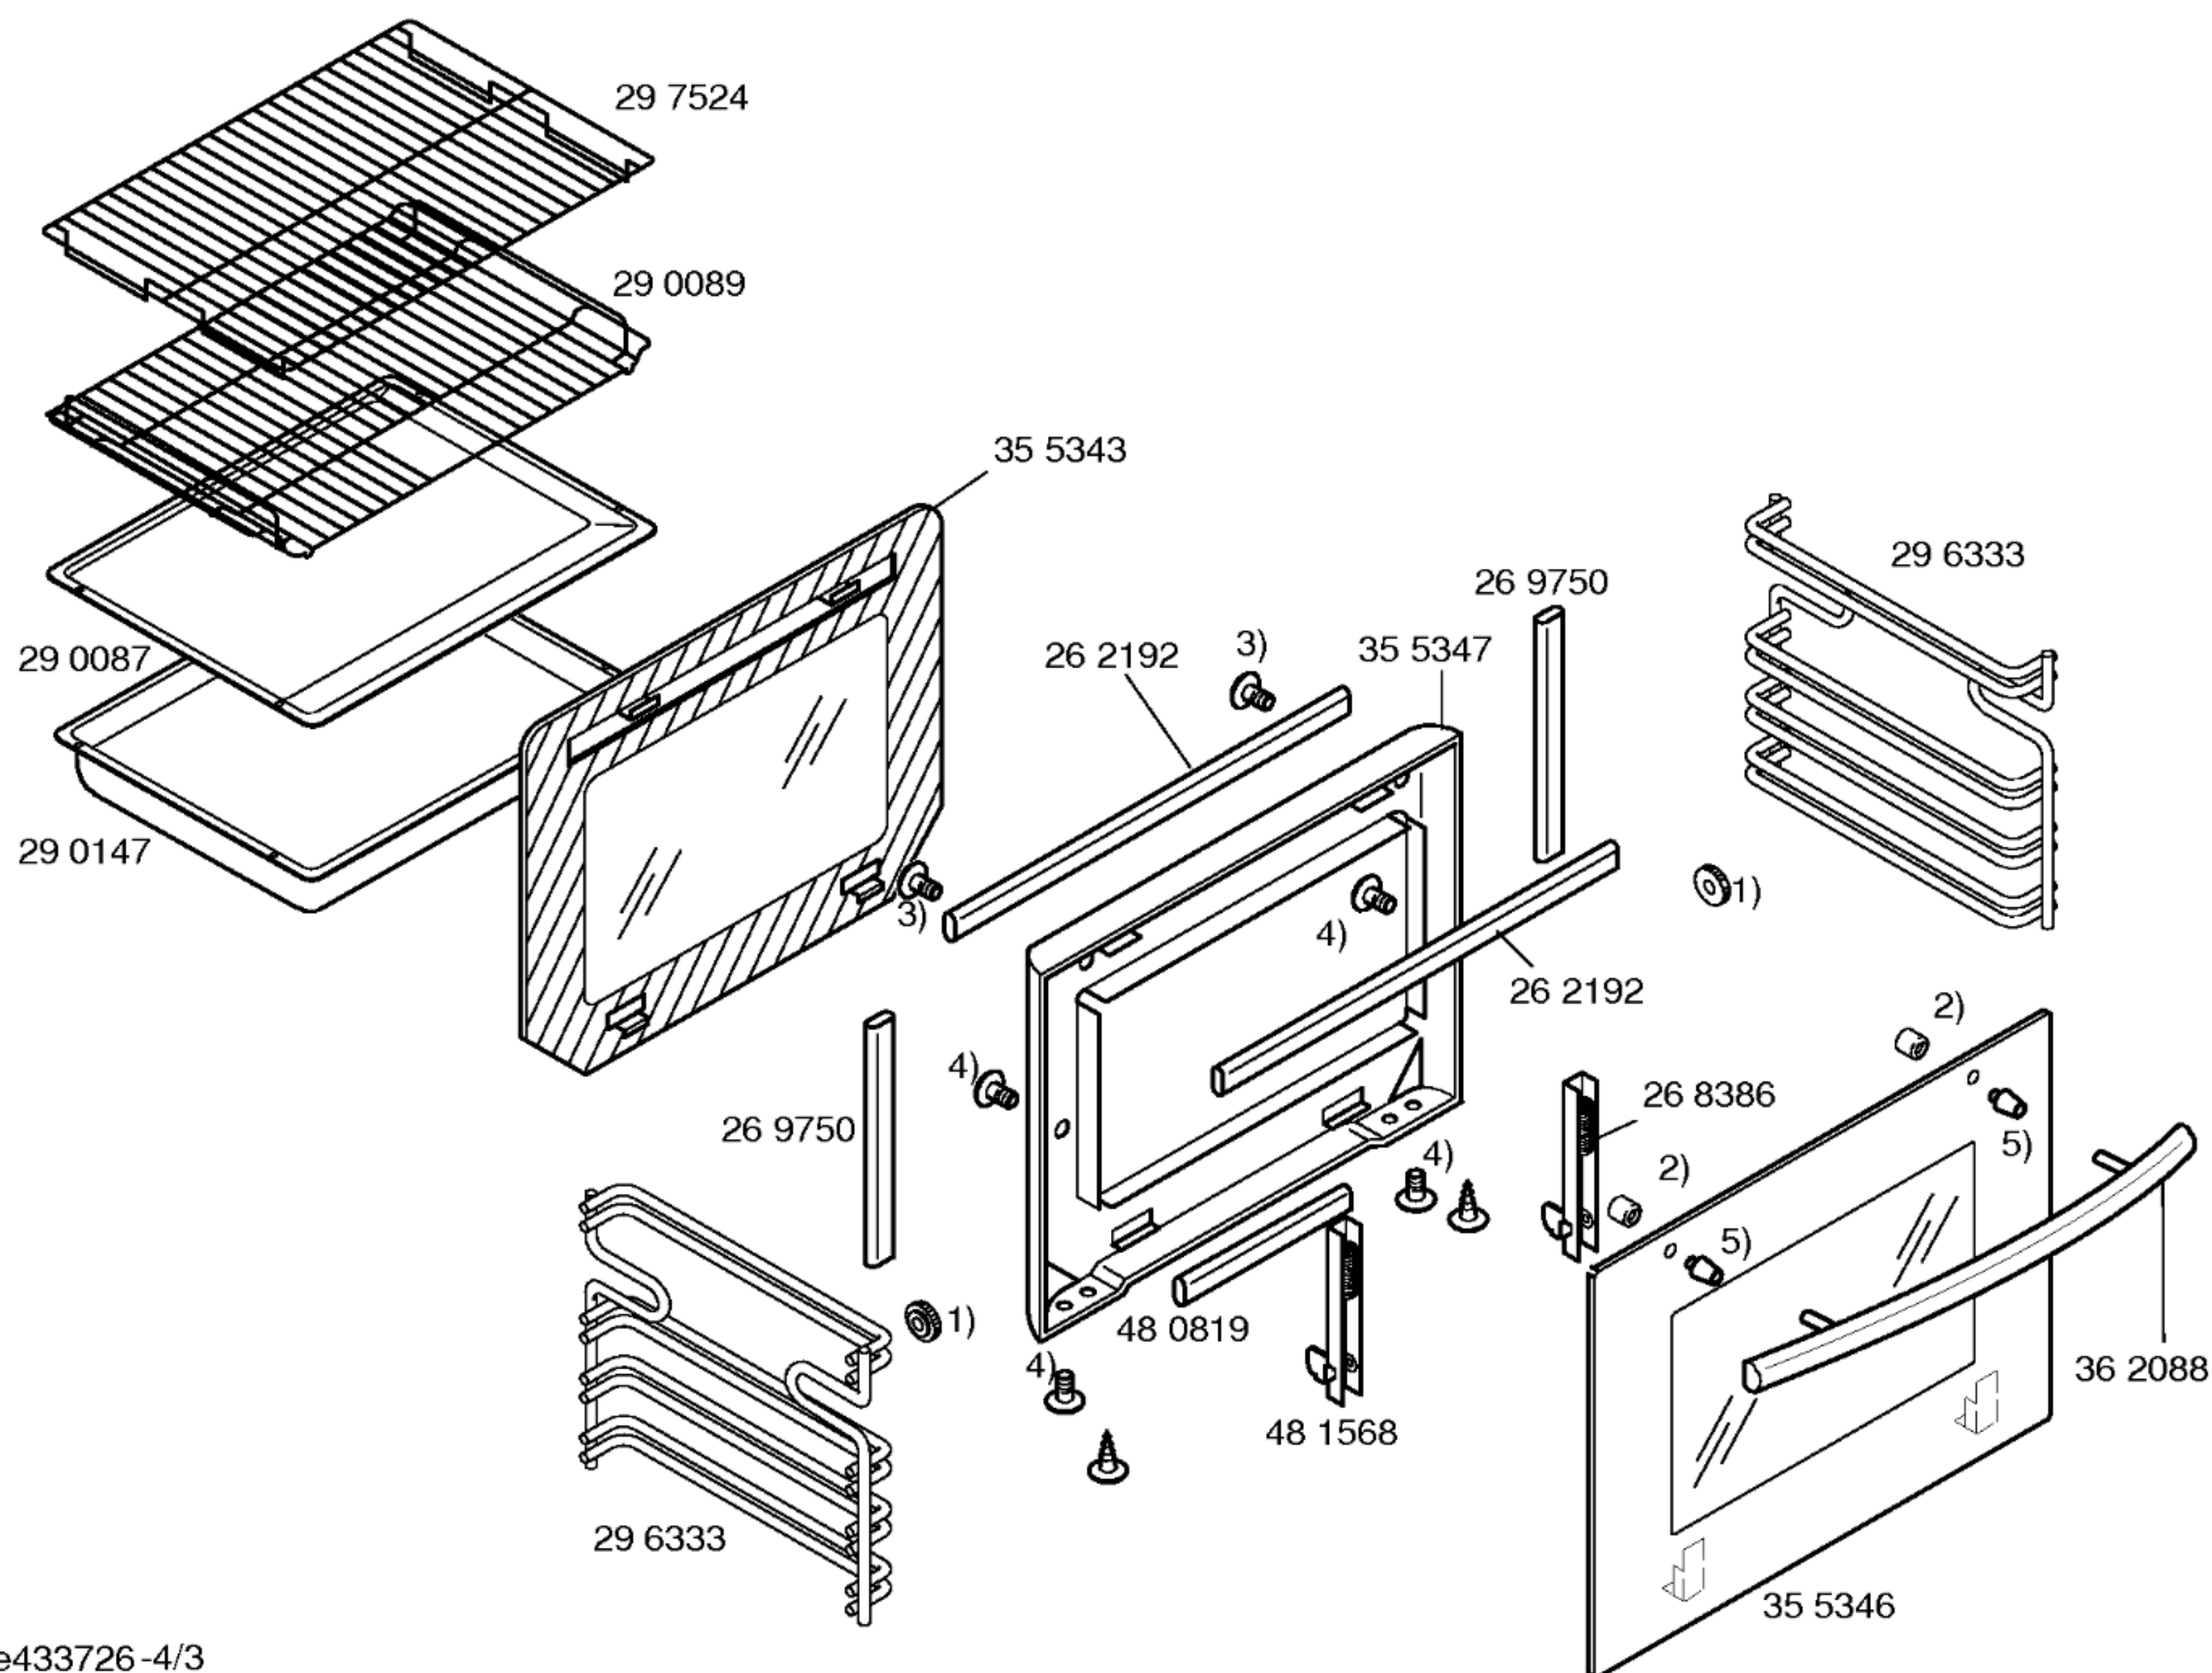

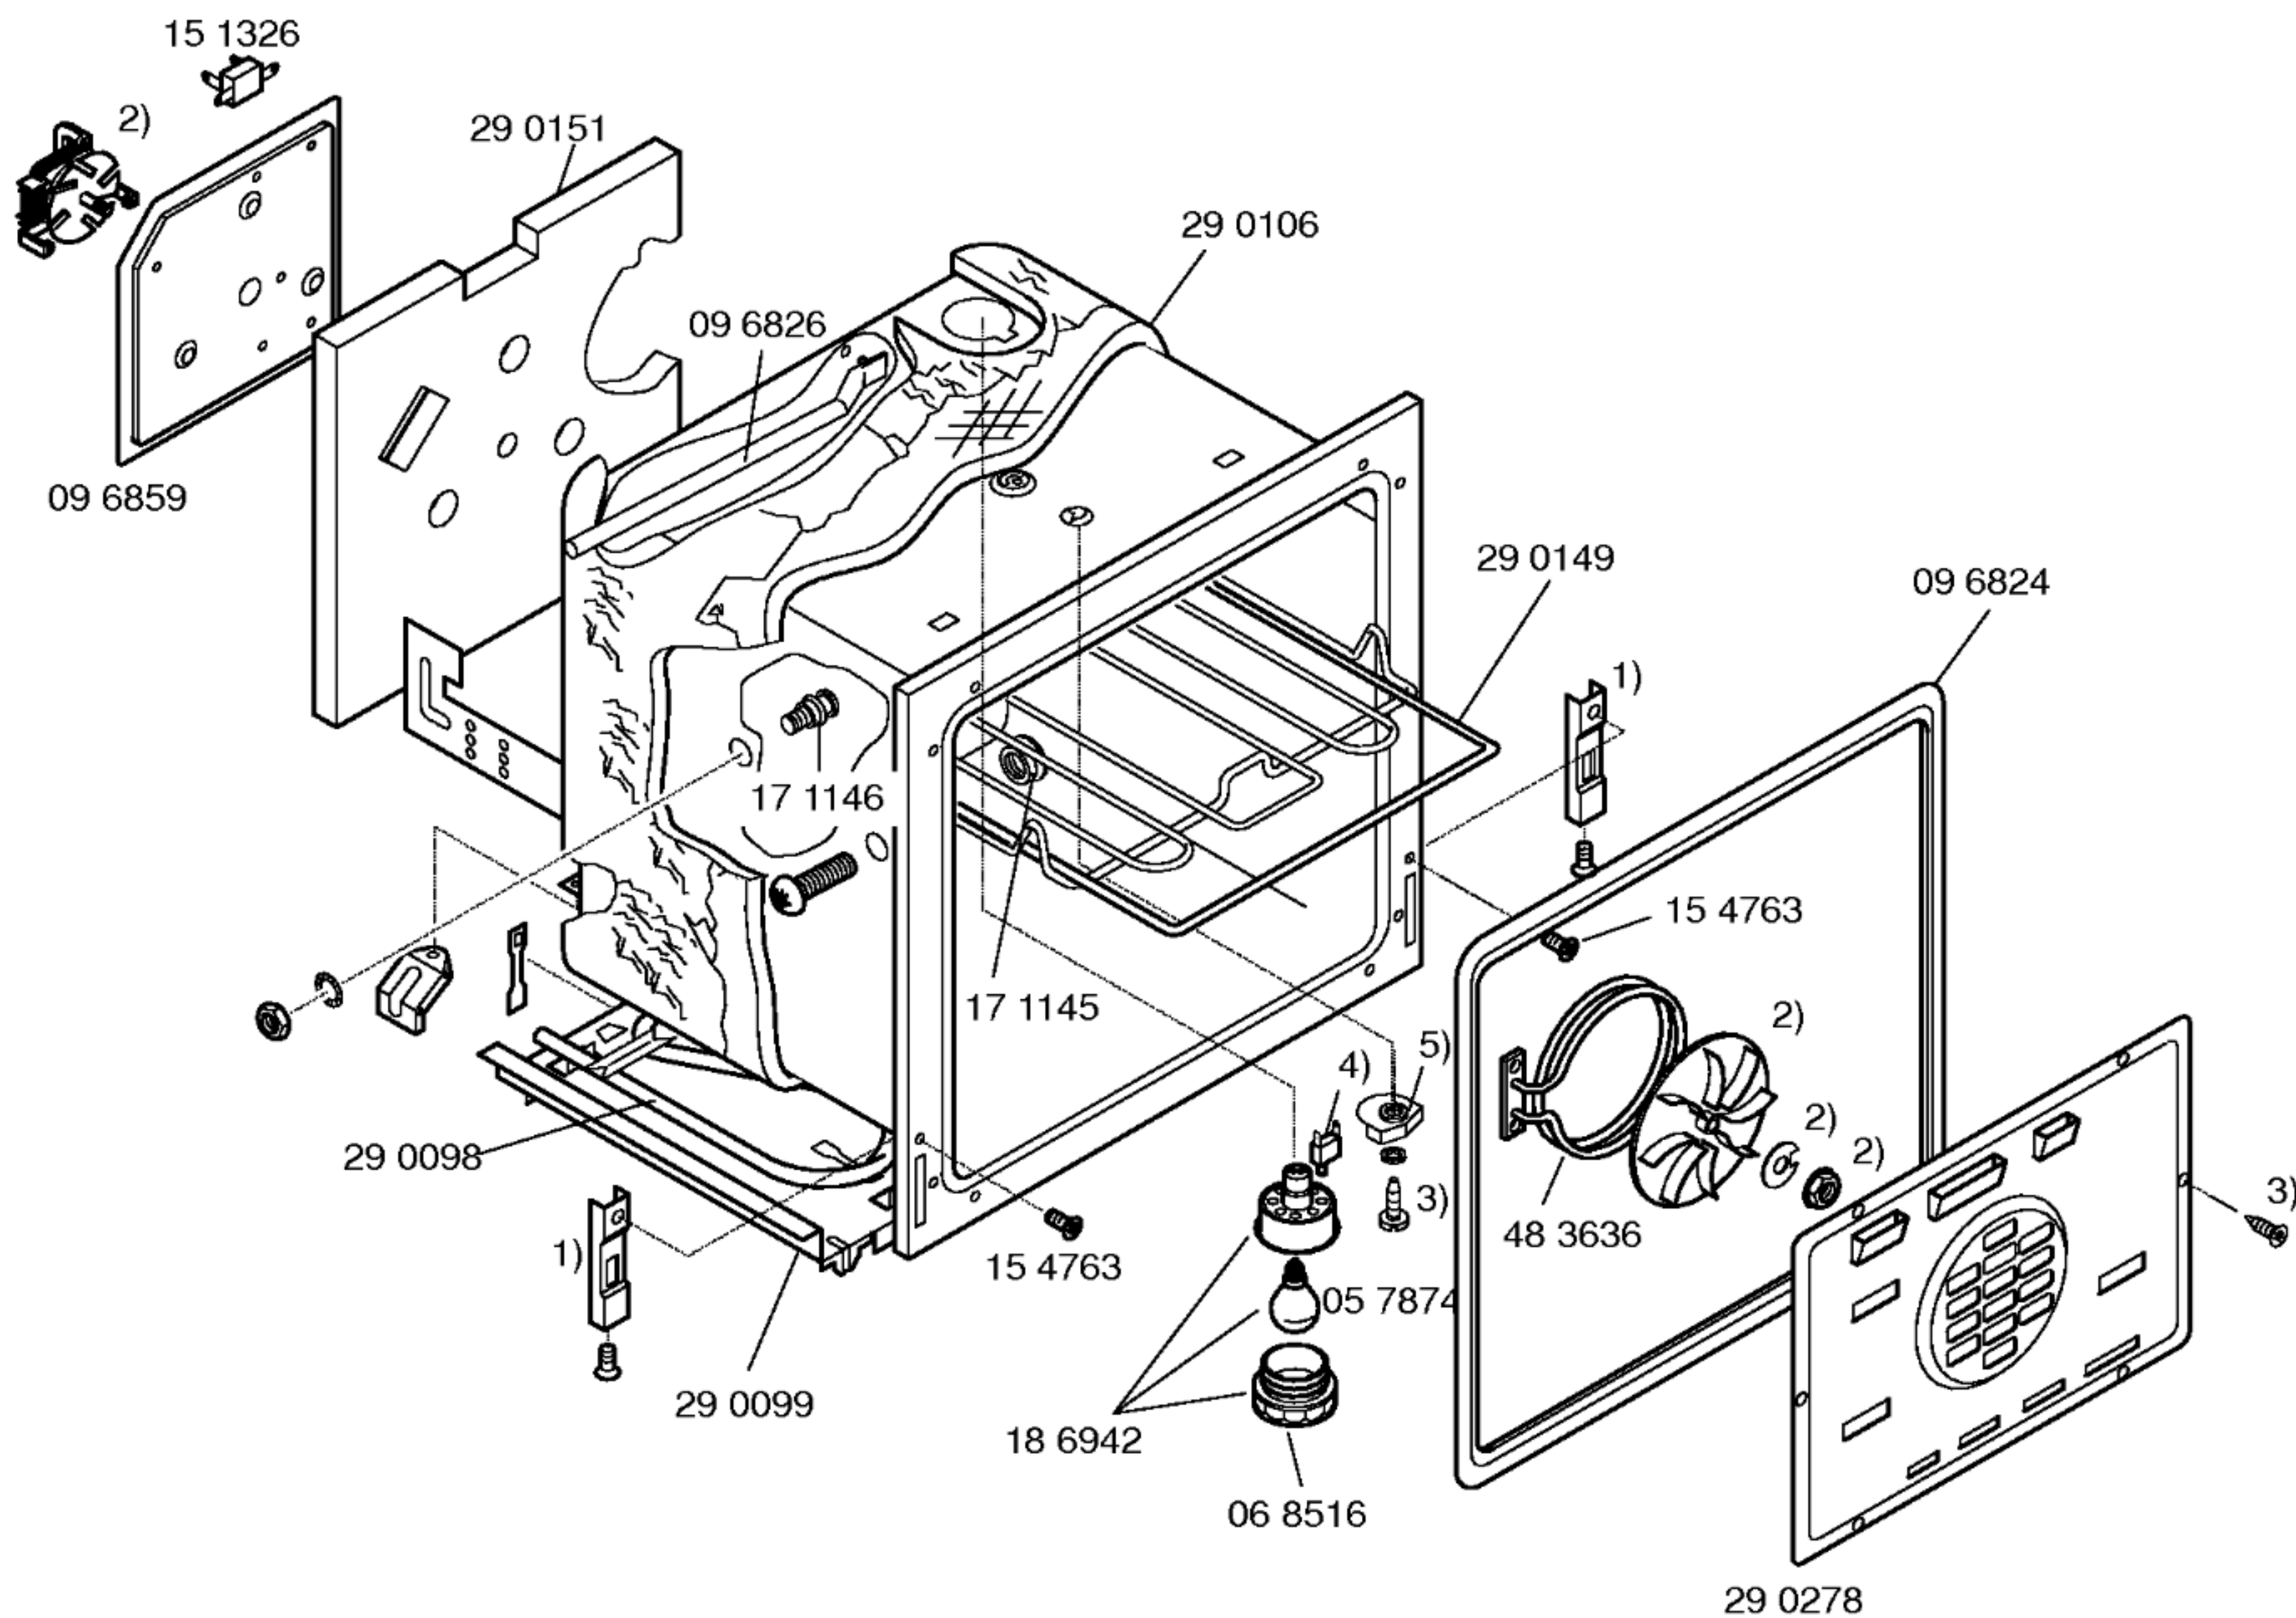

- 1) 17 2647
- 2) 26 1674
kompl.
- 3) 16 0916
- 4) 15 4836
- 5) 15 5033