

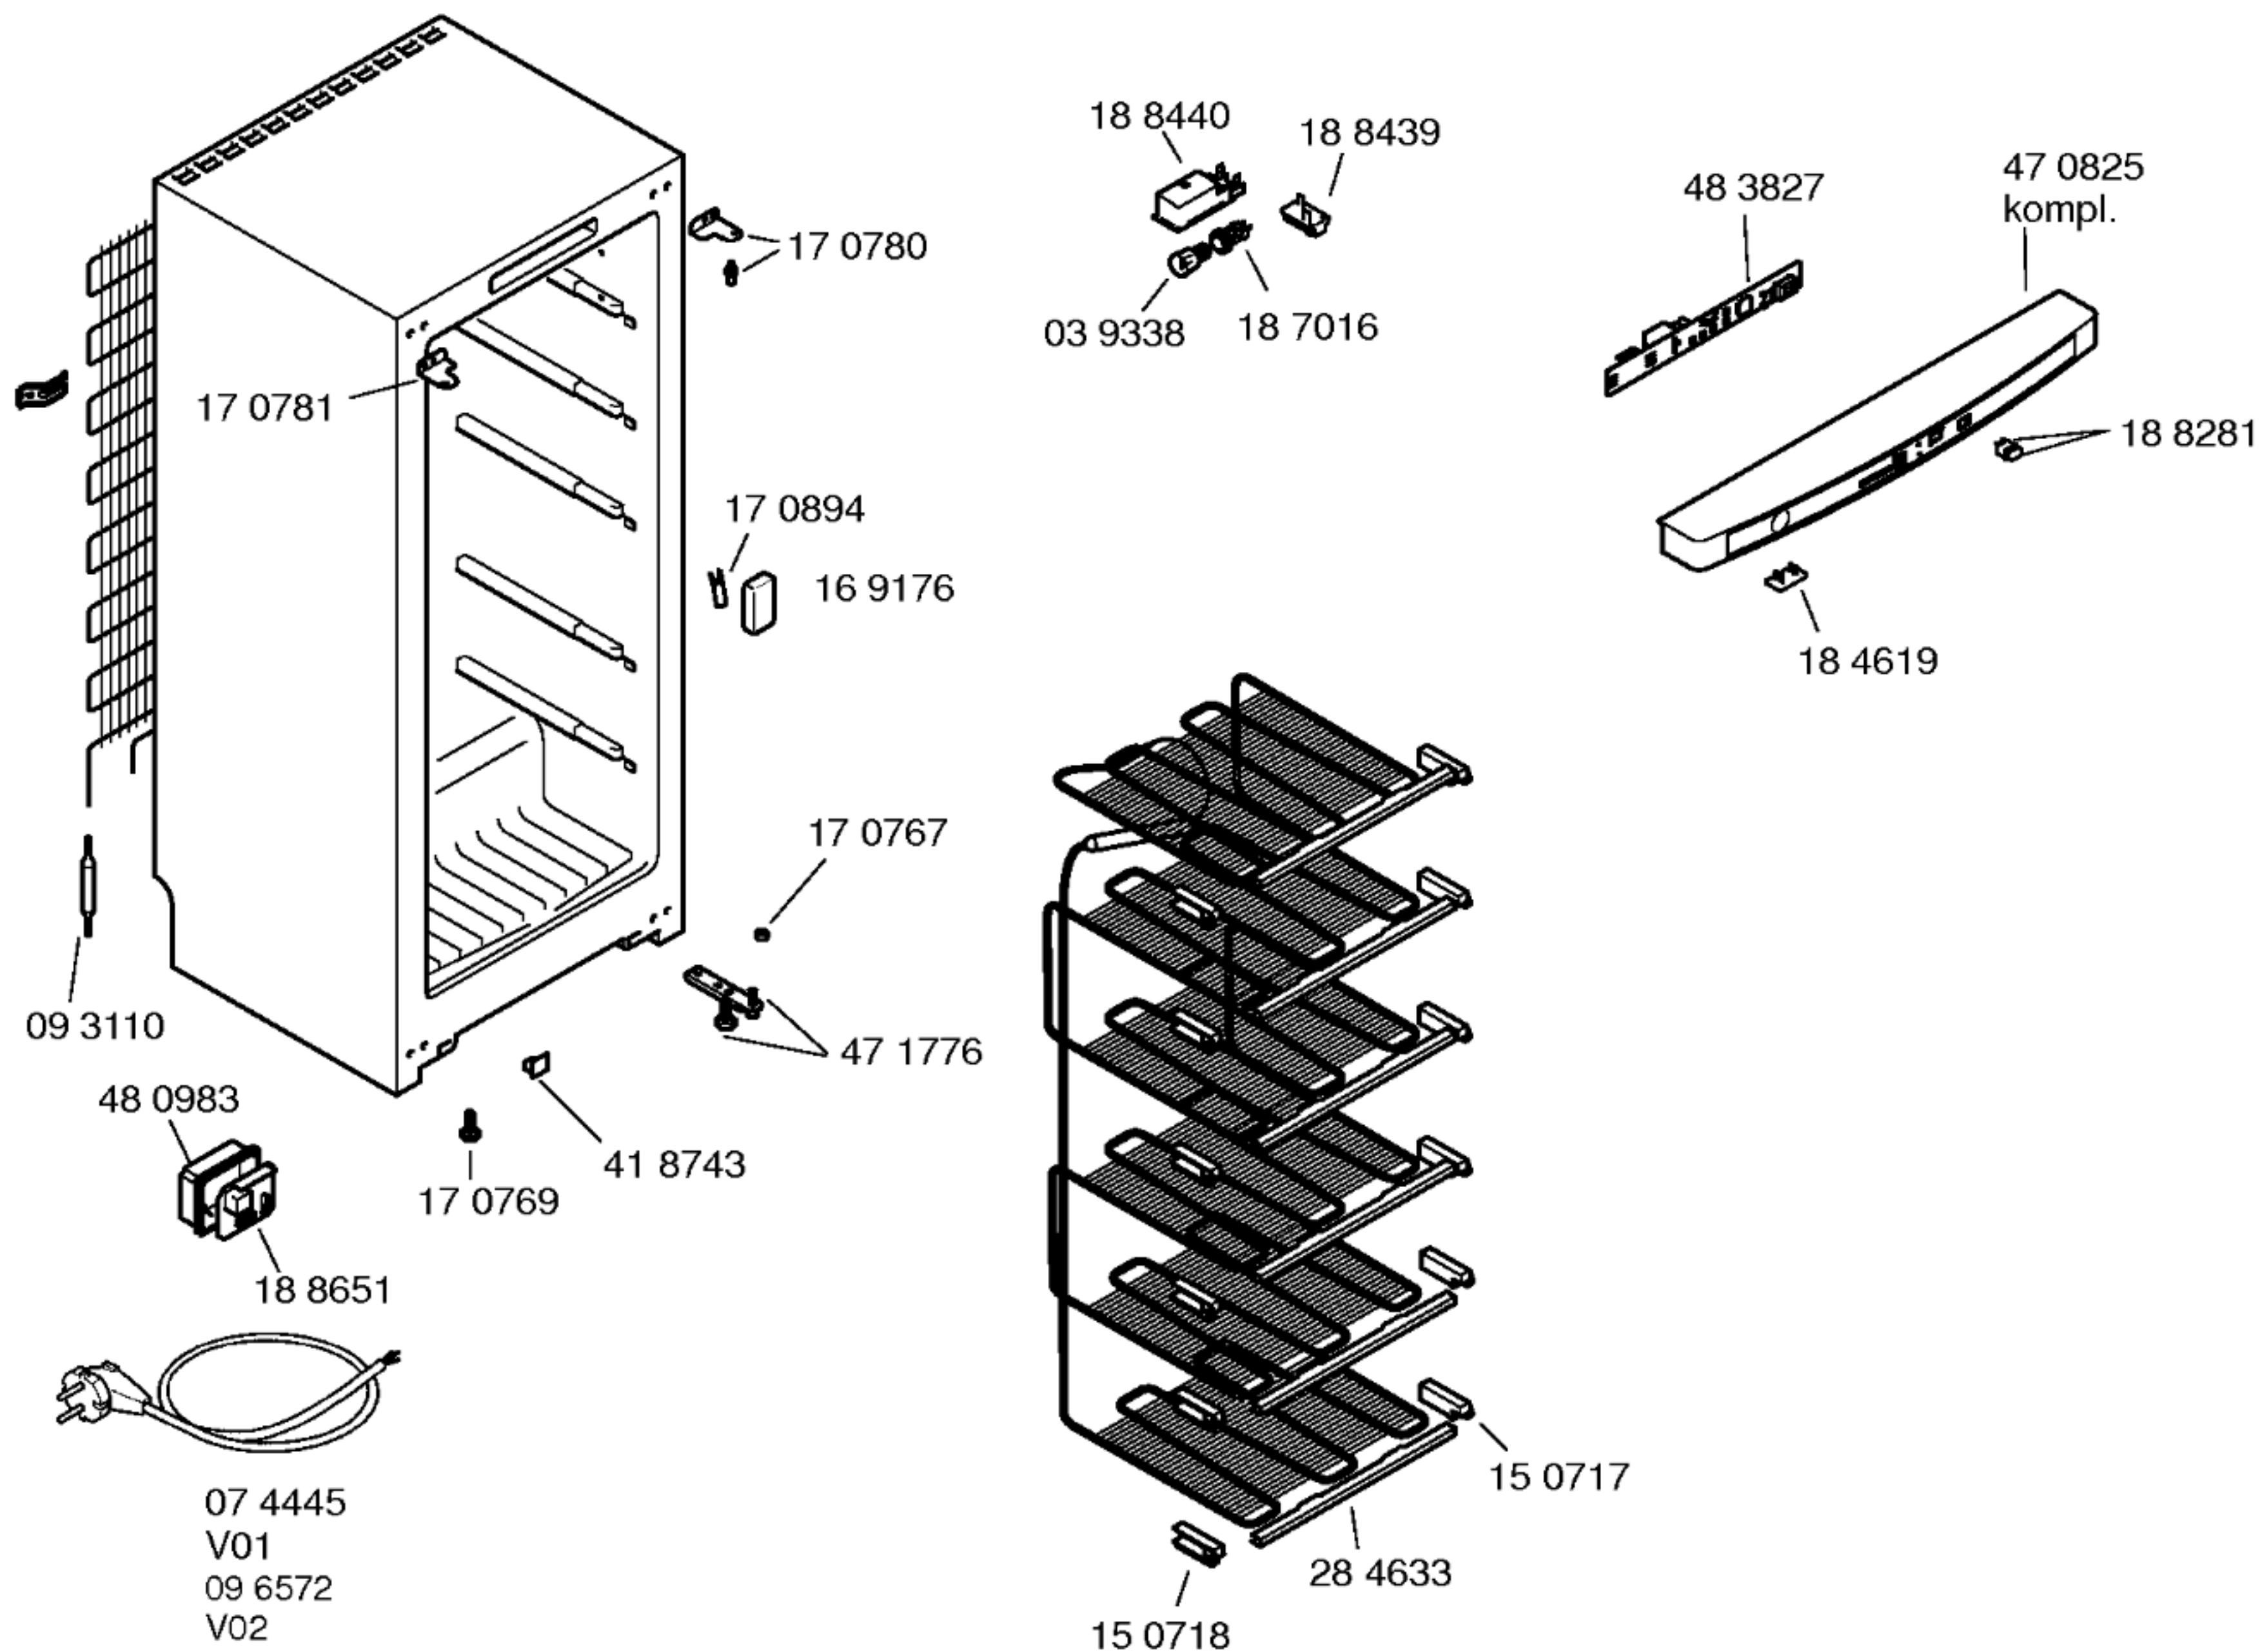
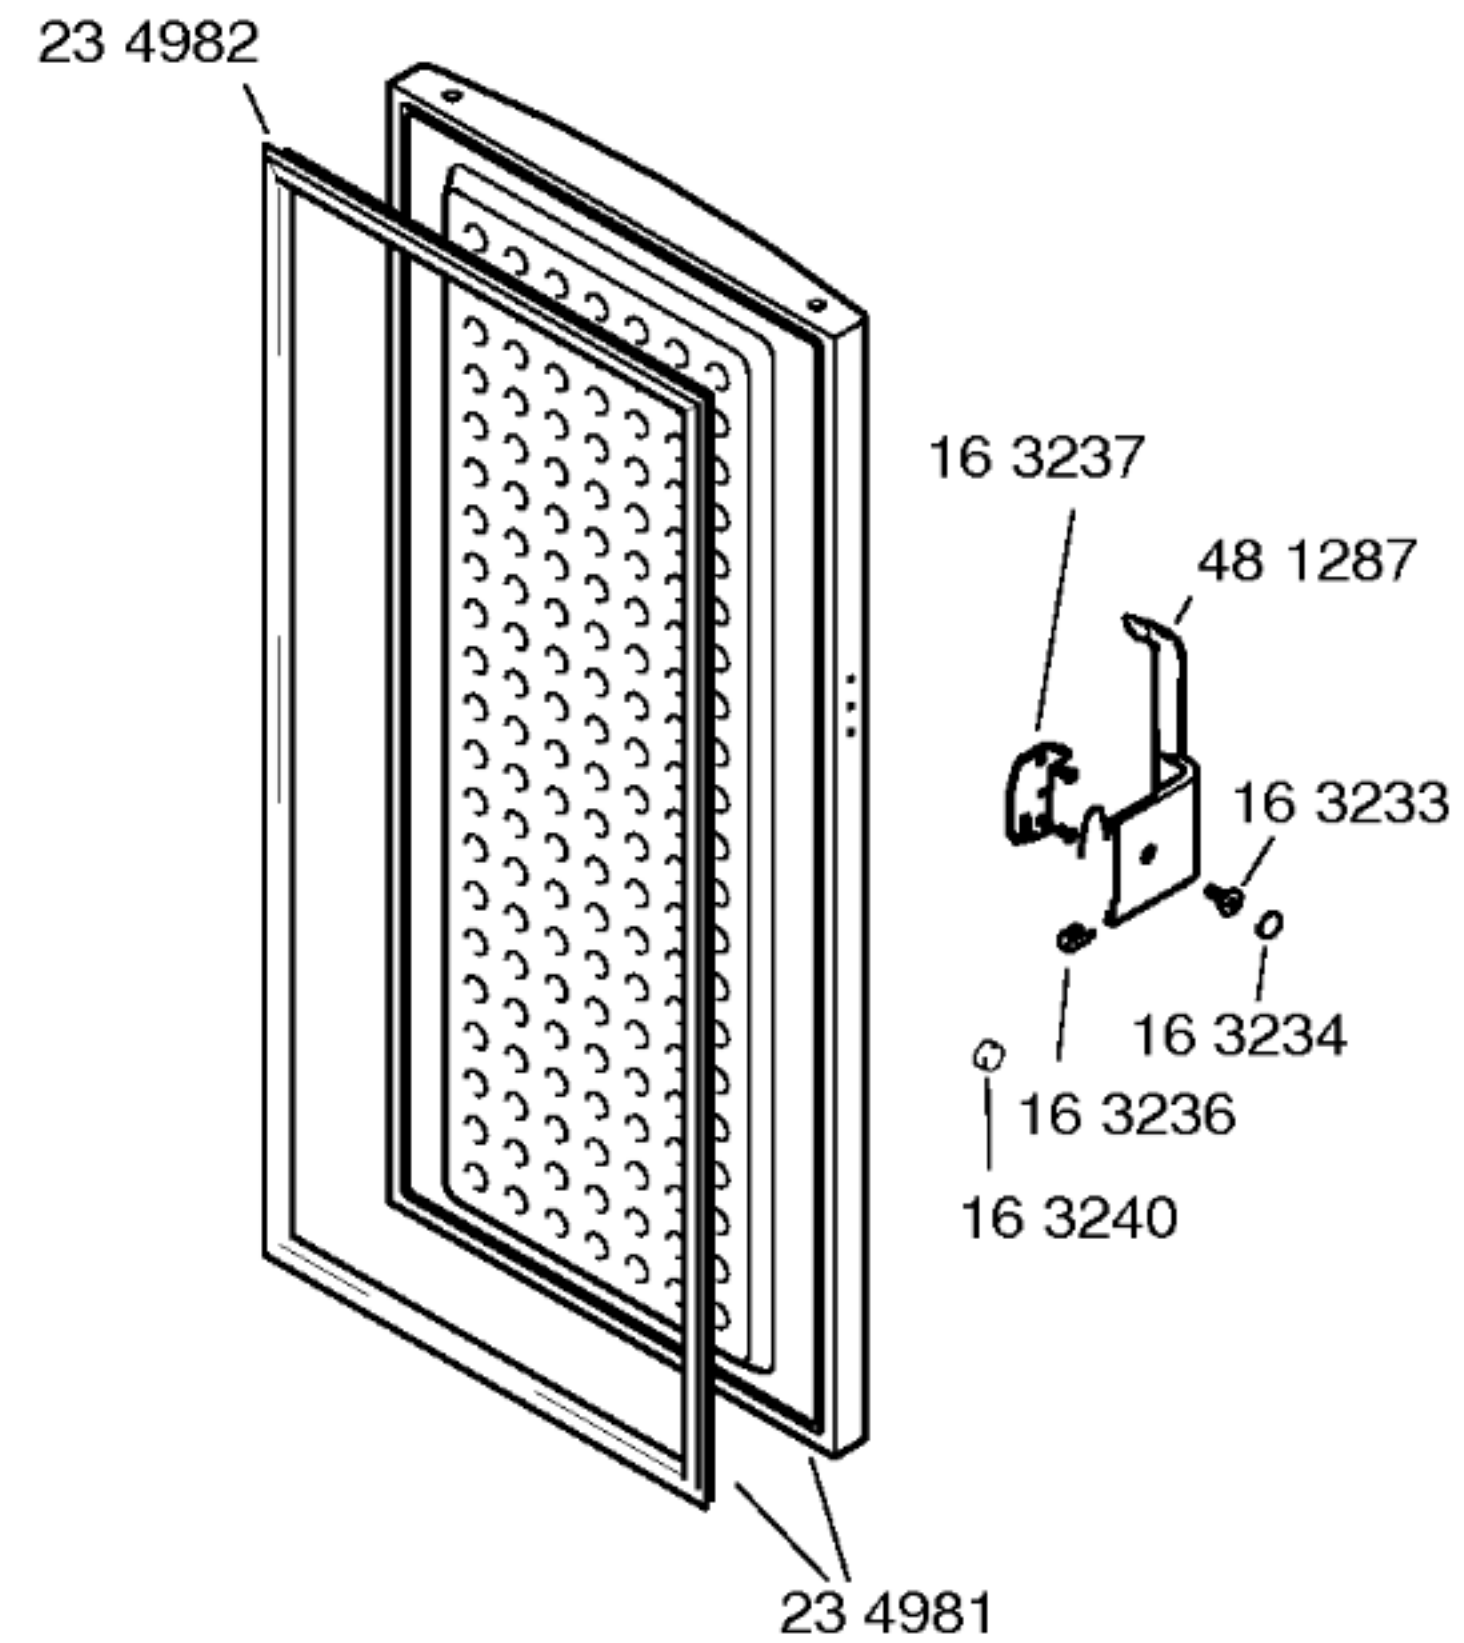


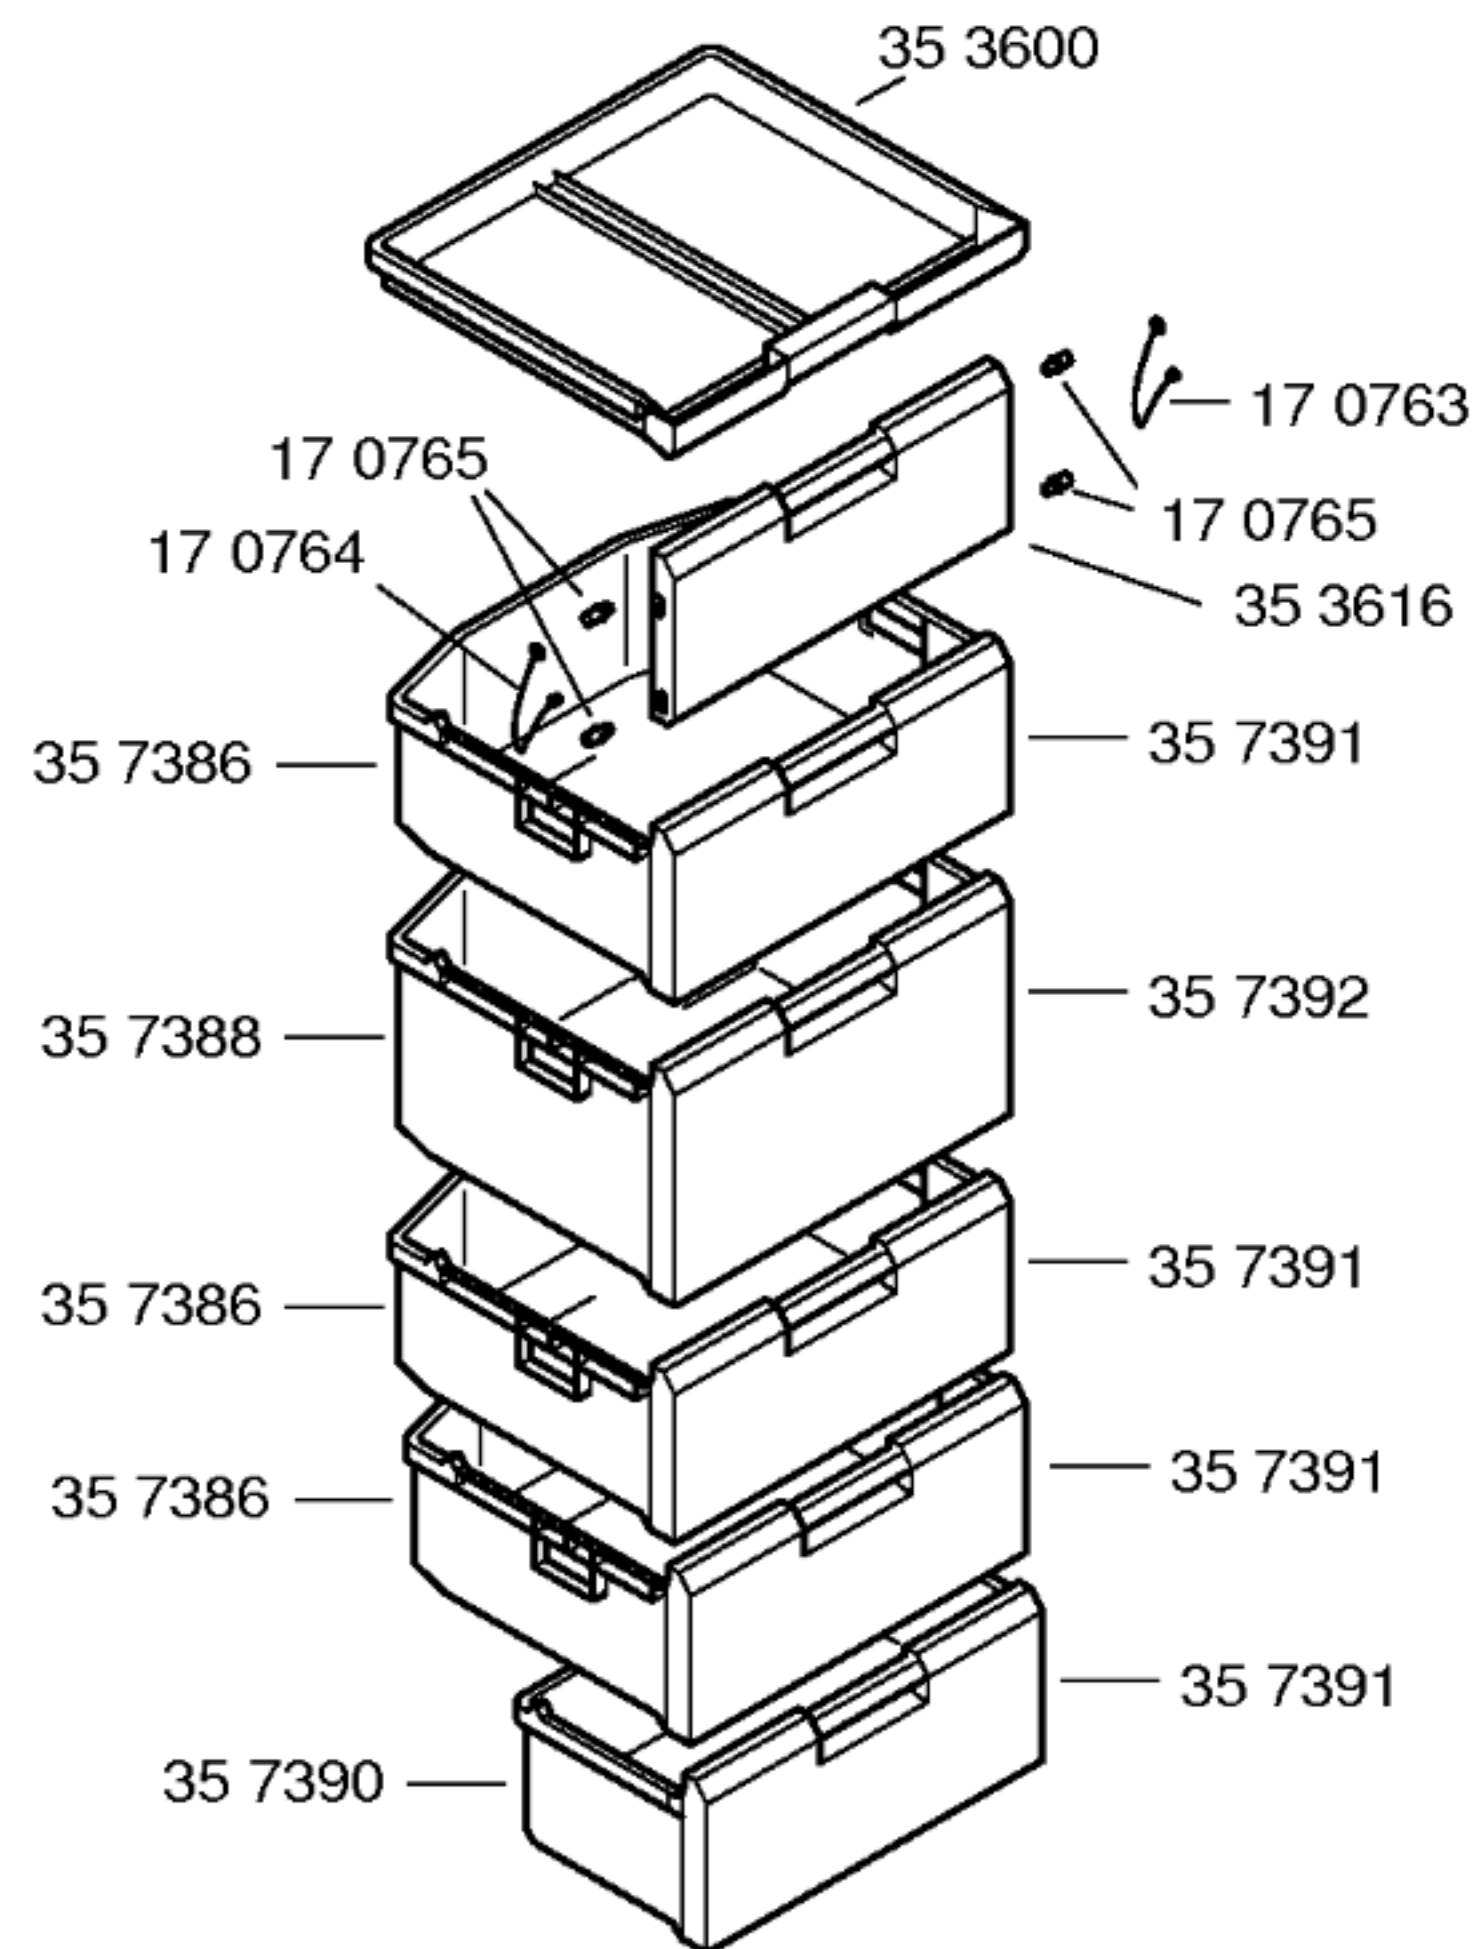


Gebrauchsanweisung
58 6541
(DE,EN,FR,IT,NL)
Montageanleitung
58 0241
Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

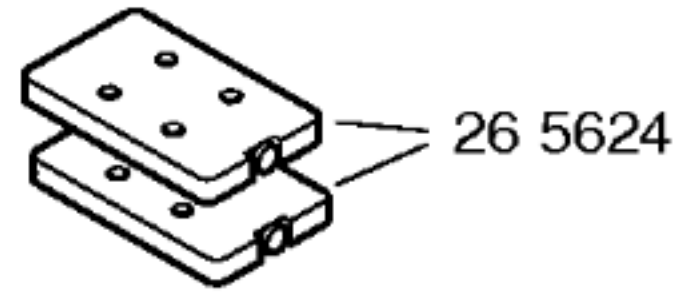

Mat. – Nr. – Konstante
3740

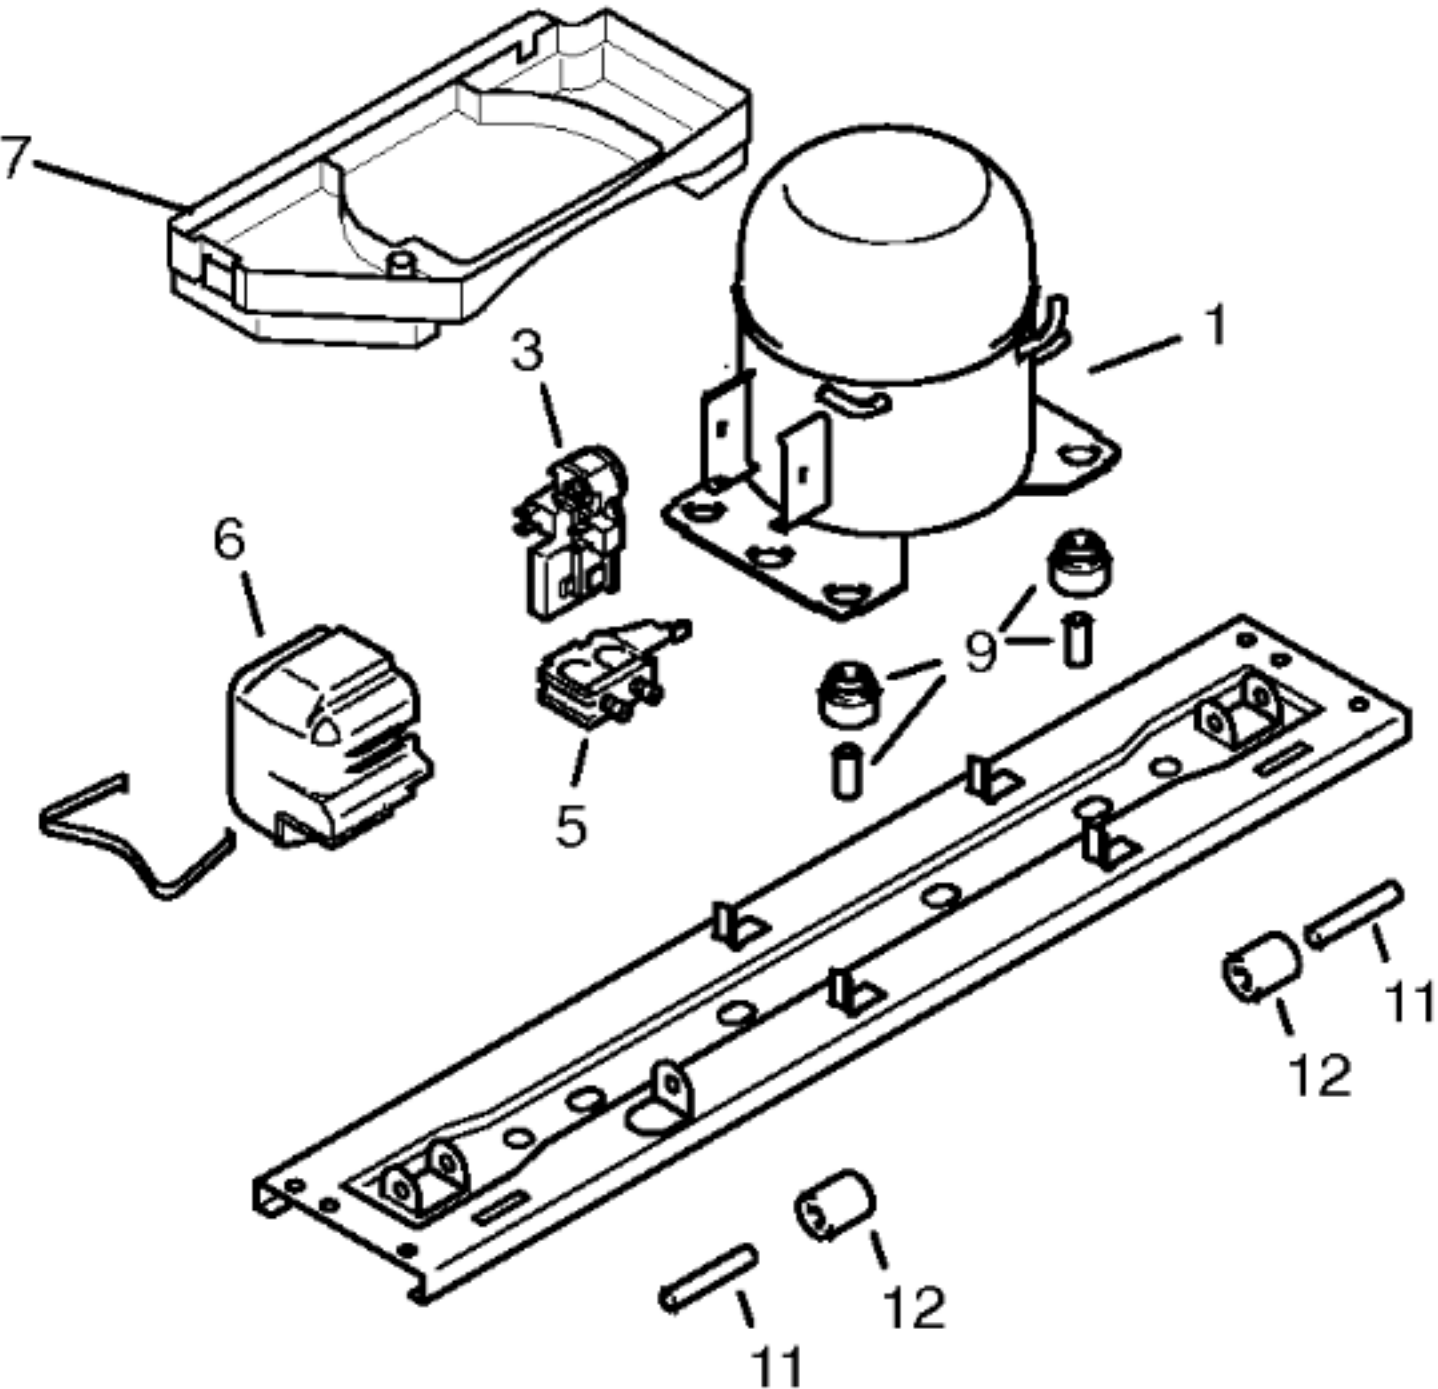

Pos.	V01,V02		
	Matsushita		
	DC125E		
1	14 2131		
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7	09 6212		
8			
9	05 0166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur		Matsushita				
Typ/Type		DC125E				
Förderleistung/Delivery/Débit		2246				
Anlaufstrom/Starting current/Cour de démarrageA		9,2				
Widerstand/Resistance/Résistance Ha/main/prinΩ		12,1				
Hi/aux Ω		13,8				
Temp.-Regler/Thermostat		Elektronisch				
Typ/Type		EIN AUS				
Regelstellung/Position		-15 -16				
Schaltwerte/Switching values "warm"		-19 -20				
Valeurs de commutation "kalt"		-23 -24				
"alarm"		-9 -14				
Füllmenge/Fill.quantity/Charge R600a		*				
Anschlußwert/Conn.load/Puiss. connectée W		120				
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung		
Widerstand/Resistance/Résistance Ω		288		240		
Leistung/Power/Puissance W		200		24		
Ventilator/Blower/Ventilateur		560				
Widerstand/Resistance/Résistance Ω						
Raumtemperaturfühler 2%		C	K	C	k	
		+10	9,9	-18	43,3	
		+ 5	12,7	-22	54,6	
		+ 0	16,3	-26	69,4	
Widerstand NTC-Fühler 1%		°C	kΩ	°C	kΩ	°C kΩ
		-1	17,3	-15	36,5	-20 48,6
		-9	26,2	-16	38,8	-23 58,1
		-14	34,5	-19	45,9	-24 61,6
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance Ω						
Spannung/Voltage/Tension V						

* siehe Typenschild