

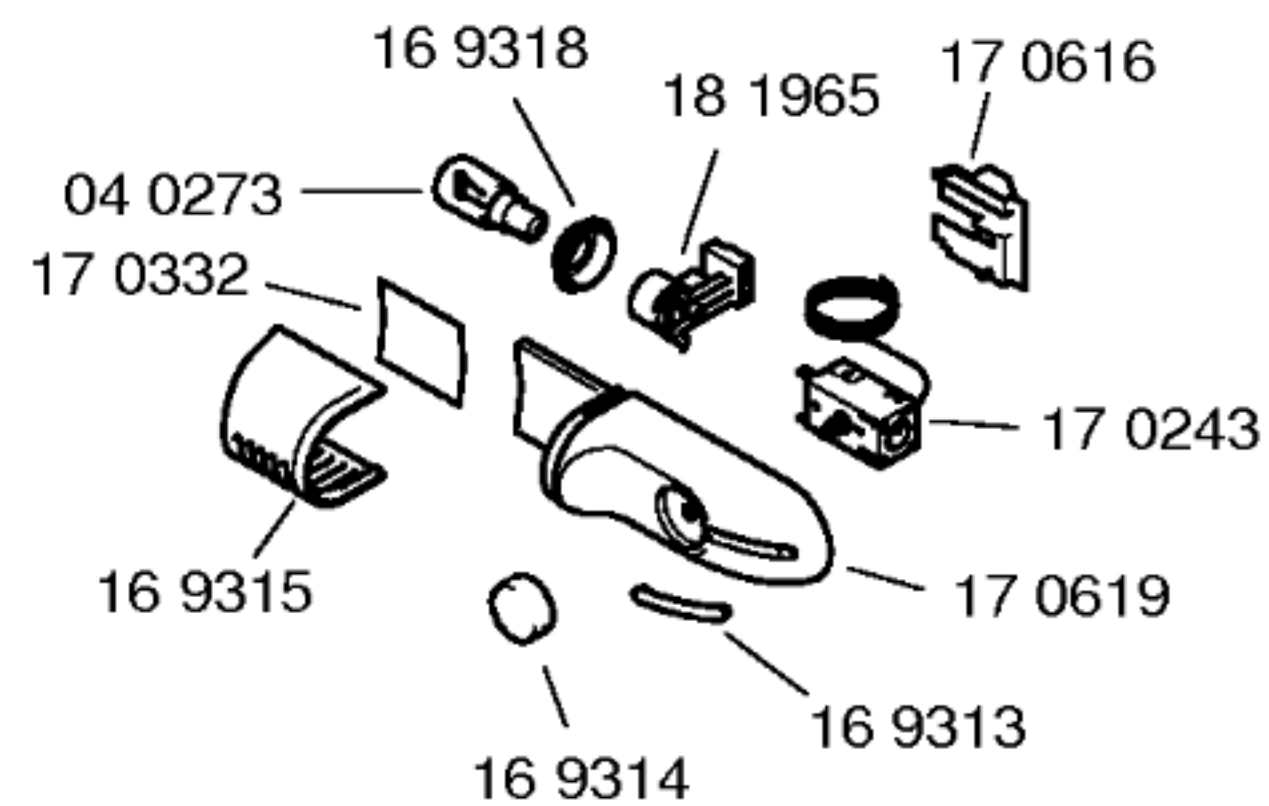


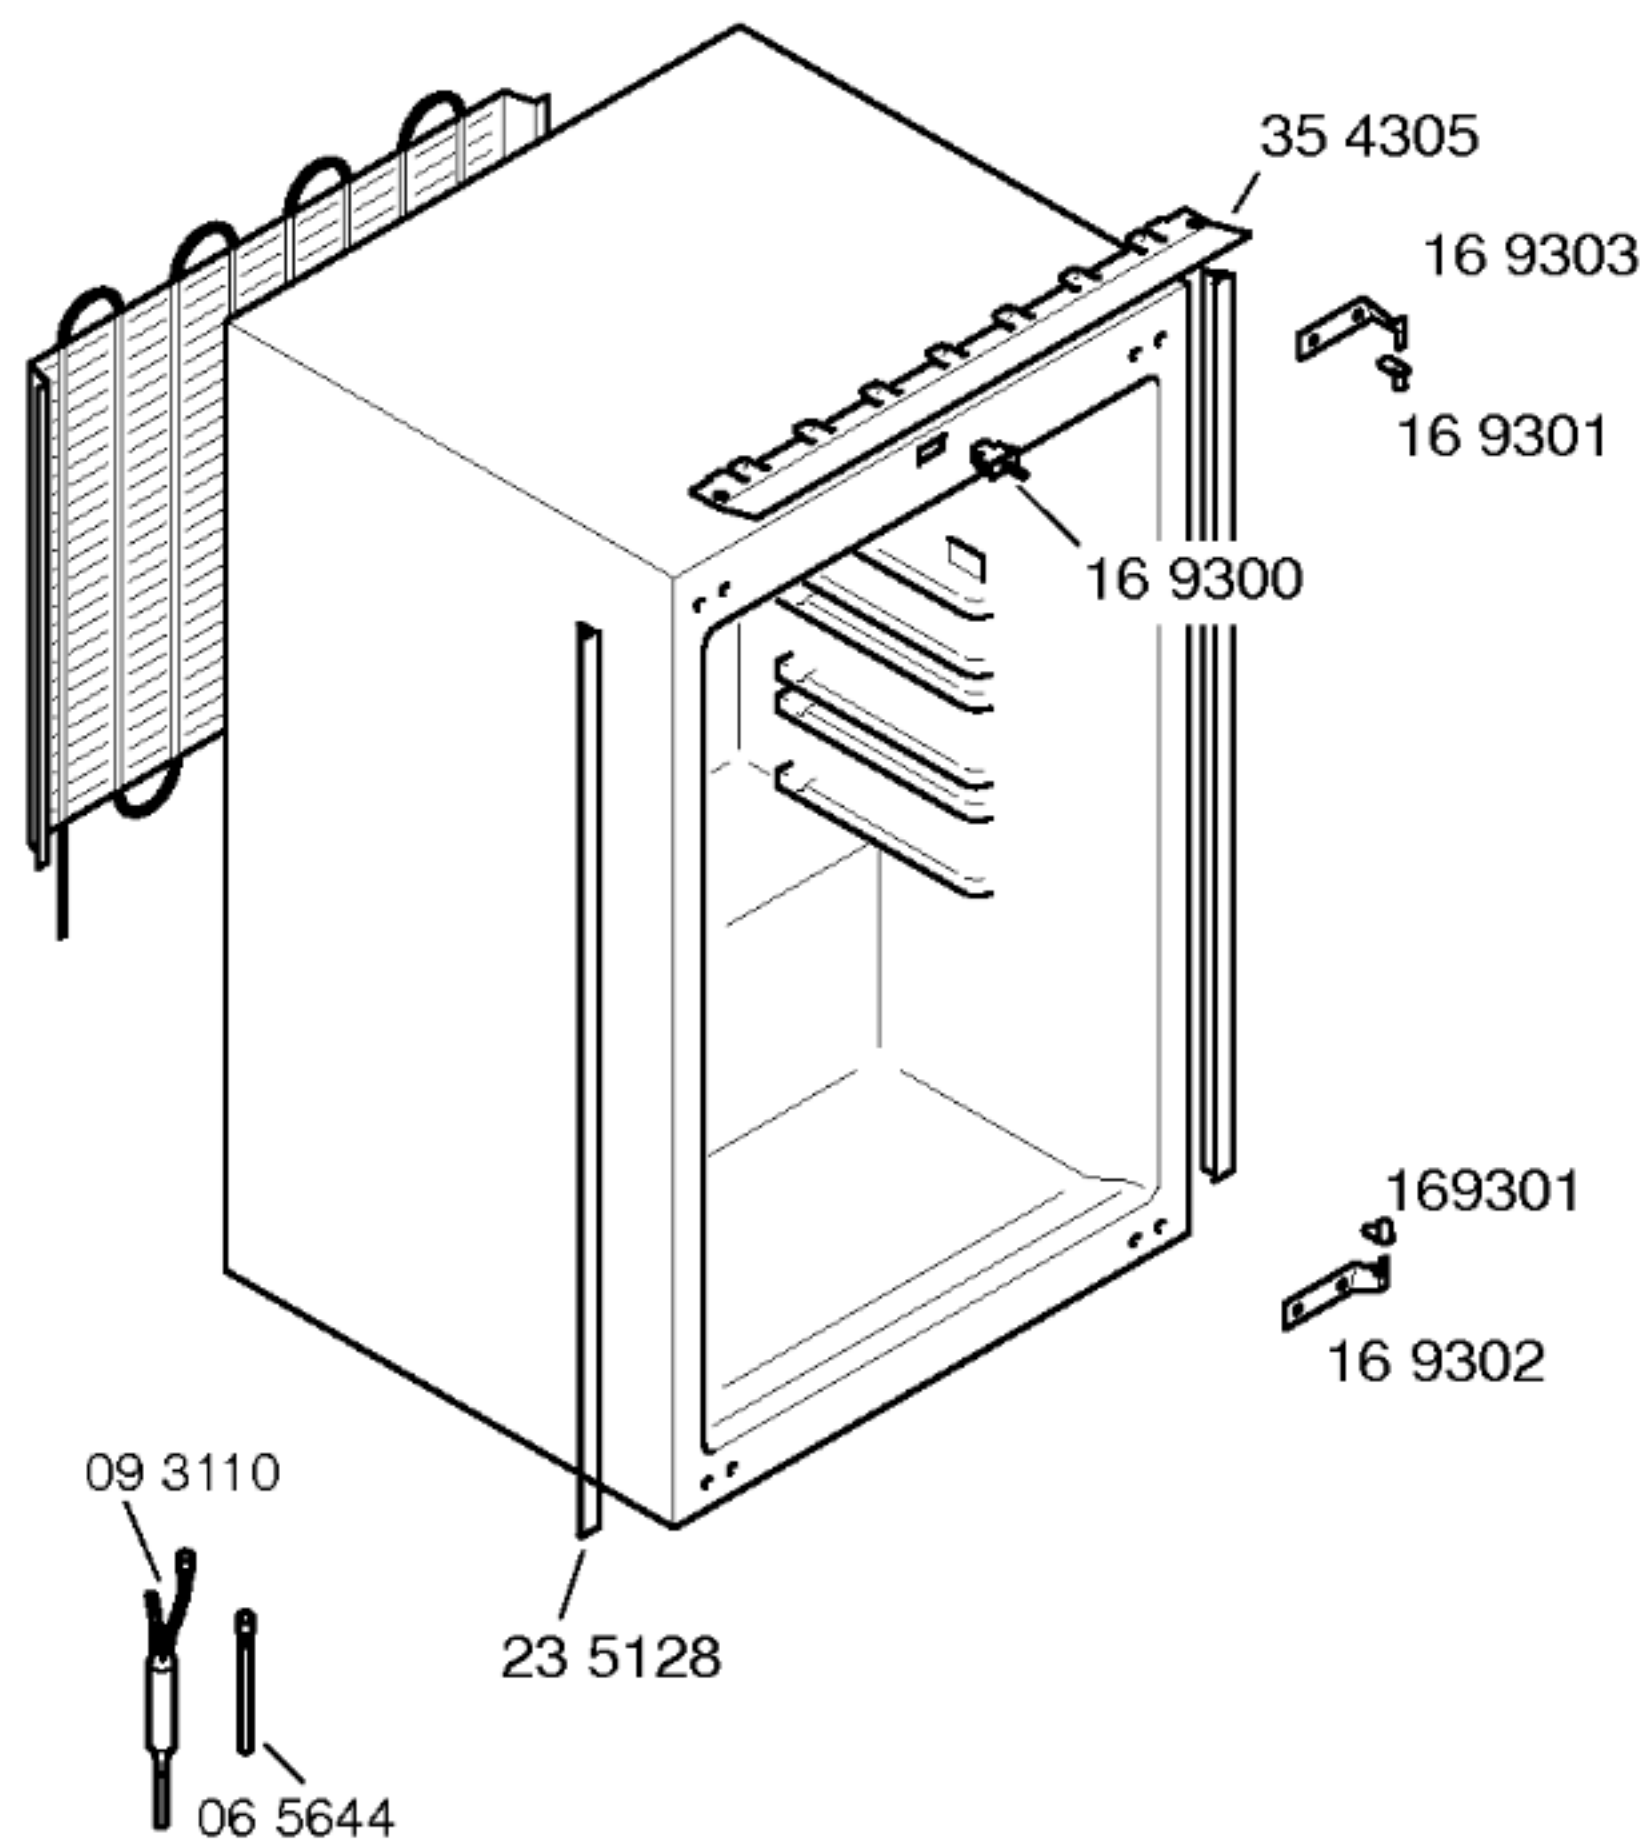


Gebrauchsanweisung
52 8708
(D,GB,F,I,NL)

Montageanleitung
52 3227
(D,GB,F,I,NL,DK,N,
SF,S,P)

Beistellsatz
26 6056

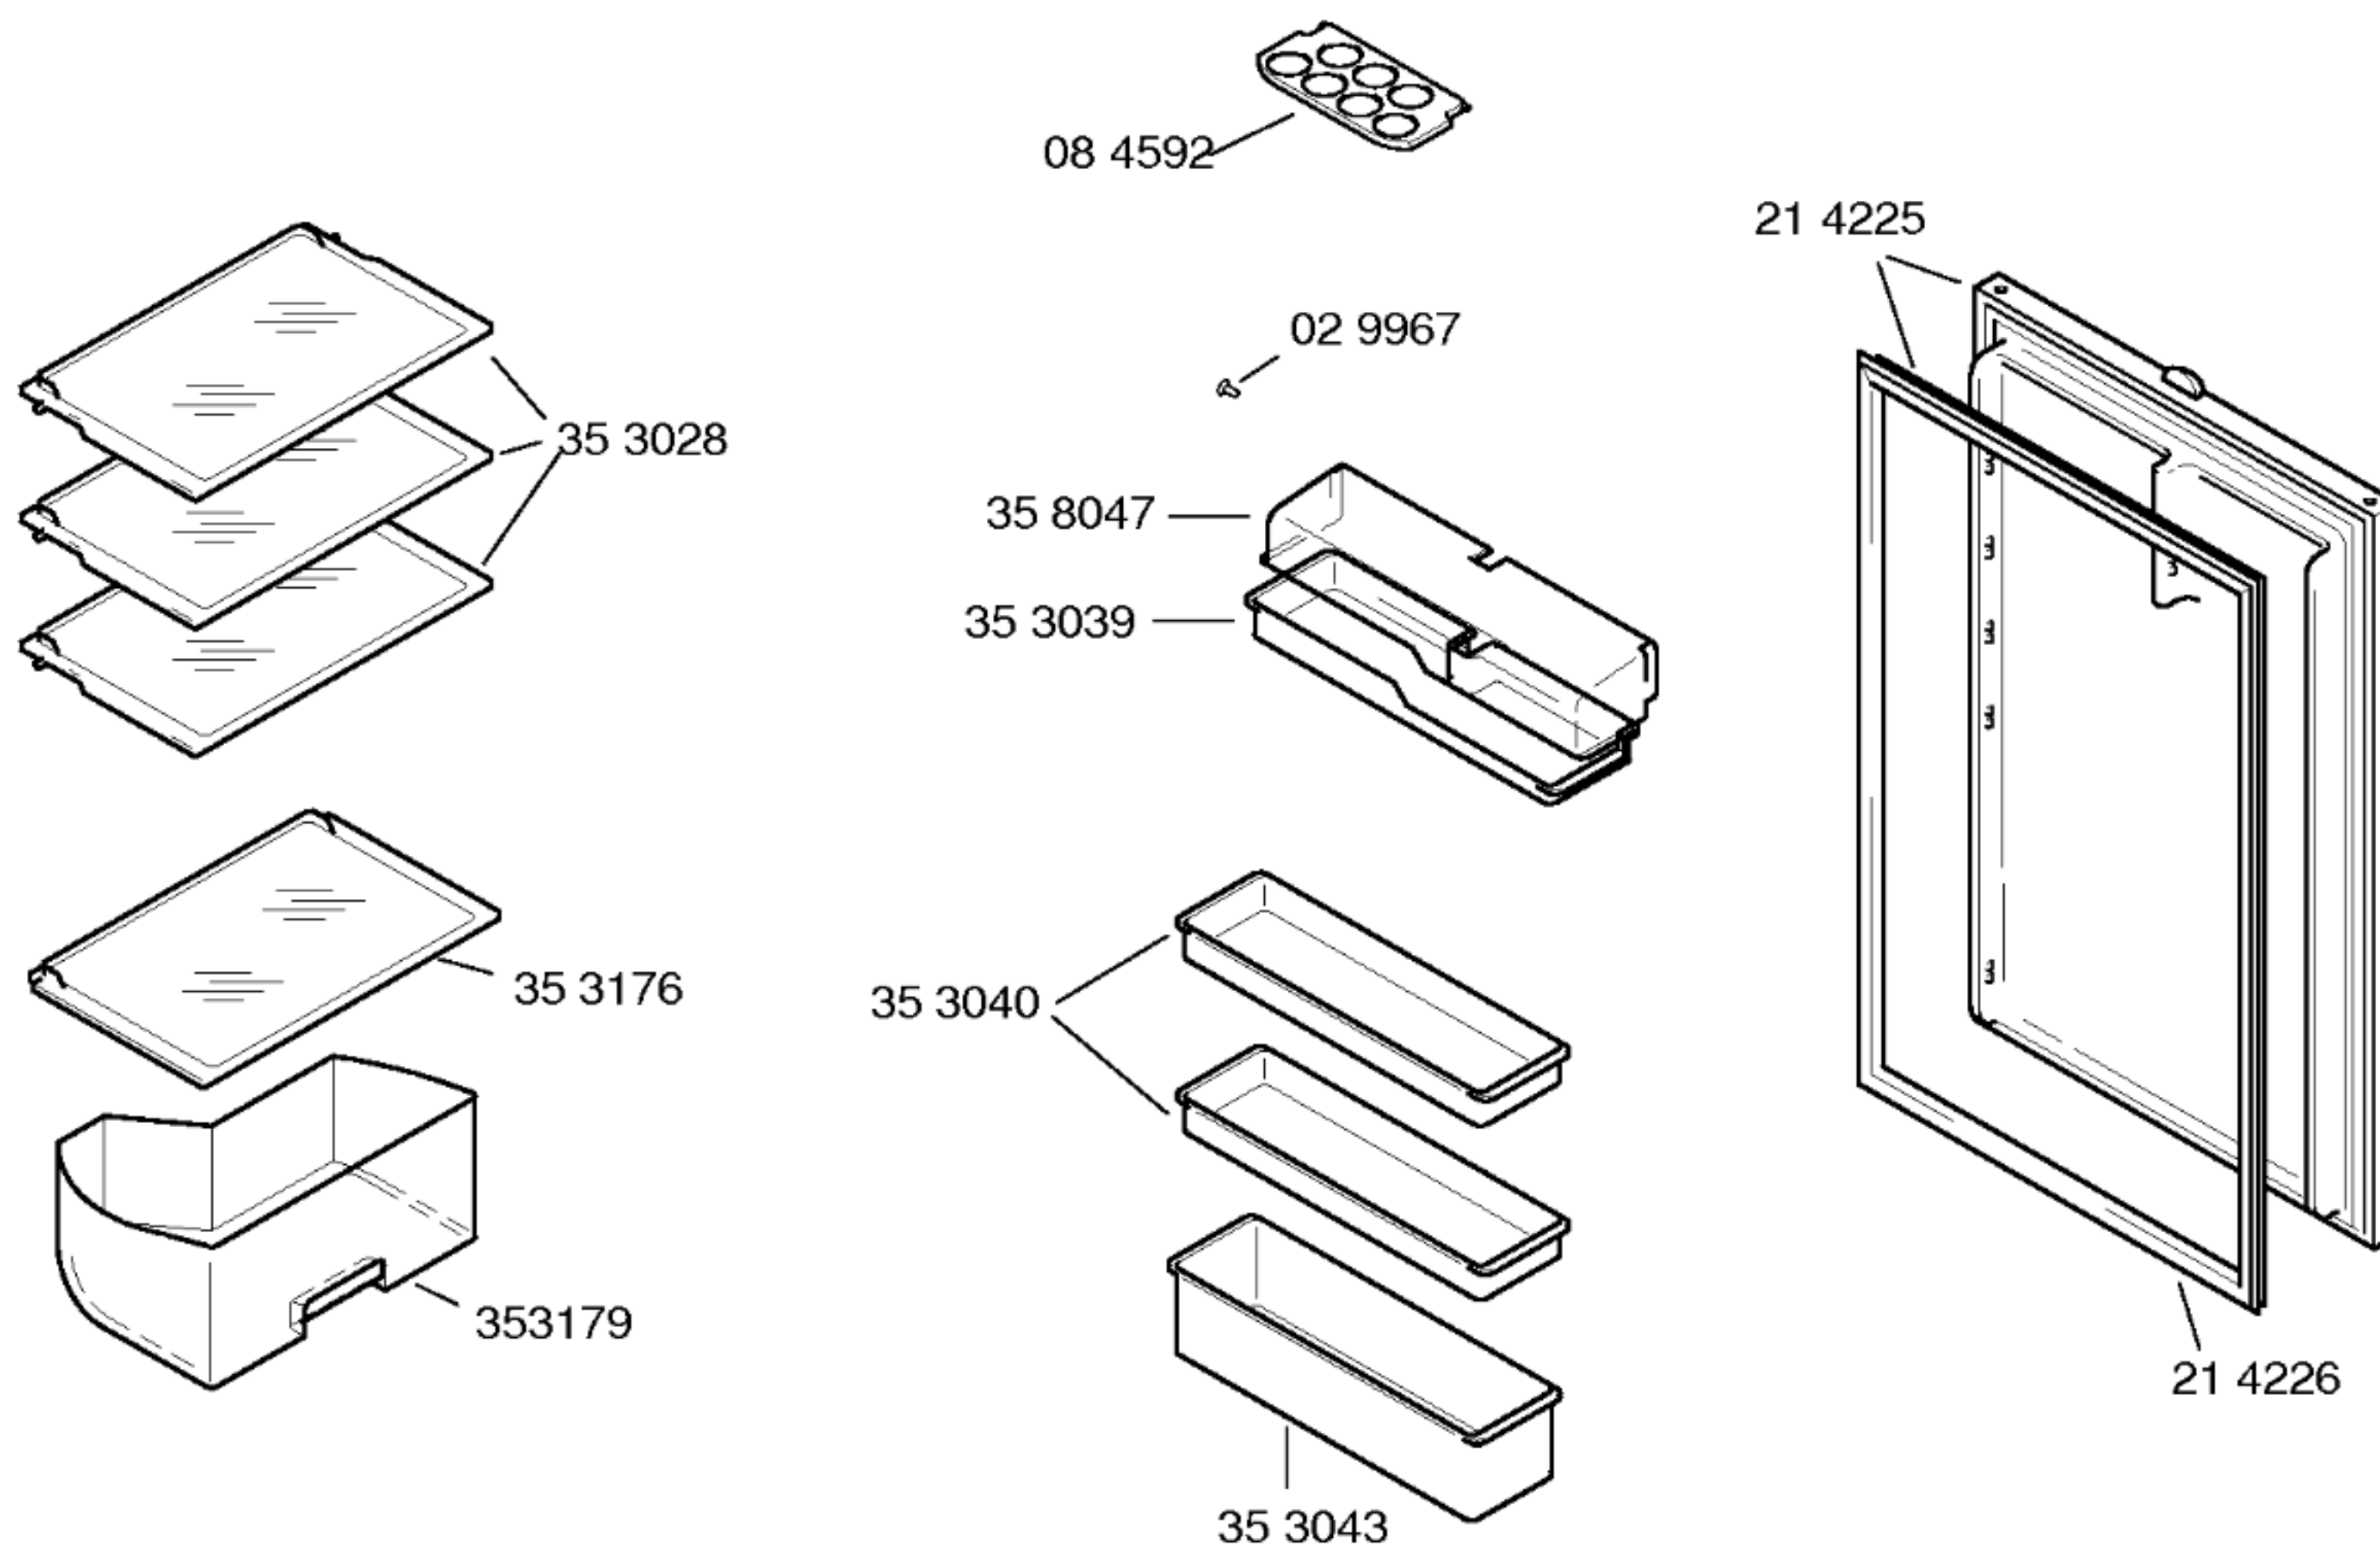

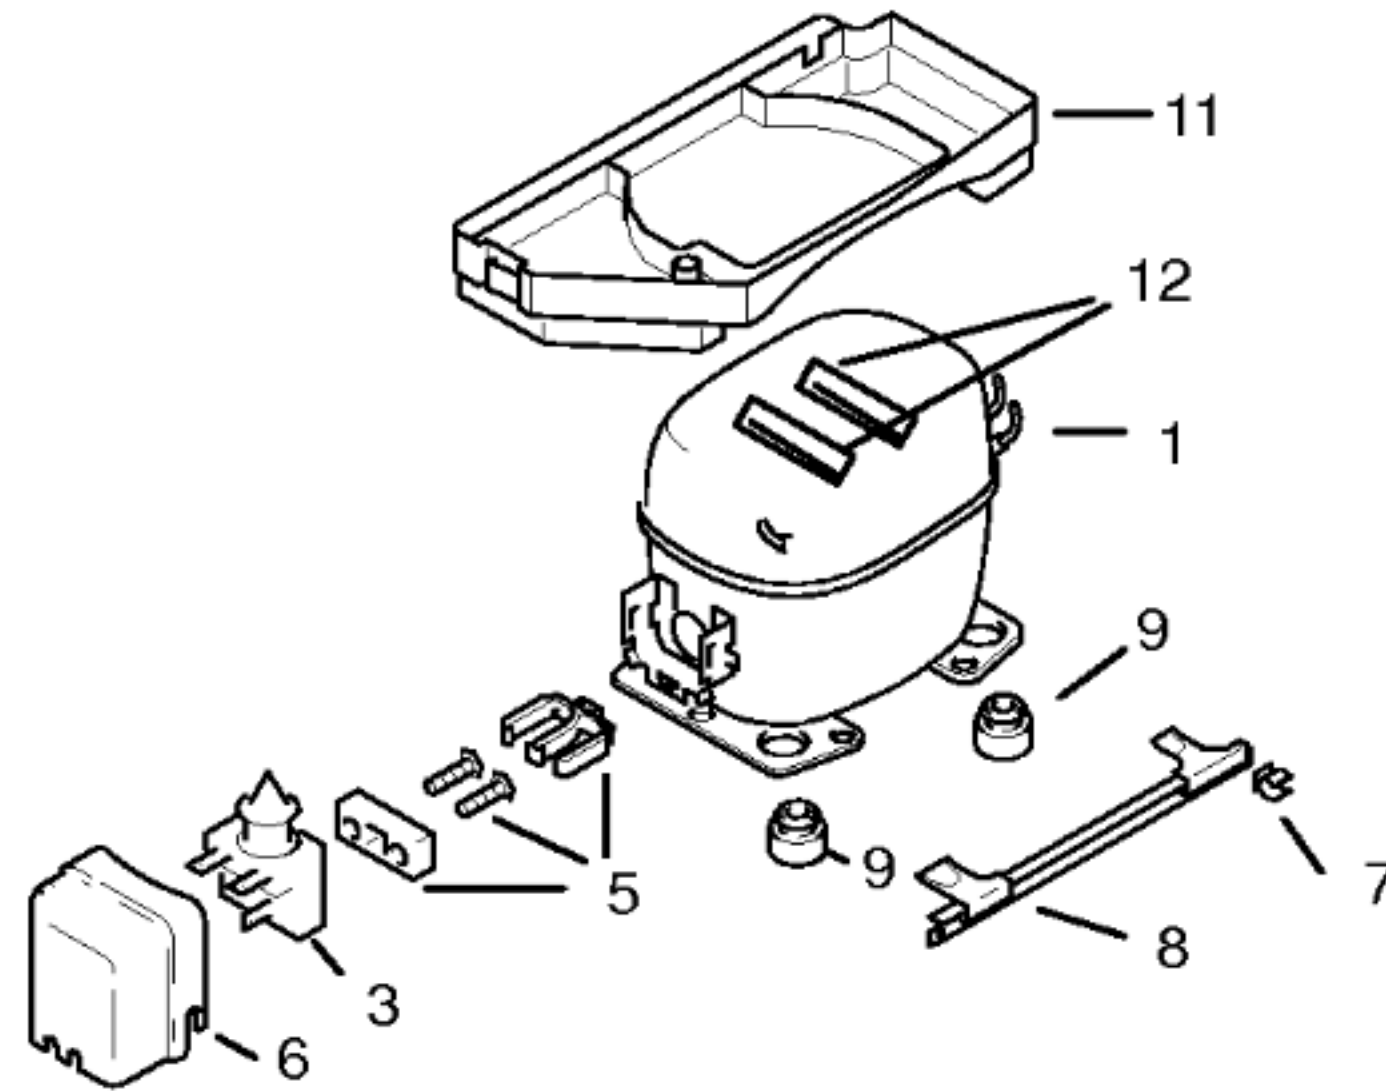

	V01	V02	
Pos.	Danfoss TLES4K	Goldstar NDA52NAEM	
1	14 1663	14 2206	
2			
3	15 1055	17 0743	
4			
5	15 0760	17 0745	
6	15 1072	17 0744	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	050166	050166	
10			
11	36 5099	36 5099	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Matsushita
Typ/Type		TLES4K	ESS 60E
Förderleistung/Delivery/Débit	l/h	698	1076
Anlaufstrom/Starting current/Cour de démarrage	A	6,9	5,6
Widerstand/Resistance/Résistance Ha/main/prin	W	29,0	30,6
Hi/aux	W	19,0	26,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K59	
Regelstellung/Position		kalt	warm
Schaltwerte/Switching values	"warm"	+5,0	+5,0
Valeurs de commutation	"kalt"	-25,0	-10,0
"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	44	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	W		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	W		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	W		
Spannung/Voltage/Tension	V		

* siehe Typenschild