

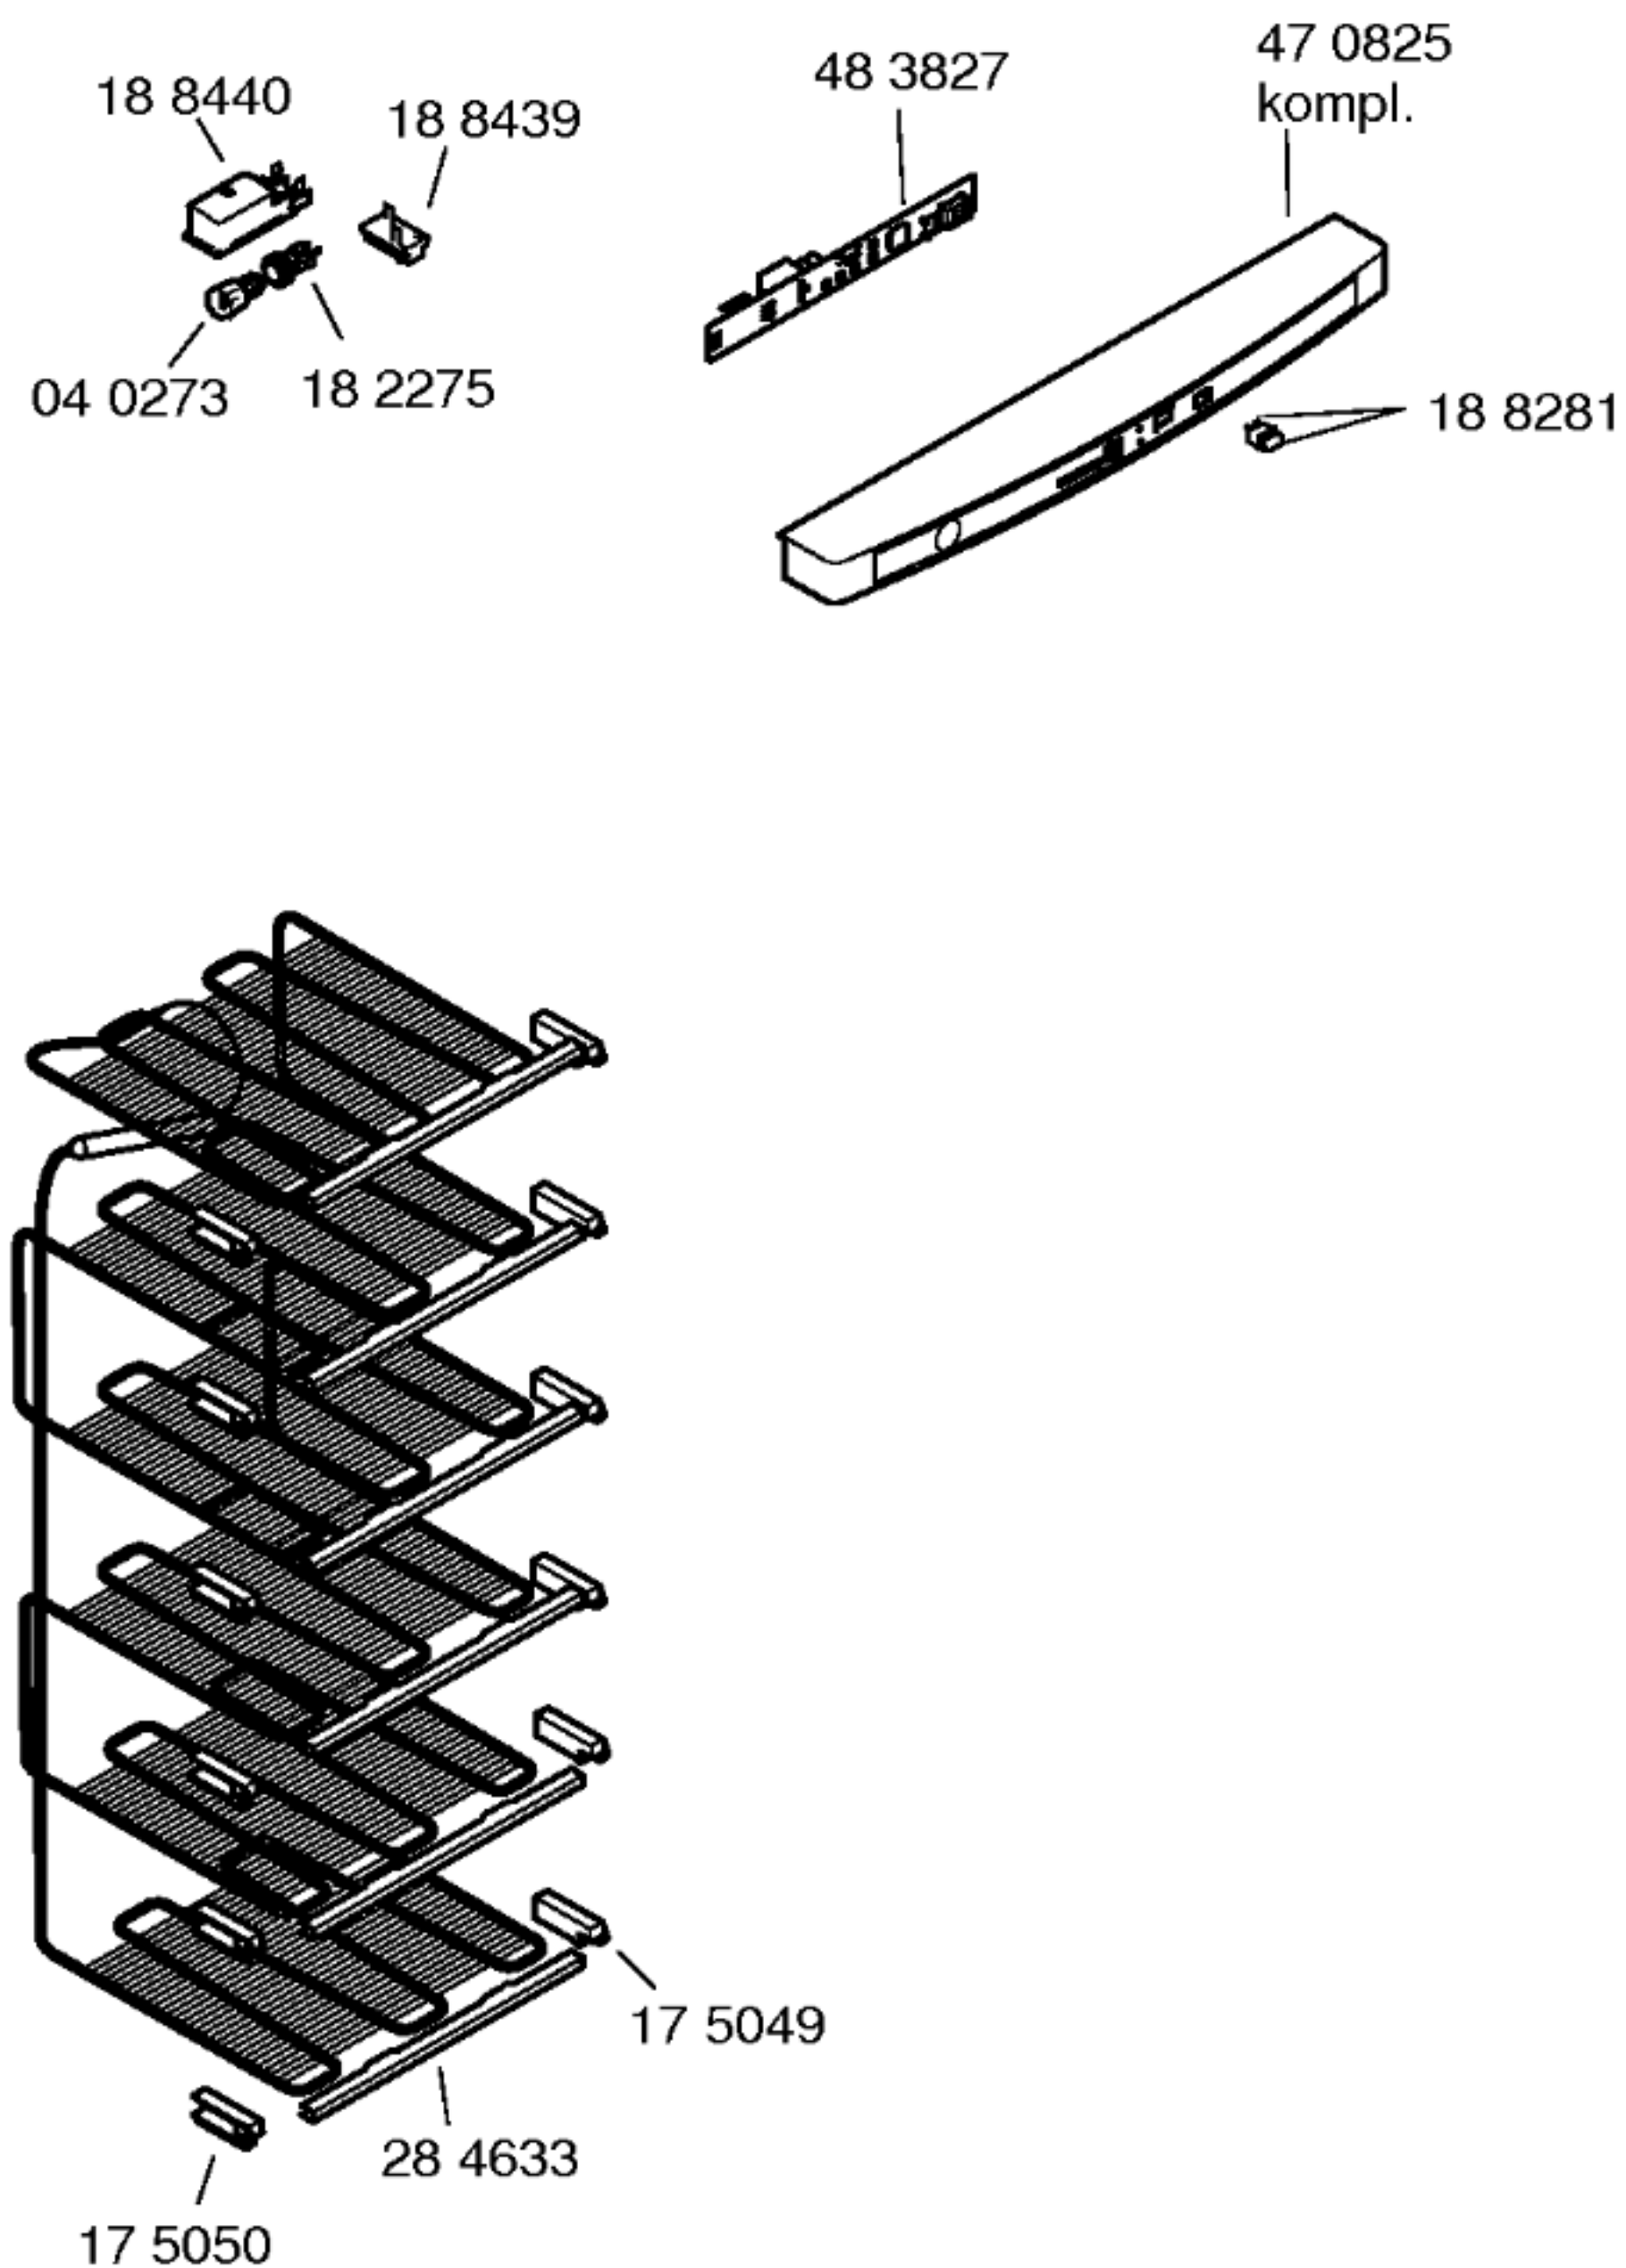


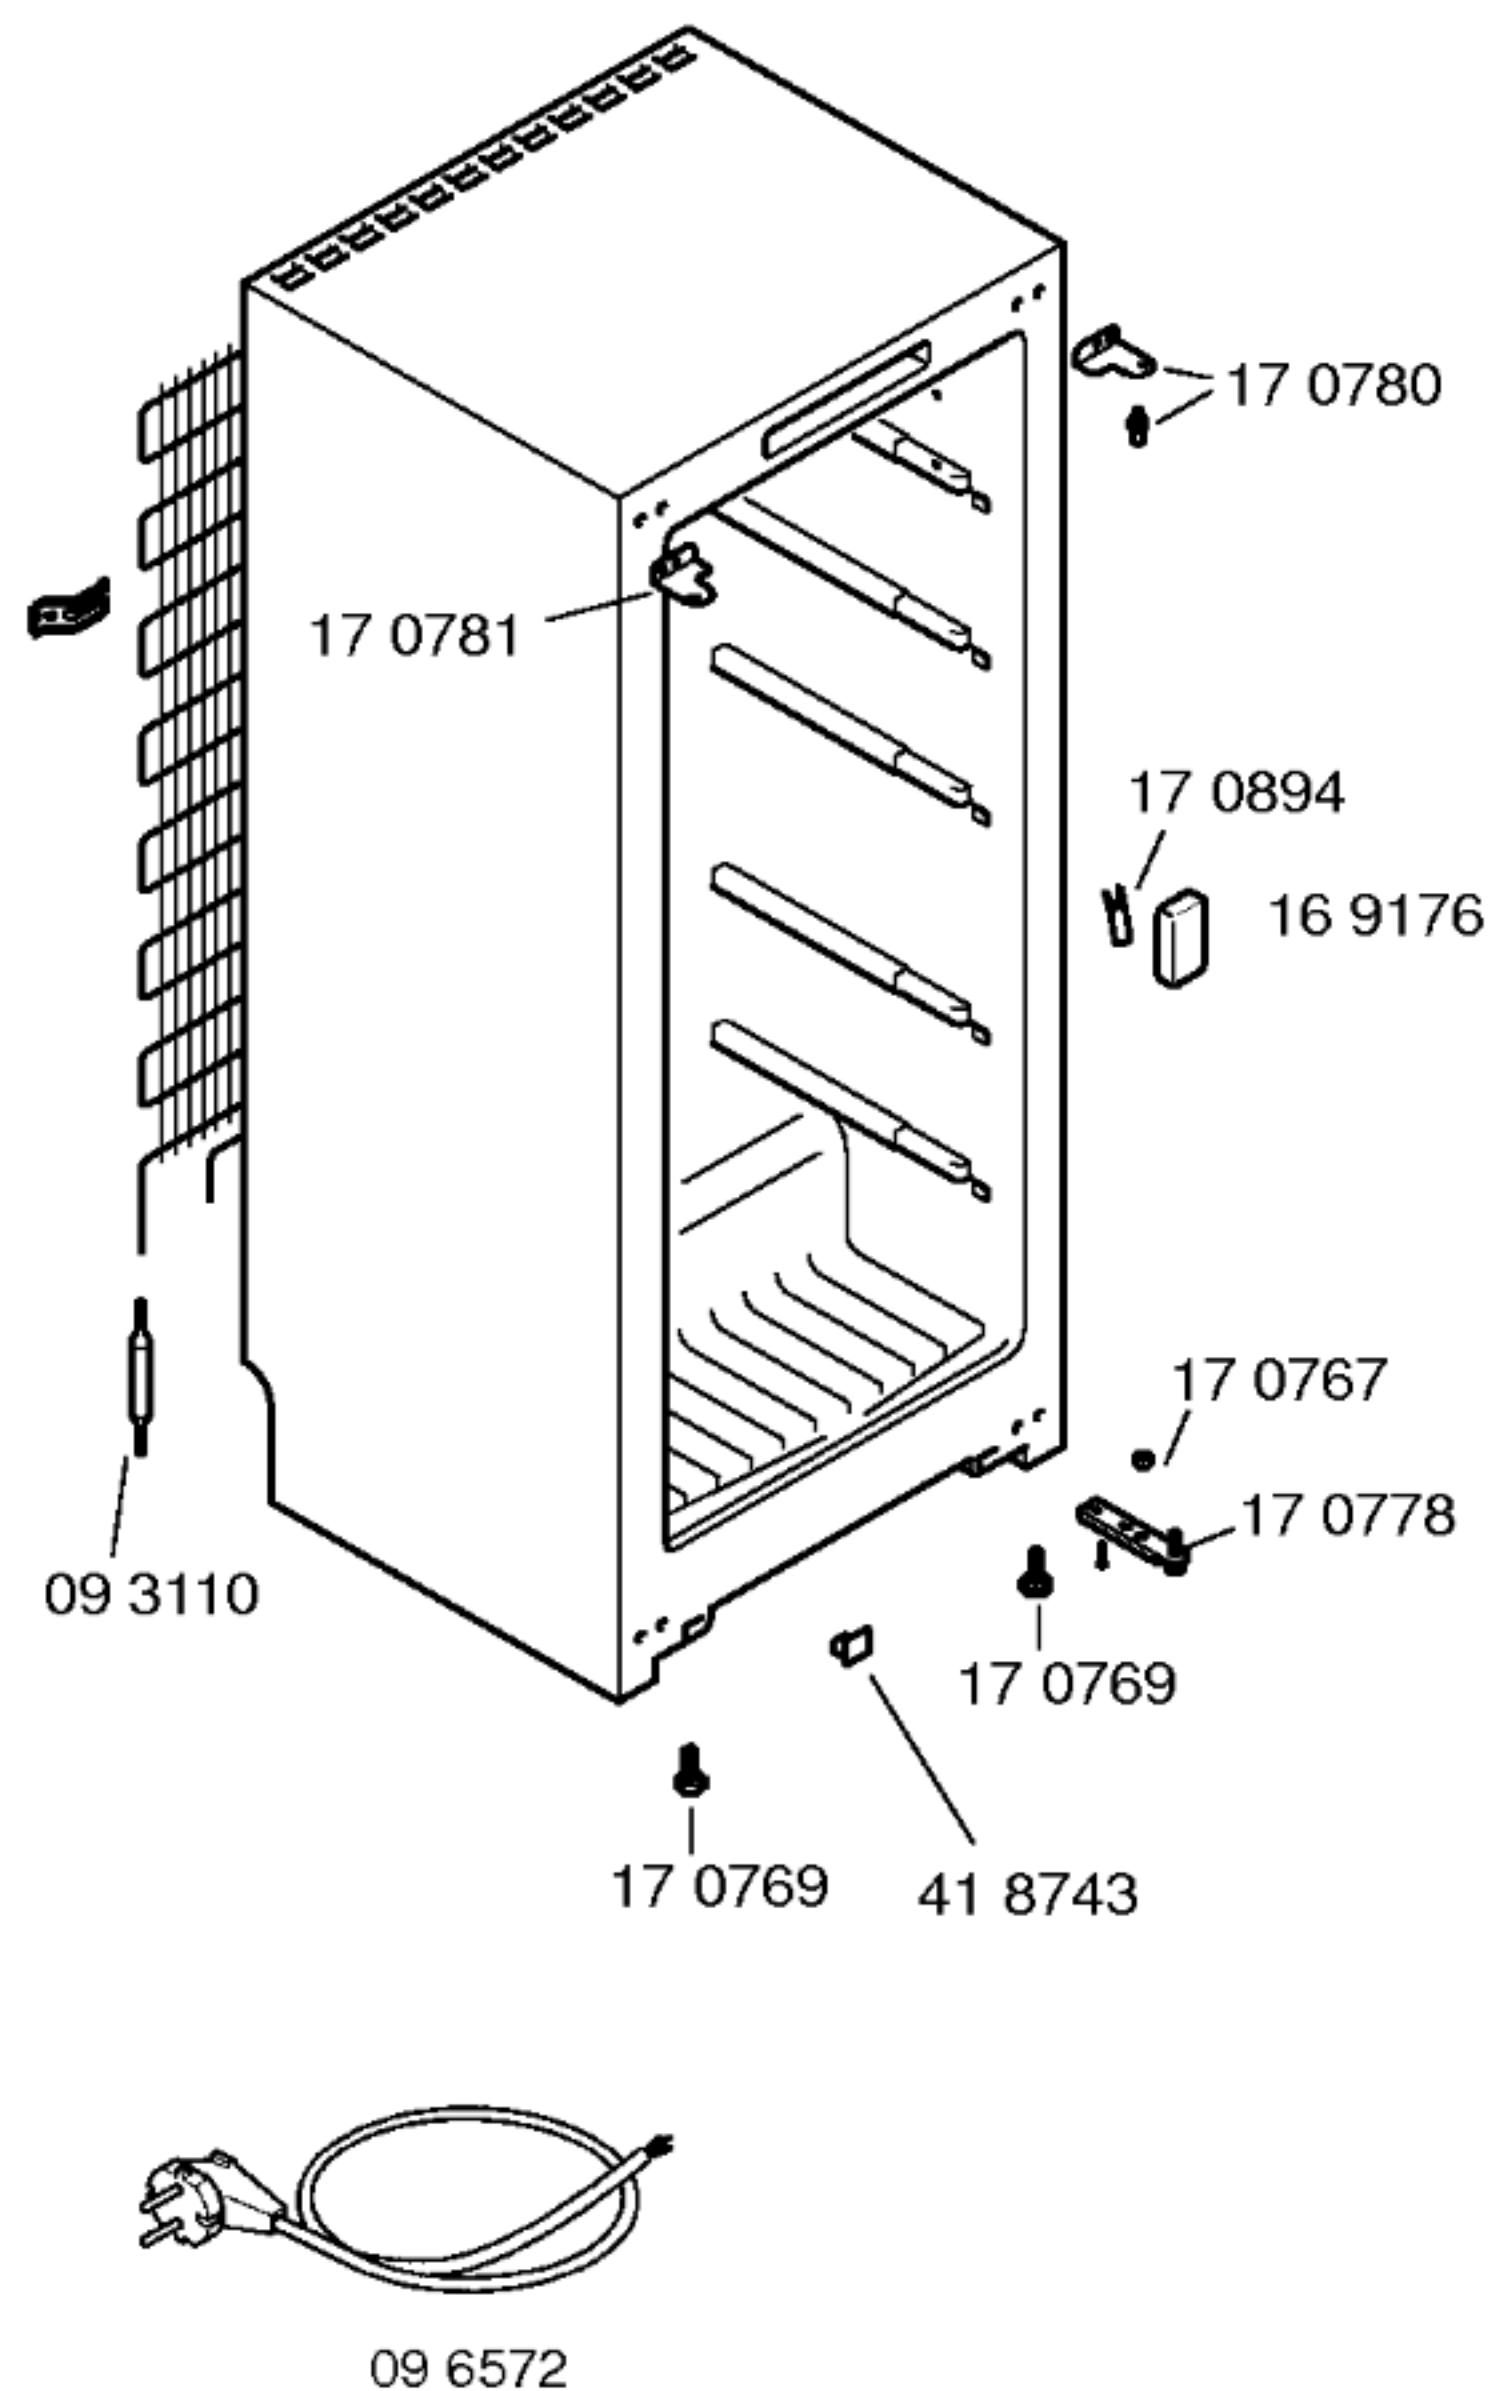


Gebrauchsanweisung
58 4698
(DE,EN,FR,IT,NL)
Montageanleitung
52 2772
Beistellsatz
26 5629


Side by Side
Beistellsatz zu KSR/KSK
48 1044

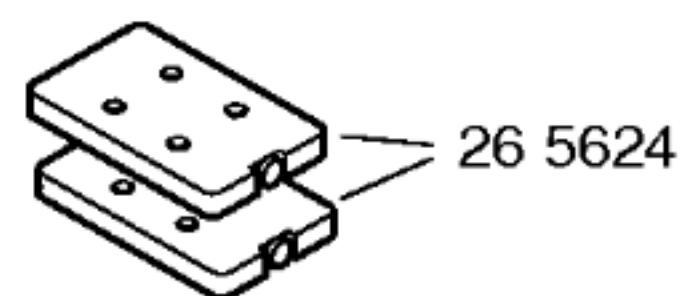

10 6850

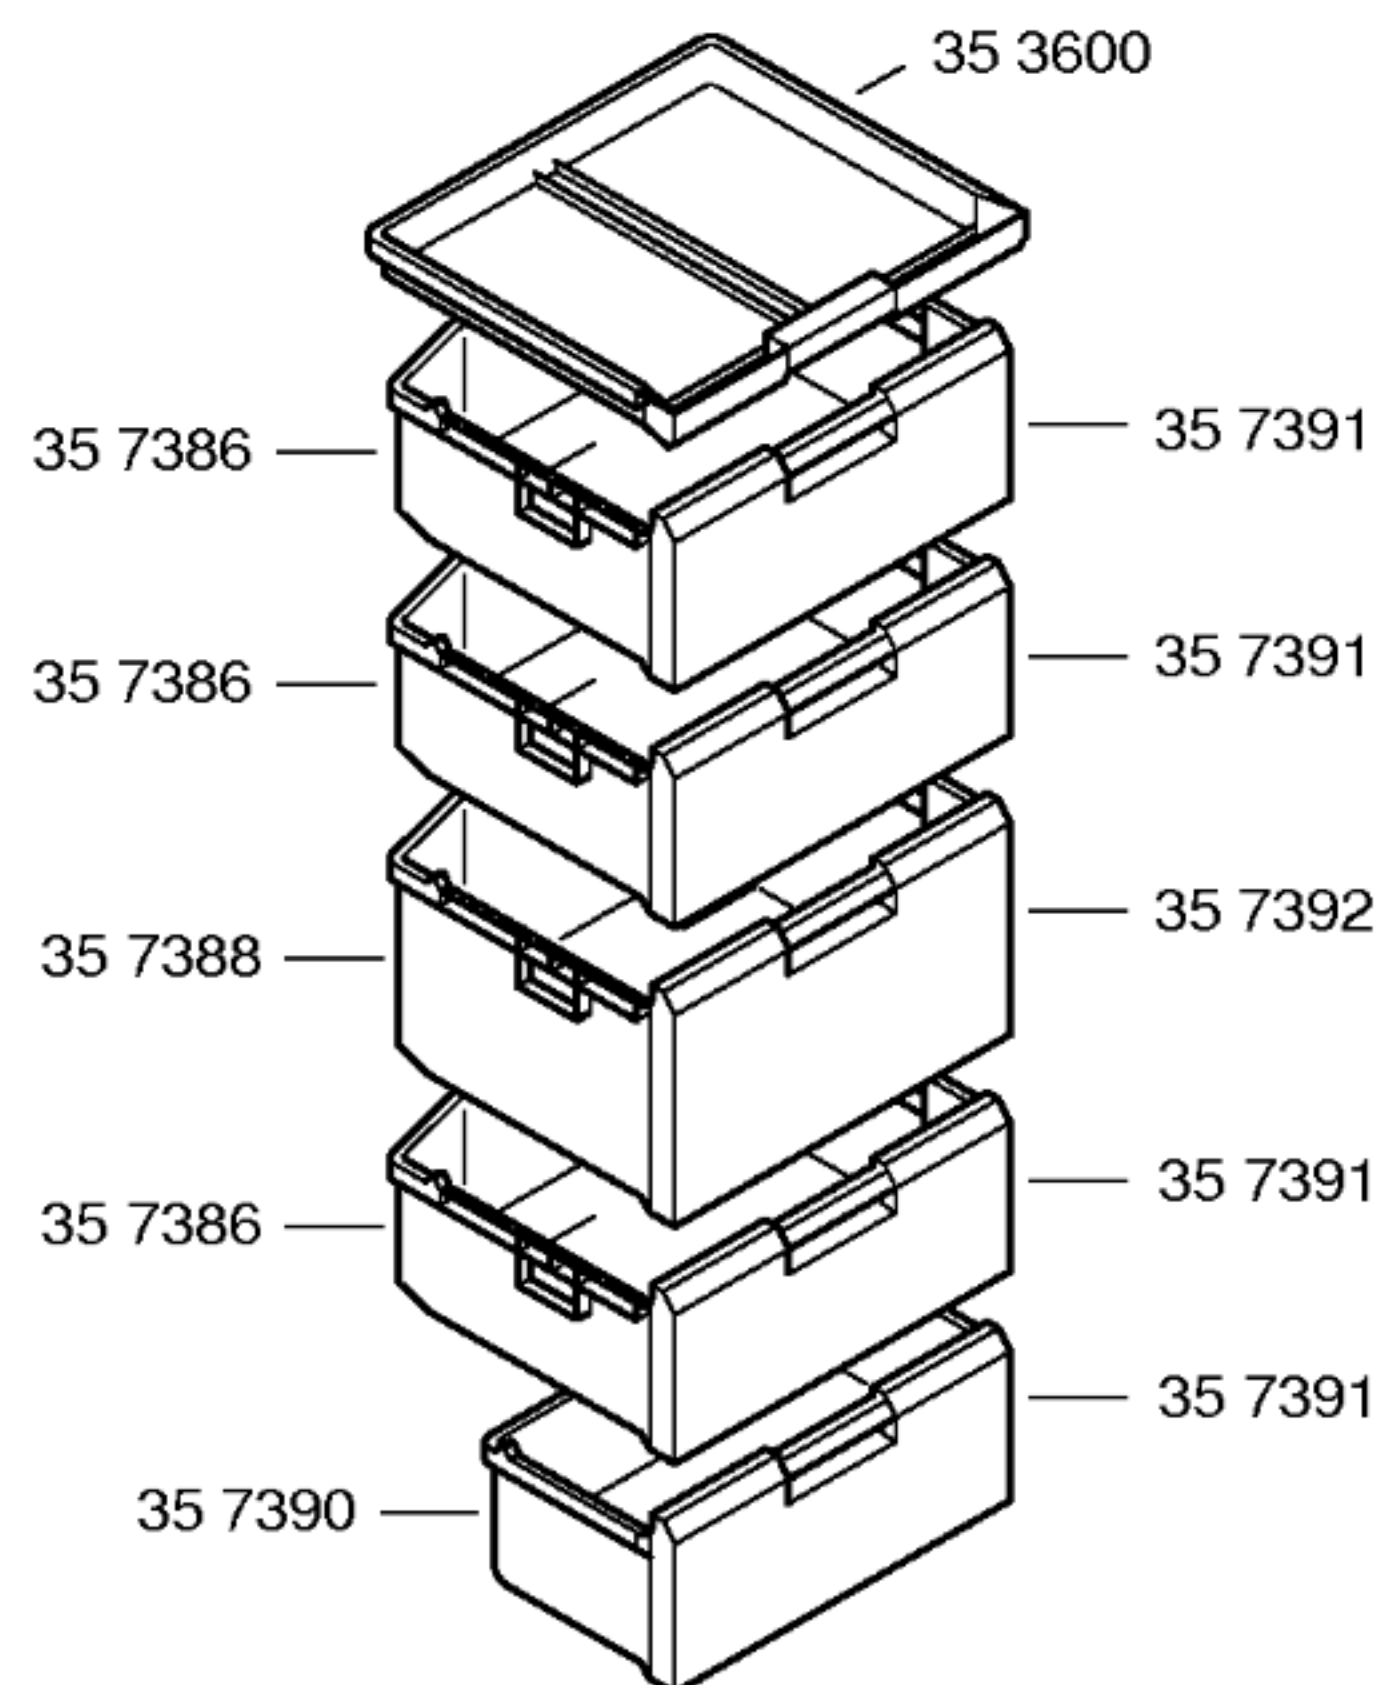


23 4986

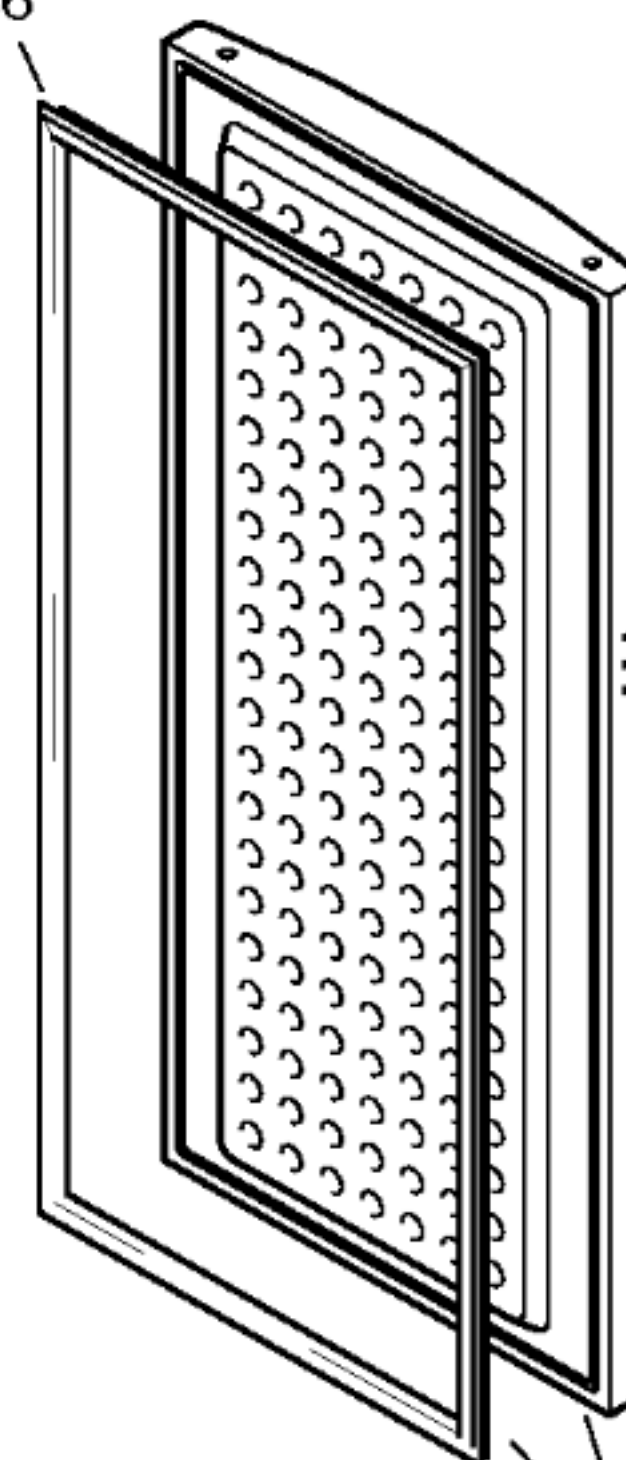

16 3237

48 1287

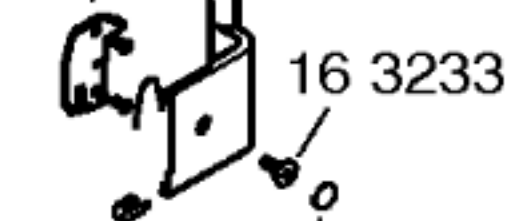


16 3234

16 3236

16 3240

23 4985

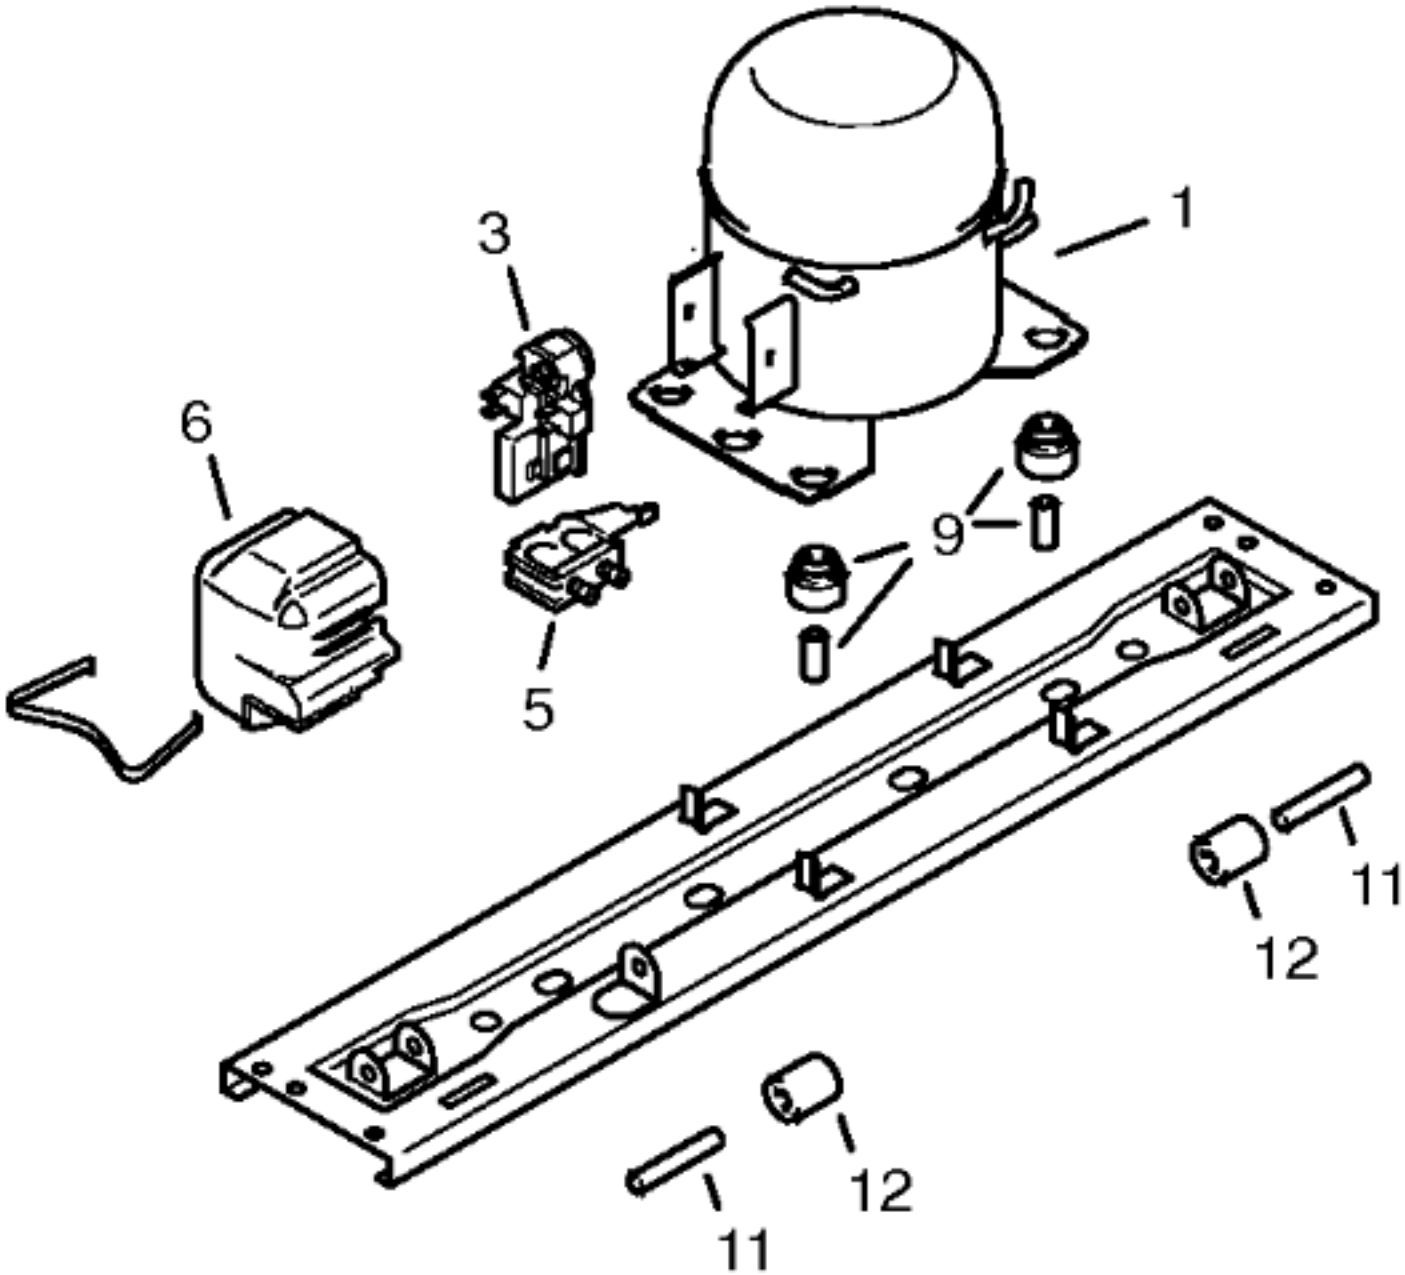

Pos.	V01			
	Matsushita			
	DC 110 E			
1	14 2130			
2				
3	17 2671			
4				
5	16 2549			
6	16 6782			
7				
8	21 4604			
9	05 0166			
10				
11	01 9017			
12	01 9016			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC 110 E		
Förderleistung/Delivery/Débit		l/h	1954	
Anlaufstrom/Starting current/Cour de démarrage		A	8,6	
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	14,2
		Hi/aux	Ω	12,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W	106	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18 43,31 ±1,10
		+5	12,70 ±0,18	-22 54,66 ±1,59
		0	16,33 ±0,16	-26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		