


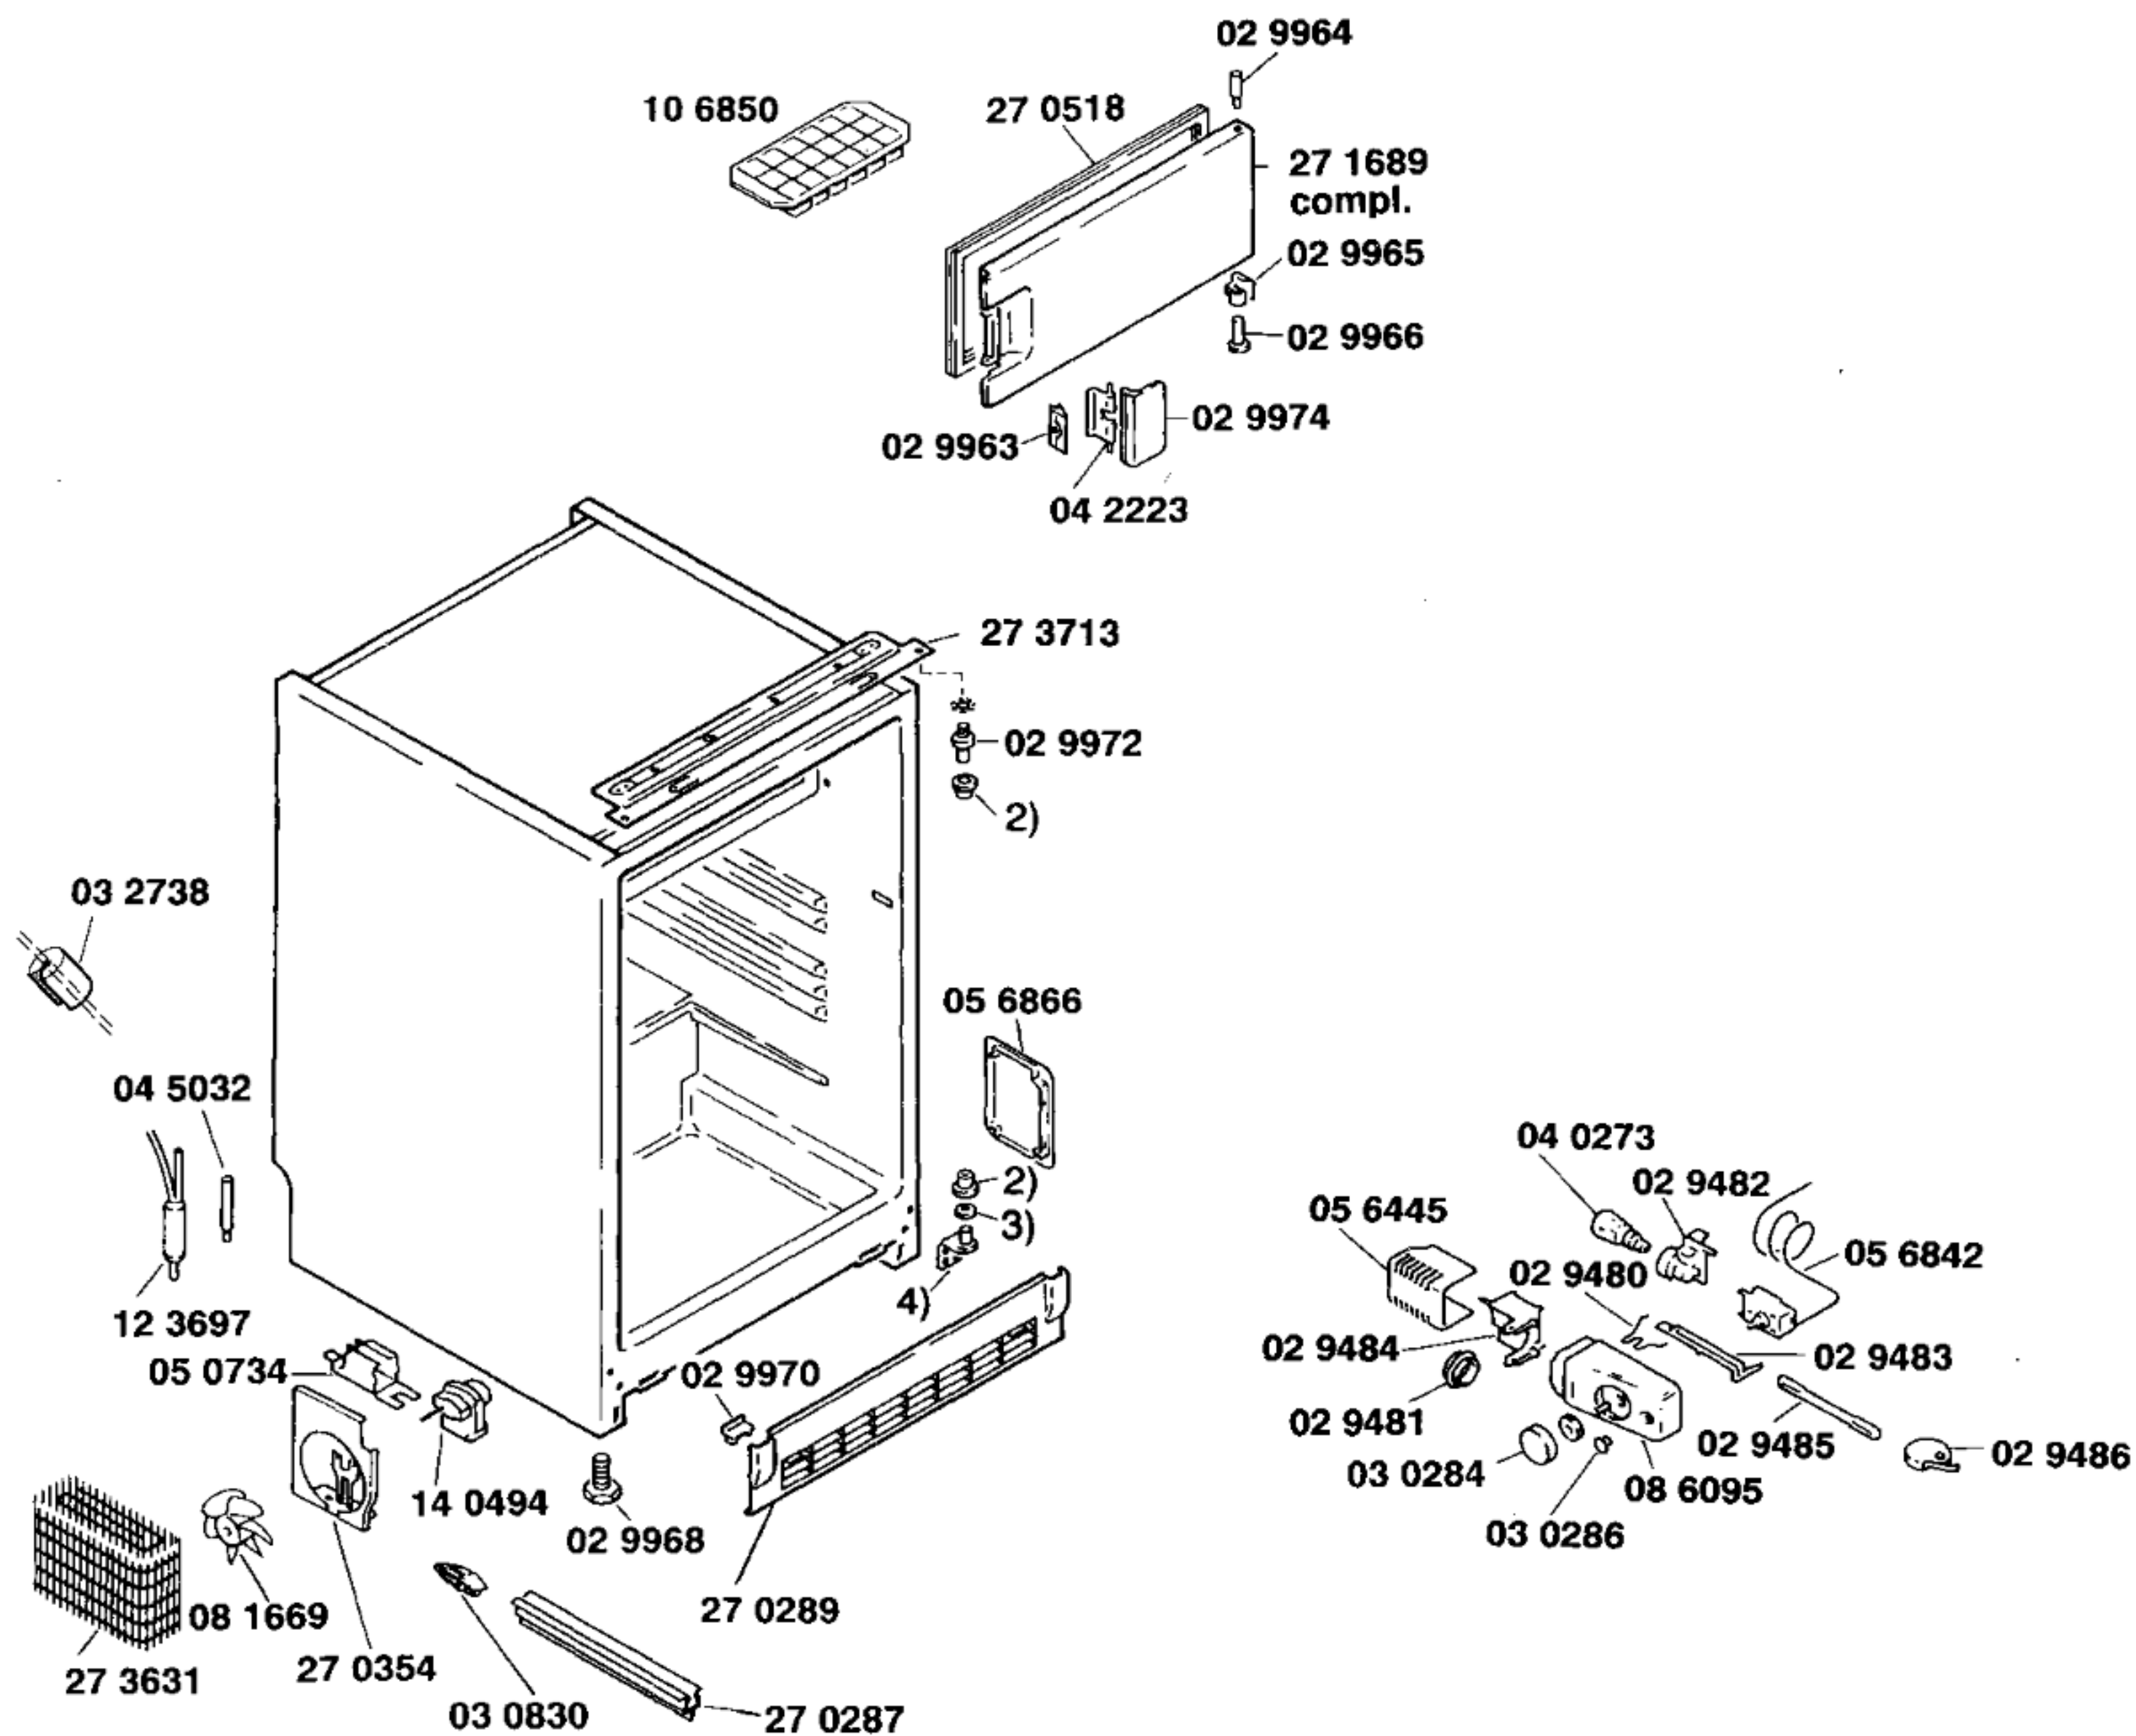

51 4331
Gebrauchsanweisung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

51 4009
Montageanweisung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

2) 01 9257


3) 02 0605

4) 02 9971

Zubehör:

Dekorrahmen
Z4110A1,Alu
Z4110W1,weiss

Sockel
Z4510X0

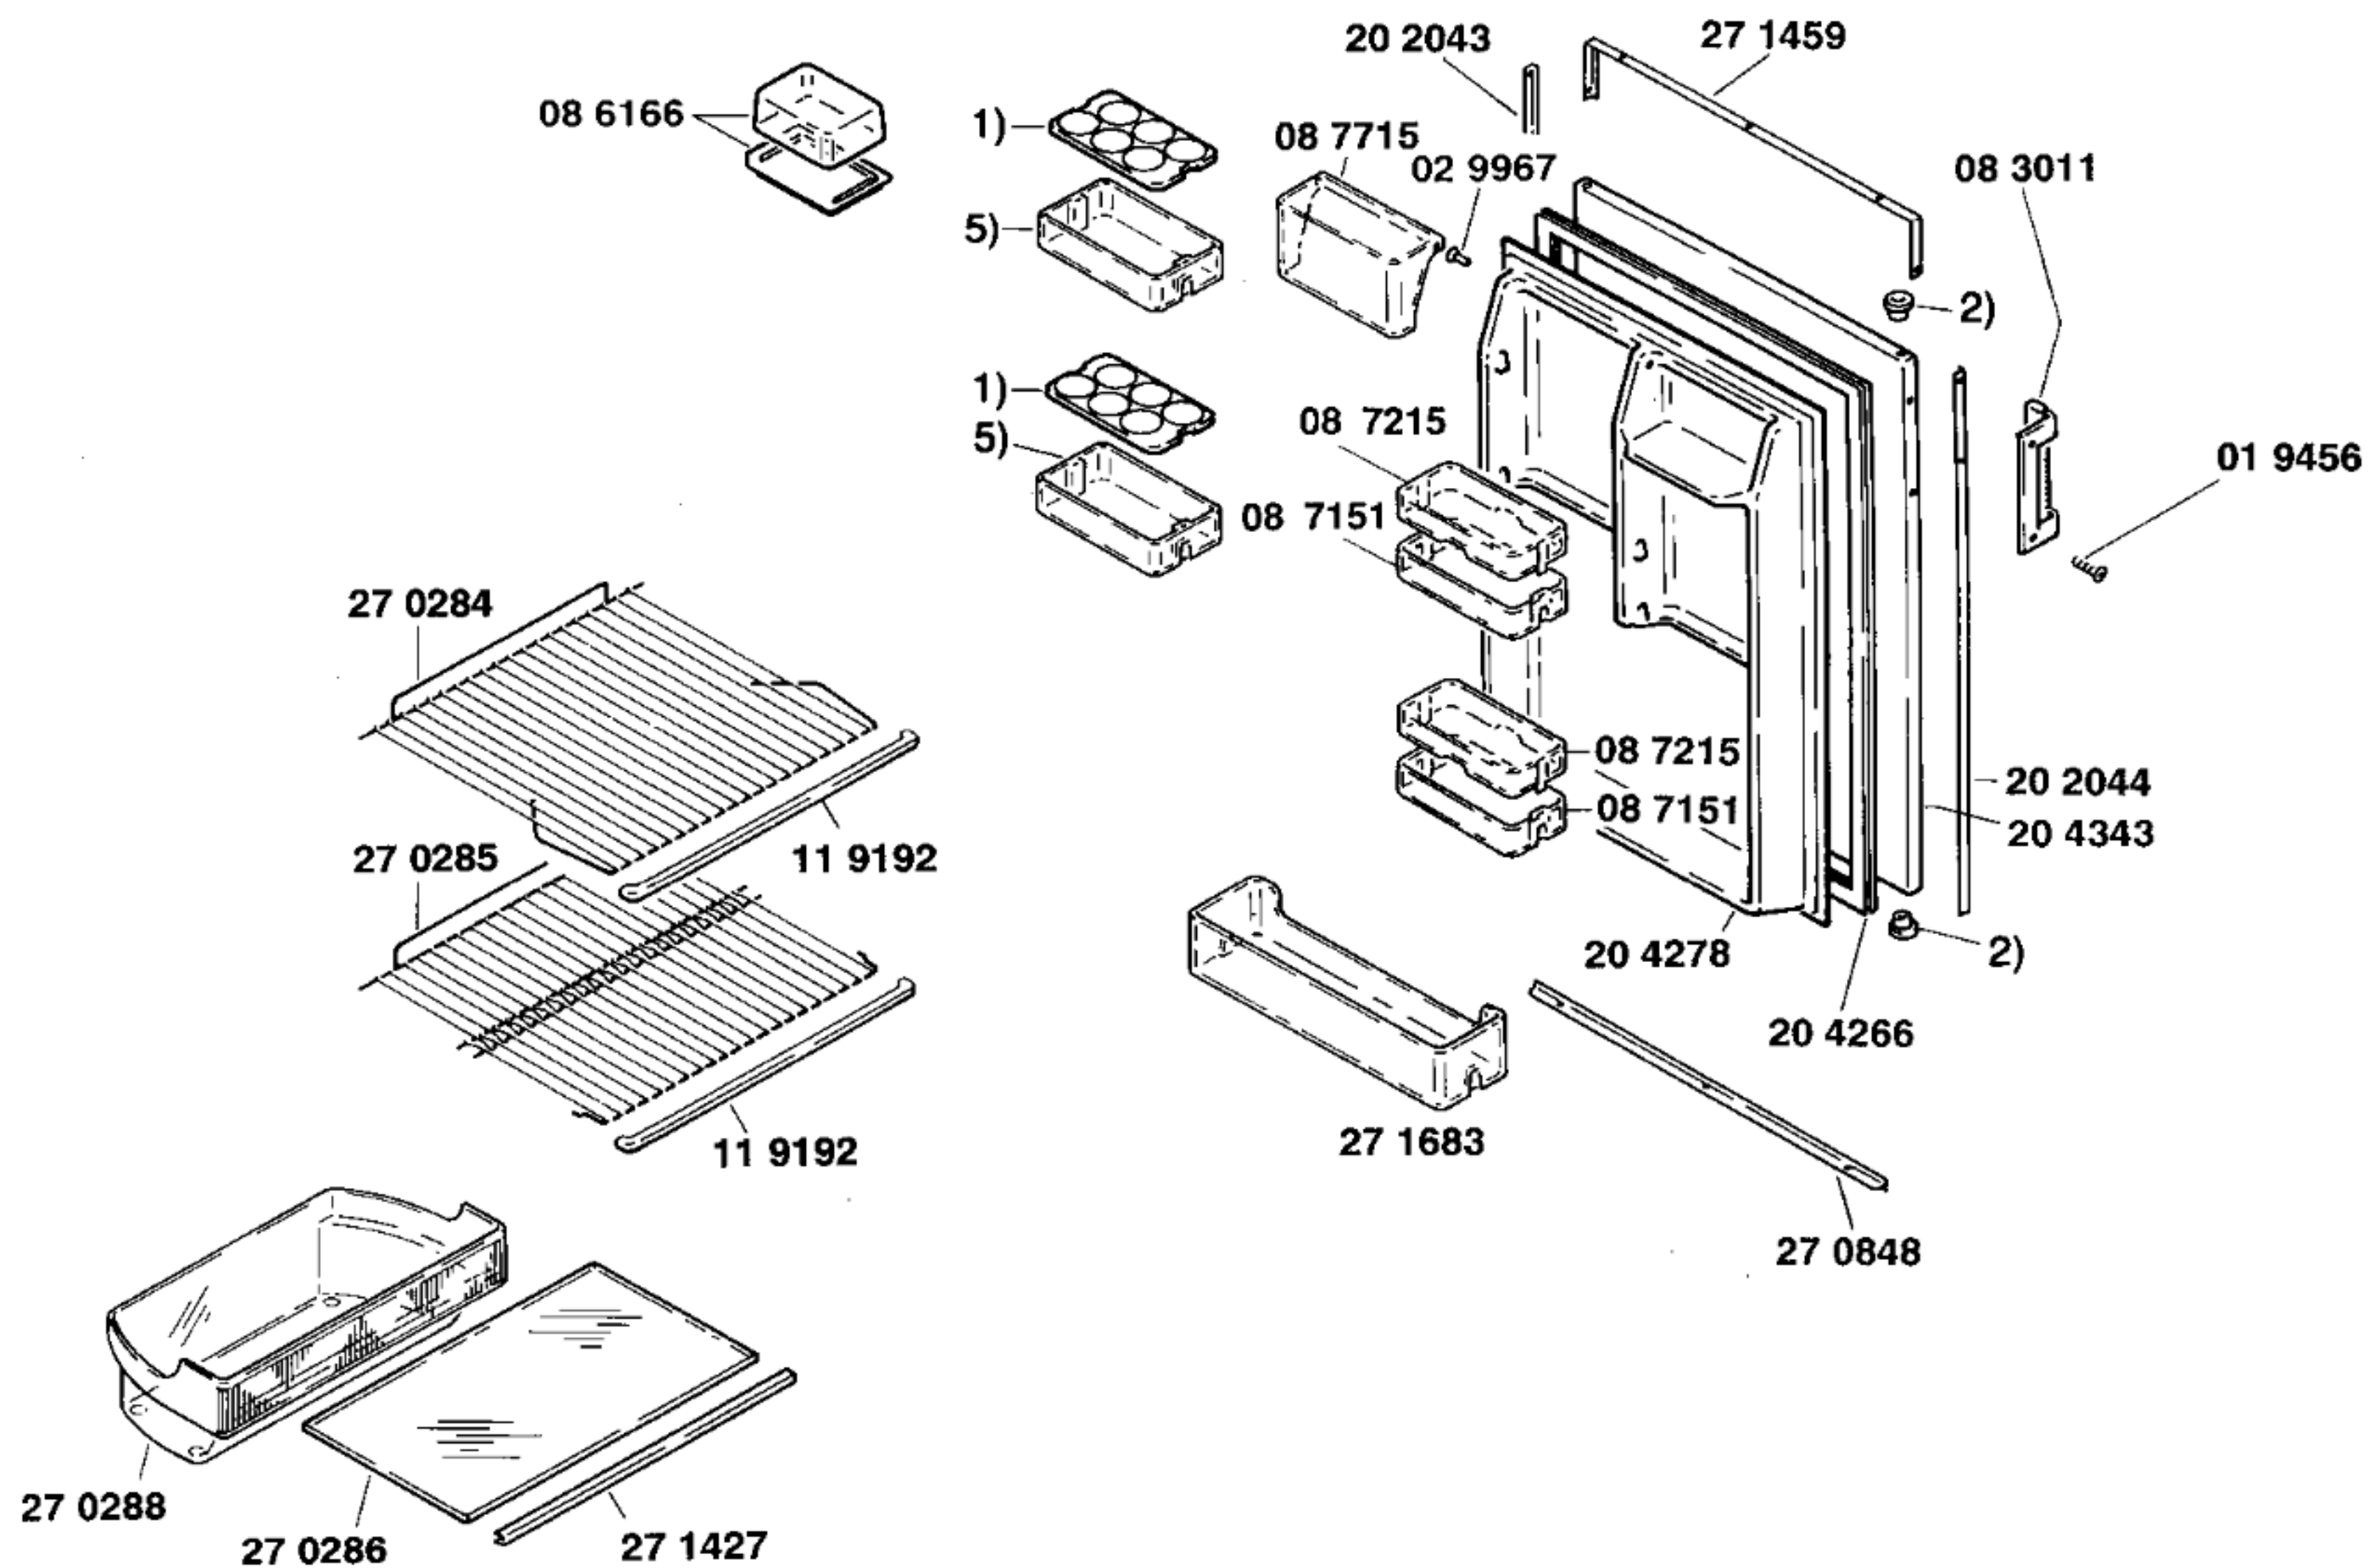

- 1) 08 5589
- 2) 01 9257
- 5) 08 7716

Pos.	EU1	EU2	
	Danfoss	Matsushita	
	TL 4A	S075LKAA	
1	13 1064	14 0599	
2			
3	02 0108	03 2034	
4			
5	02 7310		
6	05 1413	05 8457	
7			
8	27 0291	27 0291	
9	05 0166	05 0166	
10			
11	08 4744	08 8893	
12	05 6008	05 6008	

Verdichter/Compressor/Compresseur	Danfoss	Matsushita
Typ/Type	TL 4 A	S075LKAA
Förderleistung/Delivery/Débit	l/h 695	641
Anlaufstrom/Starting current/Cour. de démarrage	A 8,3	5,7
Widerstand/Resistance/Résistance	Ha/main/prin. Ω 23,4	24,4
	Hi/aux Ω 15,5	39,8

Temp.-Regler/Thermostat			Ranco	
Typ/Type			K 59	
Reglerstellung/Position			kalt	warm
Schaltwerte/Switching values/	„ein“	°C	+ 4,5	+ 4,5
Valeurs de commutation	„aus“		- 31,0	- 13,5
{ „abtauen“ od. }	„alarm“			

Füllmenge/Fill quantity/Charge	R12	g	100		
--------------------------------	-----	---	-----	--	--

Anschlußwert/Conn.load/Puiss. connectée	W	110		
---	---	-----	--	--

Heizung/Heater/Chauffage			
Widerstand/Resistance/Resistance	Ω		
Leistung/Power/Puissance	W		

Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		

Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		