

**BOSCH**KTL5102/01-V01
KTL5102/02-V02KÜHL-, GEFRIERGERÄTE
Kühlschränke, TischIdent - Nummern - Konstante
3740

Gebrauchsanweisung

51 3590

(D,GB,F,I,NL,S,SF,E,P,DK,
N)

Montageanweisung

51 3592

(D,GB,F,I,NL,S,SF,E,P,DK,
N)

1) 01 9257

2) 02 0605

3) 02 9971

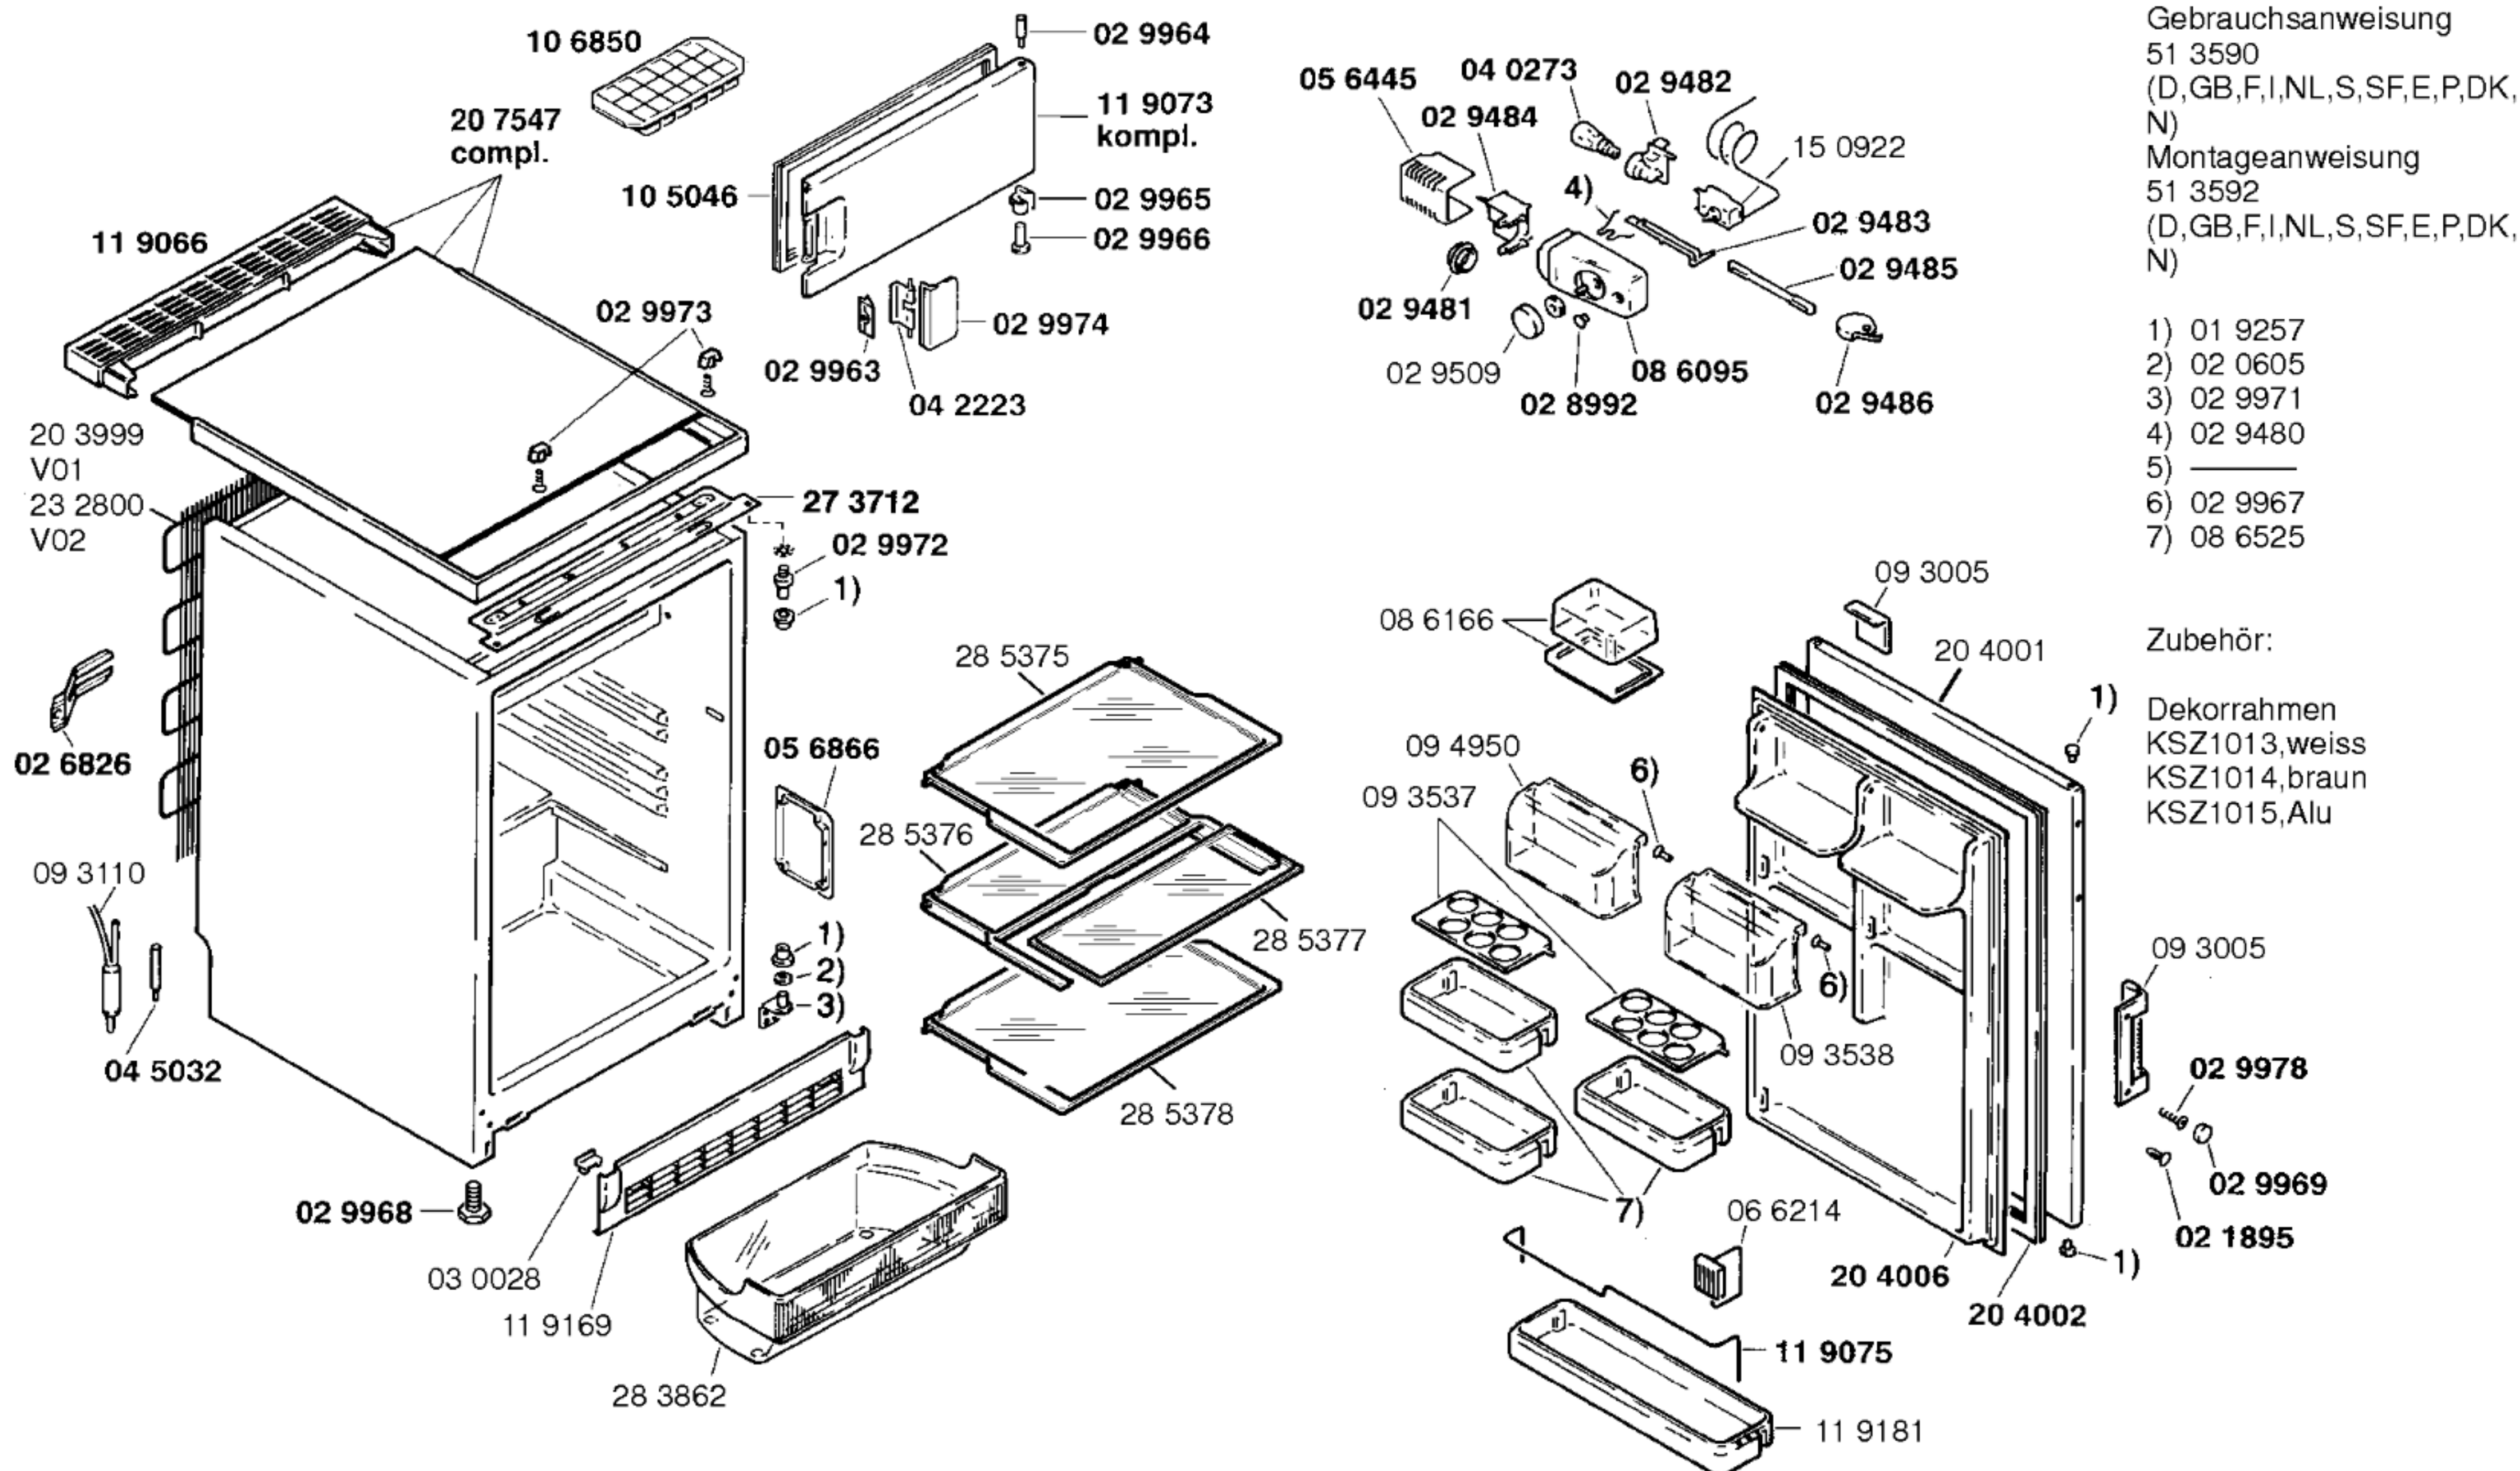
4) 02 9480

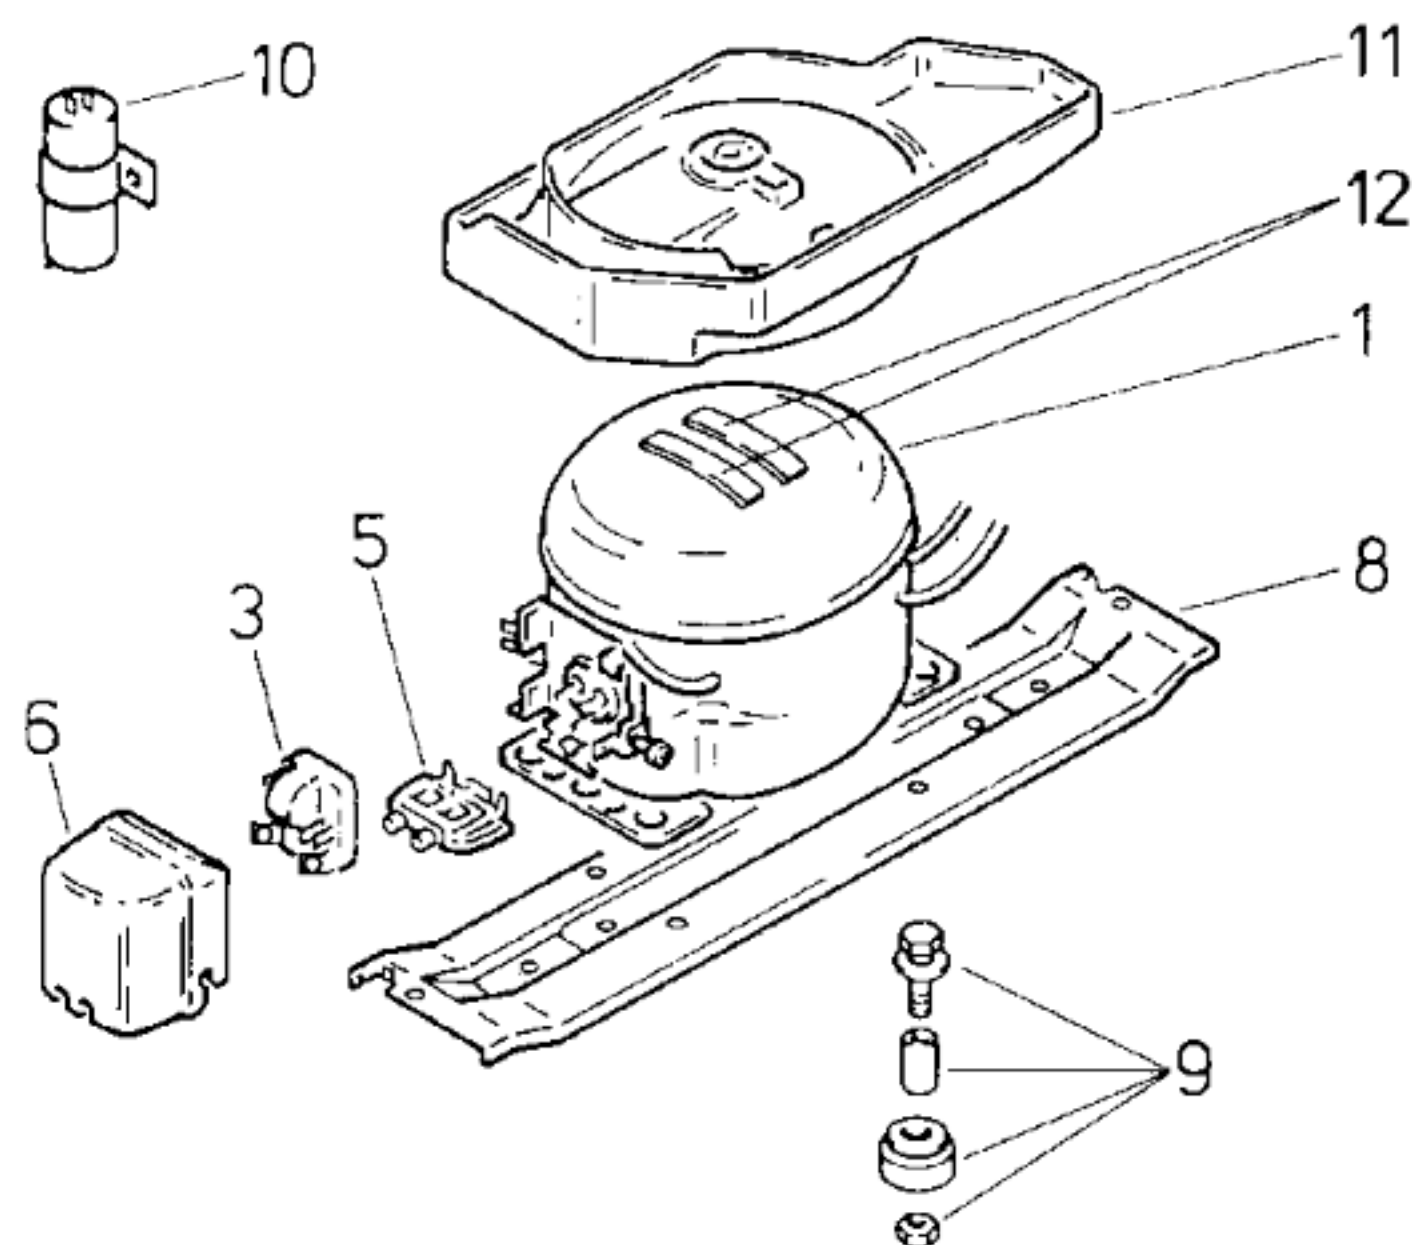
5) _____

6) 02 9967

7) 08 6525

Zubehör:

1) Dekorrahmen
KSZ1013, weiss
KSZ1014, braun
KSZ1015, Alu

**BOSCH**KTL5102/01-V01
KTL5102/02-V02KÜHL-, GEFRIERGERÄTE
Kühlschränke, TischIdent – Nummern – Konstante
3740

	V01	V02	
Pos.	Danfoss	Danfoss	
	TL5F	TLES5F	
1	14 1149	14 1242	
2			
3	05 9191	15 1055	
4			
5	02 7310	15 0760	
6	15 1072	15 1072	
7			
8	27 1375	27 1375	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5 F		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	8,9	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,0	
		Hi/aux Ω	14,7	
Temp.-Regler/Thermostat		Dan		
Typ/Type				
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		+4,5	+4,5	
Valeurs de commutation		-31,0	-13,5	
		(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge		R134a	g	
				V01-85
				V02-60
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		