



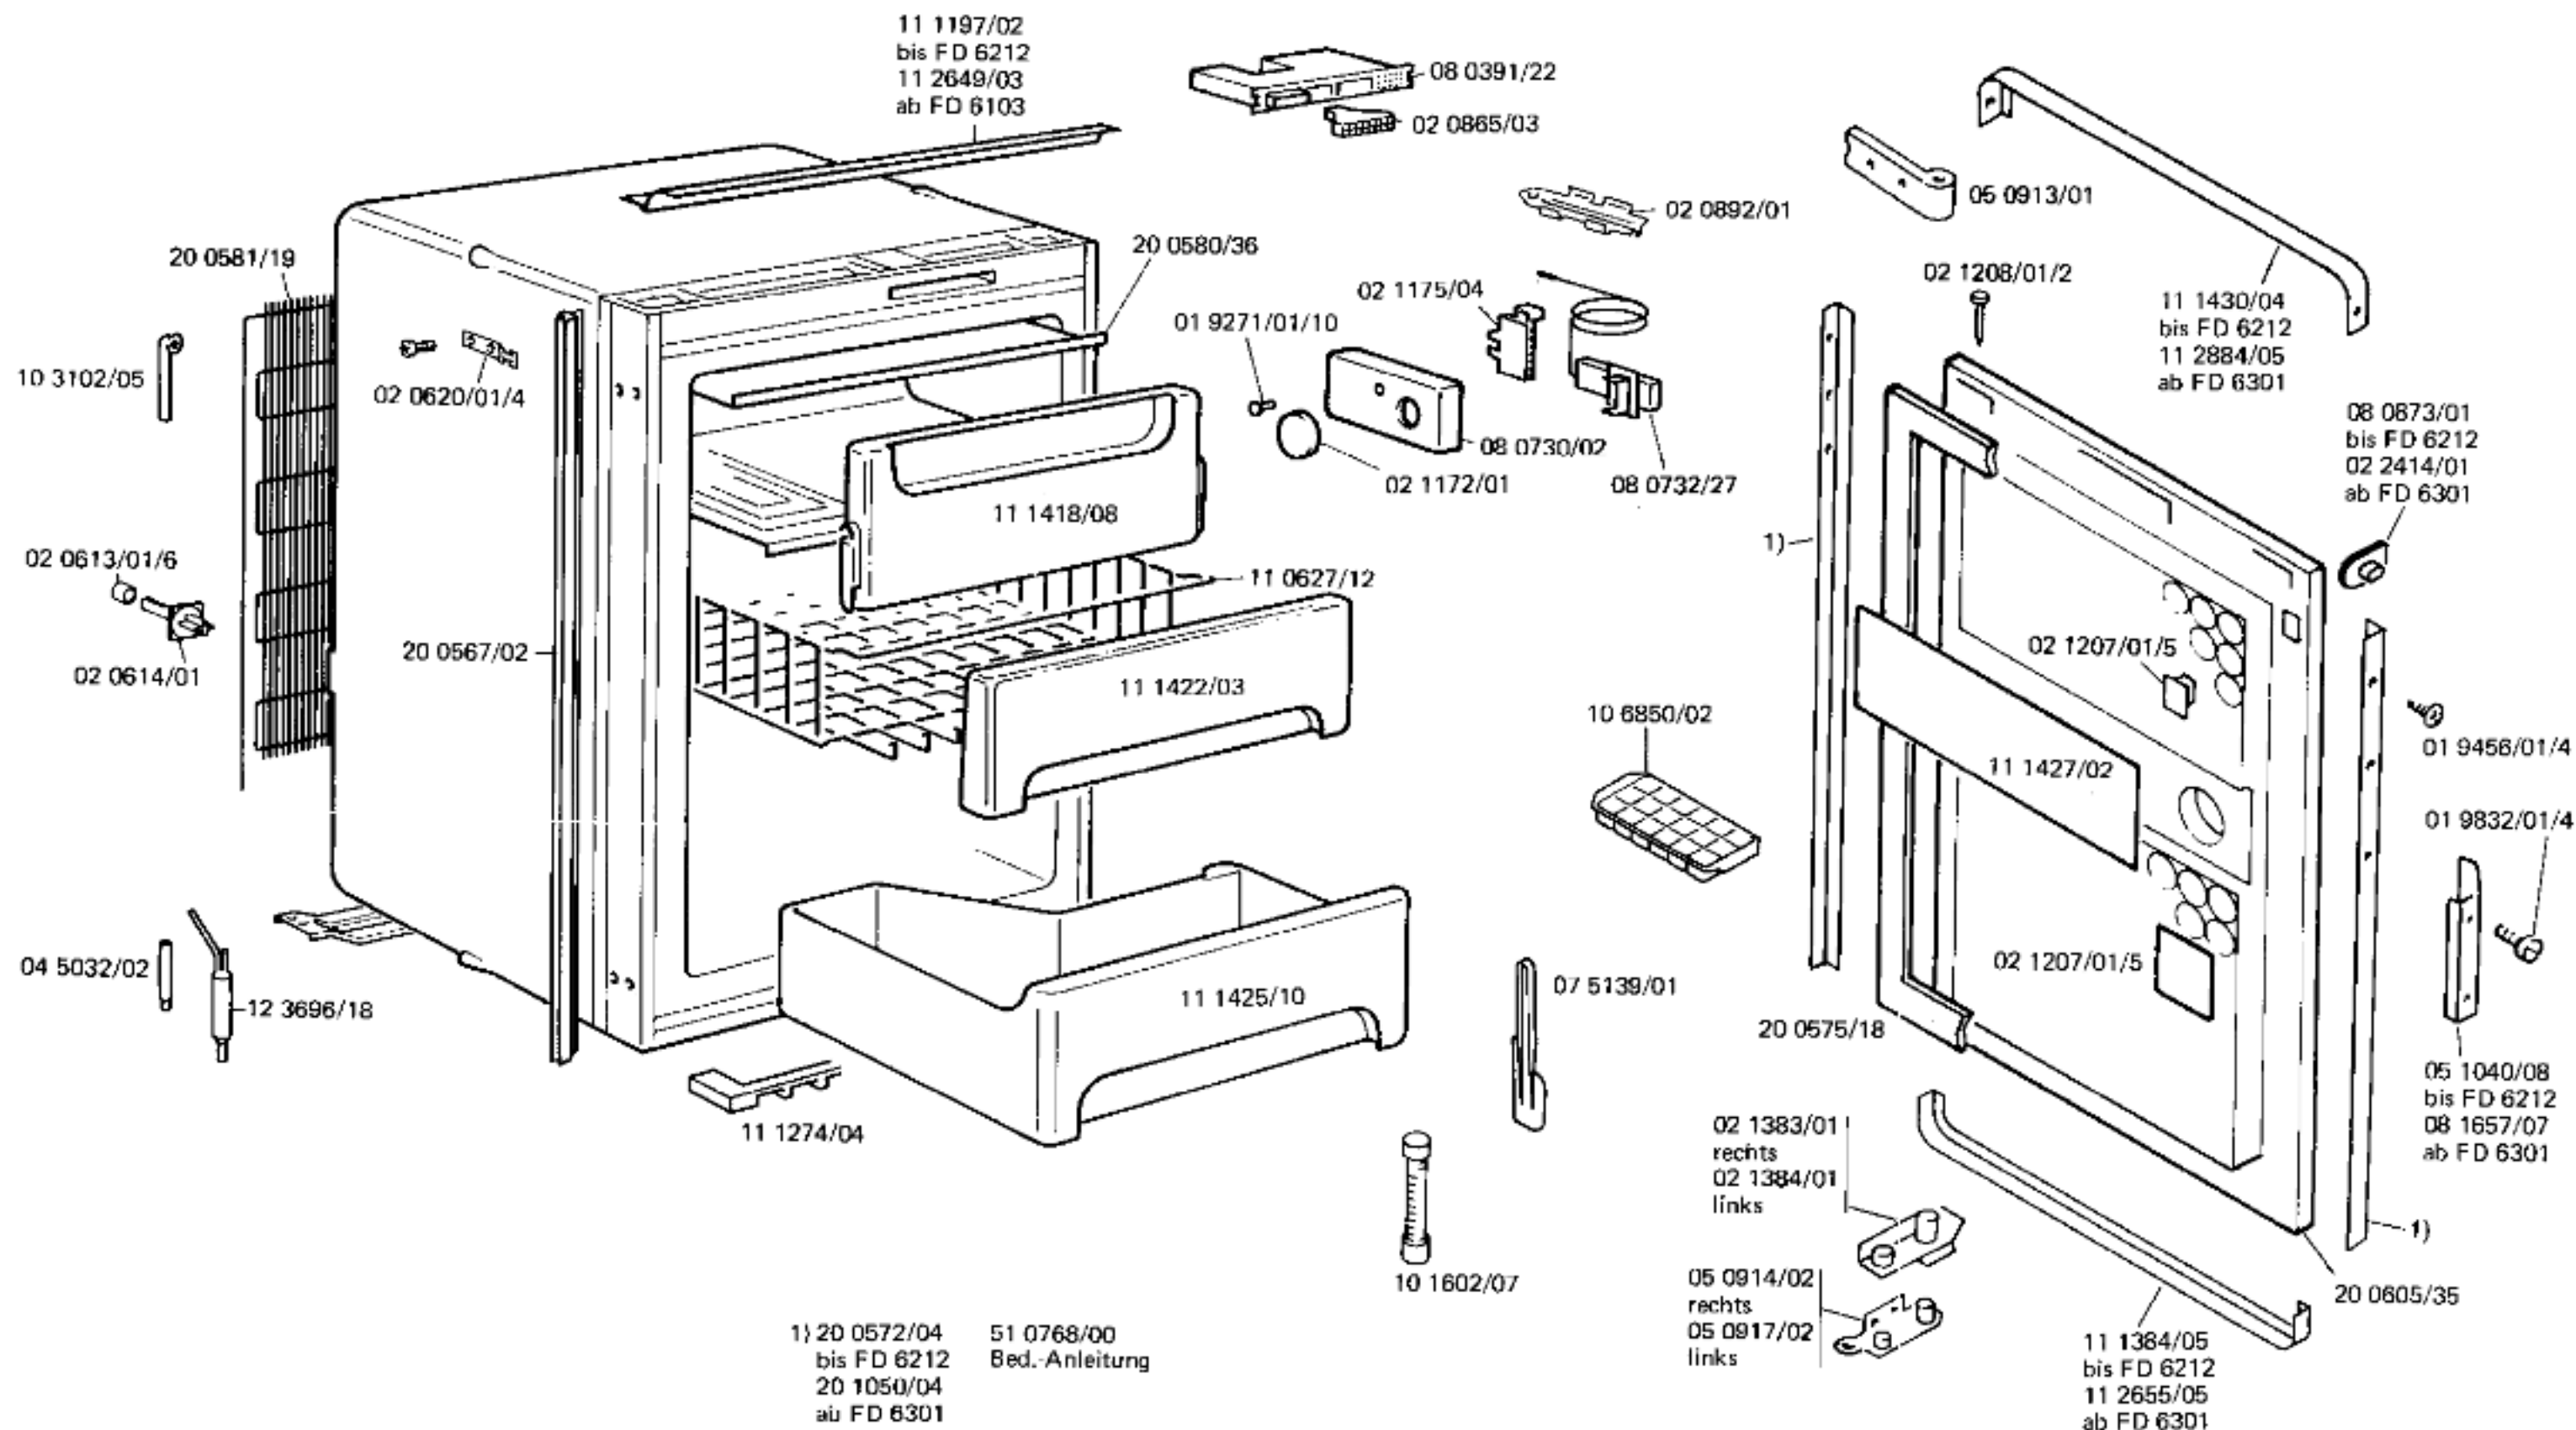

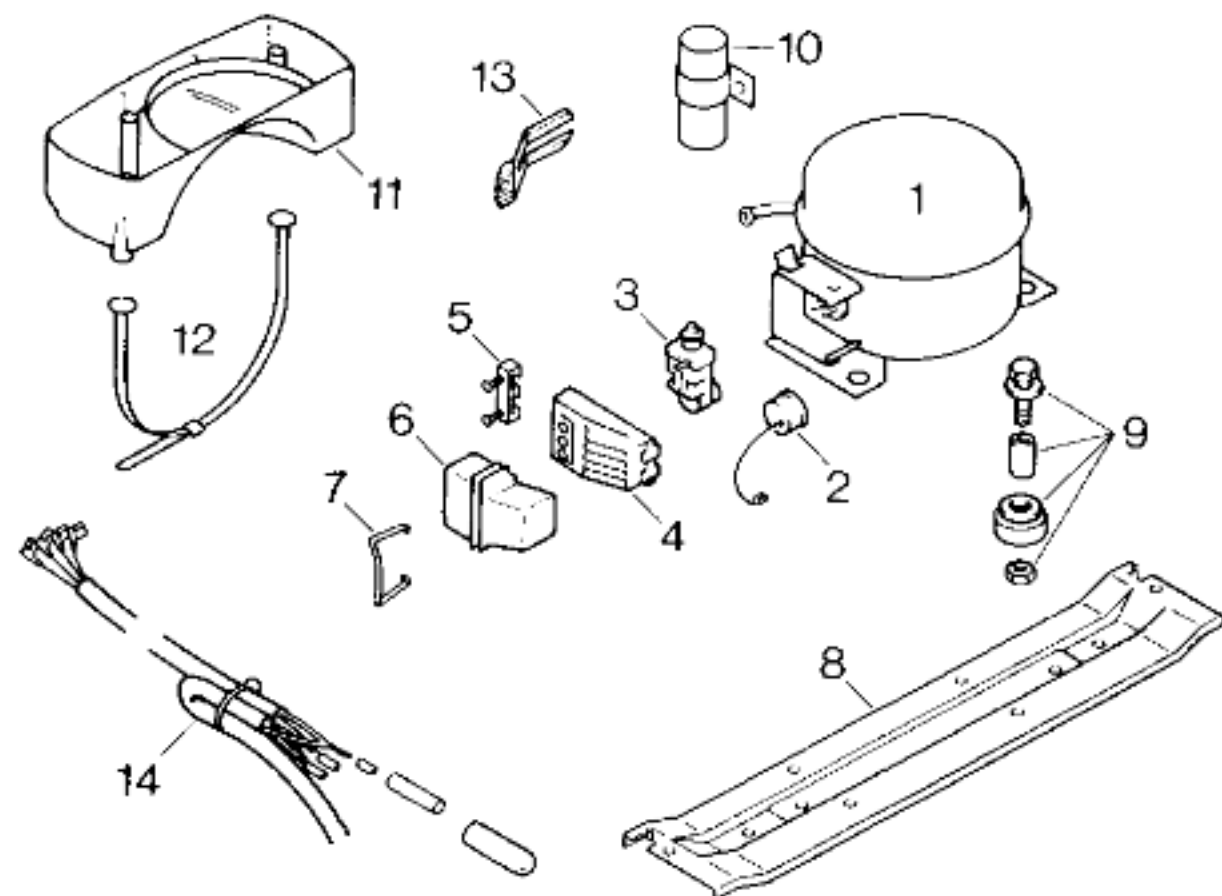

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Bosch		
Typ/Type		TL 4 A			
Förderleistung/Delivery/Débit		l/h	V 702	V 792	
Anlaufstrom/Starting current/Cour. de démarrage		A	7,8	8,3	
Widerstand/Resistance/Résistance		Hi/main/prin.	23,8	23,0	
		Hi/aux	19,7	25,7	
Temp.-Regler/Thermostat		M & J			
Typ/Type		TF 57 SF			
Reglerstellung/Position		kalt	-28	-19	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	-28	-19	
		„aus“	-34	-26	
(„abtauen“ od.)		„alarm“	-20	-15	
Füllmenge/Fill.quantity/Charge		R12	g	100	
Anschlußwert/Conn.load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.	D1,CH1,F1	D2,CH2,F2		
	Danfoss	Bosch		
1	13 1064/45			
2	—	07 2115/18		
3	02 0108/27	07 1804/18		
4	—	04 9757/02		
5	—	—		
6	05 1413/05	04 9758/02		
7	—	—		
8	11 0437/04	21 0437/04		
9	05 0166/05	—		
10	—	—		
11	—	—		
12	—	—		
13	—	—		
14	—	*05 1226/08		

*1 Bei Ersatz des Bosch-Verdichters mitbestellen
To be ordered when replacing the Bosch compressor
A commander lors du remplacement du compresseur Bosch