


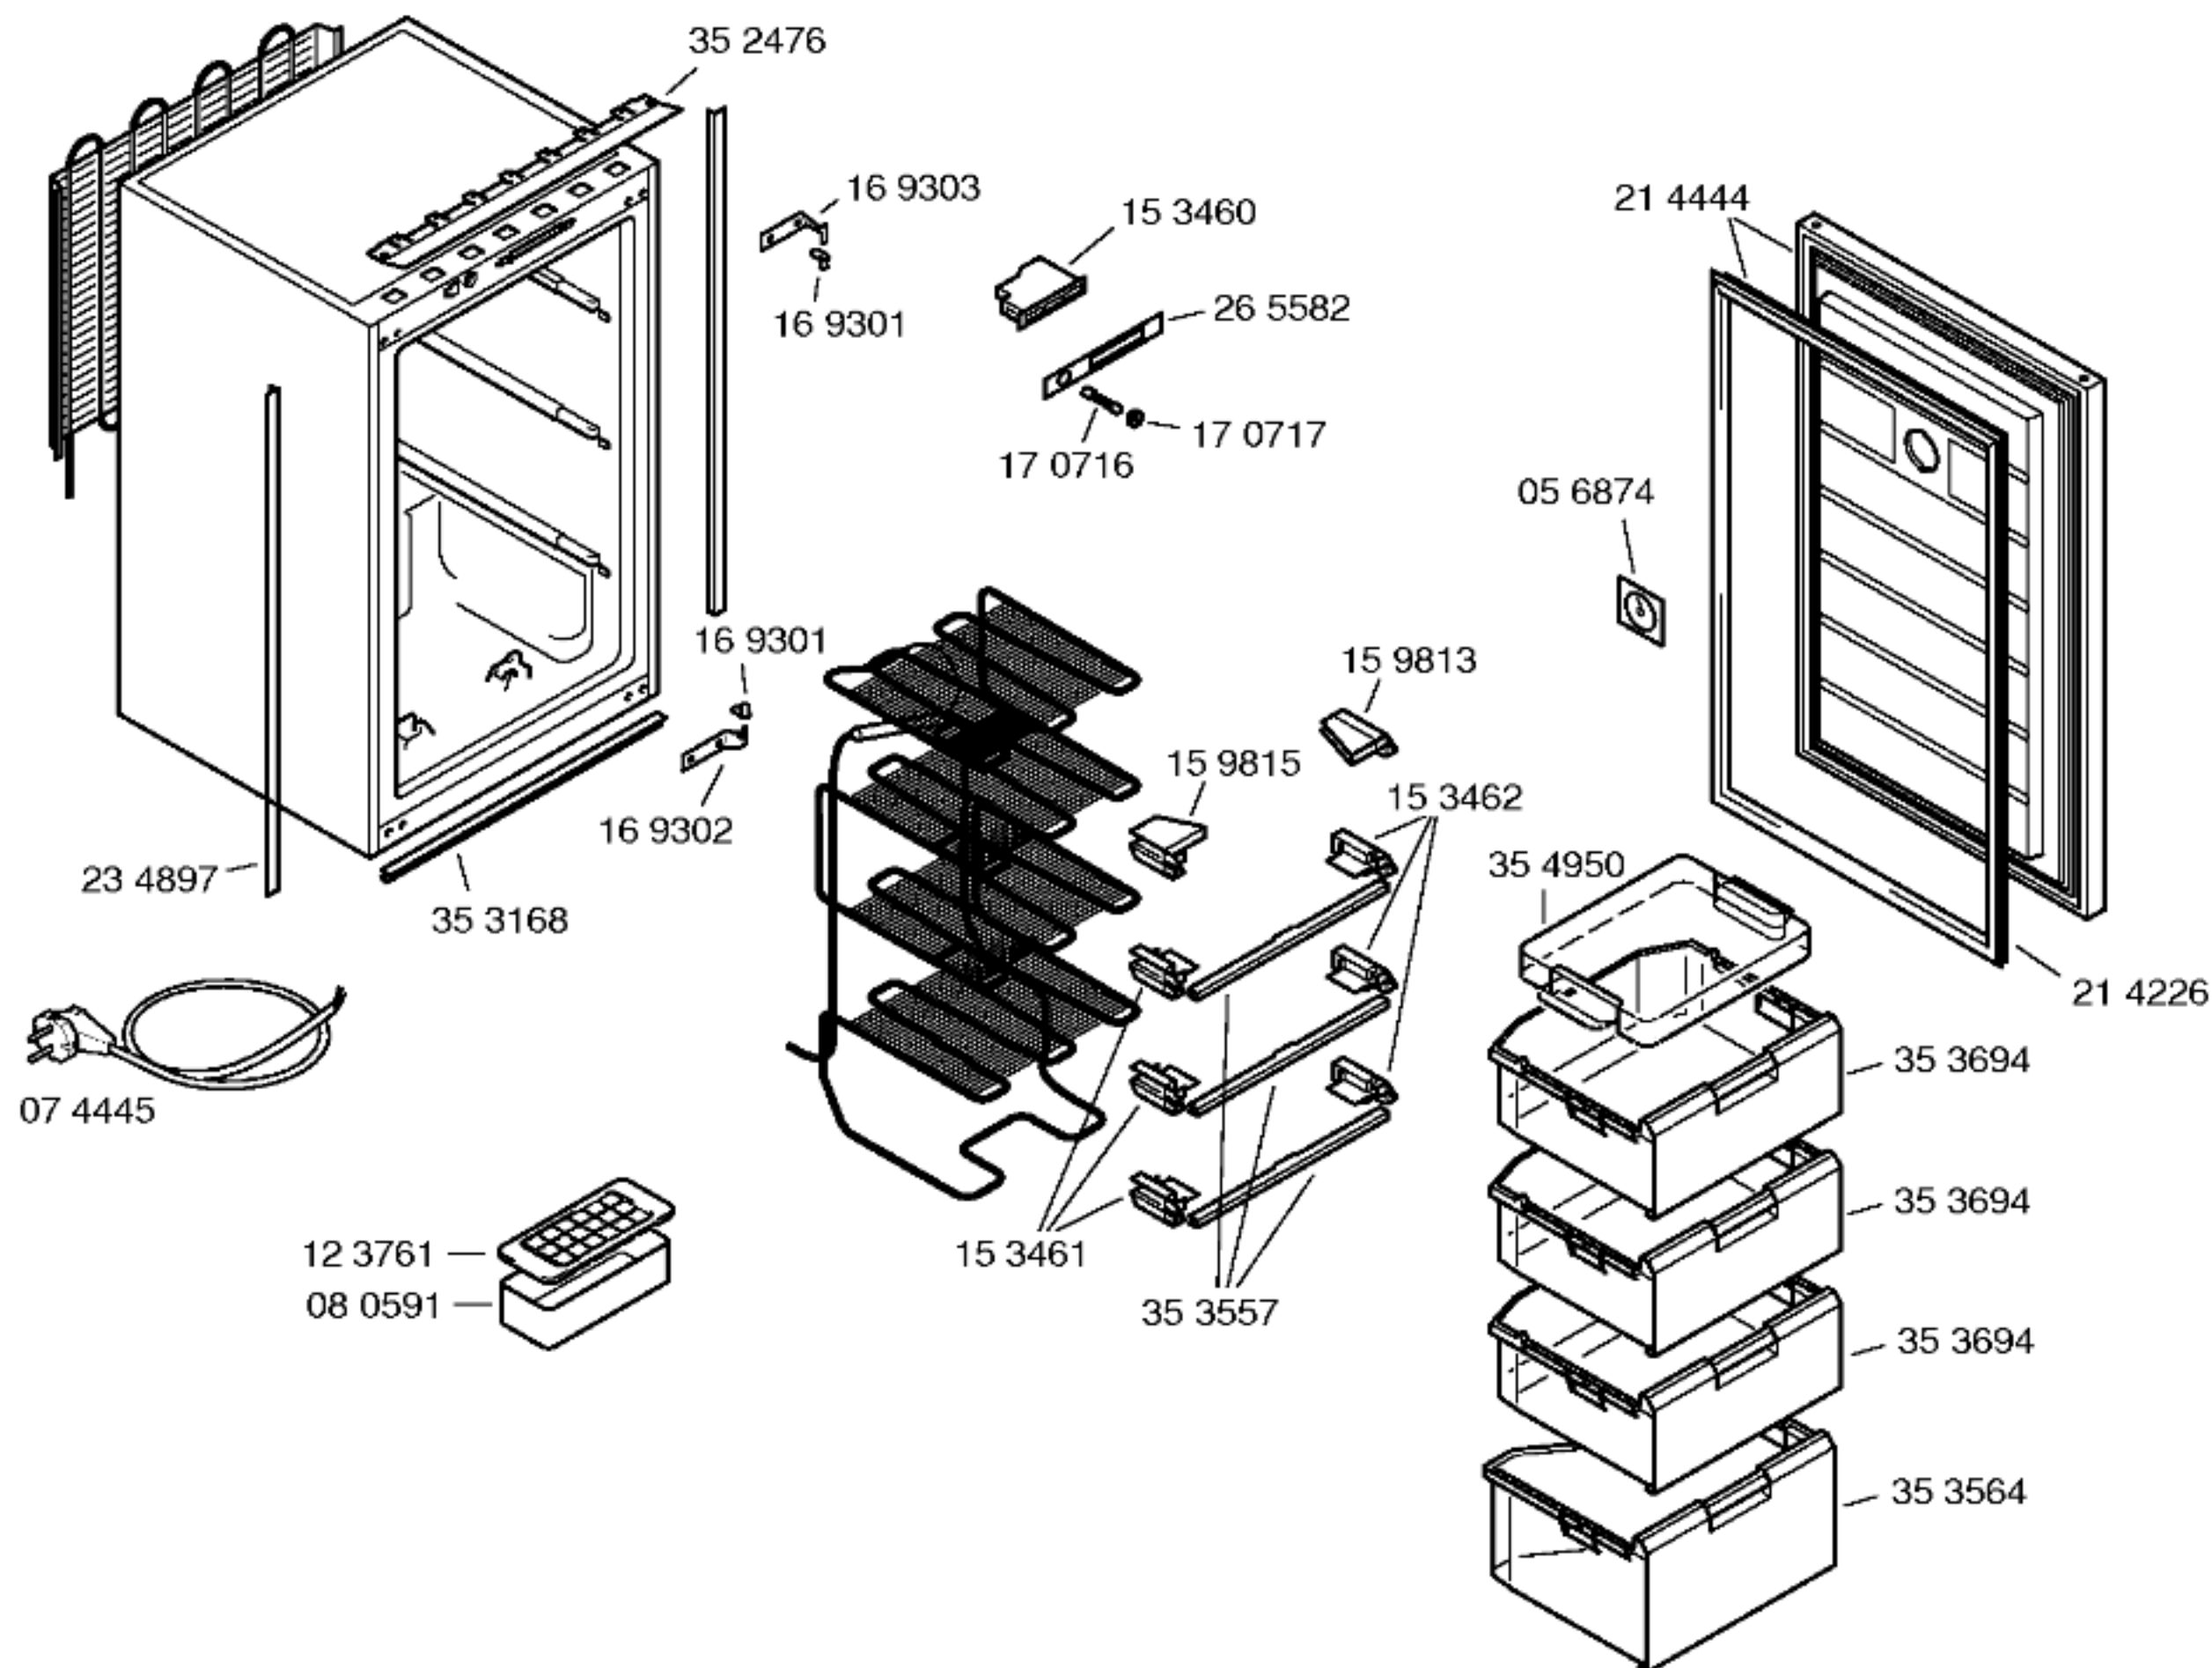


Gebrauchsanweisung
52 3549
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,P)

Beistellsatz
26 4862

Temp.-Regler
Rep.-Satz
26 5271

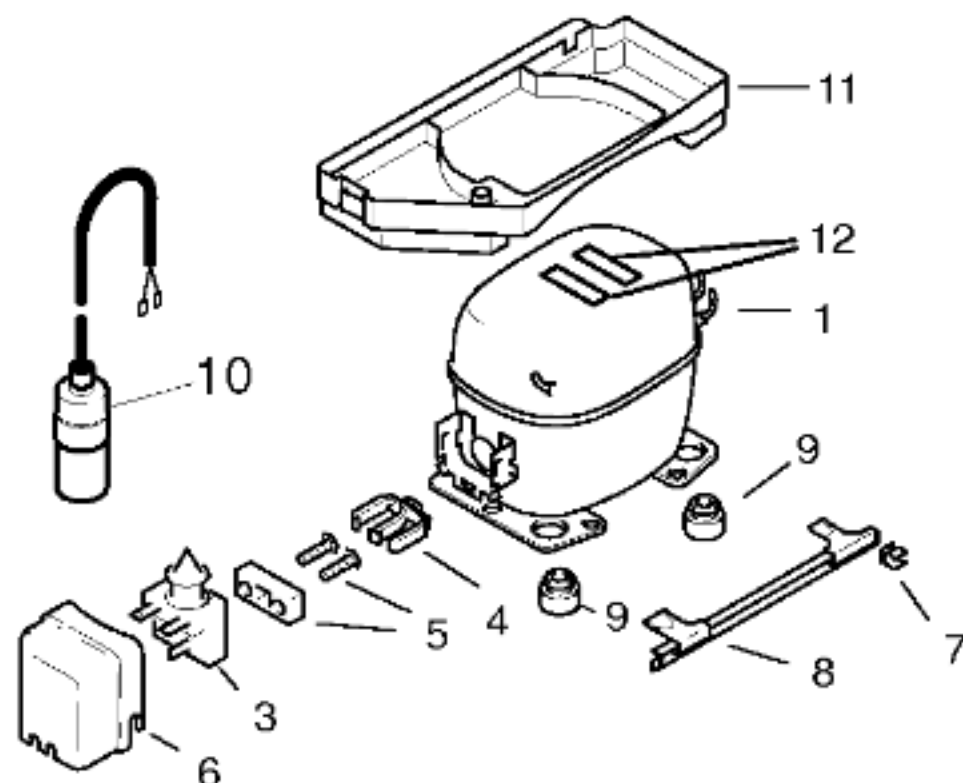

	V01,V02	V03	V04
Pos.	Aspera	Danfoss	Danfoss
	EMT 40 CLP	TLY7KK2	TLY8KK2
1	14 1839	14 2059	14 2060
2			
3	17 1315	15 1055	15 1055
4			
5	17 0882	15 0760	15 0760
6	17 0881	15 1072	15 1072
7	16 9319	16 9319	16 9319
8	26 4879	26 4879	26 4879
9	05 0166	05 0166	05 0166
10		16 5852	16 5852
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Aspera	Danfoss	Danfoss
Typ/Type		EMT 40 CLP	TLY8KK2	TLY7KK2
Förderleistung/Delivery/Débit		l/h	1404	1168
Anlaufstrom/Starting current/Cour de démarrage		A	6,4	5,7
Widerstand/Resistance/Résistance Ha/main/prin		Ω	21,6	27,1
Hi/aux		Ω	26,0	27,2
Temp.-Regler/Thermostat		KER		
Typ/Type		RCO		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		ein"	-23,0	-15,0
Valeurs de commutation		aus"	-31,0	-21,0
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	88	84
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild